


FROM POWER SOURCE SYSTEM (SEE PAGE 56)

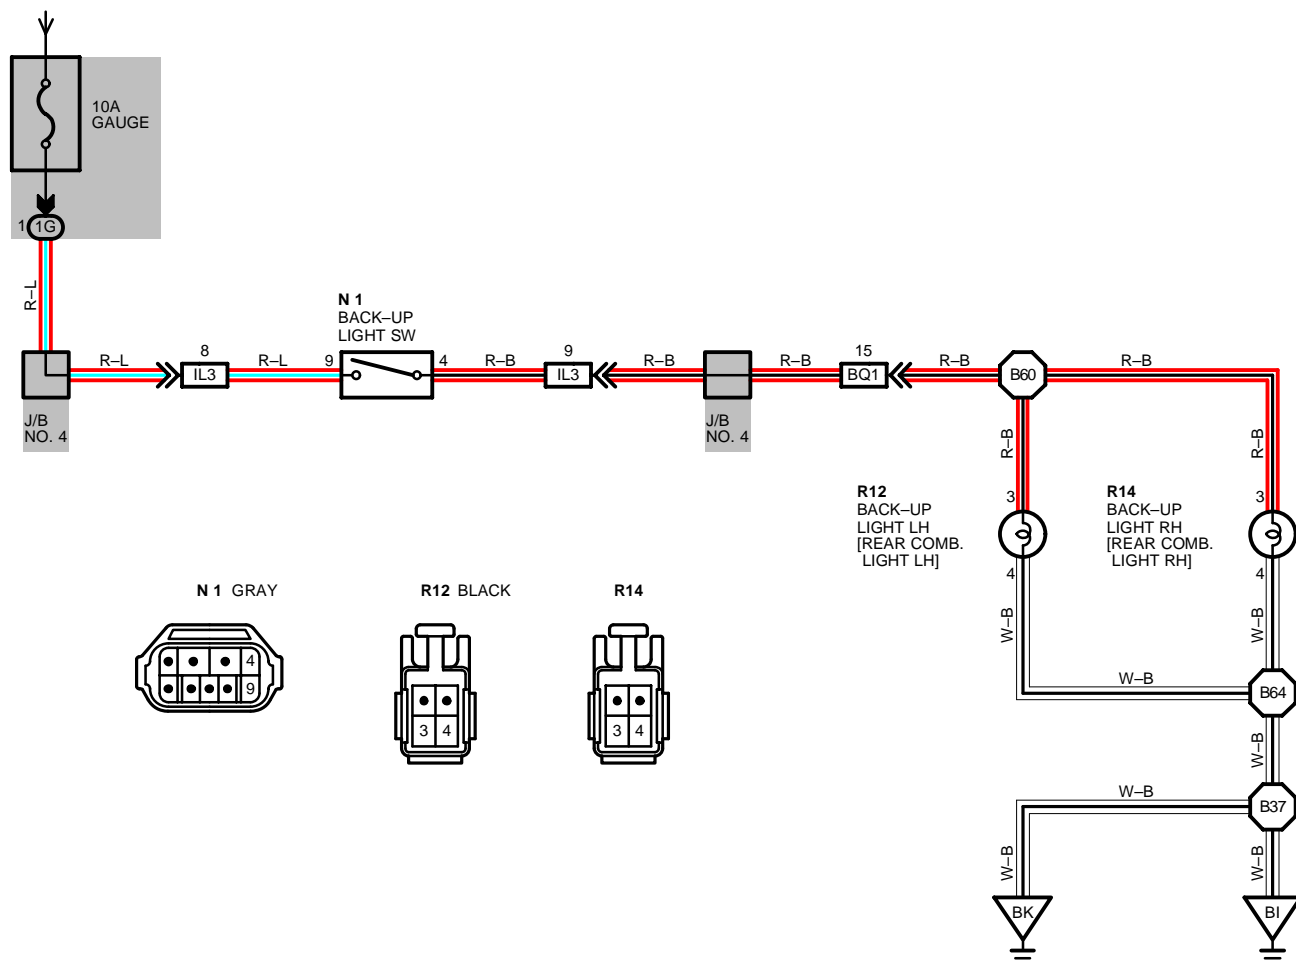

SERVICE HINTS

N 1 BACK-UP LIGHT SW

4-9 : CLOSED WITH SHIFT LEVER IN R POSITION

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
N 1	25	R12	29	R14	29

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1G	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IL3	36	ENGINE WIRE AND COWL WIRE (UNDER THE GLOVE BOX)
BQ1	38	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	38	UNDER THE LEFT REAR PILLAR
BK	38	BACK PANEL RIGHT

: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 37	38	FLOOR NO.2 WIRE	B 64	38	FLOOR NO.2 WIRE
B 60					