


DRIVING POSITION MEMORY SYSTEM

The micro computer can memorize the position of the driver's seat, the height of the shoulder belt anchor of the driver's seat belt, and the positions of the tilt and telescopic steering, and outside rear view mirrors. Two different driving position profiles can be entered into the computer's memory. Recording a driving position in the computer's memory can only be done when the ignition key is in the "ON" position and the shift lever is in the "P" position.

Setting a driving position

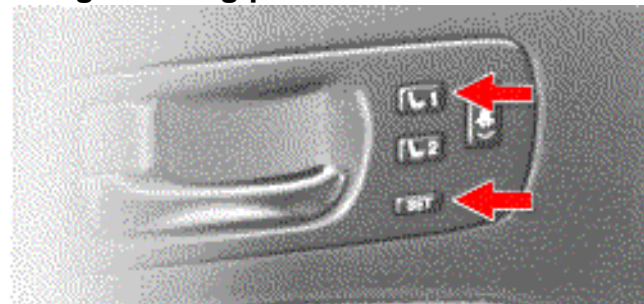

- 1. Adjust the driver's seat, driver's shoulder belt anchor, tilt and telescopic steering and outside rear view mirrors to the desired position.**
- 2. While pushing the "SET" button, push button "1" or "2" until the signal beeps.**


The beep sound means that the positions are recorded in the computer's memory.

By repeating these two steps and pressing the remaining button, the driving position for another driver can be recorded.

To set a new memorized position, select the desired position and perform step 2. The previous memory will be erased and the new position will be set.

To make only slight changes to an already memorized position, the easiest way is to first activate the memorized position, then make the desired changes and perform step 2 above.

Activating a memorized position

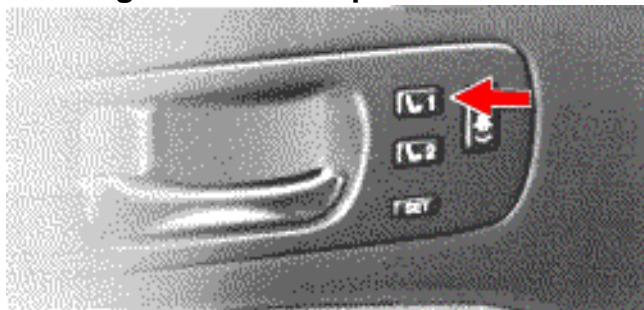

When you push button “1” or “2”, the driving position will be automatically adjusted to the position recorded for that button.

Conditions for memorized position activation

- Ignition key “ON” and shift lever in “P” position
All parts of the memorized positions can be activated. However, if the brake pedal is being depressed, the seat position will not change.

- Key not in ignition switch and within 30 seconds of opening driver’s door.

The memorized position can be activated, except for the tilt and telescopic steering. This will be activated when the key is inserted into the ignition switch.

If any driving position memory switch is pushed while one of the memorized driving profiles is being activated, the operation will stop.

To activate the system, push the desired button (“1” or “2”) again.

The driving position memory control system cannot be operated while the vehicle is moving.

If the vehicle’s battery is disconnected, the computer’s memory will be erased and the memorized positions will have to be set again.



CAUTION

- Do not start the vehicle while the adjustments are being made.
- Take care not to select the wrong button, or the seat could strike the rear passenger or hit your body against the steering wheel. If this happens, you can stop the movement by pressing another driving position memory switch, or depressing the brake pedal.