

SECTION 1 – 4

INSTRUMENTS AND CONTROLS

Interior equipment

Vanity mirrors -----	36
Interior lights -----	37
Personal lights -----	38
Ignition switch light-----	38
Clock -----	39
Outside temperature display -----	39
Cigarette lighter and ashtray -----	40
Glovebox -----	41
Cup holder-----	41
Coin box -----	42
Penlight -----	43
Floor mat -----	43
Luggage stowage precautions -----	44


VANITY MIRRORS



To use the vanity mirrors, swing the sun visor down and open the cover.

The vanity light comes on when you open the cover.

Sun visors

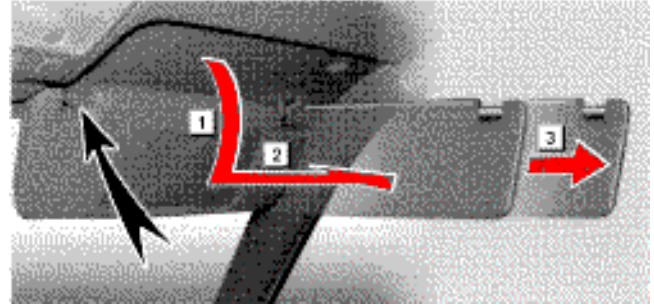


- ① To block out glare from the front, swing the sun visor down.
- ② To block out glare from the side, remove the sun visor from the hook and swing it to the side.
- ③ To block out glare coming obliquely from behind you, slide the visor backwards.

At this position, the vanity light does not come on.

INTERIOR LIGHTS

Front

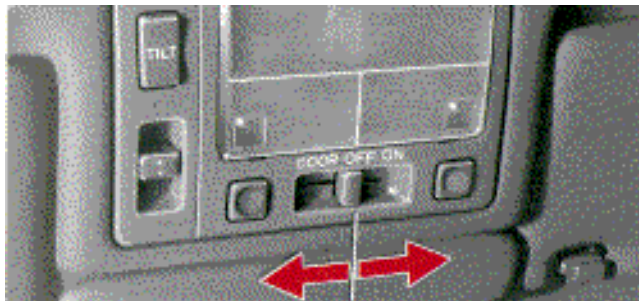

To turn on the interior light, slide the switch.

With the switch in the "DOOR" position, the light comes on when any of the doors are opened. After all the doors are closed, the light remains on for about 15 seconds and then goes out.

However, in the following cases, the light goes out immediately:

1. All the doors are closed when the ignition key is in "ACC" or "ON" position.
2. The ignition key is turned to "ACC" or "ON" when the light is still on.
3. All the doors are locked when the light is still on.
4. One door is closed with the lock button pushed in while the other doors are locked.

Rear



When you open the rear door, the light turns on. Closing it turns off the light.

PERSONAL LIGHTS

Front



Rear



To turn on the personal light, push the switch. To turn it off, push the switch again.

IGNITION SWITCH LIGHT



For easy access to the ignition switch, the ignition switch light comes on when any of the doors are opened.

The light remains on for about 15 seconds and goes out after all the doors are closed. However, the light goes out immediately when all the doors are locked or the ignition key is in the "ACC" or "ON" position.

CLOCK



The digital clock indicates the time with the ignition key at the “ACC” or “ON” position. To reset the hour, press the “H” button. To reset the minutes, press the “M” button. To adjust the time to the nearest hour, press the “:00” button.

For example, if the “:00” button is pressed when the time is between 9:30 – 9:59 or between 10:01 – 10:29, the time will change to 10:00.

Once the electrical power source has been disconnected from the clock, the time is automatically set to 1:00.


OUTSIDE TEMPERATURE DISPLAY




This display shows the outside temperature when the ignition switch is on.

The displayed temperature ranges from -30°C (-22°F) up to 50°C (122°F). If the temperature does not appear on the display or it shows “—”, take your vehicle to your Lexus dealer.

CIGARETTE LIGHTER AND ASHTRAY

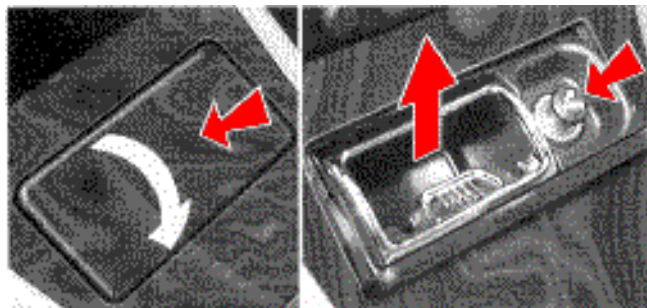

► *Front cigarette lighter and ashtray*

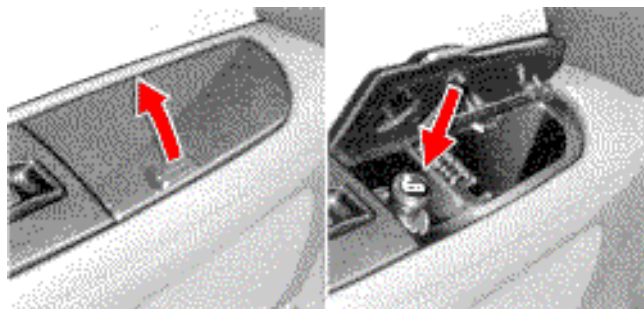

► *Rear cigarette lighter and ashtray*

Open the ashtray cover. To use the cigarette lighter, press in the cigarette lighter. When it becomes heated, it automatically pops out ready for use.

Do not hold the cigarette lighter pressed in.

If the engine is not running, the ignition key must be in the "ACC" position.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in completely.

To remove the ashtray, just pull it up.


Use a Lexus genuine cigarette lighter or equivalent for replacement.



CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always close the ashtray completely after using.

GLOVEBOX

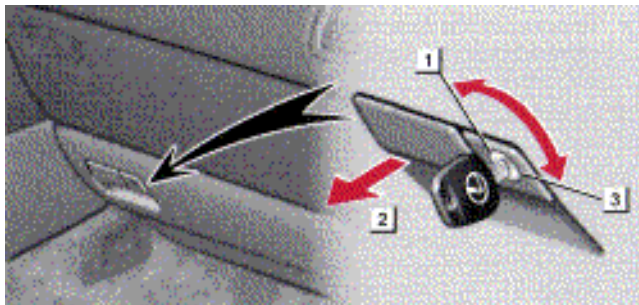

► 1 **Unlock** 2 **Open** 3 **Lock**

To open the glovebox door, pull the lever. To lock the glovebox door, insert the master key and turn it clockwise.

With the tail lights on, the glovebox light will come on when the glovebox door is open.




CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the glovebox door closed while driving.

CUP HOLDER

Front

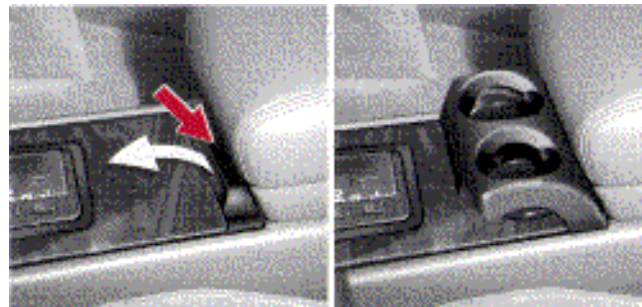

To use the cup holder, push the top of the cup holder portion of the console box.

The cup holder is designed so that cups or cans fit snugly in the holes.




CAUTION

- Do not place anything else on the cup holder, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.
- Keep the cup holder shut when not in use.

INTERIOR EQUIPMENT

Rear

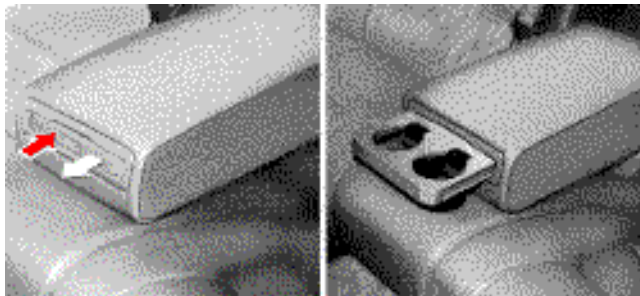

To use the cup holder, push the cup holder portion of the center armrest in the rear seat.


The cup holder is designed so that cups or cans fit snugly in the holes.



CAUTION

- Do not place anything else on the cup holder, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.
- Keep the cup holder shut when not in use.

COIN BOX

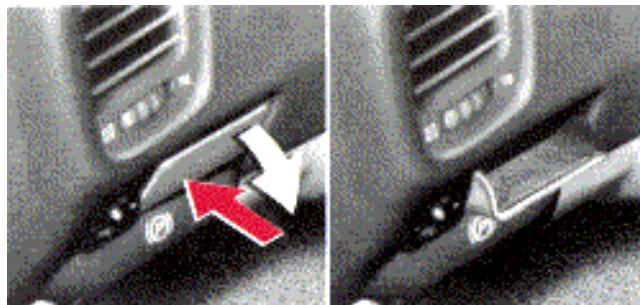


To use the coin box, push against the coin box cover.



CAUTION

Keep the coin box shut when not in use.


PENLIGHT

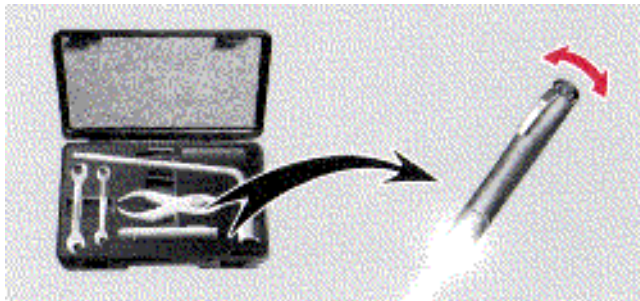

The penlight is in the tool box on the right side of the trunk.

- Battery insertion: Insert the batteries into the penlight. (The penlight terminals have no + or – end, but be sure to insert both batteries facing the same direction.)
- To turn the penlight on, turn the penlight head.
- To turn it off, turn the penlight head further in the same direction or turn it in the reverse direction.

FLOOR MAT

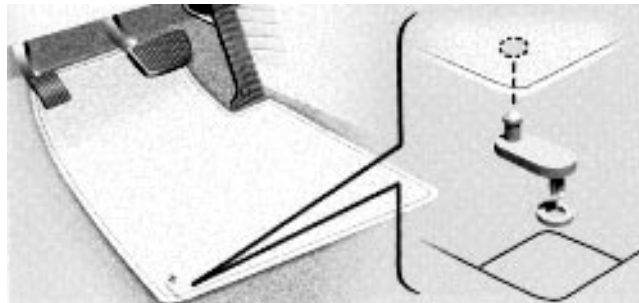

Use a floor mat of the correct size.

If the floor mat has a hole, then it is designed for use with a locking clip. Fix the floor mat and locking clip into the hole in the floor carpet.



CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

LUGGAGE STOWAGE PRECAUTIONS

When stowing luggage or cargo in the vehicle, observe the following:

- Put luggage or cargo in the trunk when at all possible. Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.



CAUTION

- Do not place anything on the filler panel behind the rear seatback. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.
- Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.

NOTICE

Do not load the vehicle beyond the vehicle capacity weight specified on the tire pressure label inside the glovebox lid.

