

SECTION 1 – 1

INSTRUMENTS AND CONTROLS

Keys and doors

Keys -----	8
Wireless remote control transmitter -----	9
Doors -----	12

KEYS



- ① **Master key** – The master key works in every lock.
- ② **Subkey** – The subkey will not open the trunk, trunk main switch and the glovebox.
- ③ **Key number plate** – Keep the plate in a safe place such as your wallet, not in the vehicle.

To protect things locked in the trunk or glovebox when you have your vehicle parked, leave the subkey with the attendant.

Since the doors and trunk lid can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

If you should require replacement or additional keys for any reason, contact your Lexus dealer.

You should also put a copy of the key number with your important papers.



Insert your flat key in its key case as shown. We recommend that you always carry this with you as a spare. Do not leave it in your vehicle.

NOTICE

- *Do not let the key case become bent as the key may fall out or become bent also.*
- *The flat key is designed for emergency use only, so do not use it regularly instead of the other master keys.*

WIRELESS REMOTE CONTROL TRANSMITTER



This transmitter has 4 functions.

- ① Locking the doors
- ② Unlocking the doors
- ③ Unlocking the trunk lid
- ④ Sounding an alarm

The operational range of the wireless remote control is approximately 1 meter (3 feet). The effective range may vary with different conditions.

When handling, take care of the following:

- Avoid knocking them hard against other objects.
- Avoid putting them in water.

Locking/Unlocking the doors

When you push the “LOCK” button on the transmitter, all the doors can be locked from outside the vehicle.

At this time, you can hear one beep. However, when you push the “LOCK” button with any door not closed securely, the buzzer sounds for 10 seconds or until all the doors are closed securely. If the key is in the ignition switch, locking cannot be done.


To make sure whether all the doors were locked or not, push the “LOCK” button once again. If they were already locked, the headlights and tail lights will flash.

When you push the “UNLOCK” button, the driver’s door is unlocked. Pushing that button once again within 3 seconds from the first push, all other doors also unlock.

At this time, two beeps sound. Together with the activation of unlocking, the interior light comes on for 15 seconds if the interior light switch is in “DOOR” position. For further information, see “Interior lights” on page 37.


You have 30 seconds to open a door after using the remote unlock feature. If a door is not opened by then, all the doors will automatically relock.

Continued pushing of the “LOCK” or “UNLOCK” buttons will not cause repeated locking or unlocking of the doors. To reverse the operation performed by the remote control feature, release the first button and then push another button.

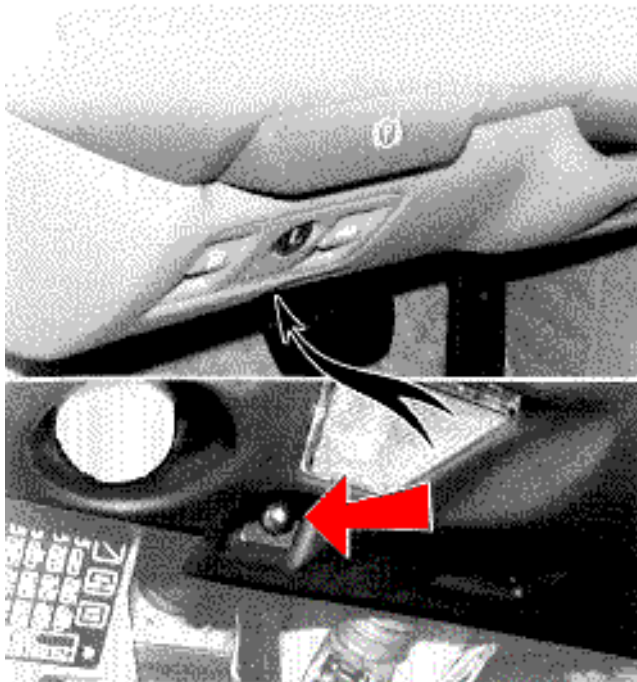


To turn off the beep sound, push this switch. Pushing it again turns on the beep sound.

Unlocking the trunk lid

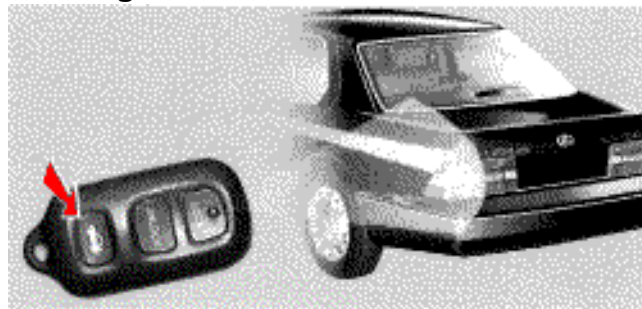

When you keep the button pushed for about 1 second, you can unlock the trunk lid. One beep sounds.

Sounding an alarm

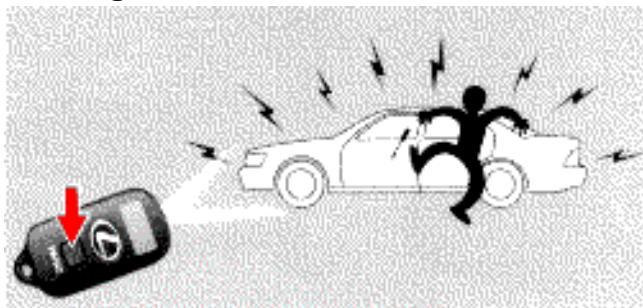

When you push the “PANIC” button, an alarm sounds to deter any person trying to break into or damage your vehicle.

The “PANIC” button functions only when the theft deterrent system is set. For the theft deterrent system, see page 90. If you want to stop the alarm, push the “PANIC” or “UNLOCK” button.

If the remote control features do not function correctly, consult your Lexus dealer.

For vehicles sold in U.S.A.

**FCC ID: HYQWDT – C
MADE IN JAPAN**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


For vehicles sold in Canada

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

DOORS

Locking with key

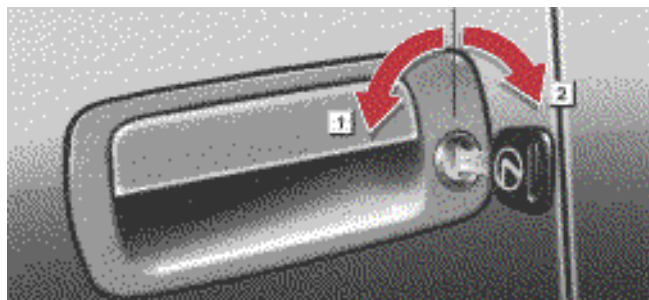


► 1 **Lock** 2 **Unlock**

Turn the key towards the front of the vehicle to lock and towards the back to unlock.

The doors lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all doors simultaneously. In the passenger's door lock, turning the key once will unlock all doors simultaneously.

Locking with inside lock button

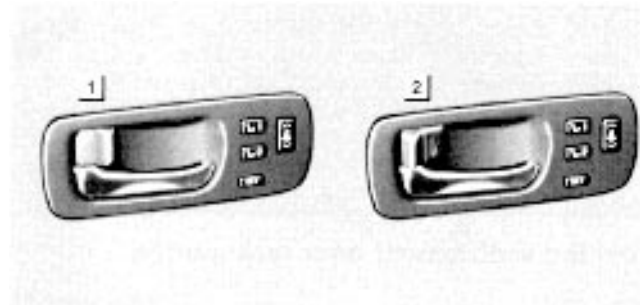

► 1 **Lock** 2 **Unlock**


Push in the lock button to lock and unlock the door.

When locked, the door cannot be opened with either the outside or inside door handle.

Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle. The door will not lock if the key is left in the ignition switch when closing the front doors.

**CAUTION**


Before driving, make sure the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

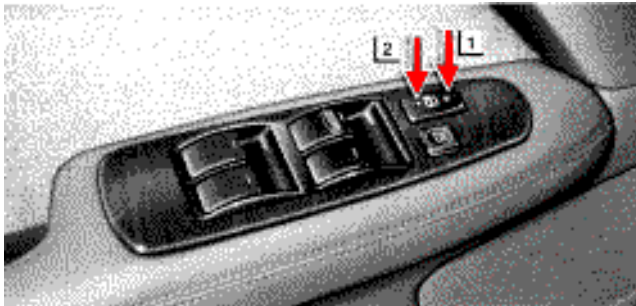Locking with power door lock switch

► 1 **Lock** 2 **Unlock**

To lock all the doors simultaneously, push the power door lock switch on the front side. Pushing on the rear side will unlock them.

The same switch is also equipped on the front passenger's side.

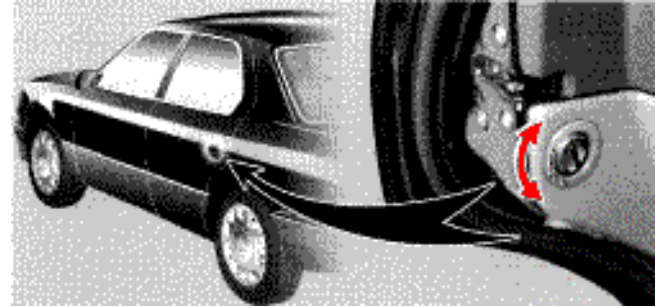Locking with rear door child-protector

Whenever small children are in the vehicle, lock the rear door so that it does not open from the inside. To do this, turn the knob to the “LOCK” position as shown next to the knob.

