

BASIC OPERATION

QUICK REFERENCE

Driver's seat -----	2
Steering wheel -----	3
Automatic transmission -----	4
Headlight and turn signal switch -----	5
Wiper switch -----	6

1. DRIVER'S SEAT

Power head restraint type



Seat adjustment

	Seat position		
	Seat cushion angle		
	Seat cushion height		
	Head restraint height		
	Seatback angle		
	Lumbar support		
—	Head restraint angle		

Manual head restraint type




Seat adjustment

	Seat position		
	Seat cushion angle		
	Seat cushion height		
	Seatback angle		
	Lumbar support		
—	Head restraint height		
—	Head restraint angle		


2. STEERING WHEEL

• TILT STEERING WHEEL

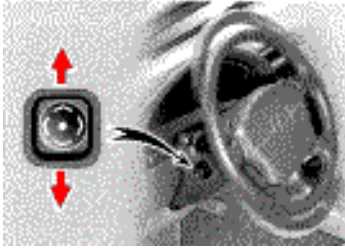

To tilt the steering wheel up or down to the desired angle, push the control switch in the required direction and release the button when the steering wheel reaches the desired angle.

• TELESCOPIC STEERING WHEEL

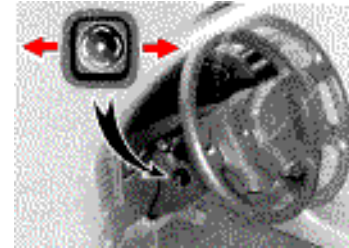

To move the steering wheel to the desired position, push the control switch away from you or pull it toward you until the steering wheel reaches the desired position.

3. AUTOMATIC TRANSMISSION




SELECTOR LEVER POSITION

- P:** Parking, engine starting and key removal position
- R:** Reverse position
- N:** Neutral position
- D:** Normal driving position (Shifting into overdrive possible)
- 3:** Position for engine braking (Shifting into overdrive not possible)*
- 2:** Position for more powerful engine braking
- L:** Position for maximum engine braking

*: When the cruise control is being used, even if you downshift from “D” to “3”, engine braking will not be applied because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 138.

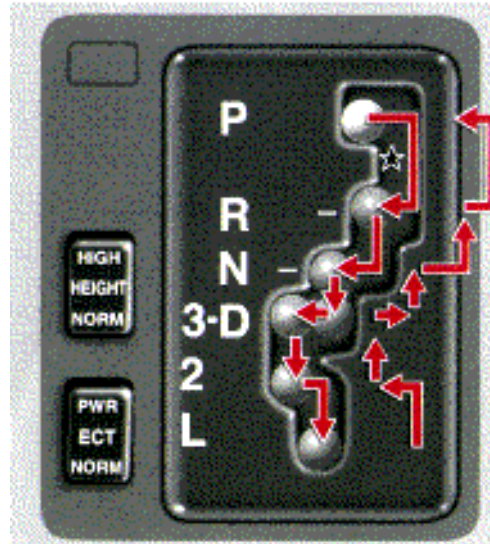




OPERATION OF SELECTOR LEVER



- ★ Shift while pressing the brake pedal. (Ignition switch must be in the “ON” position.)


4. HEADLIGHT AND TURN SIGNAL SWITCH

• HEADLIGHT SWITCH (FOR U.S.A.)




	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	Automatic light control
	High beams
	Headlight flasher


• HEADLIGHT SWITCH (FOR CANADA)

With the ignition OFF

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	Automatic light control

With the engine started and parking brake released

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on at full intensity.
	Automatic light control

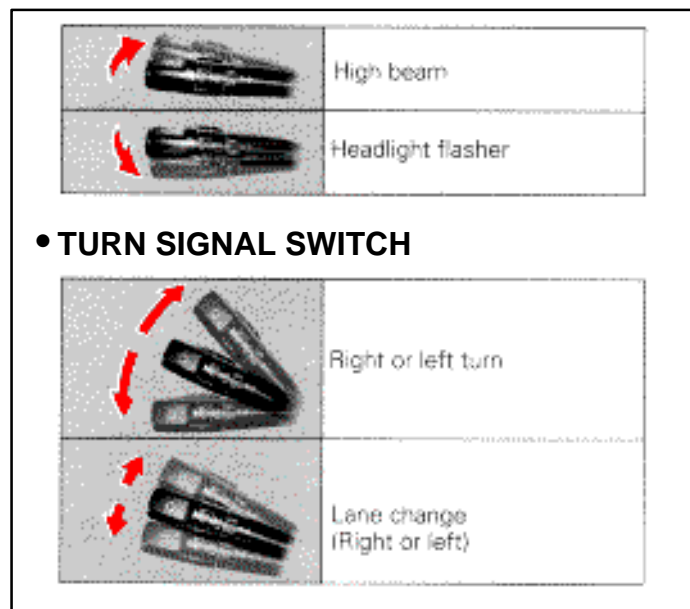

5. WIPER SWITCH

