


SECTION 1 – 5

INSTRUMENTS AND CONTROLS


Exterior equipment

Hood-----	48
Trunk lid-----	48
Fuel tank cap-----	50
Moon roof-----	52

HOOD

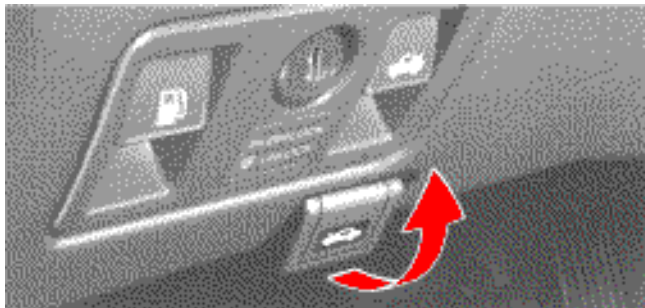


To open the hood, pull the hood lock release lever under the instrument panel. The hood will spring up slightly.

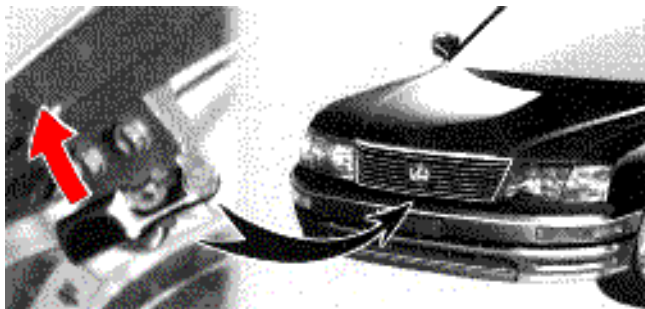

Insert your fingers under the hood, push up the auxiliary catch lever and lift the hood.

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. Then lower the hood and make sure it locks.


TRUNK LID

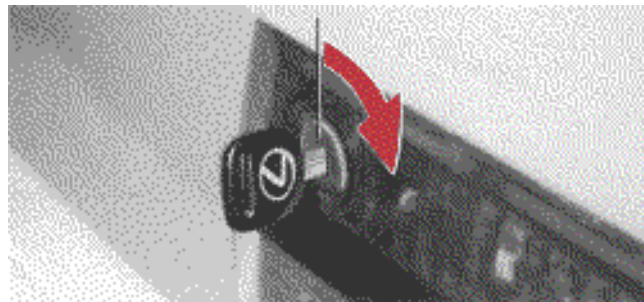

To unlock the trunk lid, insert the master key and turn it clockwise.

To close the trunk lid, lower it and press down on it. After closing the trunk lid, try pulling it up to make sure it is securely closed.

The trunk lid can be unlocked using the wireless remote control transmitter. For details, see page 10.

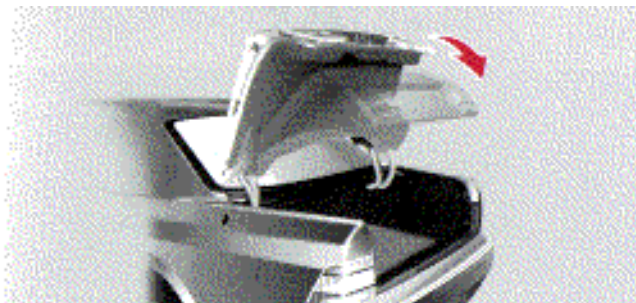

To open the trunk lid, push it up. It fully opens. However, to prevent a rain from entering the vehicle, it is designed to stop partway when you pull down the fully opened trunk lid lightly.



CAUTION


Keep the trunk lid closed while driving. This not only keeps the luggage from being thrown out, but also prevents exhaust gases from entering the vehicle.

Trunk lid opener



► ① *Main switch* ② *Operative* ③ *Inoperative*

To open the trunk lid while sitting in the driver's seat, pull the lever with the main switch not pushed in.

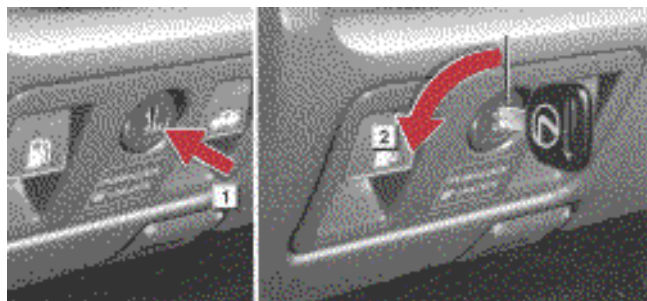

- 1 If you do not want to activate the trunk lid opener system, push in the main switch.
- 2 To activate the system, insert the master key and turn it counterclockwise.

To protect things put in the trunk, when you have your vehicle parked, push in the main switch.

FUEL TANK CAP



1. To open the fuel filler door, pull the lever under the instrument panel.



CAUTION

- Do not smoke, cause sparks or allow open flames when refuelling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.



2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. The removed cap can be stored on the back side of the fuel filler door.

It is not unusual to hear a slight swoosh when the cap is opened. When installing the cap, turn the cap clockwise until you hear a click.

If the cap is not tightened securely, the malfunction indicator lamp comes on. Make sure the cap is tightened securely.


The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.



CAUTION

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Lexus fuel tank cap for replacement. It has a built-in check valve to reduce fuel tank vacuum.


In case the opener is not actuated

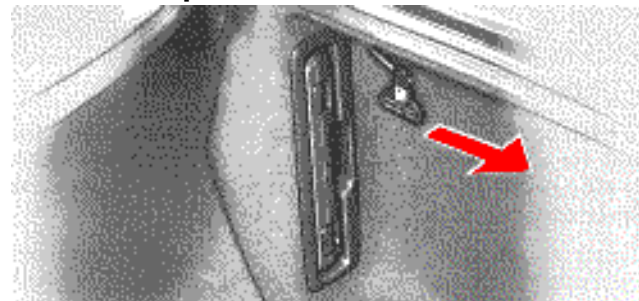

Pull the manual lever toward the back.

This is used in case the fuel filler door cannot be opened due to a discharged battery or other trouble.

MOON ROOF

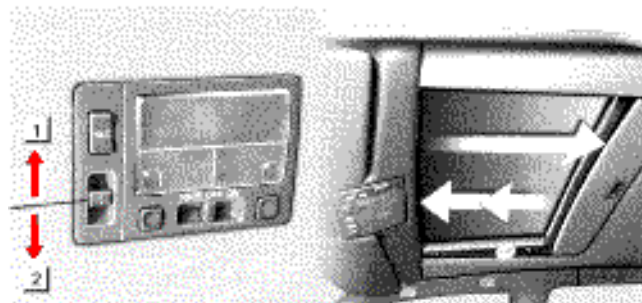


► 1 *Open* 2 *Close*

To slide open the moon roof, push the switch toward the back for about 1 second. The moon roof will fully open. To stop partway, push the switch briefly in the opposite direction or push the “TILT” switch.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened with the moon roof.

To close the moon roof, push the switch toward the front.

The moon roof will move while the switch is being pushed and stop when released. However, as a precaution, it stops partway before sliding fully closed, except when already more than three-quarters closed. Therefore, release the switch and then push it again to close it completely.

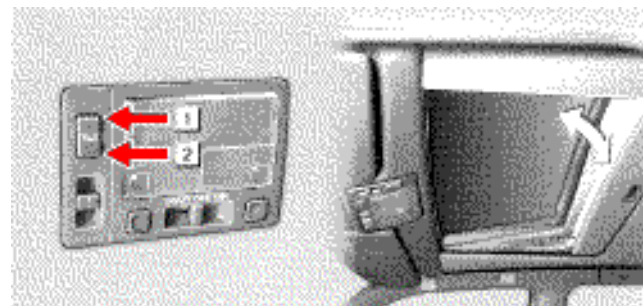

► 1 *Tilt up* 2 *Lower*

To tilt up the rear end of the moon roof, push the switch on the rear side or on the front side to lower it.

To operate the moon roof, the ignition key must be in the “ON” position. However, even if the ignition key is turned to the “ACC” or “LOCK” position, the moon roof can be operated until any of the doors is opened (or for about 45 seconds).

**CAUTION**

To avoid serious personal injury, you must do the following.

- While the vehicle is moving, always keep the head, hands and other parts of the body of all occupants away from the roof opening. Otherwise, you could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.
- Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands gets caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can become involved in serious accidents.
- Never sit on top of the vehicle around the roof opening.

