



## Circuit Diagram Glossary

### Daytona 660

This document is protected by copyright and may not, in whole or part be stored in a retrieval system, or transmitted in any form or by any means, copied, photocopied, translated or reduced to any machine-readable form without prior consent in writing from Triumph Motorcycles Limited.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

Triumph Motorcycles Limited reserves the right to make changes and alter specifications without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your authorised Triumph dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations in this publication are intended for reference use only and may not depict actual model component parts.

© Triumph Motorcycles Ltd. 05/2024 Issue 1

This page intentionally left blank

TABLE OF CONTENTS

<b>Glossary of Circuit Diagram Symbols</b>	<b>1</b>
<b>Main Wiring Harness Electrical Connectors</b>	<b>2</b>


GLOSSARY OF CIRCUIT DIAGRAM SYMBOLS

The following is a description of the symbols and information found in the circuit diagrams for this model.

NOTICE

Wire colours and connector pin references shown in the illustrations below are examples and may differ from those contained in circuit diagrams for this model.

Components with a Fly lead and an In-line Connector

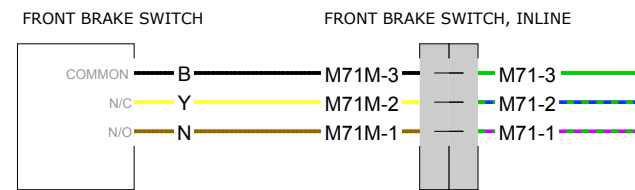

The illustration shows an example of a component with a fly lead and an in-line connector.


The component is represented by a white box, with fly lead wires leading to an in-line connector (shaded grey). Information provided with the component includes:

- The component name - located above the component.
- A function reference for each terminal - located inside the component, adjacent to the connecting wire (provided in English only).
- Wire colour references - located on each wire.
- An in-line connector name - located above the in-line connector.
- A component and pin number reference - located on each wire entering the in-line connector.

In the above example, the component and pin number references can be interpreted as follows:

M71	Component reference for the front brake switch
M	Identifies the mating connector (component side only)
-	Separator
1, 2, 3	Connector pin number reference

Components with an Integral Connector

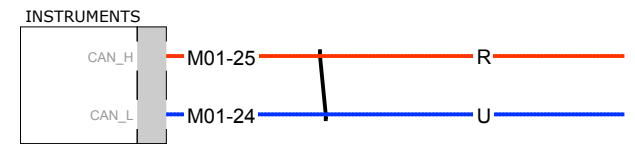

The illustration shows an example of a component with an integral connector.


The component is identified by a white box, with a grey shaded area representing the integral connector. Information provided with the component includes:

- The component name - located above the component.
- A function reference for each terminal - located inside the component, adjacent to the connecting wire (provided in English only).
- Wire colour references - located on each wire.
- A component and pin number reference - located on each wire entering the integral connector.

In the above example, the component and pin number references can be interpreted as follows:

M01	Component reference for the instruments
-	Separator
24, 25	Connector pin number reference

Components with Multiple Integral Connectors

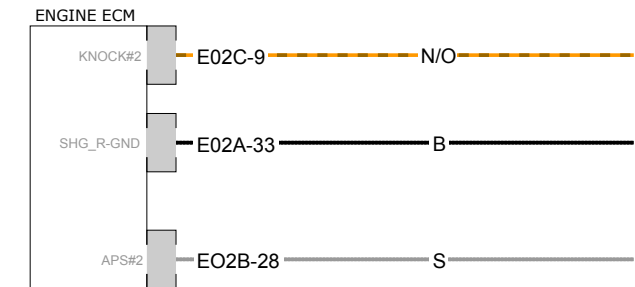


The illustration shows an example of a component with multiple integral connectors.

The multiple integral connectors can be identified by separated grey shaded areas (as shown), or by a grey shaded area that is divided into multiple sections by black line(s).

The above example shows an engine ECM with three integral connectors, connectors A, B and C. The component, connector and pin number references can be interpreted as follows:

E02	Component reference for the engine ECM
A, B, C	Connector reference
-	Separator
9, 28, 33	Connector pin number reference

Fuse Boxes

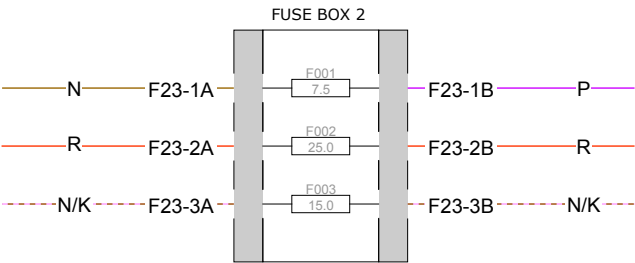

The illustration shows an example of a fuse box. A fuse is a device which protects a circuit in the event of a fault. The fuse will 'blow' should a short circuit occur, protecting that circuit from further damage.

Information provided with the fuse box includes:

- The fuse box name - located above the fuse box.
- A fuse number/location reference for each fuse - located above the fuse.
- A fuse rating (in Amps) for each fuse - located inside the fuse.
- A fuse box, terminal number and terminal block reference - located on each wire entering the fuse box.

In the above example, the fuse box, terminal number and terminal block references can be interpreted as follows:

F	Reference code for a fuse box
2	Denotes the type of fuse box: 1 = Fuse box 1 (Main fuse) 2 = Fuse box 2 (Individual circuit protection)


3	Indicates the number of fuses contained in the fuse box
-	Separator
1, 2, 3	Connector terminal number reference
A or B	Terminal block reference A (power in) or B (power out)

Relays

A relay is effectively an electromagnetic switch. To close the relay contacts and complete the circuit, an electromagnet in the relay is energised which causes the relay contacts to close, making the circuit complete.


Relays are used when the electrical current is too great for a mechanical switch, usually when the switching must be done quickly to prevent arcing across the switch contacts. If a mechanical switch were used, the mechanical switch contacts would quickly burn away.

Relays Connected with a Single Socket Connector

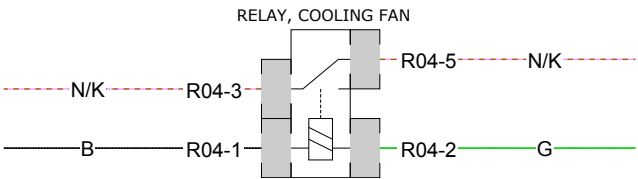

The illustration above shows an example of a relay connected to the wiring harness with a single socket relay connector.

A pin diagram of a typical single socket relay connector is shown below.

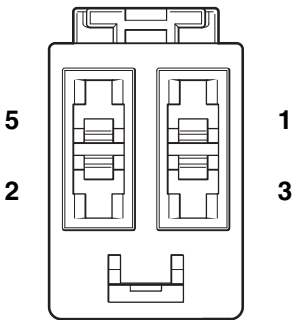

# Glossary Of Circuit Diagram Symbols


Information provided on the circuit diagram for relays with a single socket harness connector includes:

- The relay name - located above the relay.
- A relay and terminal number reference - located on each wire entering the relay connector terminals.

In the above example, the relay and terminal number reference can be interpreted as follows:


R	Indicates the component is a relay
04	Reference number for the relay (cooling fan relay in the example shown)
-	Separator
1, 2, 3, 5	Connector terminal number reference

## Relays connected with a Dual Socket Connector

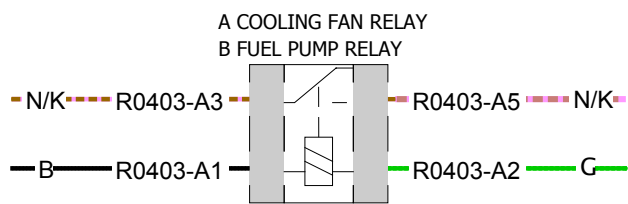

The illustration above shows an example of a relay connected to the wiring harness with a dual socket relay connector.

A dual socket relay connector provides sockets for two individual relays, socket A and socket B. A pin diagram of a typical dual socket relay connector is shown below.

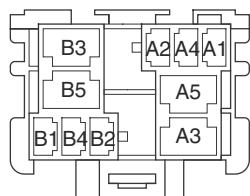


Information provided on the circuit diagram for relays with a dual socket harness connector includes:

- The names of the relays connected to sockets A and B - located above the relay.
- A dual relay and terminal number reference - located on each wire entering the relay connector terminals.

In the above example, the relay and terminal number reference can be interpreted as follows:


R	Indicates the component is a relay
04	Reference number for the relay connected to socket A (cooling fan relay in the example shown)
03	Reference number for the relay connected to socket B (fuel pump relay in the example shown)
-	Separator
A or B	Socket reference (socket A or socket B) In the example above, all references show socket A. <b>This indicates that the component shown is the cooling fan relay.</b>
1, 2, 3, 5	Connector terminal number reference for the socket/relay identified

## Ring Terminals

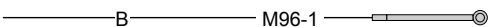

The illustration shows the symbol used to identify a ring terminal (commonly used as ground points). A ring terminal reference is provided on the wire entering the terminal.

Shielded Wires

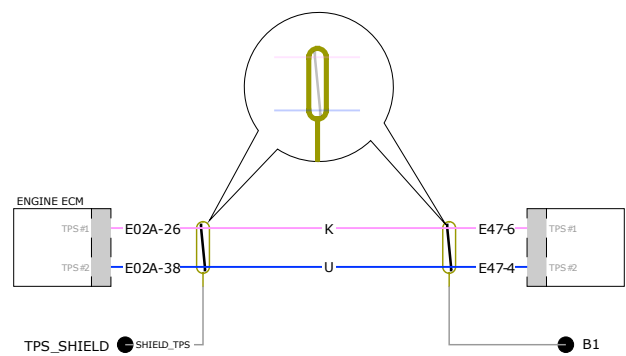


The illustration shows the symbol used to identify wires that are shielded against electromagnetic interference.

Examples of components that have shielded wires include:

- ABS wheel speed sensors
- Immobiliser antenna
- Throttle position sensor
- USB socket

The wire shielding is typically connected to ground.

Splices

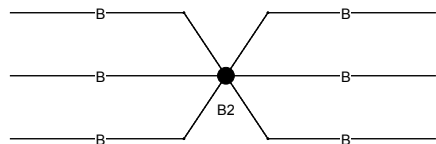


The illustration shows an example of a splice.

A splice is a hard cable joint where two or more cables are joined in the wiring harness. A splice is a potential source of both open and short circuits.

A splice reference code is provided at the nearest convenient location to the splice symbol.

Twisted Wires

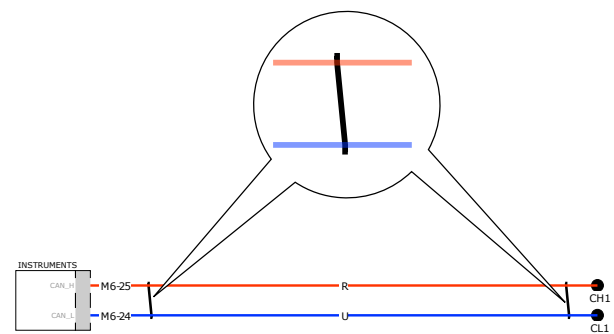

The illustration shows the symbol used to indicate a pair of wires that are twisted together, such as CAN circuit wires.

Starter Motor Grounding





Starter motors fitted to Triumph motorcycles are connected to ground through the mating faces of the starter motor body and the crankcase.

Key To Wiring Colour Codes


Code	Wiring Colour
B	Black
U	Blue
N	Brown
G	Green
S	Slate/Grey
O	Orange
K	Pink
R	Red
P	Purple
W	White
Y	Yellow
LG	Light Green
LU	Light Blue

MAIN WIRING HARNESS ELECTRICAL CONNECTORS


The table below shows the connector pin diagrams for each electrical connector on the main wiring harness for this model.

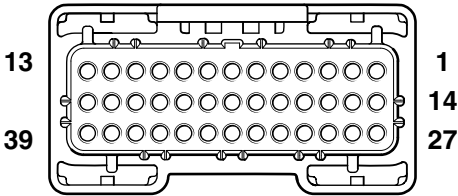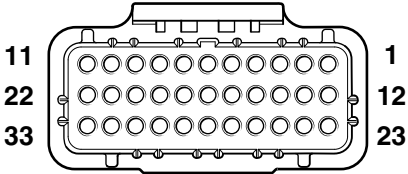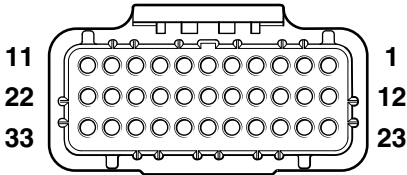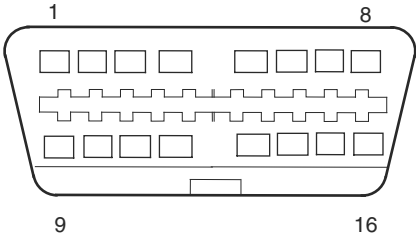 <p>E02A - Engine ECM connector A</p>	 <p>E02B - Engine ECM connector B</p>
 <p>E02C - Engine ECM connector C</p>	 <p>E04 - Diagnostic connector</p>




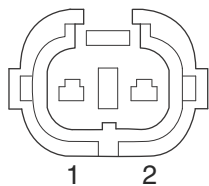


E05 - Crankshaft position sensor

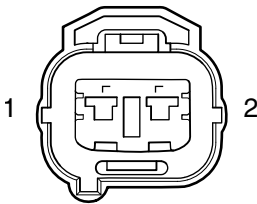

E06 - Fuel pump




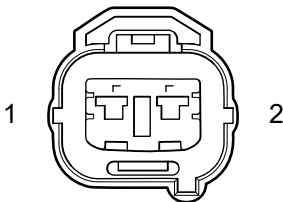



E07 - Fuel level sensor

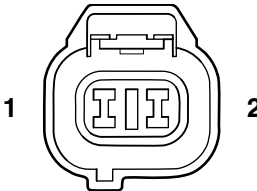

E09 - Purge valve

Main Wiring Harness Electrical Connectors

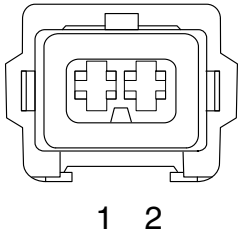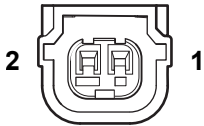
 <p>1 2</p> <p>E10 - Coolant temperature sensor</p>	 <p>2 1</p> <p>E11 - Fuel injector 1 E12 - Fuel injector 2 E13 - Fuel injector 3</p>
 <p>2 1 4 3</p> <p>E15 - Gear position sensor</p>	 <p>2 1 4 3</p> <p>E16 - Oxygen sensor, bank 1 sensor 1</p>

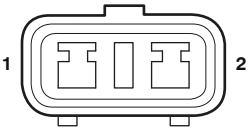


E17 - Side stand switch



E19 - Cooling fan 1




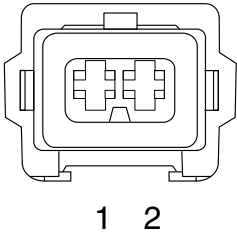



E20 - Intake air temperature sensor

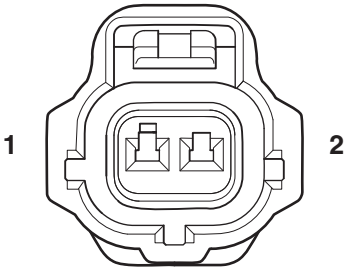


E21 - Ignition coil 1  
E22 - Ignition coil 2  
E23 - Ignition coil 3

Main Wiring Harness Electrical Connectors

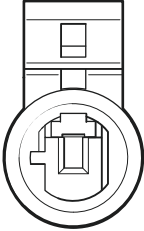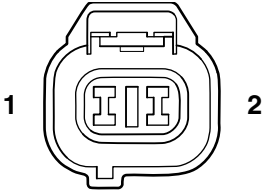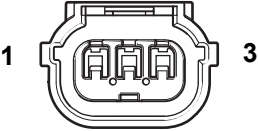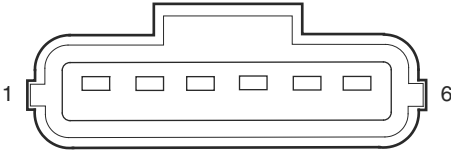
	
E25 - Oil pressure sensor	E37 - Secondary air injection
	
E38 - Manifold absolute pressure sensor E39 - Ambient air pressure sensor	E47 - Throttle body

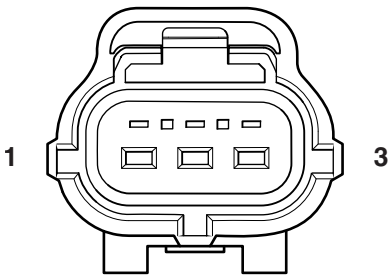


E48 - Triumph shift assist

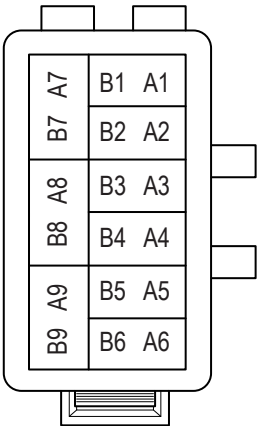

F19 - Fuse box 1




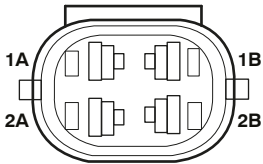



F22 - Fuse box 2

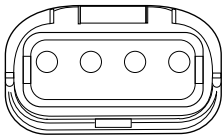


H03 - Rear light

Main Wiring Harness Electrical Connectors

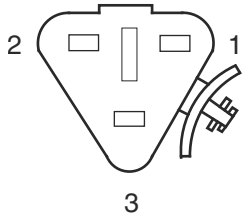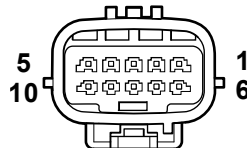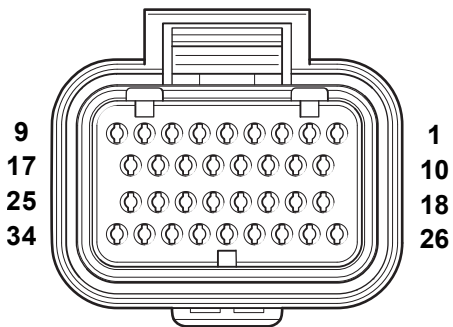	
F32 - Fuse box 3	H05 - Engine subharness
	
H10 - Sub harness ground	M01 - Instruments

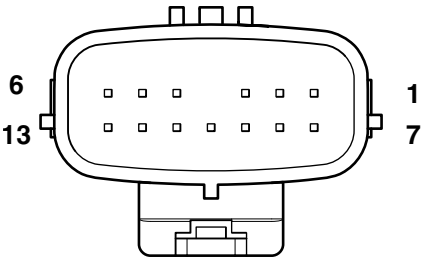


M02A - Left handlebar switch housing connector A

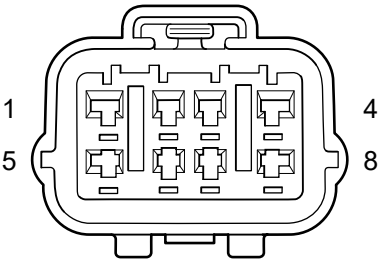

M02B - Left handlebar switch housing connector B







M04A - Front left direction indicator connector A  
M04B - Front left direction indicator connector B

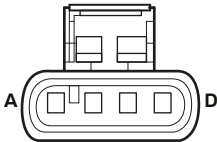


M07 - Headlight


Main Wiring Harness Electrical Connectors

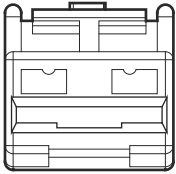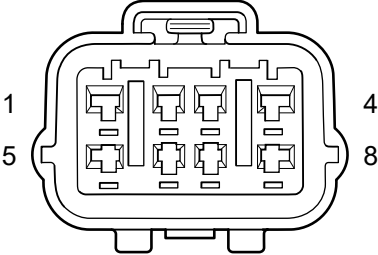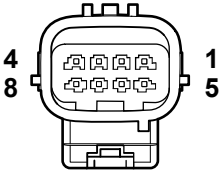 <p>M11A - Horn connector A M11B - Horn connector B</p>	 <p>M13 - Ignition switch</p>
 <p>M14A - Right handlebar switch housing connector A</p>	 <p>M19A - Front right direction indicator connector A M19B - Front right direction indicator connector B</p>




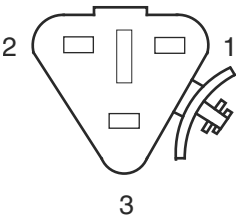


M26 - Rear brake switch

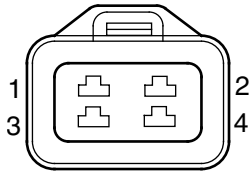

M28 - Starter solenoid

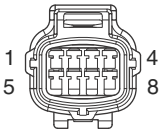


M36 - Alarm

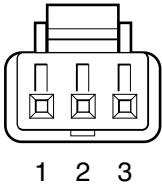


M37 - Rear light


Main Wiring Harness Electrical Connectors

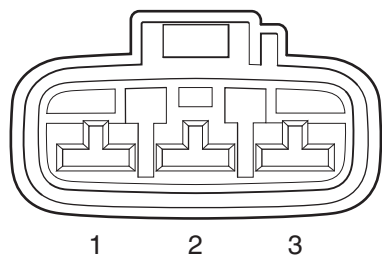


M48A - Regulator rectifier connector A

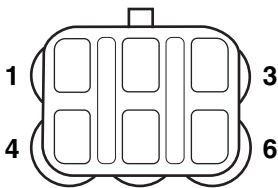


M51 - Fall detection switch

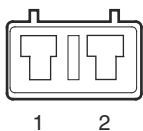


M57 - Front ABS wheel speed sensor  
M58 - Rear ABS wheel speed sensor

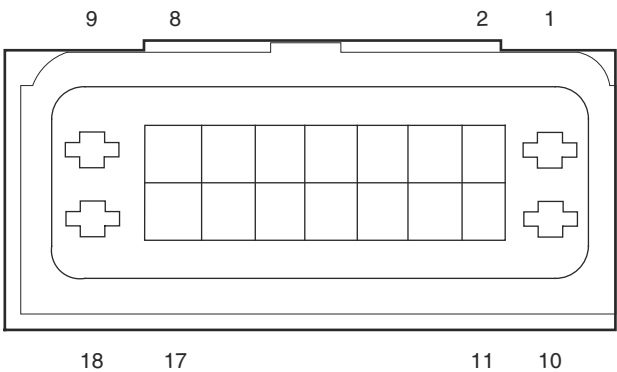


M59 - ABS modulator

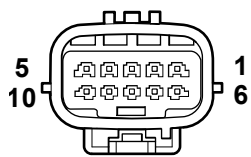


M68 - Immobiliser/TPMS ECM

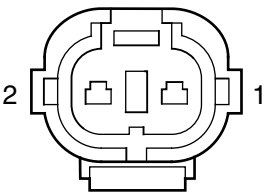


M70 - USB socket

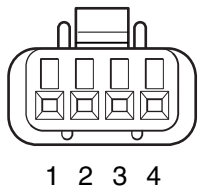

M72 - Bluetooth module

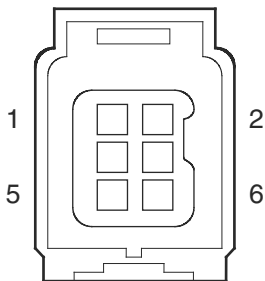


M73 - Twist grip position sensor

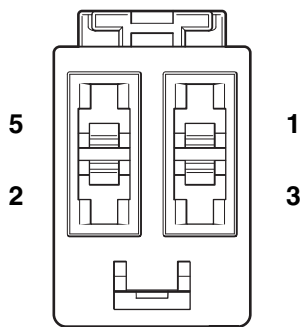


- R04 - Cooling fan relay
- R03 - Fuel pump relay
- R05 - Horn relay
- R11 - Dip beam relay
- R09 - Starter motor relay
- R07 - Engine management system relay
- R12 - Main beam relay


Main Wiring Harness Electrical Connectors

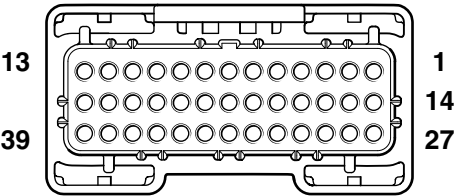


E02A - Engine ECM connector A

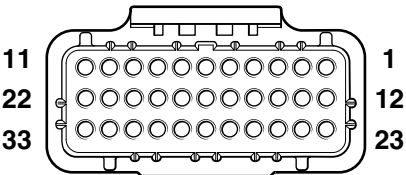


E02B - Engine ECM connector B

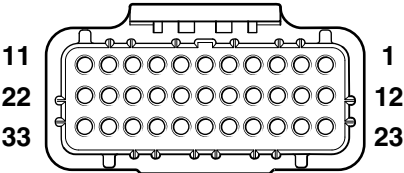


E02C - Engine ECM connector C

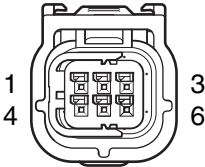


E04 - Diagnostic connector

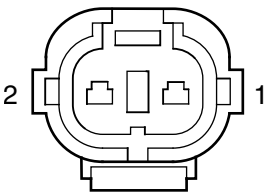


E05 - Crankshaft position sensor  
M70 - USB socket

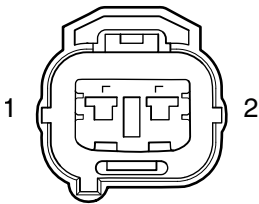

E06 - Fuel pump




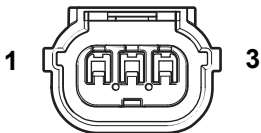






E07 - Fuel level sensor  
E38 - Manifold absolute pressure sensor  
E39 - Ambient air pressure sensor

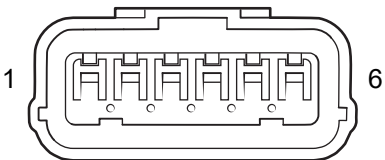







E08 - Throttle body combined

Main Wiring Harness Electrical Connectors

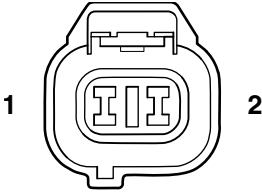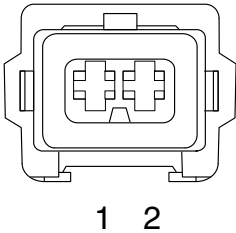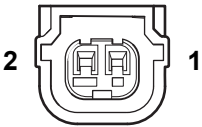
	
E09 - Purge valve	E10 - Coolant temperature sensor
	
E11 - Fuel injector 1 E12 - Fuel injector 2 E13 - Fuel injector 3	E15 - Gear position sensor

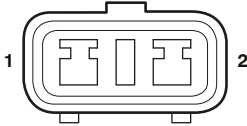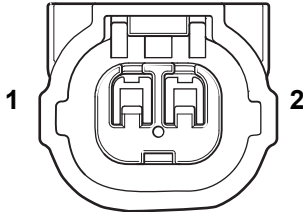 <p>E16 - Oxygen sensor, bank 1 sensor 1 E26 - Oxygen sensor, bank 1 sensor 2</p>	 <p>E17 - Side stand switch</p>
 <p>E19 - Cooling fan 1</p>	 <p>E20 - Intake air temperature sensor</p>


Main Wiring Harness Electrical Connectors

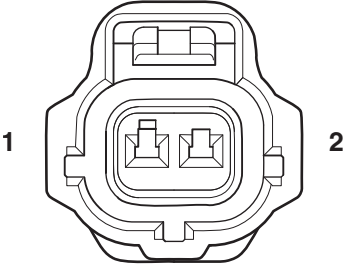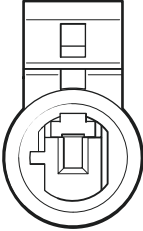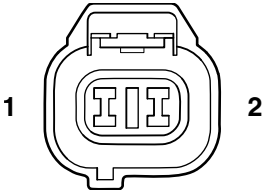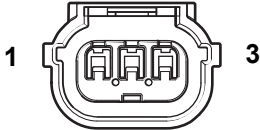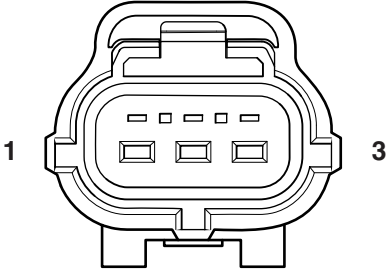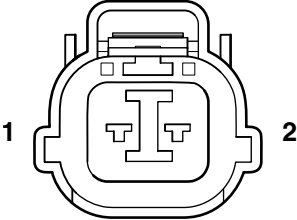 <p>E21 - Ignition coil 1 E22 - Ignition coil 2 E23 - Ignition coil 3</p>	 <p>E25 - Oil pressure sensor</p>
 <p>E37 - Secondary air injection</p>	 <p>E38 - Manifold absolute pressure sensor E39 - Ambient air pressure sensor</p>
 <p>E48 - Triumph shift assist</p>	 <p>E52 - DBW Motor</p>




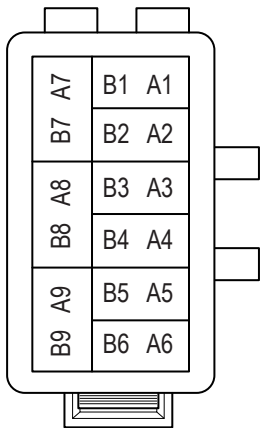


F19 - Fuse box primary  
F29 - Fuse box secondary

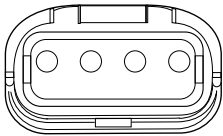

H03 - Rear light

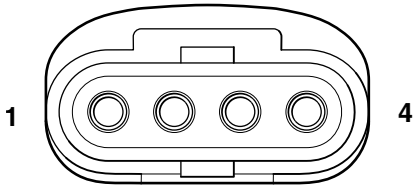


H03M - Rear light subharness

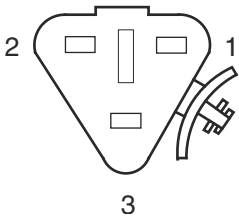


H04 - Heated grips


Main Wiring Harness Electrical Connectors

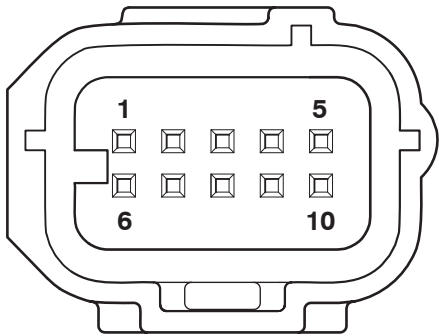


H05 - Engine subharness

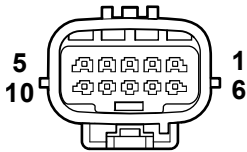


H05M - Engine subharness




H10 - Sub harness ground

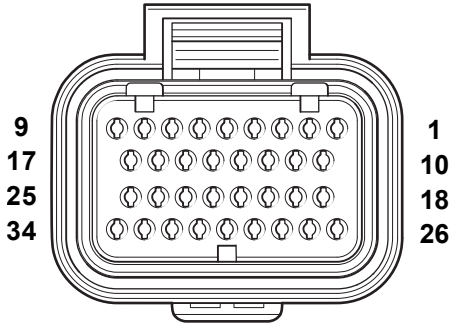


M01 - Instruments

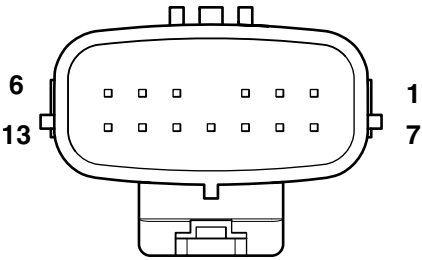


M02A - Left handlebar switch housing connector A

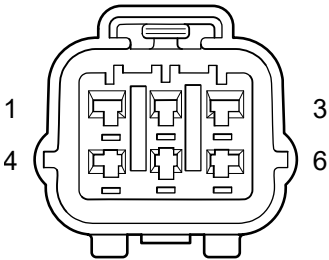

M02B - Left handlebar switch housing connector B

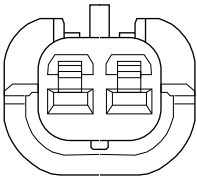


M04 - Front left direction indicator connector  
M19 - Front right direction indicator  
M35 - Rear left direction indicator  
M38 - Rear right direction indicator

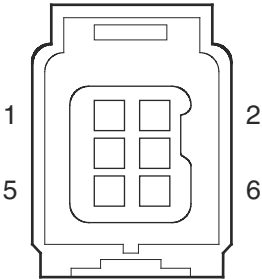


M07 - Headlight  
M73 - Twist grip position sensor


Main Wiring Harness Electrical Connectors

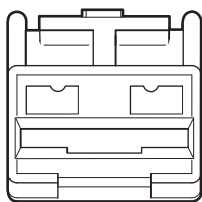


M11A - Horn connector A  
M11B - Horn connector B

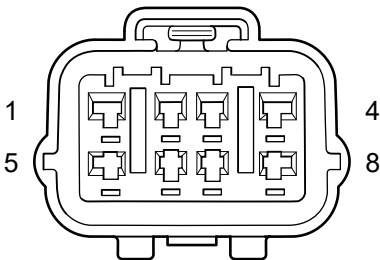


M13 - Ignition switch

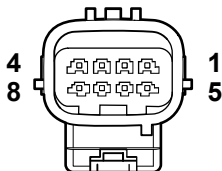


M14 - Right handlebar switch housing connector

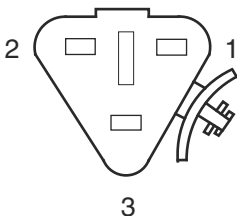


M26 - Rear brake switch

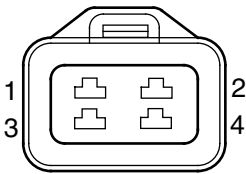


M28A - Starter solenoid connector A

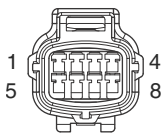

M36 - Alarm




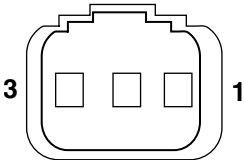



M37 - Rear light

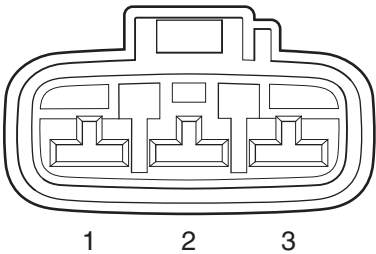

M48A - Regulator rectifier connector A

Main Wiring Harness Electrical Connectors

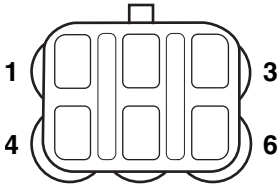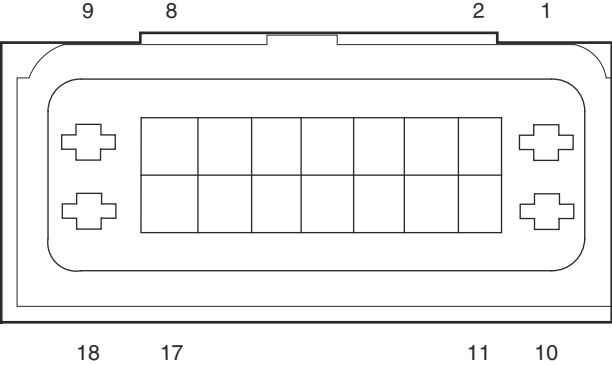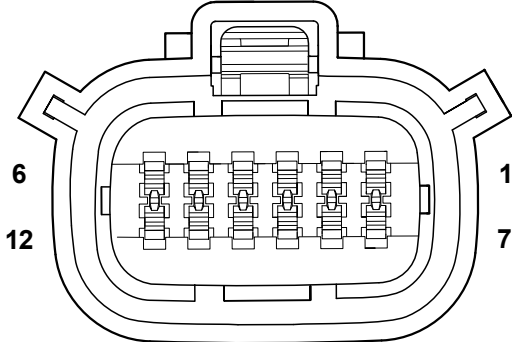	
M51 - Fall detection switch	M57 - Front ABS wheel speed sensor M58 - Rear ABS wheel speed sensor
	
M59 - ABS modulator	M68 - Immobiliser/TPMS ECM

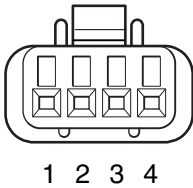


M72 - Bluetooth module



M89 - License plate light




M99B - Crankcase earth

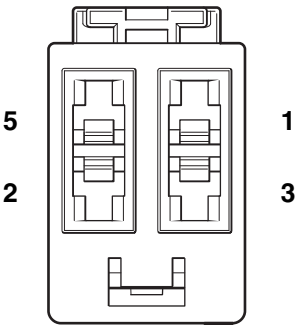


R03 - Fuel pump relay  
R04 - Cooling fan relay  
R05 - Horn relay  
R07 - Engine management system relay  
R09 - Starter motor relay  
R12 - Main beam relay


Main Wiring Harness Electrical Connectors

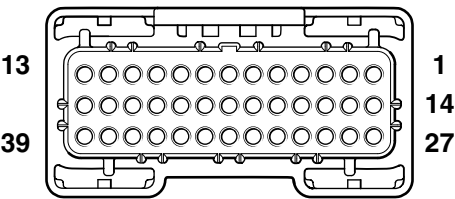


E02A - Engine ECM connector A

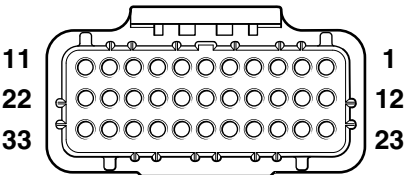

E02B - Engine ECM connector B

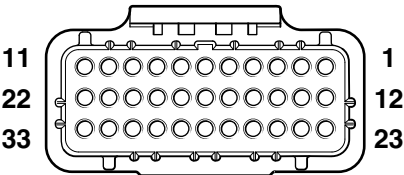


E02C - Engine ECM connector C

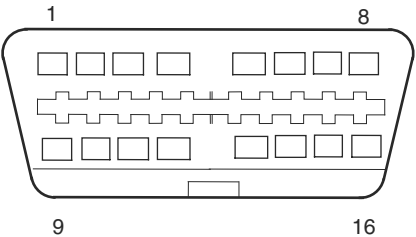


E04 - Diagnostic connector




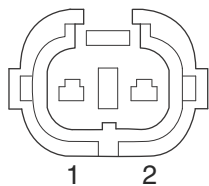


E05 - Crankshaft position sensor

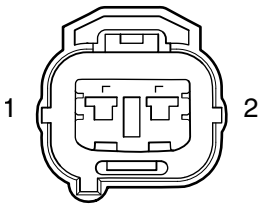

E06 - Fuel pump




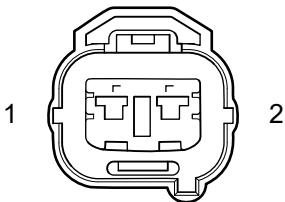



E07 - Fuel level sensor

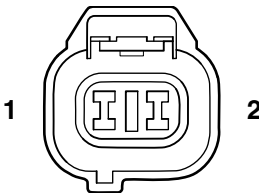

E09 - Purge valve

Main Wiring Harness Electrical Connectors

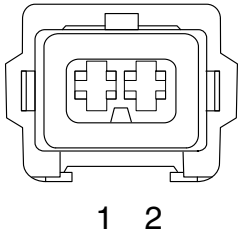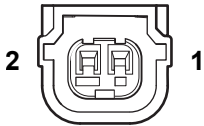
 <p>Diagram of a 2-pin electrical connector. The pins are labeled 1 and 2.</p>	 <p>Diagram of a 2-pin electrical connector. The pins are labeled 1 and 2.</p>
E10 - Coolant temperature sensor	E11 - Fuel injector 1 E12 - Fuel injector 2 E13 - Fuel injector 3
 <p>Diagram of a 4-pin electrical connector. The pins are labeled 1, 2, 3, and 4.</p>	 <p>Diagram of a 4-pin electrical connector. The pins are labeled 1, 2, 3, and 4.</p>
E15 - Gear position sensor	E16 - Oxygen sensor, bank 1 sensor 1

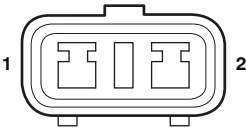


E17 - Side stand switch



E19 - Cooling fan 1

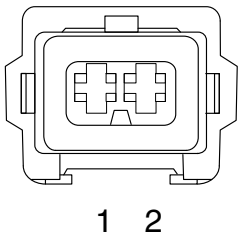


E20 - Intake air temperature sensor

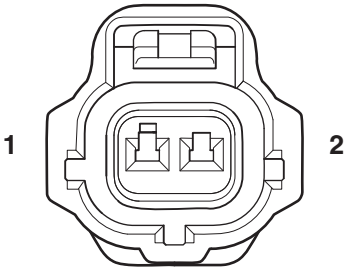


E21 - Ignition coil 1  
E22 - Ignition coil 2  
E23 - Ignition coil 3

Main Wiring Harness Electrical Connectors

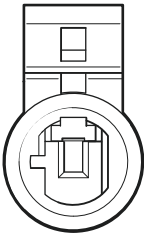


E25 - Oil pressure sensor

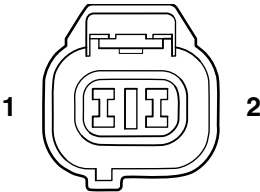


E37 - Secondary air injection




E38 - Manifold absolute pressure sensor  
E39 - Ambient air pressure sensor

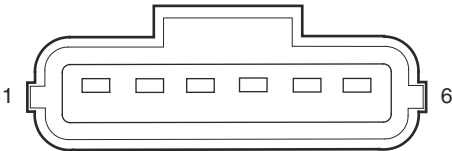


E47 - Throttle body

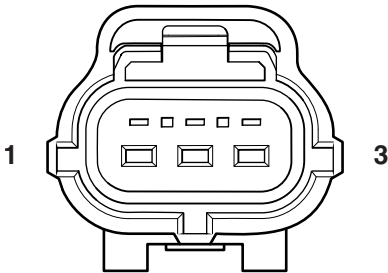


E48 - Triumph shift assist

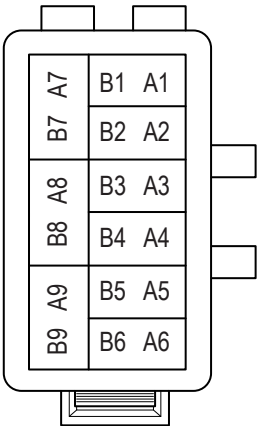

F19 - Fuse box 1




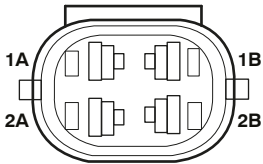



F22 - Fuse box 2

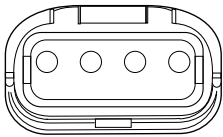


H03 - Rear light

Main Wiring Harness Electrical Connectors

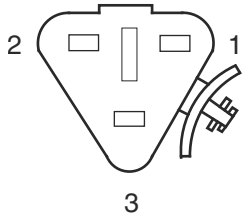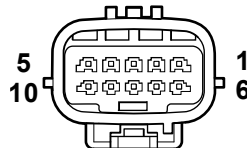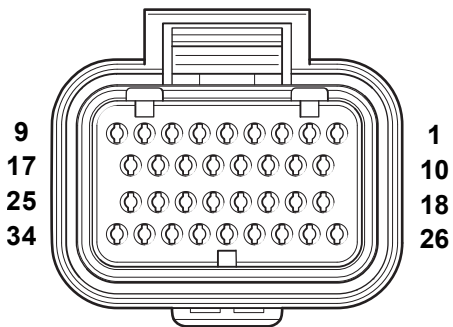	
F32 - Fuse box 3	H05 - Engine subharness
	
H10 - Sub harness ground	M01 - Instruments

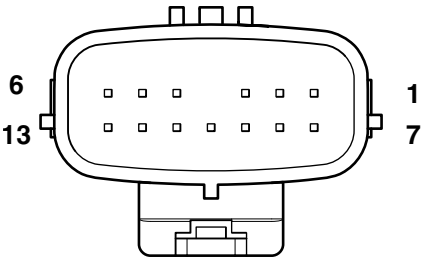


M02A - Left handlebar switch housing connector A

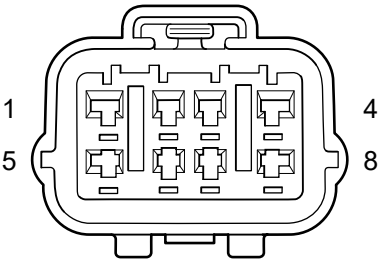

M02B - Left handlebar switch housing connector B







M04A - Front left direction indicator connector A  
M04B - Front left direction indicator connector B

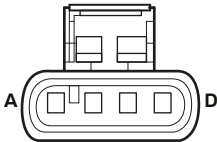


M07 - Headlight


Main Wiring Harness Electrical Connectors

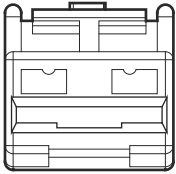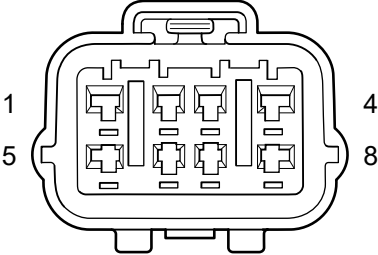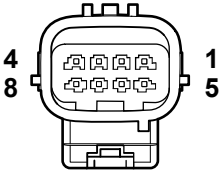 <p>M11A - Horn connector A M11B - Horn connector B</p>	 <p>M13 - Ignition switch</p>
 <p>M14A - Right handlebar switch housing connector A</p>	 <p>M19A - Front right direction indicator connector A M19B - Front right direction indicator connector B</p>




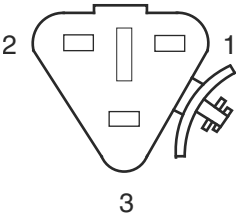


M26 - Rear brake switch

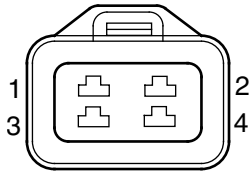

M28 - Starter solenoid




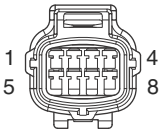



M36 - Alarm

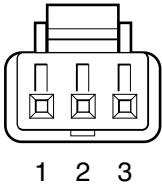


M37 - Rear light

Main Wiring Harness Electrical Connectors

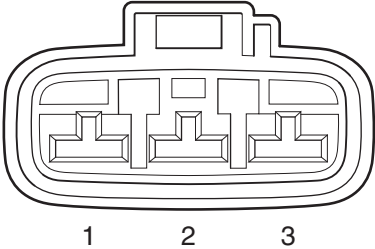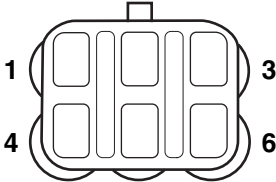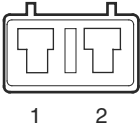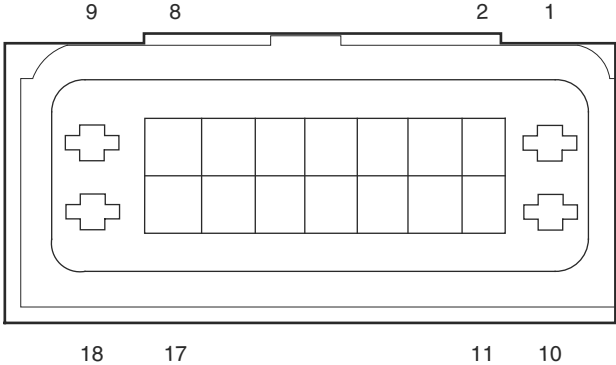
	
M48A - Regulator rectifier connector A	M51 - Fall detection switch
	
M57 - Front ABS wheel speed sensor M58 - Rear ABS wheel speed sensor	M59 - ABS modulator

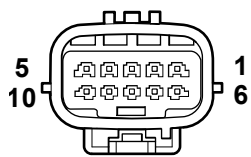


M68 - Immobiliser/TPMS ECM

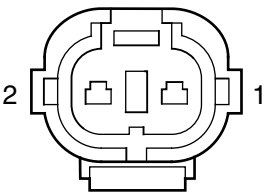


M70 - USB socket

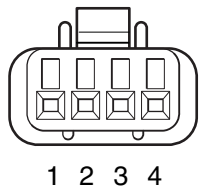

M72 - Bluetooth module

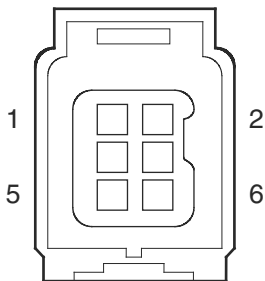

M73 - Twist grip position sensor

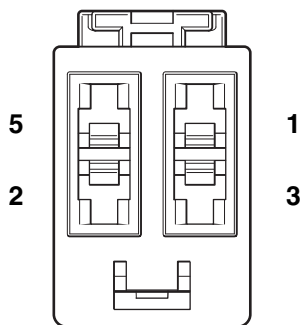

- R04 - Cooling fan relay
- R03 - Fuel pump relay
- R05 - Horn relay
- R11 - Dip beam relay
- R09 - Starter motor relay
- R07 - Engine management system relay
- R12 - Main beam relay