

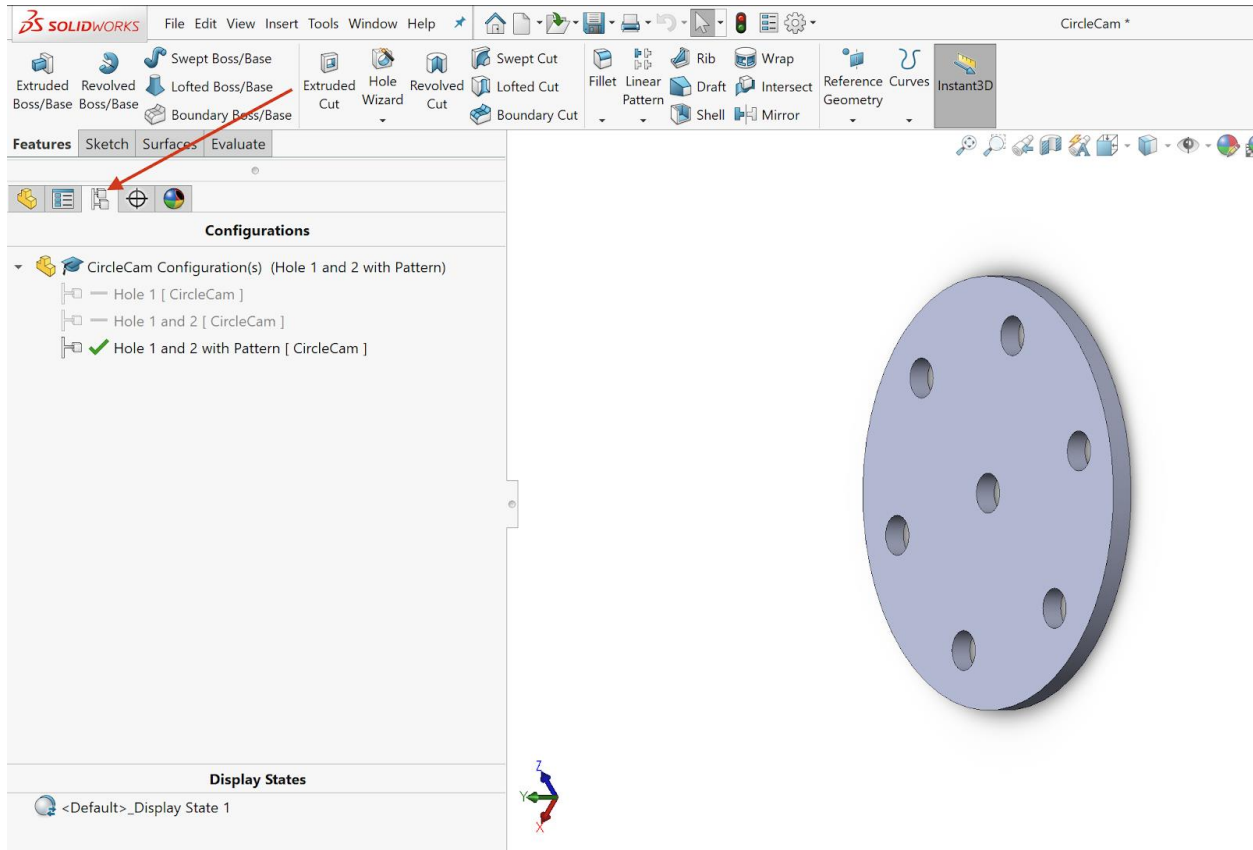


Switching Configurations:

Configurations in SolidWorks are used to show different sets of features/measurements on the same part. In order to access different configurations of the cam go to the configurations tab.

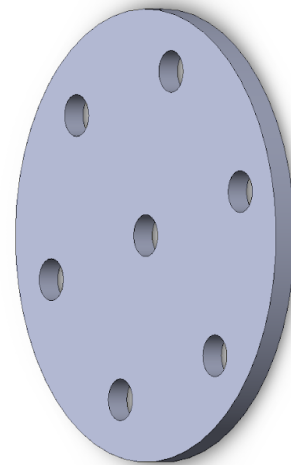

From here you can click on the configuration you want to display and select show configuration

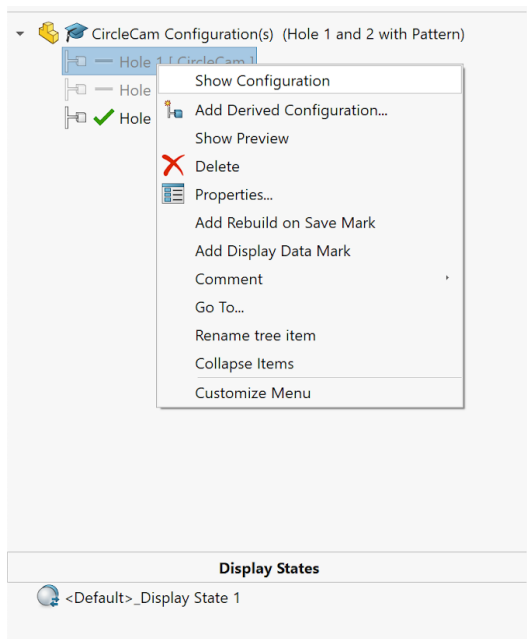

The selected configuration will automatically be displayed. In this configuration the cam has less holes.

