
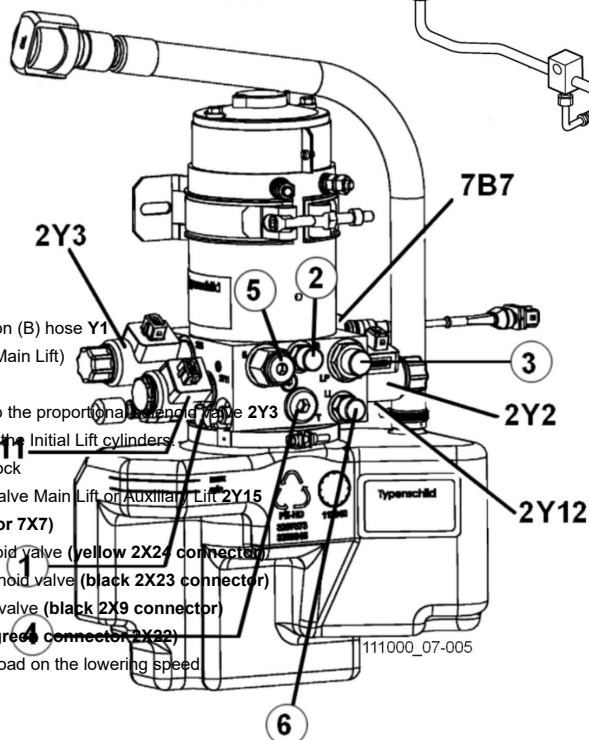



Configurations V08-01 and V08-02 type 1110

V08-01

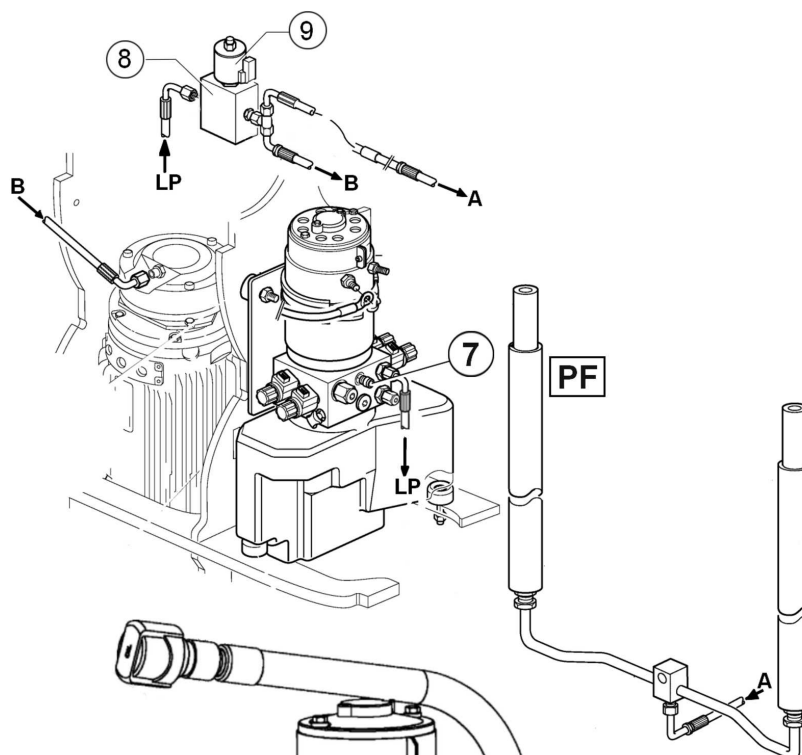

- 2 Brake assistance connection (B) hose Y1
- 3 Flexible mast connection (Main Lift)
- 4 Connector plug (T)
- 5 Pressure balance* linked to the proportional solenoid valve 2Y3
- 6 Flexible connection (LP for the Initial Lift cylinders)
- 8 Directional control valve block
- 9 Circuit selection solenoid valve Main Lift or Auxiliary Lift 2Y15
- 7B7 Pressure sensor (connector 7X7)
- 2Y3 Main lift proportional solenoid valve (yellow 2X24 connector)
- 2Y11 Main lift load retaining solenoid valve (black 2X23 connector)
- 2Y2 Initial lift lowering solenoid valve (black 2X9 connector)
- 2Y12 Switching solenoid valve (green connector 2X22)
- * Limits the influence of the load on the lowering speed

V08-02

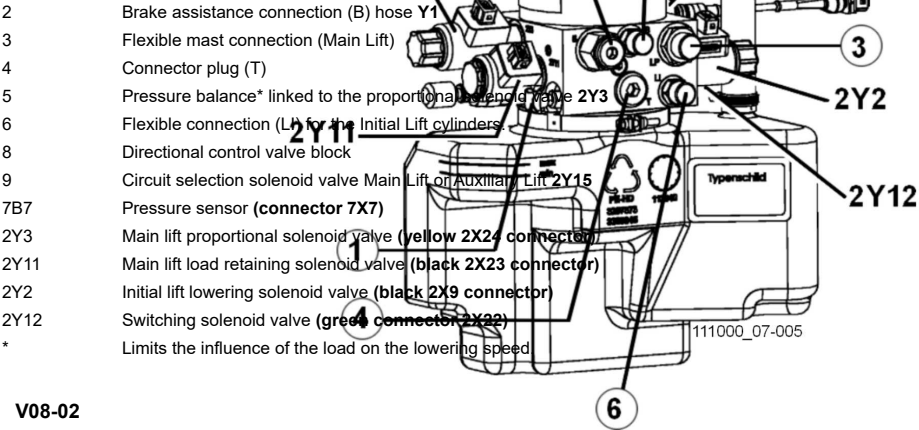



V08-02

- PF

Platform cylinders
- 1

Safety valve (return to reservoir)

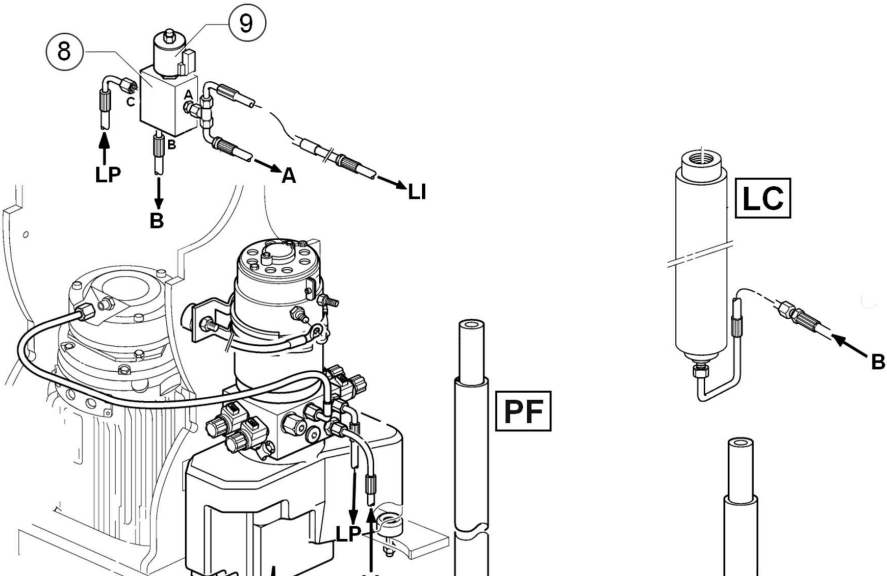

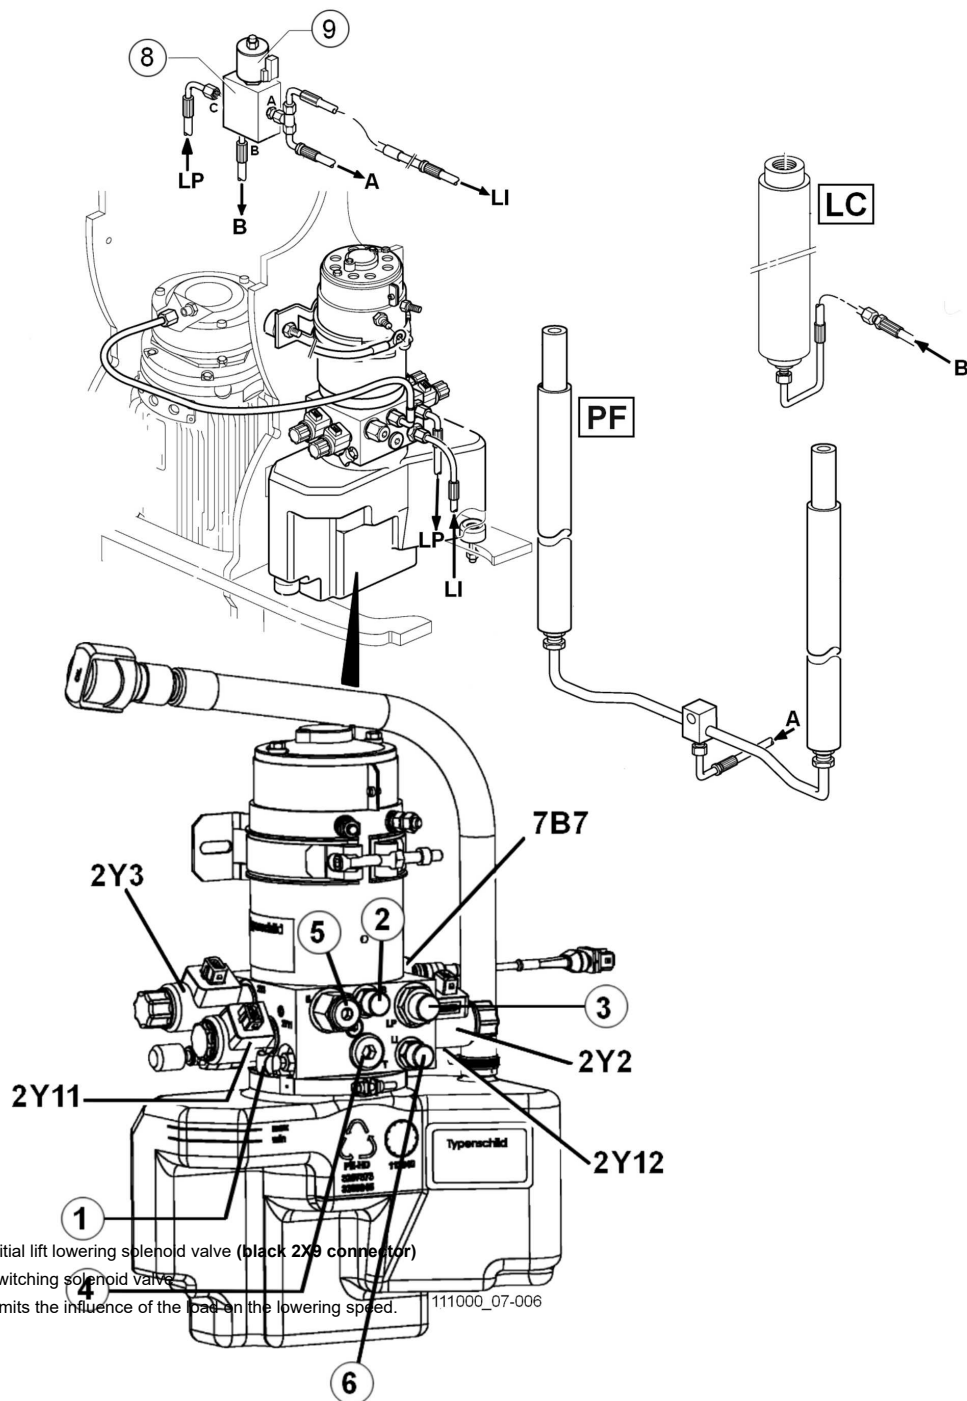


2Y2 Initial lift lowering solenoid valve (**black 2X23 connector**)

2Y12 Switching solenoid valve

* Limits the influence of the load on the lowering speed.

111000_07-006

LC	Auxiliary Lift cylinder (lift table)
PF	Platform cylinders
1	Safety valve (return to reservoir)
2	Brake assistance connection (B) hose Y1
3	Flexible mast connection (Main Lift)
4	Connector plug (T)
5	Pressure balance* linked to the proportional solenoid valve 2Y3
6	Flexible connection (LI) for the Initial Lift cylinders.
8	Control valve block for platform lift or auxiliary lift circuit
9	Circuit selection solenoid valve for platform lift or auxiliary lift 2Y15
7B7	Pressure sensor (connector 7X7)
2Y3	Main lift proportional solenoid valve (yellow 2X24 connector)
2Y11	Main lift load retaining solenoid valve (black 2X23 connector)

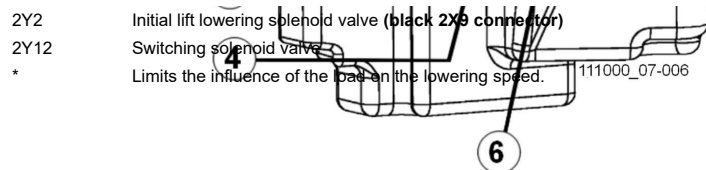

- LC Auxiliary Lift cylinder (lift table)
- PF Platform cylinders
- 1 Safety valve (return to reservoir)
- 2 Brake assistance connection (B) hose **Y1**
- 3 Flexible mast connection (Main Lift)
- 4 Connector plug (T)
- 5 Pressure balance* linked to the proportional solenoid valve **2Y3**
- 6 Flexible connection (LI) for the Initial Lift cylinders.
- 8 Control valve block for platform lift or auxiliary lift circuit
- 9 Circuit selection solenoid valve for platform lift or auxiliary lift **2Y15**
- 7B7 Pressure sensor (**connector 7X7**)
- 2Y3 Main lift proportional solenoid valve (**yellow 2X24 connector**)
- 2Y11 Main lift load retaining solenoid valve (**black 2X23 connector**)