




Linde Service Guide

Power (with brush wear detection)

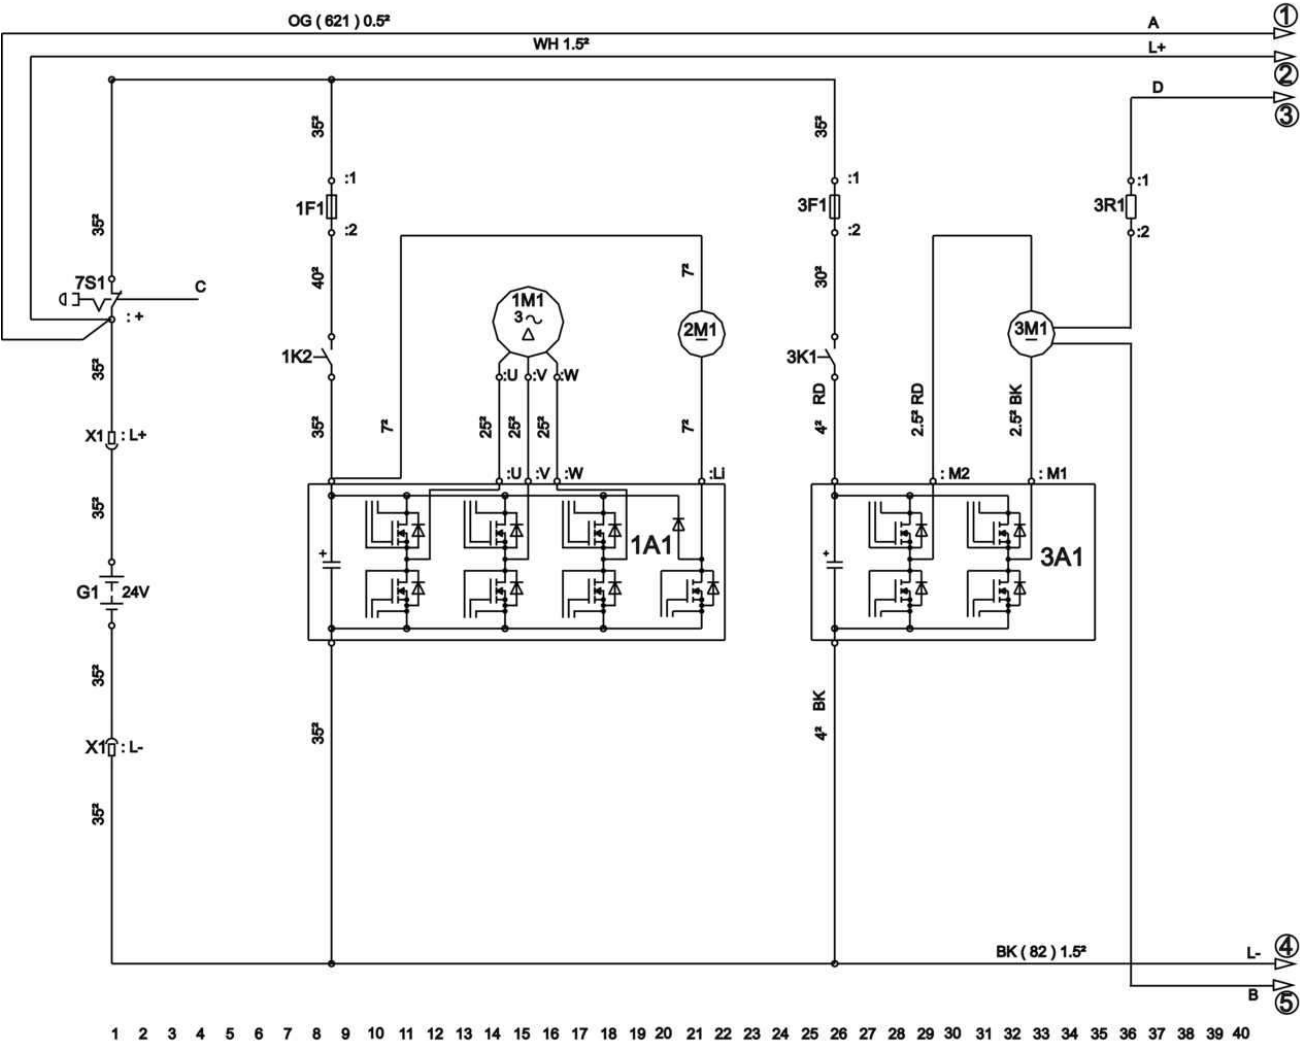

- 1A1
- Traction and initial lift controller 7-22
- 3A1
- Steering controller 25-35
- 1F1
- Traction / lift 250 A fuse 9
- 3F1
- Steering 80 A fuse 26
- G1
- Battery 1
- 1K2
- Traction / lift contact switch 9
- 3K1
- Steering contact switch 26
- 1M1
- Traction motor 14-17
- 2M1
- Pump motor 20-22
- 3M1
- Steering motor 31-33
- 3R1
- Brush wear safety resistor 36
- X1
- Battery connector

Code	Colour
BK	Black
WH	White
BU	Blue

OG	Orange
BN	Brown
GN	Green
VT	Violet
RD	Red
YE	Yellow
GY	Grey