


Basic equipment sheet 02

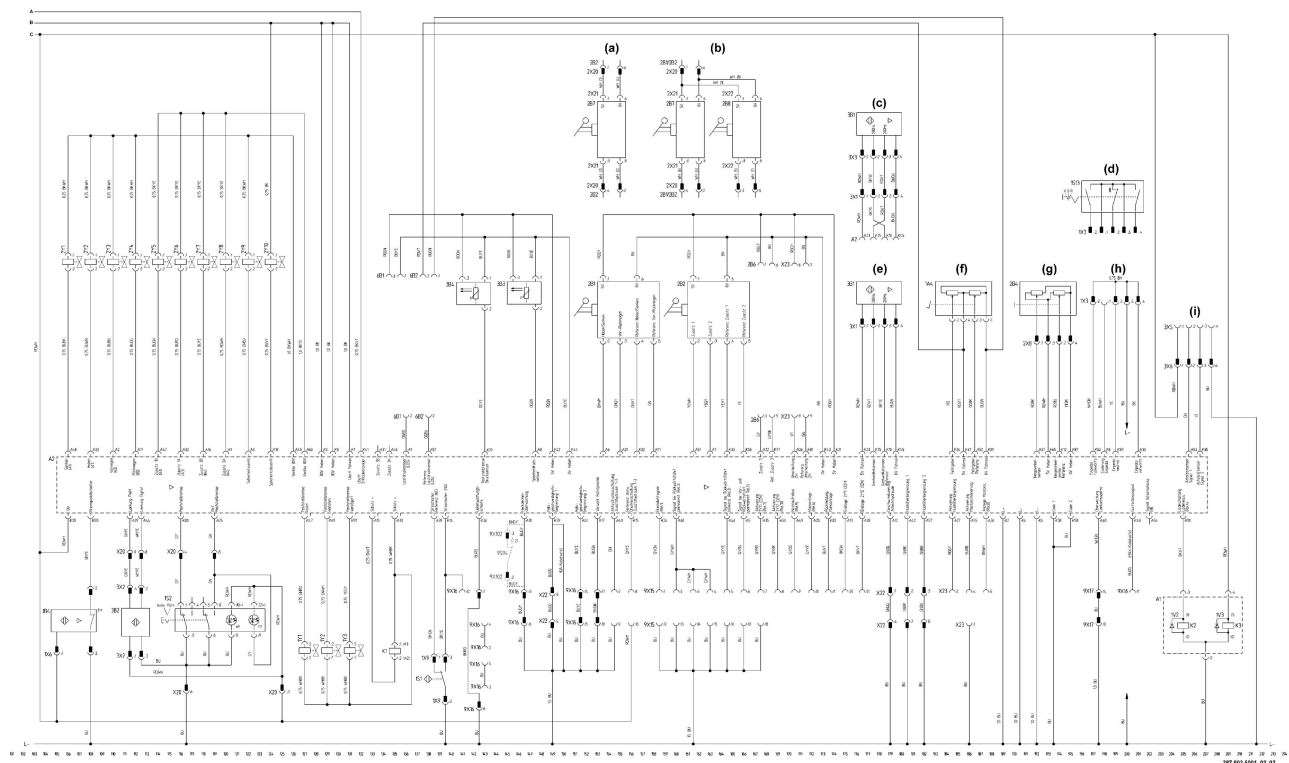

Legend

- A1 Charging circuit (6-pin), 203–210
- A2 Combi-controller (154-pin), 105–207
- :A1 — Auxiliary 2A (A4), 120
- :A2 — Tilt forwards (A2), 110
- :A3 — Safety valve, 122
- :A5 — Signal for forward/reverse travel, continuous (relay 5), 166
- :A8 — Accumulator pressure sensor, 147
- :A9 — Load pressure sensor (LPS), 123, 136
- :A10 — Rear cover monitoring, 147
- :A12 — Working hydraulics for speed reduction, 179
- :A13 — End position 2Y11 (2AH), 175
- :A15 — Negative contactor, 135
- :A16 — Auxiliary 2B (B4), 118
- :A17 — Tilt backwards (B2), 112
- :A18 — Accumulator charging valve, 124
- :A20 — Air conditioning (relay 6), 172
- :A22 — Auxiliary 3, 167
- :A25 — Parking brake reference, 121
- :A26 — Auxiliary hydraulics switchover, 170
- :A27 — Lift height restriction activation, 184
- :A28 — End position 2Y12 (3AH), 176
- :A29 — PWM steering, 113
- :A30 — Positive contactor, 137
- :A31 — Auxiliary 3B, 134
- :A32 — Auxiliary 1A (A3), 116
- :A33 — Lifting (A1), 108
- :A35 — 2Y11 activation (2AH) (relay 7), 167

:A36 — Mast position display (relay 8), 188
:A37 — Tilt angle sensor, 191
:A39 — Seat switch (NC) reference, 141
:A40 — Active depressurisation of auxiliary hydraulics 1–3, 155
:A42 — Lift height restriction 1, 180
:A44 — Digital steering, 114
:A45 — 80-V valves, 126
:A46 — Auxiliary 3A, 135
:A47 — Auxiliary 1B (B3), 114
:A48 — Lowering (A1), 106
:A49 — Time-delay relay (relay 9), 170
:A50 — 2Y12 activation (3AH) (relay 10), 169
:A52 — Accelerator reference, 187
:A53 — Axle load sensor, signal 1, 206
:A54 — Key switch ON signal, 205
:A55 — Mast positioning activation, 185
:A57 — Lift height restriction 2, 182
:A60 — 80-V valves, 127
:K1 — Ubatt for traction, 131
:K2 — L-, 189
:K3 — 80 V, lifting, 128
:K4 — L-, 191
:K5 — 80 V, lifting, 130
:K6 — L-, 192
:K8 — Single-pedal coding, 198
:K10 — Reference for steering angle sensor, 178
:K12 — Reference for tilt angle sensor, 193
:K14 — Seat switch (NO), 141
:K15 — Reference for active depressurisation of auxiliary hydraulics 1–3, 156
:K17 — Preselection of traction dynamics, 153
:K21 — 5 V, lifting, 174
:K22 — 5 V, lifting, 149
:K23 — 5 V, driving, 176
:K24 — Brake light signal (relay 1), 158
:K28 — 13 V, 106
:K30 — Single pedal, forwards, 201
:K34 — Accelerator, 183
:K35 — Axle load sensor, signal 2, 207
:K36 — Monitoring loop, 145
:A37 — Tilt angle sensor, 192
:K38 — Code 1, 193
:K39 — Driving speed limitation 1, 150
:K40 — Buckle signal, 201
:K41 — Ubatt discharge indicator, 132
:K43 — 0 V, lifting, 173
:K44 — 0 V, lifting, 150
:K45 — 0 V, driving, 180
:K46 — Flashing reversing signal (relay 2), 165
:K47 — Release parking brake, 129
:K52 — Single pedal, reverse, 197
:K57 — Reference for load pressure sensor (LPS), 125, 138
:K58 — Code 2, 195
:K59 — Single pedal, neutral, 199
:K60 — Steering axle lock monitoring, 197
:K61 — Driving speed limitation 2, 152
:K65 — 5 V, lifting, 192
:K67 — 5 V, driving, 184
:K68 — Continuous reversing signal (relay 3), 160
:K69 — Apply parking brake, 131
:K75 — Steering angle sensor, 178
:K77 — Auxiliary 3 reference, 169
:K79 — Parking brake pressure sensor, 143
:K80 — Parking brake, 117
:K81 — Auxiliary hydraulics switchover reference, 171

	:K82 — Air conditioning feedback, 173
	:K83 — Brake pedal switch, 108
	:K87 — 0 V, lifting, 194
	:K89 — 0 V, driving, 186
	:K90 — Charging relay charging circuit (relay 4), 199
	:K91 — Parking brake delayed, 133
1A4	Accelerator (4-pin), 183–188
1B4	Brake pedal sensor, 104–108
2B1	Basic joystick function, 6-pin, 153–158
	:2 — Lifting/lowering, 153
	:3 — Tilting forwards/backwards, 155
	:4 — Reference for lifting/lowering, 157
	:5 — Reference for tilting forwards/backwards, 158
2B2	Additional joystick function, 6-pin, 161–166
	:2 — Auxiliary 1, 161
	:3 — Auxiliary 2, 163
	:4 — Auxiliary 1 reference, 165
	:5 — Auxiliary 2 reference, 166
2B4	Tilt angle sensor, 190–195
2B6	3AH joystick (6-pin), 159, 160, 167, 168
2B7	Single-lever joystick 1, 153–155
2B8	Single-lever joystick 2, 165–167
3B1	Steering angle sensor, 176–180
3B2	Steering column sensor, 111–113
3B3	Accumulator pressure sensor (3-pin), 145–148
3B4	Brake pressure sensor (3-pin), 140–143
6B1	LPS connection assembly (3-pin), 134–136
6B2	LPS reference connection assembly (3-pin), 137, 138
K1	Main contactor, 135–136
1S1	Seat switch, 138–139
1S2	Parking brake switch, 116–122
1S13	Drive direction switch, 196–201
9S94	Battery door monitoring switch, 145
X20	10-pin connection assembly, console separation point, 111, 112, 116, 119, 125
X22	10-pin connection assembly, lift limitation transfer, 149, 179, 180, 182
X23	10-pin armrest connection assembly, 140, 142, 170, 171, 177, 184–187
1X3	6-pin connection assembly 1S13, 197–201
1X6	3-pin connection assembly 1B4, 104–108
1X9	5-pin connection assembly 1S1, 138–139
2X8	4-pin connection assembly 2B4, 192–195
2X20	6-pin connection assembly 1xEH/2xEH, 153, 155
2X21	6-pin single-lever 1 connection assembly, 153–155
2X22	6-pin single-lever 2 connection assembly, 165–167
3X1	4-pin connection assembly 3B1, 176–179
3X2	4-pin connection assembly 3B2, 111–112
3X3	4-pin connection assembly 3B1, 176–179
3X5	4-pin connection assembly 3B5, 204–207
3X6	4-pin connection assembly 3B5, 204–207
9X15	21-pin connection assembly (transfer from basic equipment to special equipment), 158, 160–176
9X16	18-pin connection assembly (transfer from basic equipment to special equipment), 141–143, 146, 147, 151–156, 200
9X17	15-pin connection assembly (transfer from basic equipment to special equipment), 196, 197
1Y1	Release parking brake valve, 127
1Y2	Apply parking brake valve, 129
1Y3	Delayed parking brake valve, 131
2Y1	Lowering valve, 106
2Y2	Lifting valve, 108
2Y3	Tilt forwards valve, 110
2Y4	Tilt backwards valve, 112
2Y5	Auxiliary valve 1B, 114
2Y6	Auxiliary valve 1A, 116
2Y7	Auxiliary valve 2B, 118
2Y8	Auxiliary valve 2A, 120
2Y9	Valve, safety valve, 122
2Y10	Accumulator charging valve, 124

Wire colours

BK	Black
BN	Brown
BU	Blue
GN	Green
GY	Grey
OG	Orange
RD	Red
VT	Violet
WH	White
YE	Yellow

Wires with unspecified cross-sections = 0.5 mm²

Main power lines with unspecified colour = BK

- 1)
- The sensor is actuated when the brake pedal is in the inactive position
- ↑
- Shown in the activated state

Notes

- (a) Adaptor for one single lever
- (b) Adaptor for two single levers
- (c) Steering axle steering angle sensor, series 1602 (series 388)
- (d) Drive direction switch for single-pedal trucks
- (e) Steering axle steering angle sensor, series 1611 (series 387)
- (f) Accelerator
- (g) Tilt angle sensor
- (h) Coded plug for dual-pedal trucks
- (i) Axle load sensor