

Yaesu FT-60R HAM Radio

TunnelsUp.com v1.0

Data Sheet

Transmitter Power: 5W

QTH - Location

QSL - Confirmation

QSY - Change freq.

QRZ - Who is calling me?

QRT - Close down station.

QSO - Radio contact

Bands

108MHz-200MHz (tx 144-148)

200MHz-299MHz

300MHz-399MHz

400MHz-520MHz (tx 430-450)

700MHz-999MHz

Simplex Frequencies

146.52 147.42

146.535 147.435

146.55 147.48

146.565 147.495

146.595 446.0

Local Repeaters

Call Sign:

Operation and Buttons


Legend
FW+: Press the FW(function) button then another button
P&H: Push and Hold

Memory Mode
Press PRI (V/M) key to switch between VFO (manual freq. dial) and Memory bank mode.

Change Memory Bank
While in Memory Mode, press and hold the BAND key, then rotate dial to bank, then press V/M key.

Dial Knob
Used to change frequencies and menu selection

SQL Knob
Outer knob is used to silence background noise. Turn it clockwise until noise is cancelled and the green "BUSY" indicator turns off.

Dial Into Repeater
Press 0 and make sure wires  is off. Enter VFO mode (PRI key) Enter the repeater transmit freq. Push FW+1, select SQ Type, then FW Push FW+2, set the receive freq. Attempt to talk, if repeater sends beeps back, 2way comm is good.

Save a Frequency
Dial into the freq to save. P+H FW key Select channel and push FW key.

Notes:

PTT (Push to Talk)

MONI Switch
Disables squelch.

Lamp Switch
Illuminates the LCD screen

SQ TYP (1)
Press: Enter Frequency Digit
FW+: Activates CTCSS or Tone SQ Type
P&H: **Recalls NOAA Weather Channel**

CODE (2)
Press: Enter Frequency Digit
FW+: Selects CTCSS or Tone SQ freq
P&H: Activates the ARTS feature

RPT (4)
Press: Enter Frequency Digit
FW+: Selects freq shift "+", "-", "simplex"
P&H: Activates EMERGENCY function

BELL (5)
Press: Enter Frequency Digit
FW+: CTCSS/DCS bell ringer repetitions
P&H: None

P1 (7)
Press: Enter Frequency Digit
FW+: Activates EPCS feature
P&H: None

P2 (8)
Press: Enter Frequency Digit
FW+: Memory scan "skip" channel-select
P&H: None

PRI (V/M)
Press: **Switches freq. control between VFO and memory**
FW+: Priority (Dual Watch)
P&H: **Scans freq. or channel upward**

SET (0)
Press: Enter Frequency Digit or Enable/Disable Wires
FW+: Set (Menu) mode
P&H: Enables internet access code selection

F/W
Press: Enables secondary key
FW+: Disables secondary key
P&H: Activates memory write

Band DN (BAND)
VFO Mode:
Press: Moves freq. band up
FW+: Moves freq. band down
P&H: Selects scanner b/w
Memory Mode:
Press: Show frequency
P&H: Change banks

TX PO (3)
Press: Enter Frequency Digit
FW+: Select transmitter output level
P&H: Activates Smart Search


MHz (up)
Press: Moves freq. up or channel up
FW+: Moves VFO freq. up by 1MHz
P&H: Starts scanner upward

LOCK (6)
Press: Enter Frequency Digit
FW+: Activates key lockout feature
P&H: Activates key lockout feature

MHz (down)
Press: Moves freq. down or channel down
FW+: Moves VFO freq. down by 1MHz
P&H: Starts scanner downward

DTMF (9)
Press: Enter Frequency Digit
FW+: Selects DTMF mode
P&H: None

HMRV
Press: Reverse tx and rx frequencies
FW+: Switches to "home" channel
P&H: None

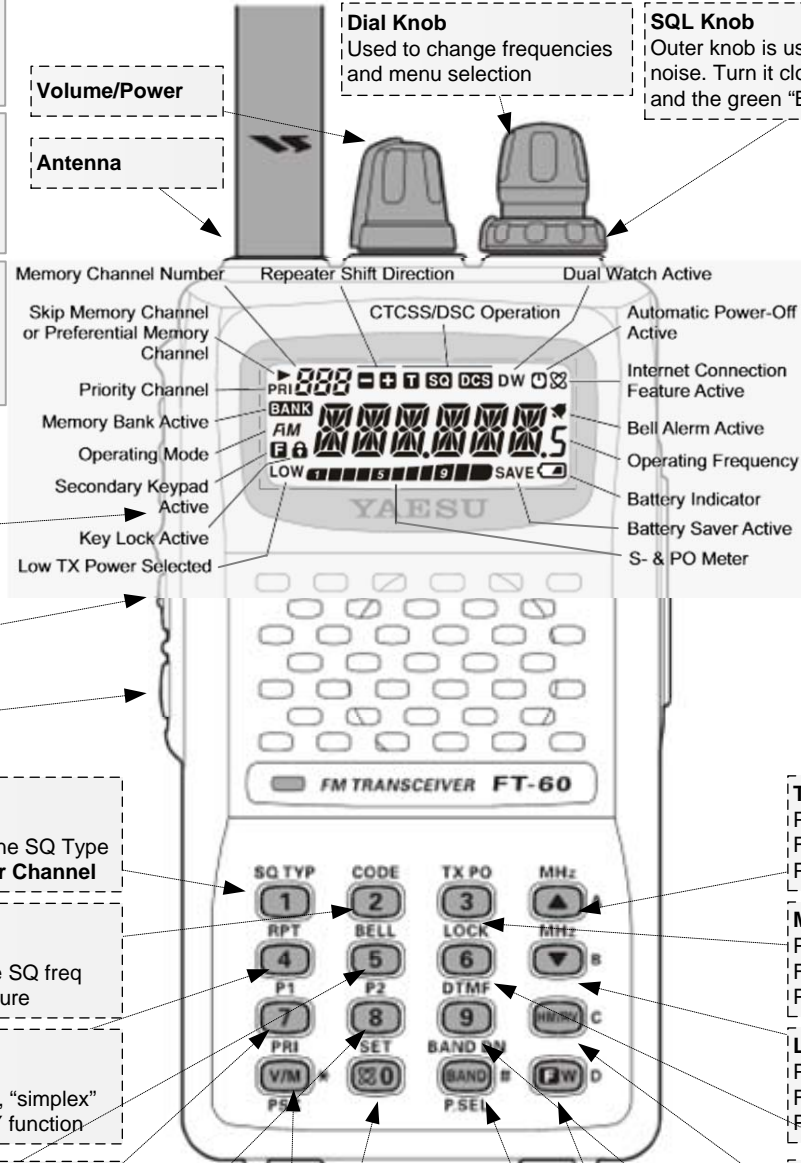

Memory Channel Number Repeater Shift Direction Dual Watch Active

Skip Memory Channel or Preferential Memory Channel

Priority Channel

Memory Bank Active

Operating Mode

Secondary Keypad Active

Key Lock Active

Low TX Power Selected

CTCSS/DCS Operation

Automatic Power-Off Active

Internet Connection Feature Active

Bell Alarm Active

Operating Frequency

Battery Indicator

Battery Saver Active

S- & PO Meter

FM TRANSCEIVER FT-60

SQ TYP CODE TX PO MHz

1 2 3 4

RPT BELL LOCK

4 5 6 7

P1 P2 DTMF

7 8 9 0

PRI SET BAND DN

V/M 0 BAND B

FW D