



# Spire 1.1 Initial Setup




Press the corners in the correct sequence: Top Left, Top Left, Top Right, Top Left, (1,1,2,1).

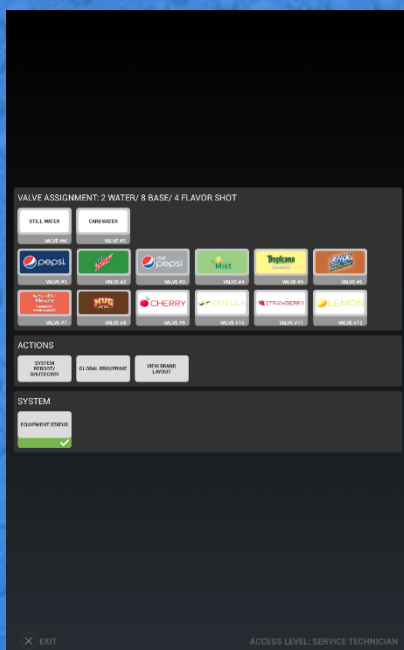

To access the service/technician screen of the Service UI, enter **3944** on the pin pad.

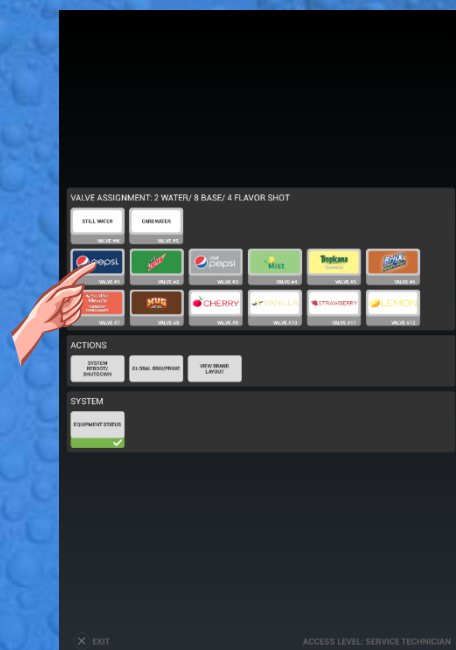


Select the desired valve to be brixed. (NOTE: Rear cover needs to be removed to access soda and water flow controls.)

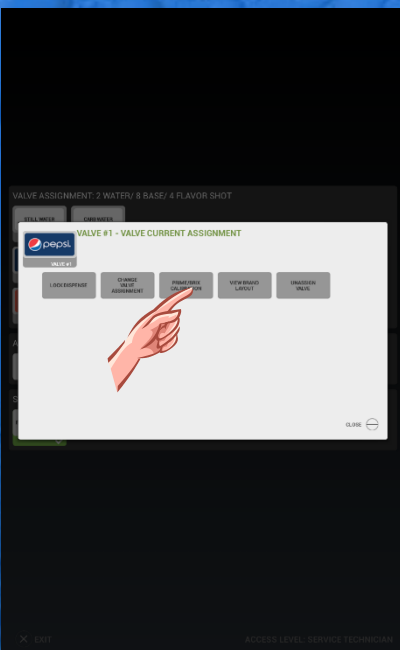

Press the “PRIME/ BRIX CALIBRATION” button.


Ratio	Syrup (ml)	Water (ml)
5	40	
5.5	37	
6	33	200
8.5	24	
30	8	

Use chart to verify brix settings for valve.

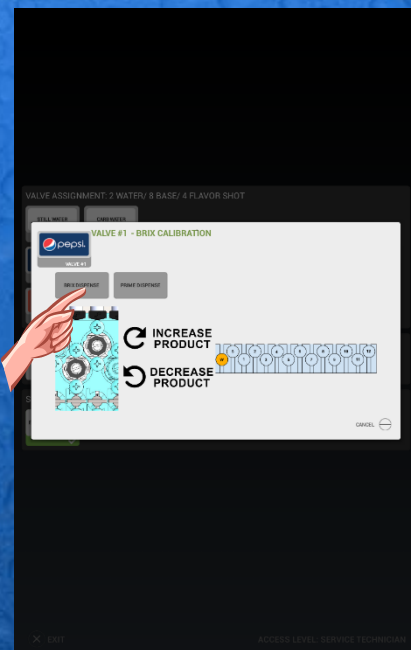


Place a graduated cylinder or brix cup under the nozzle to collect the dispense. Press the “BRIX DISPENSE” button.


# Spire 1.1 Initial Setup

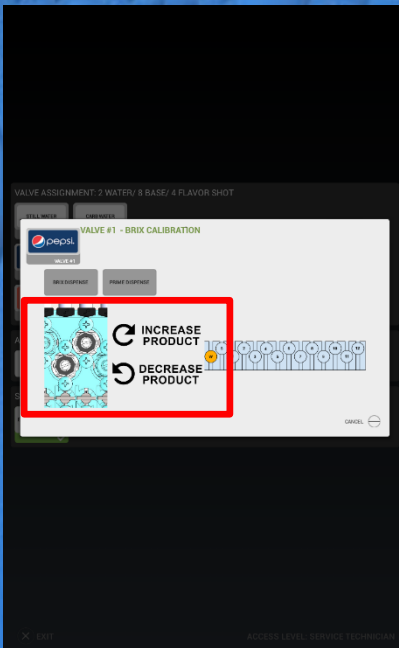


Check dispensing volume against specified volume. Adjust valve's flow control in 1/8 to 1/4 turn increments per on-screen instructions.

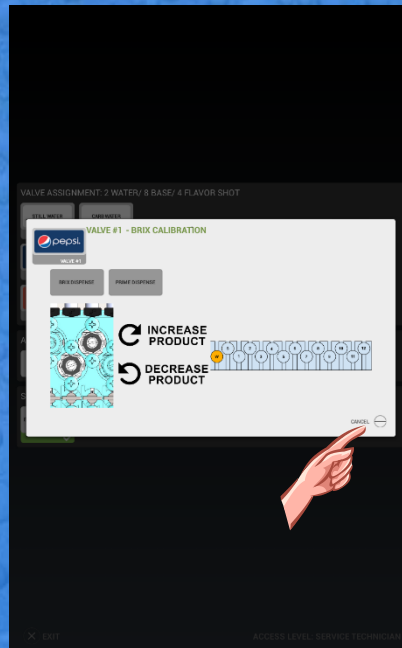


Press the "CANCEL" button at any time to stop the Brix dispense immediately.

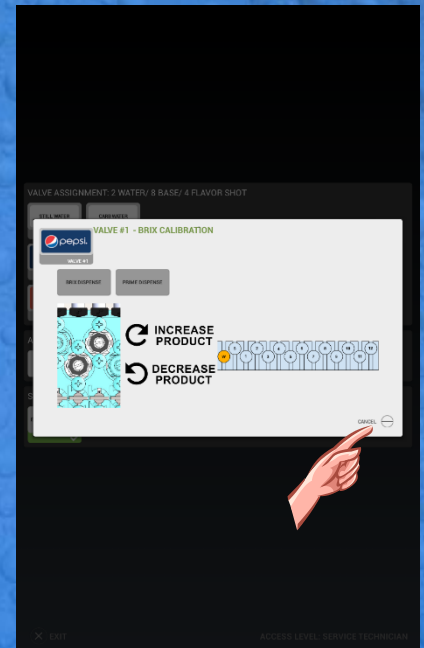

After the valve has been brixed, press the "CANCEL" button to return to the "VALVE CURRENT ASSIGNMENT" menu.

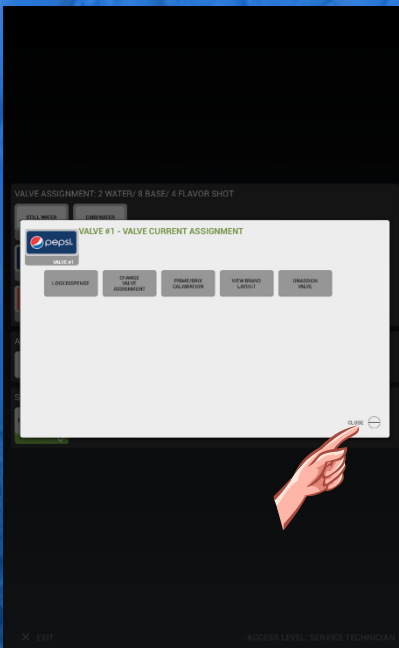

Press the "CLOSE" button to return to the service UI dashboard.

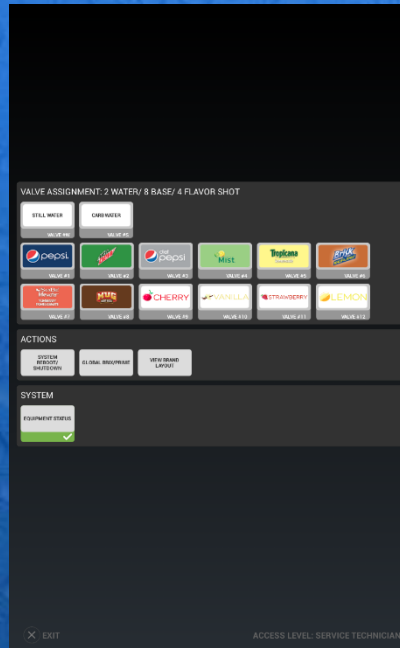

Repeat calibration for all valves.