

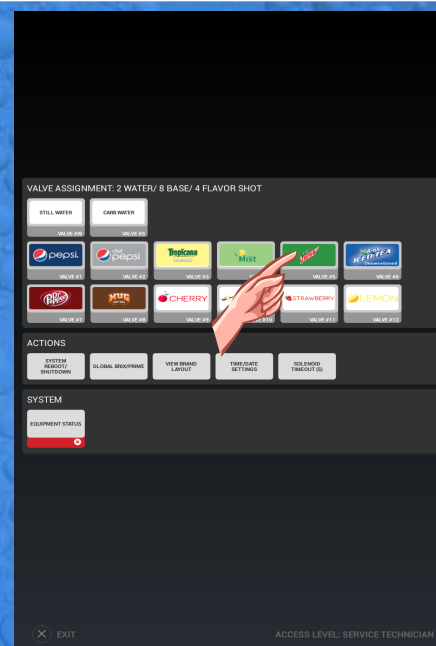


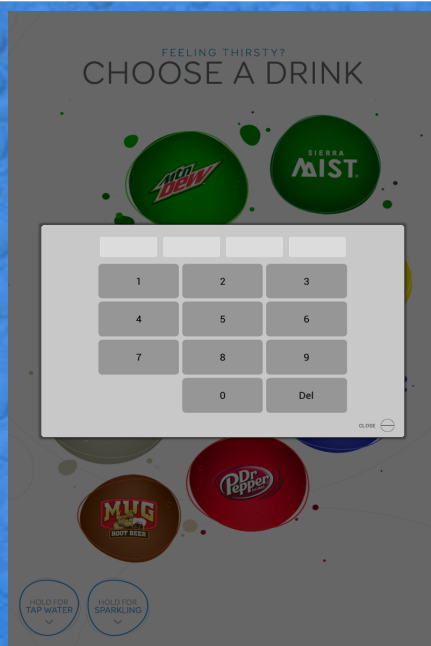

# Standard Operating Procedure

## Pic Manual – Installation




### Spire 1.1 - Service UI Change Valve Assignment

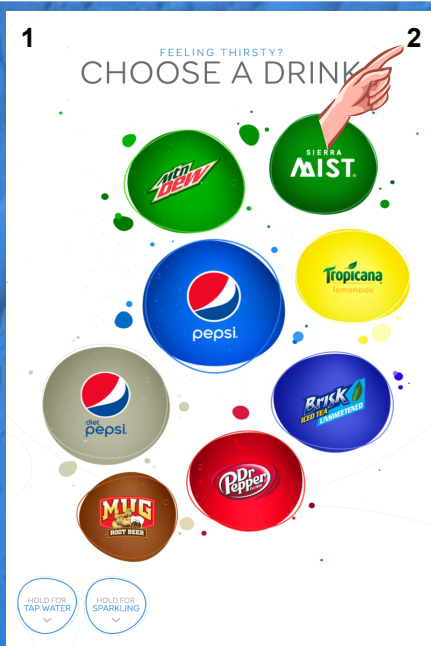

Go to the powered on, physical Spire 1.1 Unit. Touch the corners in this order: **1121**

To enter access level: "Service Technician", enter: **3944** on the pin pad.


Each Valve # is defined in the Valve Assignment section. Touch a specific valve to re-assign.

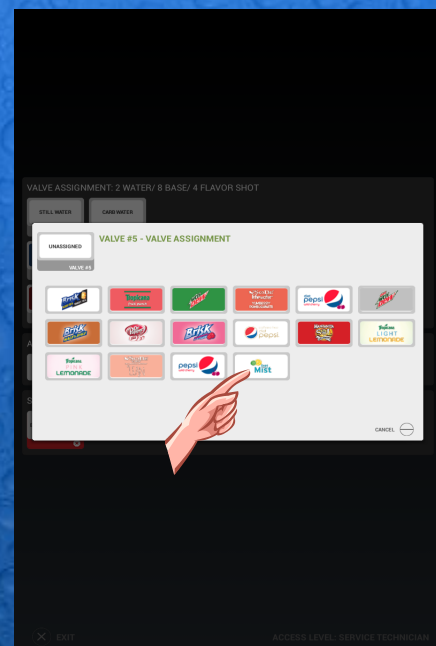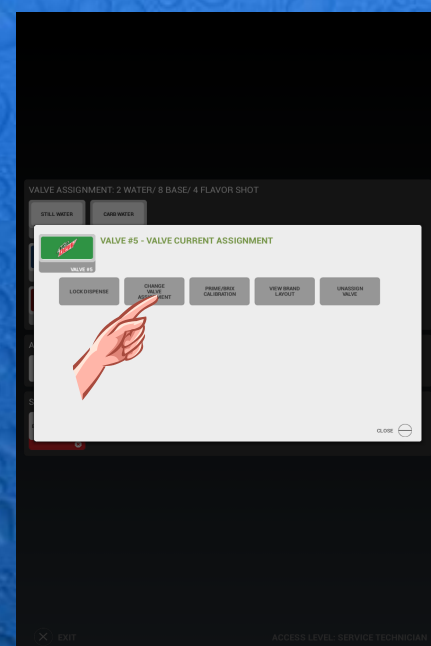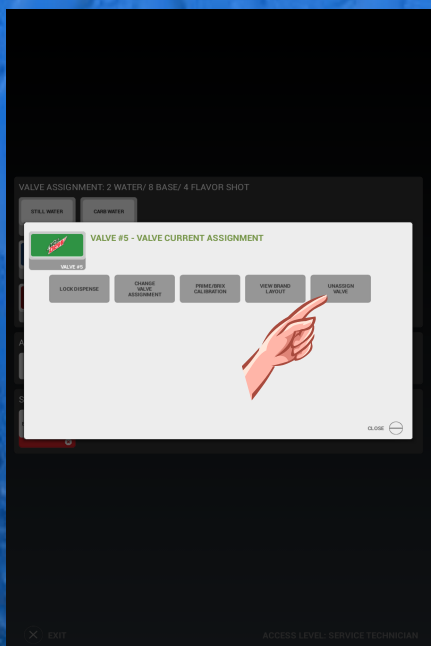

To move a brand/ flavor to another Valve, choose "UNASSIGN VALVE". Then "CLOSE".

To switch to a brand/ flavor which is not assigned, choose "CHANGE VALVE ASSIGNMENT"

Touch the intended Brand for the particular valve.

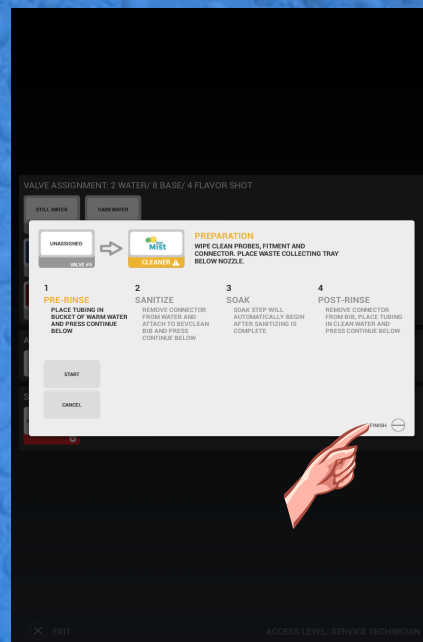

Upon completion of Sanitization, choose "FINISH"



Change Valve Assignment  
Complete!