



## MaxAir - Setup Sensor Value Notifications

MaxAir can be configured to send email notifications if a sensor value is either below a pre-set minimum value or above a pre-set maximum value.


In order to use this feature 'Email Notifications' must be configured, please see relevant documentation.

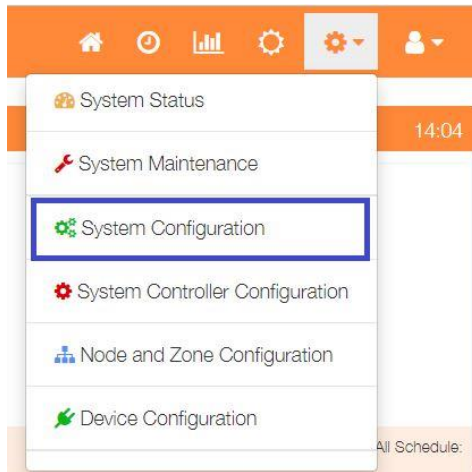

Select 'System Configuration' from the Settings dropdown list, then click the 'Sensor Limits' button.

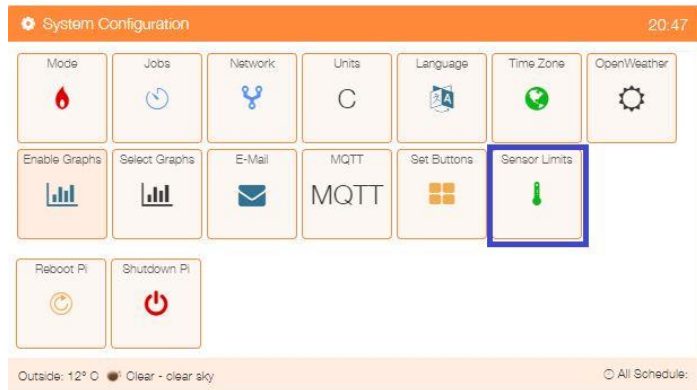

If no Sensor limits have been defined, then click on the 'Add Sensor Limits' button.

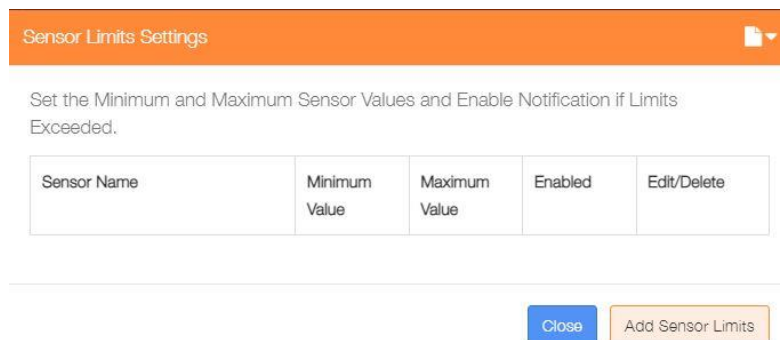A screenshot of the 'Add Sensor Limits' form. It has an orange header with a plus icon and the title 'Add Sensor Limits' and a clock showing 21:00. The form contains a checked checkbox for 'Enabled Enable Notification if Limits Exceeded.'. Below this is a 'Sensor Name' dropdown menu with 'Downstairs' selected. There are two input fields: 'Minimum Value' with '-1.5' and 'Maximum Value' with '26.0'. At the bottom left are 'Submit' and 'Cancel' buttons. A weather status bar at the very bottom shows 'Outside: 0° C Clear - clear sky'.

Click to enable these limits.

Select the sensor.



Set the minimum value.

Set the maximum value.

Click 'Submit' to save the limits for the selected sensor.

Sensor Limits Settings

Set the Minimum and Maximum Sensor Values and Enable Notification if Limits Exceeded.

Sensor Name	Minimum Value	Maximum Value	Enabled	Edit/Delete
Downstairs	-1.50	26.00	Yes	 

Close

Add Sensor Limits

Any defined sensor limits can be shown from Settings/System Configuration and click on the Sensor Limits menu option.

Limits for a particular sensor can be either edited or delete from this screen.

**Note: Email Notifications needs to be active.**