
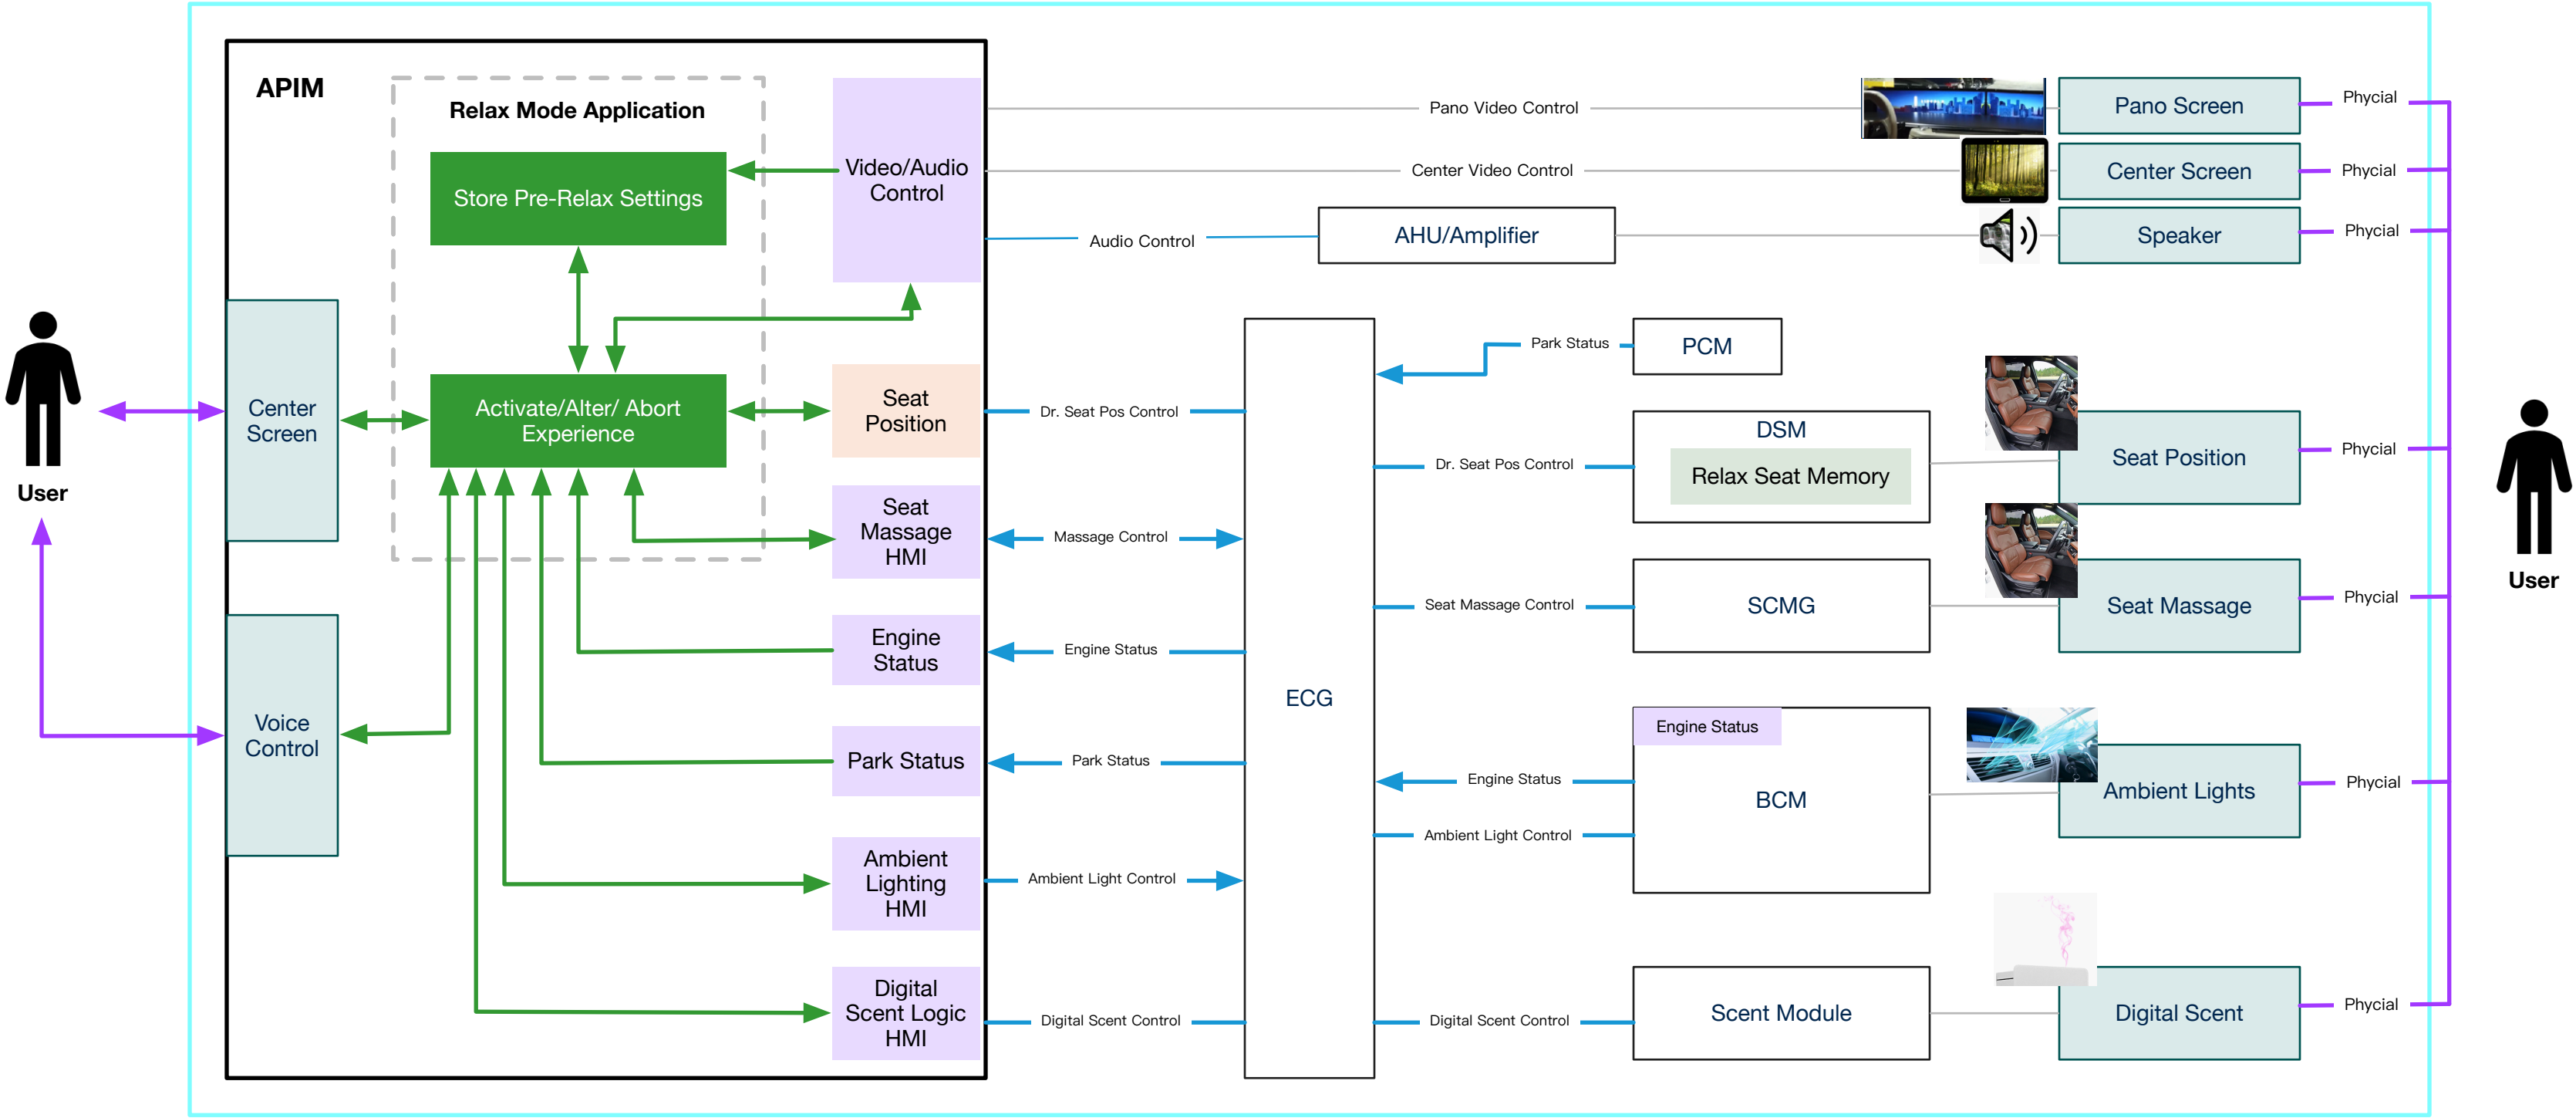


Relax Mode "Feature" for China Markets only at Sync+ BOUNDARY DIAGRAM (FNV3)

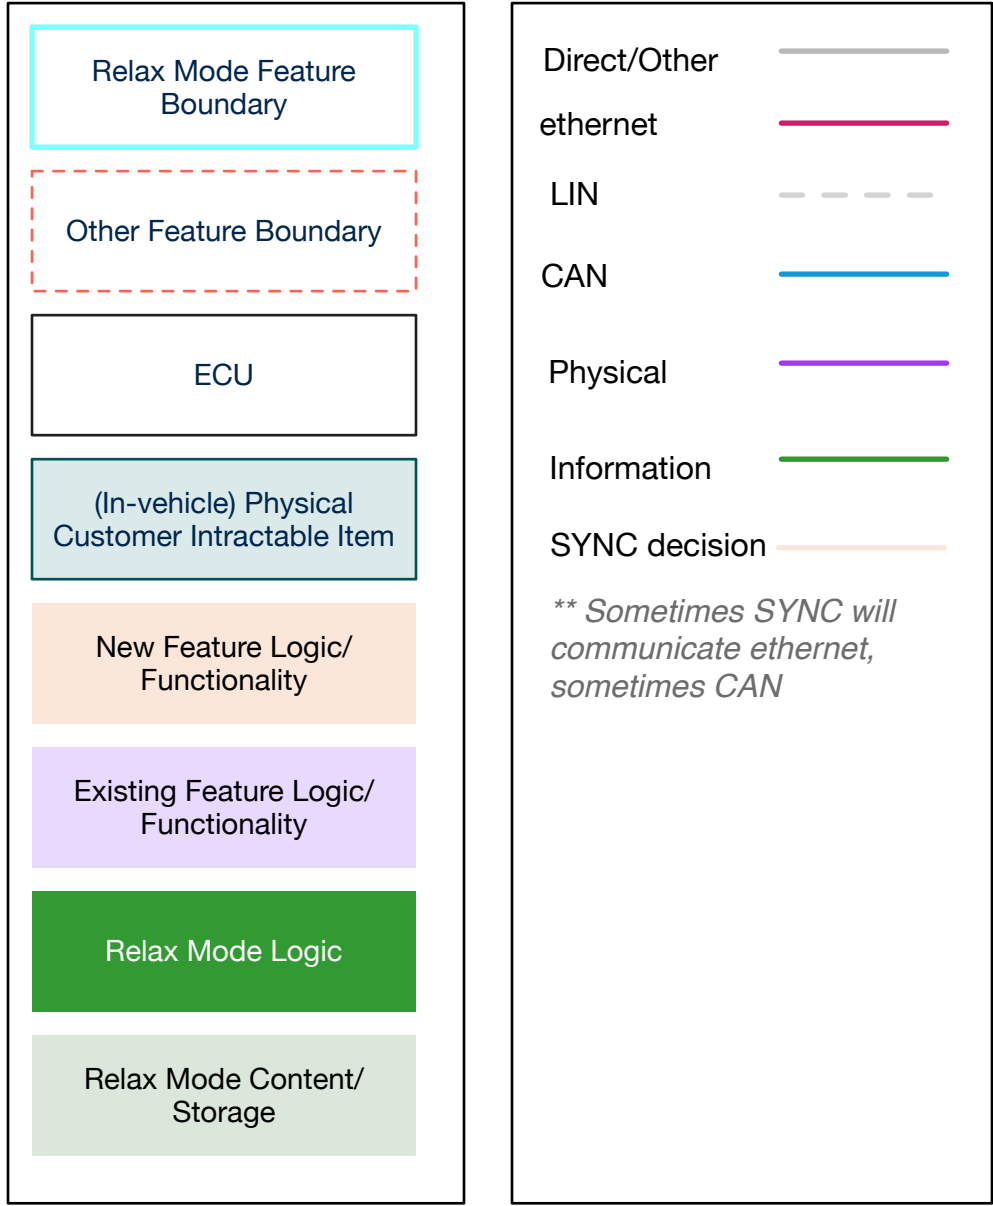

Notes (by / for author):

"Feature" (not system or component) Boundary: All components which are required by the feature should be included inside the boundary. This Boundary Diagram will be used for Interface Matrix (numbered boxes for from / to interfaces).