

Navigation Based Pilot Subsystem Technology Specific Specification (STSS)

Version 1.0

UNCONTROLLED COPY IF PRINTED

Version Date: October 31, 2022

FORD CONFIDENTIAL

Table of Contents

| | |
|---|----|
| Table of Contents | 2 |
| 1. Navigation Based Pilot | 4 |
| 1.1 Functional Description | 4 |
| 1.2 Interfaces..... | 5 |
| 1.2.1 Interface Context Diagram (I/O Block Diagram) | 5 |
| 1.2.2 Inputs..... | 6 |
| 1.2.3 Outputs | 7 |
| 1.3 Function/Performance | 8 |
| 1.3.1 Operational Modes | 8 |
| 1.3.2 Voltage Levels..... | 8 |
| 1.3.3 Human-Machine Interface | 8 |
| 1.3.4 System Accuracy | 9 |
| 1.3.5 Operation: Performance and Functional..... | 11 |
| 1.4 Error Handling | 30 |
| 1.4.1 SR-REQ-XXXXXX/A–Missing Message Strategy | 30 |
| 1.5 Diagnostics..... | 30 |
| 1.5.1 Self -Test | 30 |
| 1.5.2 Engineering Test Mode..... | 30 |
| 1.5.3 Part II Performance..... | 30 |
| 1.6 Reference Specification..... | 30 |
| 1.7 Revision History | 32 |

Terms and Definitions

| Abbreviation | Description |
|--------------|------------------------|
| NBP | Navigation Based Pilot |
| ALC | Assisted Lane Change |
| TJA | Traffic Jam Assist |

1. Navigation Based Pilot

1.1 Functional Description

This STSS handles the functions associated with the Navigation Based Pilot feature, hereafter called NBP feature or NBP.

When a user is driving a vehicle with ALC, the user will be indicated by a lane change suggestion if it's determined to be helpful. Following a turn signal initiated by driver, the vehicle will perform a lane change.

Based on ALC, NBP will add the ability for vehicle to provide lane change suggestions according Navigation indication.

Currently, NBP scenarios are below:

- Highway Exit
- Y-shaped Road
- Lane End

Depending on the vehicle location relative to lane position and the distance to target road section and objects, this feature will:

- Signal to driver for a lane change suggestion
- Signal to driver for taking over steering control

Starting with MY2024 CX771/CX821, Navigation Based Pilot (NBP) has been introduced to the suite of Highway Assist feature with the support of new introduced IPMB_EPC module. NBP enriches the capability providing lane change suggestion against additional scenarios (means Highway Exit) compared with that supported by ALC.

Navigation Based Pilot correlates the Personalization signals from the IPMB, several signals from IPMB_EPC and the Operation Mode to determine when to activate additional appropriate displays.

1.2 Interfaces

1.2.1 Interface Context Diagram (I/O Block Diagram)

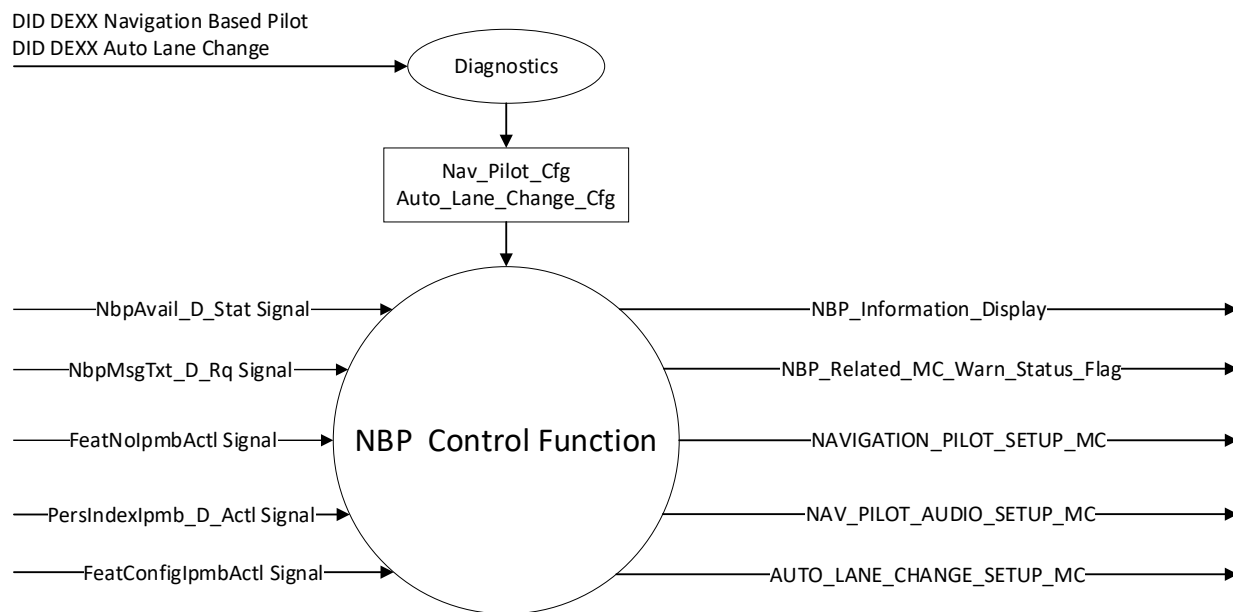


Figure 2.Error! No text of specified style in document. **NBP Context Diagram**

1.2.2 Inputs

1.2.2.1 Internal

- Nav_Pilot_Cfg
- Auto_Lane_Change_Cfg

1.2.2.2 MUX signals on the CAN Bus from IPMB (2nd ECU)

1.2.2.2.1 SIG-REQ-XXXXXX/A-FeatConfigIpmbActl Signal

| Signal Name | Size (bits) | Detail | Units | Res. | Offset | State Encoded | Min | Max |
|--------------------|-------------|--------|-----------|------|--------|---------------|---------|----------------|
| FeatConfigIpmbActl | 16 | - | Undefined | 1 | 0 | | 0 (0x0) | 65535 (0xFFFF) |

1.2.2.2.2 SIG-REQ-XXXXXX/A- FeatNoIpmbActl Signal

| Signal Name | Size (bits) | Detail | Units | Res. | Offset | State Encoded | Min | Max |
|----------------|-------------|--------|--------|------|--------|---------------|---------|----------------|
| FeatNoIpmbActl | 16 | - | Number | 1 | 0 | | 0 (0x0) | 65535 (0xFFFF) |

1.2.2.2.3 SIG-REQ-XXXXXX/A-PersIndexIpmb_D_Actl Signal

| Signal Name | Size (bits) | Detail | Units | Res. | Offset | State Encoded | Min | Max |
|----------------------|-------------|---------|-------|------|--------|---------------|---------|---------|
| PersIndexIpmb_D_Actl | 3 | | SED | 1 | 0 | | 0 (0x0) | 7 (0x7) |
| | | PERS_1 | | | | 0x0 | | |
| | | PERS_2 | | | | 0x1 | | |
| | | PERS_3 | | | | 0x2 | | |
| | | PERS_4 | | | | 0x3 | | |
| | | Vehicle | | | | 0x4 | | |
| | | Unused | | | | 0x5 | | |
| | | Unused | | | | 0x6 | | |
| | | Unused | | | | 0x7 | | |

1.2.2.2.4 SIG-REQ-XXXXXX/A-NbpAvail_D_Stat Signal

| Signal Name | Size (bits) | Detail | Units | Res. | Offset | State Encoded | Min | Max |
|-----------------|-------------|----------------------------|-------|------|--------|---------------|---------|---------|
| NbpAvail_D_Stat | 3 | | SED | 1 | 0 | | 0 (0x0) | 7 (0x7) |
| | | Off | | | | 0x0 | | |
| | | Standby | | | | 0x1 | | |
| | | AvailableLnChngSuggstnOnly | | | | 0x2 | | |
| | | AvailableDrvLnChng | | | | 0x3 | | |
| | | AvailableVehLnChng | | | | 0x4 | | |
| | | NbpFailure | | | | 0x5 | | |
| | | NotUsed_1 | | | | 0x6 | | |
| | | NotUsed_2 | | | | 0x7 | | |

1.2.2.2.5 SIG-REQ-XXXXXX/A- NbpMsgTxt_D_Rq Signal

| Signal Name | Size (bits) | Detail | Units | Res. | Offset | State Encoded | Min | Max |
|----------------|-------------|---------------------------|-------|------|--------|---------------|---------|----------|
| NbpMsgTxt_D_Rq | 4 | | SE D | 1 | 0 | | 0 (0x0) | 15 (0xF) |
| | | NoMessage | | | | 0x0 | | |
| | | LnChngSuggstnLeftFaterLn | | | | 0x1 | | |
| | | LnChngSuggstnRightFaterLn | | | | 0x2 | | |
| | | AlcOn | | | | 0x3 | | |
| | | AlcOff | | | | 0x4 | | |
| | | TurnOffIndicator | | | | 0x5 | | |
| | | LnChngSuggstnLeftNav | | | | 0x6 | | |
| | | LnChngSuggstnRightNav | | | | 0x7 | | |
| | | HandOver | | | | 0x8 | | |
| | | MissingExitAlert | | | | 0x9 | | |
| | | LnChngSuggstnLeftManual | | | | 0xA | | |
| | | LnChngSuggstnRightManual | | | | 0xB | | |
| | | NotUsed_1 | | | | 0xC | | |
| | | NotUsed_2 | | | | 0xD | | |
| | | NotUsed_3 | | | | 0xE | | |
| | | NotUsed_4 | | | | 0xF | | |

1.2.3 Outputs

1.2.3.1 Internal

- NBP_Information_Display displays the Navigation Based Pilot information in the ADAS metaphor.
- NAVIGATION_PILOT_SETUP_MC, controls the setting menu display output for Navigation Based Pilot.
- NAV_PILOT_AUDIO_SETUP_MC, controls the setting menu display output for Navigation Based Pilot audio selection.
- AUTO_LANE_CHANGE_SETUP_MC, controls the setting menu display output for Auto Lane Change.
- NBP_Related_MC_Warn_Status_Flag, which is used to control the state of the text warning message including those MC_Warn_Status_Flag below:
 - 1) Navigation_Pilot_Unavailable_MC_Warn_Status_Flag
 - 2) Lane_Change_Suggested_For_Faster_Lane_Left_MC_Warn_Status_Flag
 - 3) Lane_Change_Suggested_For_Faster_Lane_Right_MC_Warn_Status_Flag
 - 4) Lane_Change_Suggested_Following Navigation Left_MC_Warn_Status_Flag
 - 5) Lane_Change_Suggested_Following Navigation Right_MC_Warn_Status_Flag
 - 6) LnChngSuggstnLeftManual_MC_Warn_Status_Flag
 - 7) LnChngSuggstnRightManual_MC_Warn_Status_Flag
 - 8) HandOver_MC_Warn_Status_Flag
 - 9) Missing_Exit_Alert_MC_Warn_Status_Flag

1.3 Function/Performance

1.3.1 Operational Modes

| Mode | Differentiating Vehicle Conditions |
|--------------|--|
| Sleep Mode | NBP Control Function Text Message Disabled |
| Limited Mode | NBP Control Function Text Message Disabled |
| Normal Mode | NBP Control Function Text Message Enabled / Disabled |
| Crank Mode | NBP Control Function Text Message Enabled / Disabled |

1.3.2 Voltage Levels


Refer to the Cluster Features table located in the Operational Modes **and** Voltage Range Strategies Section in this STSS.

1.3.3 Human-Machine Interface

1.3.3.1 Visual

1.3.3.1.1 Indicator Graphics / Display Format

Example Graphic (final graphics to be provided by HMI wallpaper)

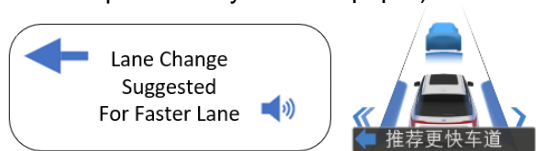

Message Center Text Warning Message as defined in section 1.3.3.5.12 of this document. Actual wording may vary based on Program Translation table.

Please refer to the program specific menu structure for exact graphics.

Example Menu Structure:

| Menu level 0 | Menu level 1 | Menu level 2 | Comments |
|---------------|----------------|--|--|
| Driver Assist | Cruise Control | With Lane Centering <input type="checkbox"/> | Traffic_Jam_Assist_Cfg = 0x1 (Enabled) Hwy_Assist_Cfg = 0x0 (Disabled) Nav_Pilot_Cfg = X (Don't Care) Auto_Lane_Change_Cfg = X (Don't Care) |
| | | With Lane Centering (Blue Cruise) <input type="checkbox"/> With Smart Offerings <input type="checkbox"/> Lane Biasing Assist Lane Change | Hwy_Assist_Cfg = 0x1 (Enabled) Traffic_Jam_Assist_Cfg = X (Don't Care) Nav_Pilot_Cfg = 0x0 (Disabled) Auto_Lane_Change_Cfg = X (Don't Care) |
| | | With Lane Centering (Blue Cruise) <input type="checkbox"/> With Smart Offerings <input type="checkbox"/> Lane Biasing Assist Lane Change <ul style="list-style-type: none"> Navigation Based Pilot Audio On | Hwy_Assist_Cfg = 0x1 (Enabled) Traffic_Jam_Assist_Cfg = X (Don't Care) Nav_Pilot_Cfg = 0x1 (Enabled) Auto_Lane_Change_Cfg = 0x0 (Disabled) |
| | | With Lane Centering (Blue Cruise) <input type="checkbox"/> With Smart Offerings <input type="checkbox"/> Lane Biasing Assist Lane Change | Hwy_Assist_Cfg = 0x1 (Enabled) Traffic_Jam_Assist_Cfg = X (Don't Care) Nav_Pilot_Cfg = 0x1 (Enabled) Auto_Lane_Change_Cfg = 0x1 (Enabled) |

| | | | |
|--|--|--|--|
| | | <ul style="list-style-type: none"> • Navigation Based Pilot <ul style="list-style-type: none"> • Audio On • Auto Lane Change | |
|--|--|--|--|

Menu display logic in above list:

1. About the menu of Lane Biasing and Assist Lane Change (Pre-condition: Hwy_Assist_Cfg = 0x1 (Enabled))

Menu display of Lane Biasing and Assisted Lane Change depends on the customer selection of Blue Cruise (Ford Brand)/Active Glide (Lincoln Brand) feature. LB and ALC shall appear when Blue Cruise is selected on, while disappear when Blue Cruise is selected off.

2. About the menu of Navigation Based Pilot (Pre-condition: Hwy_Assist_Cfg = 0x1 (Enabled))

Menu display of Navigation Based Pilot depends on the customer selection of ALC feature. Navigation Based Pilot shall appear when ALC is selected on, while disappear when ALC is selected off. And the two sub menus: Audio On and Auto Lane Change can be checked or unchecked independently.

1.3.3.1.2 Indicator Color Coordinates

Refer to program specific HMI requirements for styling direction.

1.3.3.1.3 Indicator Characteristics

As per program specific HMI theme.

1.3.3.2 Audio – 待修改

F-REQ-XXXXXX (NBP indication and cancellation).

Note that both Graphic and Voice indication could be provided during NBP operation while voice broadcast can be enabled/disabled by customer in the setting menu.

When both supported, voice broadcast should show synchronously with the graphic text. The voice content needs to be broadcasted once till the signal transits to a new state.

Note that considering the similarity between NBP voice broadcast and Navigation broadcast, NBP shows a higher priority. Hence, arbitration between these two should be supported.

1.3.3.3 Switch Control Logic

Consumer access to NBP Module Configuration shall be as specified in the message center basic functionality display as specified in Message Center X Display_Y Button Interface Section, where X and Y are appropriate values in this document.

13.4 System Accuracy

Within 100 msec of receiving a message that results in a change of state the cluster will update the display to the proper state.

1.3.5 Operation: Performance and Functional

1.3.5.1 Subsystem Algorithm Flowchart / State Diagram

1.3.3.5.1 F-REQ-343087/A-Highway Assist with Navigation Pilot Diagnostic Configuration Flowchart

Figure 3.1 Diagnostic Configuration Flowchart

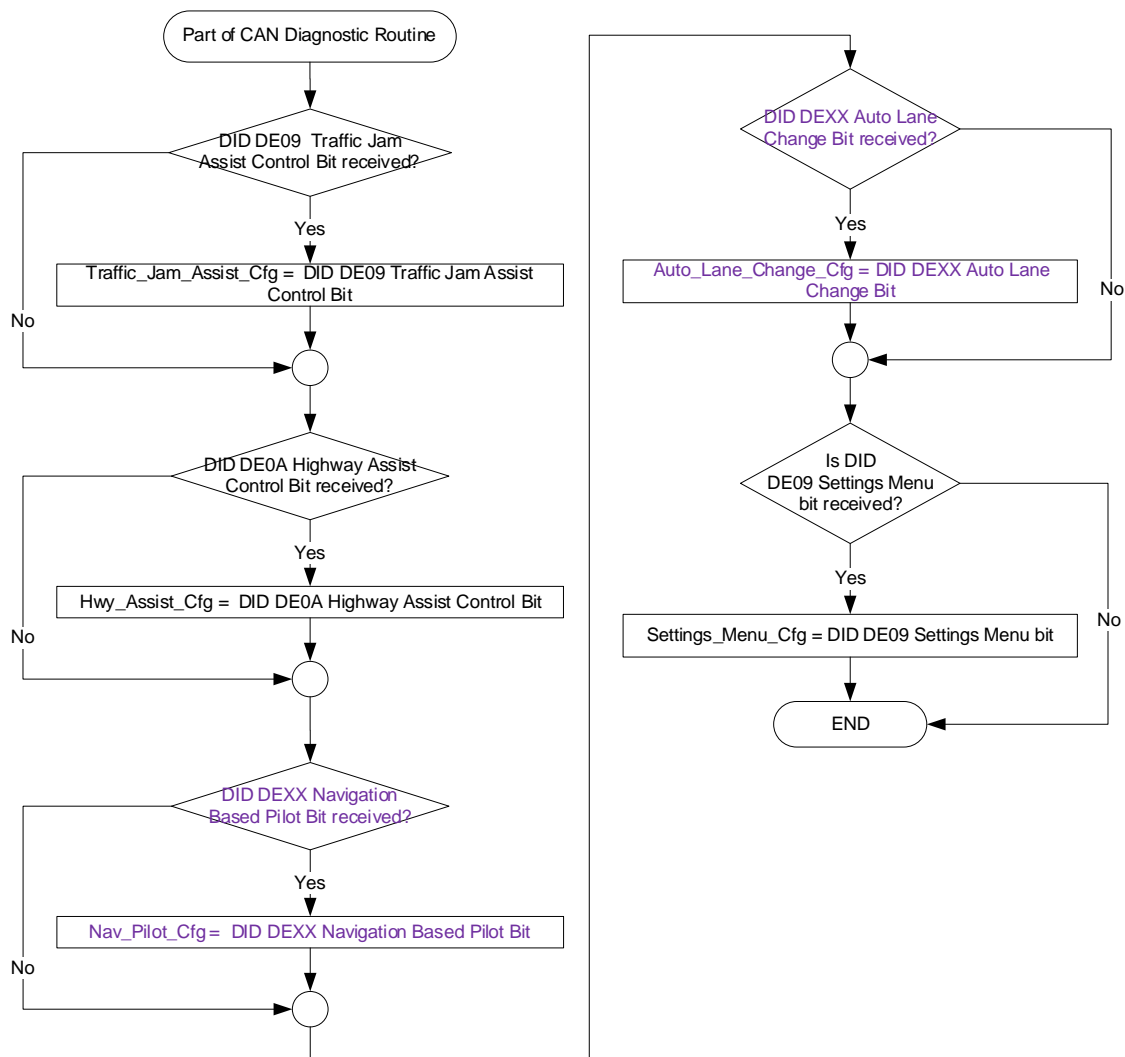


Figure 3.1 Diagnostic Configuration Flowchart

Figure3.1 is based on F-REQ-343087/A-Highway Assist and Lane Centering Diagnostic Configuration Flowchart in < Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>. The purple content is added for NBP.

1.3.3.5.2 F-REQ-343087/A-Highway Assist and Lane Centering and Navigation Pilot Diagnostic Configuration Flowchart

| Hwy_Assist_Cfg | Traffic_Jam_Assist_Cfg | Nav_Pilot_Cfg | “With Lane Centering” Displayed in menu? | “With Smart Offering” Displayed in menu? | “With Nav Pilot” Displayed in menu? |
|----------------|------------------------|----------------|---|---|--|
| Enabled (0x1) | Enabled (0x1) | Enabled (0x1) | Yes | Yes | Yes |
| Enabled (0x1) | Enabled (0x1) | Disabled (0x0) | Yes | Yes | No |
| Enabled (x1) | Disabled (0x0) | Enabled (0x1) | Yes | Yes | Yes |
| Enabled (0x1) | Disabled (0x0) | Disabled (0x0) | Yes | Yes | No |
| Disabled (0x0) | Enabled (0x1) | Enabled (0x1) | Yes | No | No |
| Disabled (0x0) | Enabled (0x1) | Disabled (0x0) | Yes | No | No |
| Disabled (0x0) | Disabled (0x0) | Enabled (0x1) | No | No | No |
| Disabled (0x0) | Disabled (0x0) | Disabled (0x0) | No | No | No |

1.3.3.5.3 F-REQ-343089/ D-Highway Assist with Navigation Pilot input request Flowchart

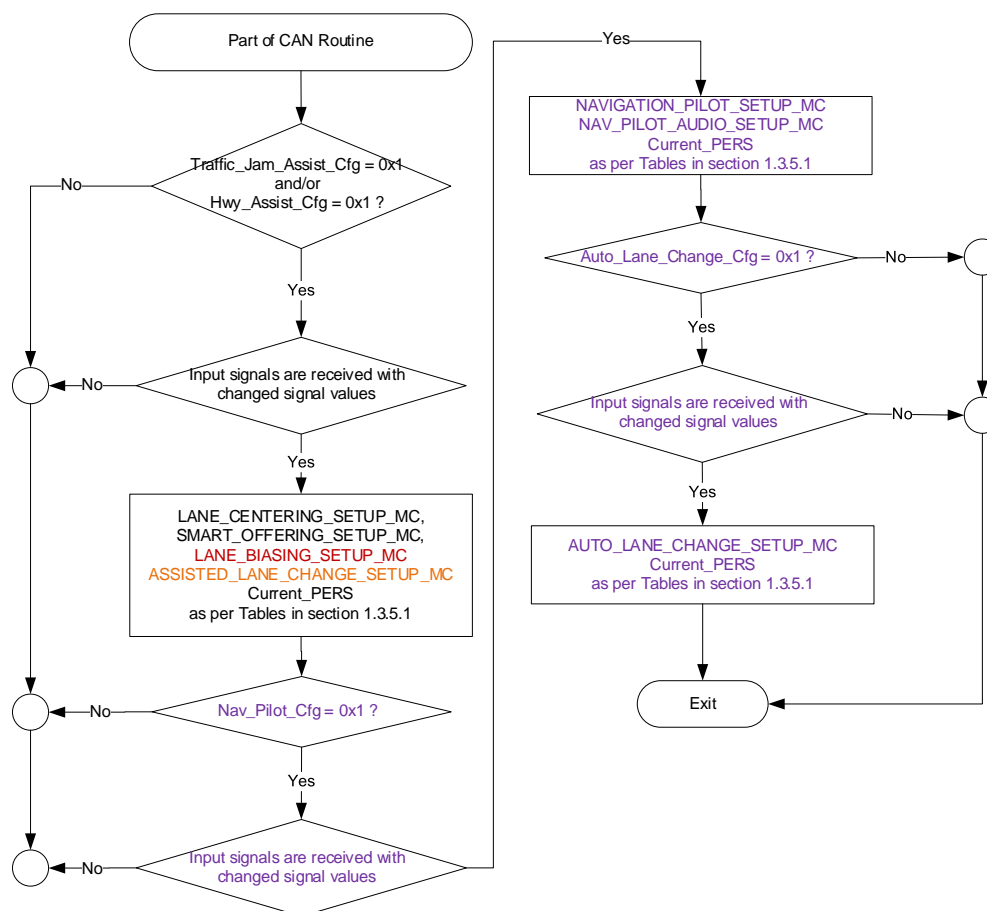


Figure 3.2 Input Request Flowchart

Figure3.2 is based on F-REQ-343089/D-Highway Assist and Lane Centering input request Flowcharts in < Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>. The purple content is added for NBP.

Input signals are received in a message from IPMB (2nd ECU), including FeatNoIpmbActl Signal, FeatConfigIpmbActl Signal, PersIndexIpmb_D_Actl Signal that is described in IO inputs.

1.3.3.5.4 F-REQ-343089/ D-Highway Assist with Navigation Pilot output SET request Flowchart

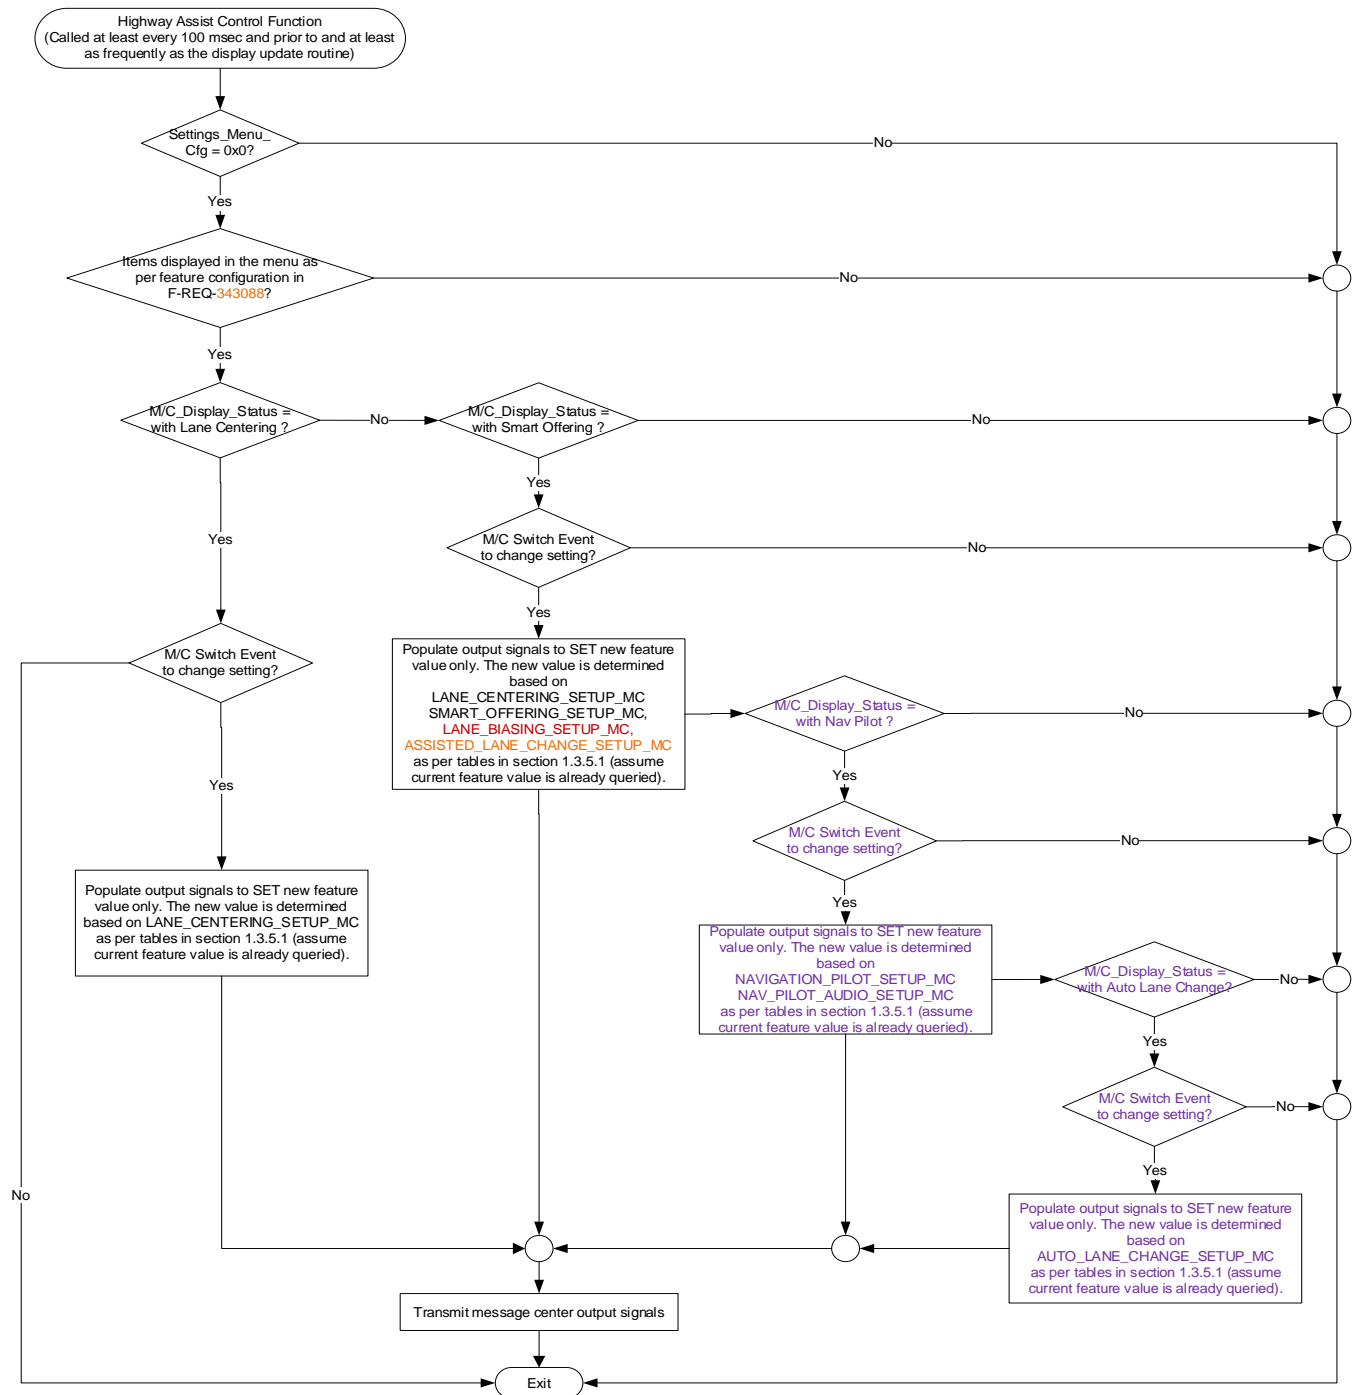


Figure 3.3 Output SET Request Flowchart

Figure3.3 is based on F-REQ-343090/D-Highway Assist and Lane Centering Output SET request Flowchart in < Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>. The purple content is added for NBP.

Output signals are sent in a message to IPMB (2nd ECU), including MsgCntrDsplyOp_D_Rq Signal, MsgCntrFeatNoRq Signal, MsgCntrFeatConfigRq Signal and MsgCntrPersIndex_D_Rq Signal that is described in Setup Request Messages.

1.3.3.5.5 F-REQ-XXXXXX/A-Navigation Based Pilot Setup State Assignment

| FeatNoIpmb Actl Signal | FeatConfigIpmbActl Signal | PersIndexIpmb_D_Actl Signal | NAVIGATION_PILOT_ SETUP_MC | Current_PERS ⁽³⁾ |
|--|------------------------------|--------------------------------|-------------------------------|-----------------------------|
| 0x0880 ⁽¹⁾ | 0x0000 (Off) | 0x0 – 0x4 | 0x00 | 0x0 – 0x4 |
| | 0x0001 (On) | 0x0 – 0x4 | 0x01 | 0x0 – 0x4 |
| | Other ⁽²⁾ | | Error (0x2) | Last Known |
| Missing per Section 1.4.1 ⁽²⁾ | | | | |

⁽¹⁾ Navigation Based Pilot Feature Number. Reference is Feat Num table in “Vehicle Personalization FS”

⁽²⁾ Message Response is Faulted

⁽³⁾ Equal to the received “PersIndex<--->” signal value. When faulted Keep last known value.

1.3.3.5.6 F-REQ-XXXXXX/A-Navigation Based Pilot Setup Request Messages based upon NAVIGATION_PILOT_SETUP_MC

| ASSISTED_LANE_CHANGE_SETUP_MC | Display Menu | M/C Switch Selection Event | MsgCntrDsplyOp_D_Rq Signal | MsgCntrFeatNoRq Signal | MsgCntrFeatConfigRq Signal | MsgCntrPersIndex_D_Rq Signal |
|-------------------------------|--|----------------------------|----------------------------|------------------------|-----------------------------|------------------------------|
| 0x00 or 0x02 | <input type="checkbox"/> (Off) | Up/Down + OK (Select On) | SET (0x2) | 0x0880 | 0x0001 (If On is selected) | Current_PERS |
| 0x01 | <input checked="" type="checkbox"/> (On) | Up/Down + OK (Select Off) | SET (0x2) | 0x0880 | 0x0000 (If Off is selected) | Current_PERS |

1.3.3.5.7 F-REQ-XXXXXX/A-Navigation Pilot Audio Setup State Assignment

| FeatNoIpmb Actl Signal | FeatConfigIpmbActl Signal | PersIndexIpmb_D_Actl Signal | NAVIGATION_PILOT_ SETUP_MC | Current_PERS ⁽³⁾ |
|--|------------------------------|-----------------------------|-------------------------------|-----------------------------|
| 0x0881 ⁽¹⁾ | 0x0000 (Off) | 0x0 – 0x4 | 0x00 | 0x0 – 0x4 |
| | 0x0001 (On) | 0x0 – 0x4 | 0x01 | 0x0 – 0x4 |
| | Other ⁽²⁾ | | Error (0x2) | Last Known |
| Missing per Section 1.4.1 ⁽²⁾ | | | | |

⁽¹⁾ Navigation Pilot Audio Feature Number. Reference is Feat Num table in “Vehicle Personalization FS”

⁽²⁾ Message Response is Faulted

⁽³⁾ Equal to the received “PersIndex<--->” signal value. When faulted Keep last known value.

1.3.3.5.8 F-REQ-XXXXXX/A-Navigation Pilot Audio Setup Request Messages based upon NAV_PILOT_AUDIO_SETUP_MC

| ASSISTED_LANE_CHANGE_SETUP_MC | Display Menu | M/C Switch Selection Event | MsgCntrDsplyOp_D_Rq Signal | MsgCntrFeatNoRq Signal | MsgCntrFeatConfig Rq Signal | MsgCntrPersIndex_D_Rq Signal |
|-------------------------------|--|----------------------------|----------------------------|------------------------|-----------------------------|------------------------------|
| 0x00 or 0x02 | <input type="checkbox"/> (Off) | Up/Down + OK (Select On) | SET (0x2) | 0x0881 | 0x0001 (If On is selected) | Current_PERS |
| 0x01 | <input checked="" type="checkbox"/> (On) | Up/Down + OK (Select Off) | SET (0x2) | 0x0881 | 0x0000 (If Off is selected) | Current_PERS |

1.3.3.5.9 F-REQ-XXXXXX/A-Auto Lane Change Setup State Assignment


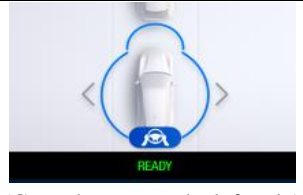



| FeatNoIpmbActl Signal | FeatConfigIpmbActl Signal | PersIndexIpmb_D_Actl Signal | NAVIGATION_PILOT_ SETUP_MC | Current_PERS ⁽³⁾ |
|--|------------------------------|-----------------------------|-------------------------------|-----------------------------|
| 0x0882 ⁽¹⁾ | 0x0000 (Off) | 0x0 – 0x4 | 0x00 | 0x0 – 0x4 |
| | 0x0001 (On) | 0x0 – 0x4 | 0x01 | 0x0 – 0x4 |
| | Other ⁽²⁾ | | Error (0x2) | Last Known |
| Missing per Section 1.4.1 ⁽²⁾ | | | | |

1.3.3.5.10 F-REQ-XXXXXX/A-Auto Lane Change Setup Request Messages based upon AUTO_LANE_CHANGE_SETUP_MC




| ASSISTED_LANE_CHANGE_SETUP_MC | Display Menu | M/C Switch Selection Event | MsgCntrDsplyOp_D_Rq Signal | MsgCntrFeatNoRq Signal | MsgCntrFeatConfig Rq Signal | MsgCntrPersIndex_D_Rq Signal |
|-------------------------------|--|----------------------------|----------------------------|------------------------|-----------------------------|------------------------------|
| 0x00 or 0x02 | <input type="checkbox"/> (Off) | Up/Down + OK (Select On) | SET (0x2) | 0x0882 | 0x0001 (If On is selected) | Current_PERS |
| 0x01 | <input checked="" type="checkbox"/> (On) | Up/Down + OK (Select Off) | SET (0x2) | 0x0882 | 0x0000 (If Off is selected) | Current_PERS |

1.3.3.5.11 F-REQ-438184/A-State Matrix Update for Assisted Lane Change Information With NBP

Assisted Lane Change Information will be shown whenever Navigation Based Pilot is not available (either because Navigation Based Pilot is configured off or even if equipped but not activated due to driver deselection or without Navigation route).

| Operational_Mode | Feature Config | NbpAvail_D_Stat Signal | TjaLc_D_Stat Signal | TjaLcWarn_D_Rq Signal | TjaLcMsgTxt_D_Rq | ALC_Information_Display (Example Graphics) | Chime Status Flag |
|--------------------|--|--|--------------------------|--------------------------|------------------|--|-------------------|
| Normal or Crank | Traffic_Jam_Assist_Cfg = 0x1 (Enabled) OR Hwy_Assist_Cfg = 0x1 (Enabled) AND Nav_Pilot_Cfg = X (Don't Care) AND Auto_Lane_Change_Cfg = X (Don't Care) | 0x0 (Off) Or 0x1 (Standby) Or 0x5 (Nbp Failure) Or Missing | 0x1 (Standby) | X (Don't Care) | X (Don't Care) |  <p>((under speed threshold or no lanes detected) chevrons have less contrast and line thickness)</p> | None |
| | | | 0x2 (AvailableLeft) | | |  <p>(Grey chevron on the left only)</p> | None |
| | | | 0x3 (AvailableRight) | | |  <p>(Gray chevron on the right only)</p> | None |
| | | | 0x4 (AvailableLeftRight) | | |  <p>(Grey Chevron on both sides, example graphic of HA in limited mode)</p> | None |
| | | | 0x5 (PreparingLeft) | | |  <p>(Blue Chevron on the Left, none Right, example graphic of HA in extended mode)</p> | None |
| | | | | | | Active | |

[illegible]
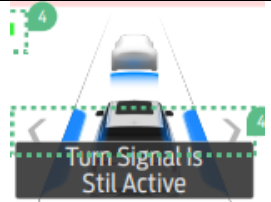
| | | | | | | | | |
|-----------------|--|---|-------------------|----------------------------|-----------------------------|-----------------|--|------|
| | | | | 0x5 (CancelSpeedTooLow) | | | Canceled Low Speed* (GML ID: A16) | |
| Normal or Crank | Traffic_Jam_Assist_Cfg = 0x1 (Enabled) OR Hwy_Assist_Cfg = 0x1 (Enabled) AND Nav_Pilot_Cfg = X (Don't Care) AND Auto_Lane_Change_Cfg = X | 0x0 (Off) Or 0x1 (Standby) Or 0x5 (Nbp Failure) Or Missing | X (Don't Care) | X (Don't Care) | 0x1 (LcSuggestion Left) | Active |  (above text or “Lane Change Possible, Use Left Turn Signal to make lane change” based on application HMI) | None |
| | | | | | 0x2 (LcSuggestion Right) | |  (above text or “Lane Change Possible, Use Left Turn Signal to make lane change” based on application HMI Example graphic of HA in Extended mode) | None |
| | | | | | 0x5 (TurnOffIndicator) | |  (Text: Turn Signal is Still Active) | None |
| | | All Other Cases | | | Inactive | (No indication) | None | |

The ADAS controller will arbitrate and populate the 3 input signals above, cluster simply displays information based on signal states received.


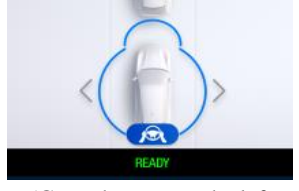



Note *: The generic "Cancellation (GML ID: A1)" notification shall be displayed only if application display does not have space to display reason text.




Note: The Lane_Centering_Assist_Canceled_MC_Warn_Status_Flag shall have higher priority over any and all ALC cancellation messages.






Above State Matrix for Assisted Lane Change Information is based on F-REQ-438184/B-State Matrix for Assisted Lane Change Information in < Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>. The purple content is added for NBP.



1.3.3.5.12 F-REQ-XXXXXX-State Matrix for Navigation Based Pilot Information

Navigation Based Pilot Information will only be shown when the feature is active.

| Operational_Mode | Feature Config | NbpAvail_D_Stat Signal | TjaLc_D_Stat Signal | TjaLcWarn_D_Rq Signal | NbpLcMsgTxt_D_Rq | NBP_Information_Display (Example Graphics) | Chime Status Flag |
|--------------------|--|--|------------------------------|--------------------------|-------------------|--|-------------------|
| Normal or Crank | Traffic_Jam_Assist_Cfg = 0x1 (Enabled) OR Hwy_Assist_Cfg = 0x1 (Enabled) AND Nav_Pilot_Cfg = 0x1 (Enabled) AND Auto_Lane_Change_Cfg = X (Don't Care) | 0x2 (AvailableLnChngSuggestnOnly) Or 0x3 (AvailableDrvLnChng) Or 0x4 (AvaialbleVehLnChng) | 0x1 (Standby) | X (Don't Care) | X (Don't Care) |  <p>((under speed threshold or no lanes detected) chevrons have less contrast and line thickness)</p> | None |
| | | | 0x2 (AvailableLeft) | | |  <p>(Grey chevron on the left only)</p> | None |
| | | | 0x3 (AvailableRight) | | |  <p>(Gray chevron on the right only)</p> | None |
| | | | 0x4 (AvailableLeft Right) | | |  <p>(Grey Chevron on both sides, example graphic of HA in limited mode)</p> | None |
| | | | 0x5 (PreparingLeft) | | |  | None |
| | | | | | | Active | |

| | | | | | | | |
|--|--|--|-------------------------|-------------------|--------|---|--|
| | | | | | | (Blue Chevron on the Left, none Right, example graphic of HA in extended mode) | |
| | | | 0x6 (PreparingRight) | | |  <p>(Blue Chevron on the Right, none Left)</p> | None |
| | | | 0x7 (LcActiveLeft) | | |  <p>(part of animation Indicating a lane change to the left, final static image is displayed as long as signal is active)</p> | None |
| | | | 0x8 (LcActiveRight) | | |  <p>part of animation Indicating a lane change to the right, final static image is displayed as long as signal is active)</p> | None |
| | | | X (Don't Care) | X (Don't Care) | | Canceled by Driver* (GML ID: A13) | TJA_Low_Priority_ Chime_Status_Flag |
| | | | | | Active | Canceled (GML ID: A1) | |

| | | | | | | | | |
|-----------------|--|---|-------------------|-----------------------------|--|--------|--|------|
| | | | | 0x3 (CancelNoLane) | | | Canceled No Lane Seen* (GMLD ID: A15) | |
| | | | | 0x4 (CancelLaneBusy) | | | Canceled Lane Busy* (GML ID: A14) | |
| | | | | 0x5 (CancelSpeedTooLow)) | | | Canceled Low Speed* (GML ID: A16) | |
| Normal or Crank | Traffic_Jam_Assist_Cfg = 0x1 (Enabled) OR Hwy_Assist_Cfg = 0x1 (Enabled) AND Nav_Pilot_Cfg = 0x1 (Enabled) AND Auto_Lane_Change_Cfg = X | 0x2 (AvailableLnChngSuggestionOnly) Or 0x3 (AvailableDriverLnChng) Or 0x4 (AvailableVehicleLnChng) | X (Don't Care) | X (Don't Care) | 0x1 (LnChngSuggestionLeftFasterLn) | Active |  | None |
| | | | | | 0x2 (LnChngSuggestionRightFasterLn) | |  | None |
| | | | | | 0x5 (TurnOffIndicator) | |  (Text: Turn Signal is Still Active) | None |
| | | | | | 0x6 (LnChngSuggestionLeftNav) | |  | None |
| | | | | | 0x7 (LnChngSuggestionRightNav) | |  | None |

| | | | | | | | |
|--|--|--|--|-----------------|------------------------------------|---|--|
| | | | | | 0x8 (HandOver) |  | None |
| | | | | | 0x9 (MissingExitAlert) |  | TJA_Low_Priority - Chime_Status_Flag |
| | | | | | 0xA (LnChngSuggestnLeftManual) | To do added | None |
| | | | | | 0xB (LnChngSuggestnRightManual) | To be added | None |
| | | | | All Other Cases | Inactive | (No indication) | None |

The ADAS controller will arbitrate and populate the 3 input signals above, cluster simply displays information based on signal states received.

Note *: The generic “Cancellation (GML ID: A1)” notification shall be displayed only if application display does not have space to display reason text.

Note: The Lane_Centering_Assist_Canceled_MC_Warn_Status_Flag shall have higher priority over any and all ALC cancelation messages.







1.3.3.5.13 F-REQ-343100/D-State Matrix Update for Highway Assist Information Warnings with NBP

| Operational_Mode | Feature Config | Driver Assist On-Demand Screen | TjaWarn_D_Rq Signal | TjaMsgTxt_D_Dsply Signal | NbpAvail_D_Stat Signal | Lane_Centering_Assis t_Canceled_MC_War | Driver_Resume_Cont | Lane_Warning_Right | Lane_Warning_Left MC_Warn_Statue_El | Eyes_On_Road_Ambe rEyesOff (0x6) | Eyes_On_Road_Red MC_Warn_Statue_El | Lane_Centering_Una vailable | Lane_Centering_Assis t_On | Hwy_Assist_Unavaila ble | Hwy_Assist_On MC_Warn_Statue_El | Hwy_Assist_Available | Hwy_Assist_Press_Ac c_to | Navigation_Pilot_Un | |
|------------------|--|-----------------------------------|---------------------------------|-----------------------------|---------------------------|---|--------------------|--------------------|--|-------------------------------------|---------------------------------------|--------------------------------|------------------------------|----------------------------|------------------------------------|----------------------|-----------------------------|---------------------|-----------|
| Normal or Crank | Traffic_Jam_Assist_Cfg = Enabled (0x1) OR Hwy_Assist_Cfg = Enabled (0x1) AND Nav_Pilot_Cfg = 0x1 (Enabled) AND Auto_Lane_Change_Cfg = X | Not Displayed | TrafficJamAssistCancel (0x1) | X (Don't Care) | X (Don't Care) | Active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | |
| | | Actively Displayed | | | | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | | |
| | | X (Don't Care) | HardTakeOverLevel2 (0x3) | X (Don't Care) | | In active | Active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active |
| | | | HaLaneDeptWarningRight (0x4) | | | In active | Active | In active | In active | In active | In active | In active | In active | In active | In active | In active | In active | | |
| | | | HaLaneDeptWarningLeft (0x5) | | | In active | In active | Active | In active | In active | In active | In active | In active | In active | In active | In active | | | |
| | | | SoftTakeOverEyesOff (0x6) | | | In active | In active | In active | In active | Active | In active | In active | In active | In active | In active | In active | | | |
| | | | HardTakeOverEyesOff (0x7) | | | In active | In active | In active | In active | In active | Active | In active | In active | In active | In active | In active | | | |
| | | | NoWarning (0x0) | | | TrafficJamAssistUnavailable (0x1) | In active | In active | In active | In active | In active | In active | Active | In active | In active | In active | In active | In active | |
| | | TrafficJamAssistSelected (0x2) | | In active | | In active | In active | In active | In active | In active | Active | In active | In active | In active | In active | In active | | | |
| | | HAUnavailable (0x4) | | In active | | In active | In active | In active | In active | In active | In active | Active | In active | In active | In active | In active | | | |
| | | HASelected (0x5) | | In active | | In active | In active | In active | In active | In active | In active | In active | Active | In active | In active | In active | | | |

| Operational_Mode | Feature Config | Driver Assist On-Demand Screen | TjaWarn_D_Rq Signal | TjaMsgTxt_D_Dsply Signal | NbpAvail_D_Stat Signal | Lane_Centering_Assis t_Canceled_MC_War | Driver_Resume_Cont rol | Lane_Warning_Right | Lane_Warning_Left MC_Warn_Status_F1 | Eyes_On_Road_Ambe nt | Eyes_On_Road_Red MC_Warn_Status_F1 | Lane_Centering_Una vailable | Lane_Centering_Assis t_On | Hwy_Assist_Unavaila ble | Hwy_Assist_On MC_Warn_Status_F1 | Hwy_Assist_Available | Hwy_Assist_Press_Ac tivated | Navigation_Pilot_Un available |
|------------------|----------------|--------------------------------|--|--|---------------------------|---|---------------------------|--------------------|--|-------------------------|---------------------------------------|--------------------------------|------------------------------|----------------------------|------------------------------------|----------------------|--------------------------------|----------------------------------|
| | | | | SmartOffering (0x6) | | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Acti ve | Inact ive | Inact ive |
| | | | | Disclaimer (0x7) | | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Acti ve | Inact ive | | |
| | | | | Declared Missing as per Section 1.4.1 | | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | | | |
| | | | X (Don't Care) | X (Don't Care) | NbpF ailure (0x5) | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Acti ve | | |
| | | | Declared Missing as per Section 1.4.1 | X (Don't Care) | X (Don't Care) | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | | |
| All Other Cases | | | | | | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | Inact ive | | | |

Above State Matrix for Assisted Lane Change Information is based on F-REQ-343100/D-State Matrix for Highway Assist Information Warnings in < Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>. The purple content is added for NBP.

1.3.3.5.14 MC Status Flag to MC Warning Message

| MC Warn Status Flag | Reference Text or Graphic (see GML for exact wording) | MC Warning ID | Chime Status Flag |
|--|--|---------------|------------------------------------|
| Navigation_Pilot_Unavailable_MC_Warn_Status_Flag | | | None |
| Lane_Change_Suggested_For_Faster_Lane_Left_MC_Warn_Status_Flag |  A top-down view of a car on a road with lane markings. A blue arrow points left from the car, and a blue double arrow points left from the left lane. A black box at the bottom contains the text "Lane Change Suggested For Faster Lane". | | None |
| Lane_Change_Suggested_For_Faster_Lane_Right_MC_Warn_Status_Flag |  A top-down view of a car on a road with lane markings. A blue arrow points right from the car, and a blue double arrow points right from the right lane. A black box at the bottom contains the text "Lane Change Suggested For Faster Lane". | | None |
| Lane_Change_Suggested_Following_Navigation_Left_MC_Warn_Status_Flag |  A top-down view of a car on a road with lane markings. A blue arrow points left from the car, and a blue double arrow points left from the left lane. A black box at the bottom contains the text "Lane Change Suggested Following Navigation". | | None |
| Lane_Change_Suggested_Following_Navigation_Right_MC_Warn_Status_Flag |  A top-down view of a car on a road with lane markings. A blue arrow points right from the car, and a blue double arrow points right from the right lane. A black box at the bottom contains the text "Lane Change Suggested Following Navigation". | | None |
| HandOver_MC_Warn_Status_Flag |  A top-down view of a car on a road with lane markings. A black box at the bottom contains the text "Handover". | | None |
| Missing_Exit_Alert_MC_Warn_Status_Flag |  A top-down view of a car on a road with lane markings. A black box at the bottom contains the text "Missing Exit Alert" in orange. | | TJA_Low_Priority_Chime_Status_Flag |

| | | | |
|--|--|--|------|
| LnChngSuggstnLeftManual_MC _Warn_Status_Flag | | | None |
| LnChngSuggstnRightManual _MC_Warn_Status_Flag | | | None |

1.3.5.2 Operation Description (supports algorithm flow chart)

NBP settings are at IVI instead of cluster.

1.3.5.3 Personalization Feature Number Definition

None

1.3.5.4 Function Safety Classification (EMC)

Class B

1.3.5.5 Memory Storage

1.3.5.5.1 Memory Storage Parameters

| Parameter Name | Description | Value at Battery Connect | Value at Wake-up |
|--|--|--------------------------|------------------|
| Nav_Pilot_Cfg | Configures cluster to display items in the Settings menu (Set to “cluster” at cluster supplier manufacturer plant. | Use Stored Value | Use Stored Value |
| Auto_Lane_Change_Cfg | Configures cluster to display items in the Settings menu (Set to “cluster” at cluster supplier manufacturer plant. | Use Stored Value | Use Stored Value |
| FeatConfigIpmbActl signal | Input signal sent from IPMB to indicate current value of the feature setting for the feature that is being set or queried. | (0x0000) | Do Not Init |
| FeatNoIpmbActl | Input signal sent from IPMB to indicate Feature Number. | (0x0000) | Do Not Init |
| PersIndexIpmb_D_Actl | Input signal from IPMB to indicate which personality profile is being reported. | Vehicle (0x4) | Do Not Init |
| Nbp_D_Stat | Input signal from IPMB to display current status of NBP system. | 0x0 | 0x0 |
| NbpMsgTxt_D_Rq | Input signal from IPMB to display lane change assist notifications to the user. | 0x0 | 0x0 |
| NBP_Information_Display | Output signal to displays the Navigation Based Pilot information in the ADAS metaphor. | Inactive | Inactive |
| Navigation_Pilot_Unavailable_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| Lane_Change_Suggested_For_Faster_Lane_Left_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| Lane_Change_Suggested_For_Faster_Lane_Right_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| Lane_Change_Suggested_Following_Navigation_Left_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| Lane_Change_Suggested_Following_Navigation_Right_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |

| Parameter Name | Description | Value at Battery Connect | Value at Wake-up |
|--|--|--------------------------|-------------------|
| HandOver_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| Missing_Exit_Alert_MC_Warn_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| LnChngSuggstnRightManua_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| LnChngSuggstnRightManual_Status_Flag | Output signal to control the state of the text warning message. | Inactive | Inactive |
| NAVIGATION_PILOT_SETUP_MC | Output signal to control the setting menu display output for Navigation Based Pilot | Inactive | Inactive |
| NAV_PILOT_AUDIO_SETUP_MC | Output signal to control the setting menu display output for Navigation Based Pilot audio selection. | Inactive | Use Stored Value? |
| AUTO_LANE_CHANGE_SETUP_MC | Output signal to control the setting menu display output for Auto Lane Change. | Inactive | Inactive |

1.3.5.5.2 Time Constants

| TIME CONSTANT | Duration | Description | Min | Max | Resolution |
|---------------|----------|--|-------|--------|------------|
| MAX_WARN_TIME | 4 secs | Max time that the warning is displayed during a fault. | 0 sec | 5 secs | 1 sec |

The above parameter shall be made tunable via a writeable supplier DID.

Same with NVM-REQ-343114/A-Time Constants in < Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>.

1.3.5.6 Reconfigurable Telltale

None

1.3.5.6 Prove Out

None

1.3.5.7 Message Center Msg

Refer to 1.3.3.5.14 MC Status Flag to MC Warning Message.

1.4 Error Handling

1.4.1 SR-REQ-XXXXXX/A–Missing Message Strategy

Missing message DTC (TBD) shall be logged if signals NbpAvail_D_Stat or NbpMsgTxt_D_Rq is not received for continuous 5s.

If Nav_Pilot_Cfg = Disabled (0x0), the cluster shall never log a missing message DTC for NbpAvail_D_Stat and NbpMsgTxt_D_Rq signals for this feature.

1.5 Diagnostics

1.5.1 Self -Test

None

1.5.2 Engineering Test Mode

Reference section “Dealer / Engineering Test Mode (ETM)”

1.5.3 Part II Performance

1.5.3.1 DID DExx

| Block Num | Block Description | Byte(s) | Bits | State: Description | "0" | "1" | Default | Comments/ Information |
|---|----------------------|---------|------|------------------------|----------|---------|----------|---|
| PACKETED BLOCKS | | | | | | | | |
| \$01 | Option Content (B&A) | * | 1 | Navigation Based Pilot | Disabled | Enabled | Disabled | This parameter allows the NBP related menu items and all information pertaining to the feature to be displayed in the vehicle. Disabled means NBP feature is not present in the vehicle. |
| \$02 | Option Content (B&A) | * | 1 | Auto Lane Change | Disabled | Enabled | Disabled | This parameter allows the Auto Lane Change settings menu and all pertaining information to be displayed in the cluster, as well as information. Disabled means Auto Lane Change (that is submenu of NBP) is not present in the vehicle. |
| *Byte and bit location to be identified in Part II Specification for this cluster | | | | | | | | |

1.5.3.2 Supported Diagnostic Trouble Codes (DTCs)

| DTC | Description |
|-----|--|
| TBD | Lost Communication with IPMB (Image Processing Module “B”) |

1.6 Reference Specification

< Highway Assist with Lane Centering Control Function and Warnings - FNV2.docm>

1.7 Revision History

| Version | Name | Change Description | Date |
|---------|------------|--------------------|-----------------|
| 1.0 | Zheng Dong | Initial release | October 31/2022 |
| | | | |
| | | | |
| | | | |