


5. ELEVATOR CONTROL
MECHANISM ASSEMBLY
WASHER (4)
BOLT (4)

6. CONNECTING LINK
BOLT
WASHER
NUT
COTTER PIN

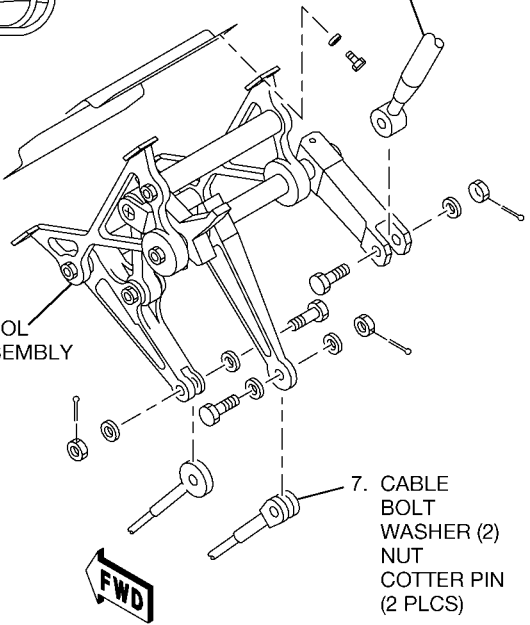


7. CABLE
BOLT
WASHER (2)
NUT
COTTER PIN
(2 PLCS)

ICN-88277-G2731178-004-01

3-2. FOLLOW-ON MAINTENANCE.


1. (A) Remove rig pin 5-5 from elevator cable crank control assembly.
2. (A) Close access door (313ATD) and tighten fasteners.
3. Remove elevator aircraft ground safety lock (05-10-01, task 01-6).
4. Remove rudder aircraft ground safety lock (05-10-01, task 01-2).
5. Exit horizontal stabilizer (00-00-02).

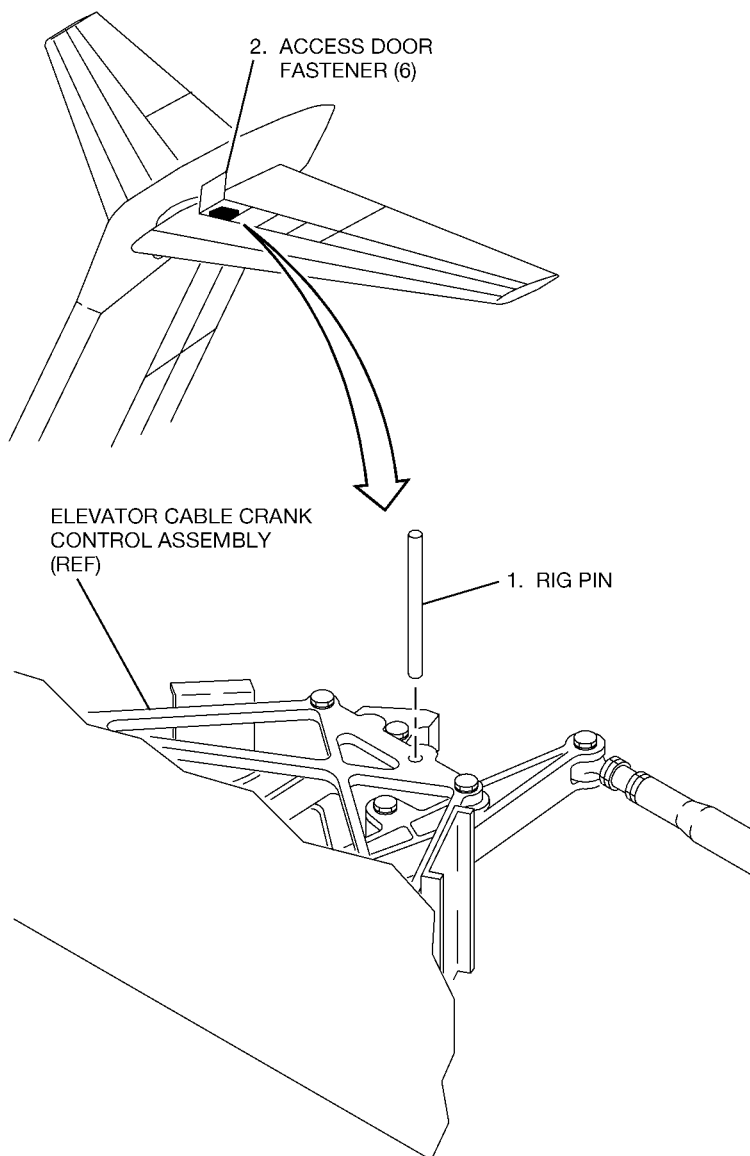

ICN-88277-G2731180-003-01

TO 1300i-2-27JG-30-2

6. (A,B) Hold non-intersecting halves; remove quick-release pin and control mechanism lock from shaft.
7. Perform upper crew compartment floor panel installation (215BZY) (53-21-10, tasks 3-1 and 3-2).
8. Perform elevator mechanical controls and surfaces system operational checkout (27-31-01, task 01-1).

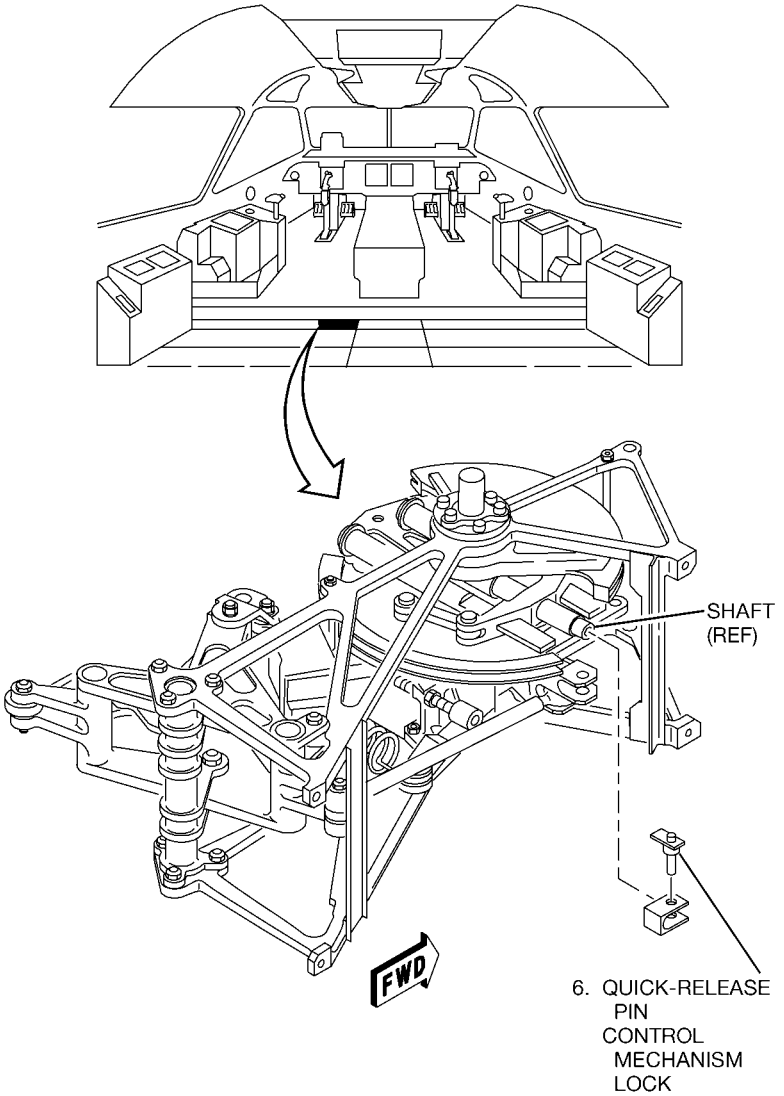

ICN-88277-G2731181-004-01

