


Altium Download:



1. Follow the below link and click on the .zip download:


<ftp://altiumdownload.ece.ufl.edu/pub/Altium%20Install/Altium%2019/Altium%2019%20zip/>

2. Once finished downloading, extract the files to whatever destination you want.
3. Once inside your destination folder, click on the AltiumDesigner19Setup.exe file.

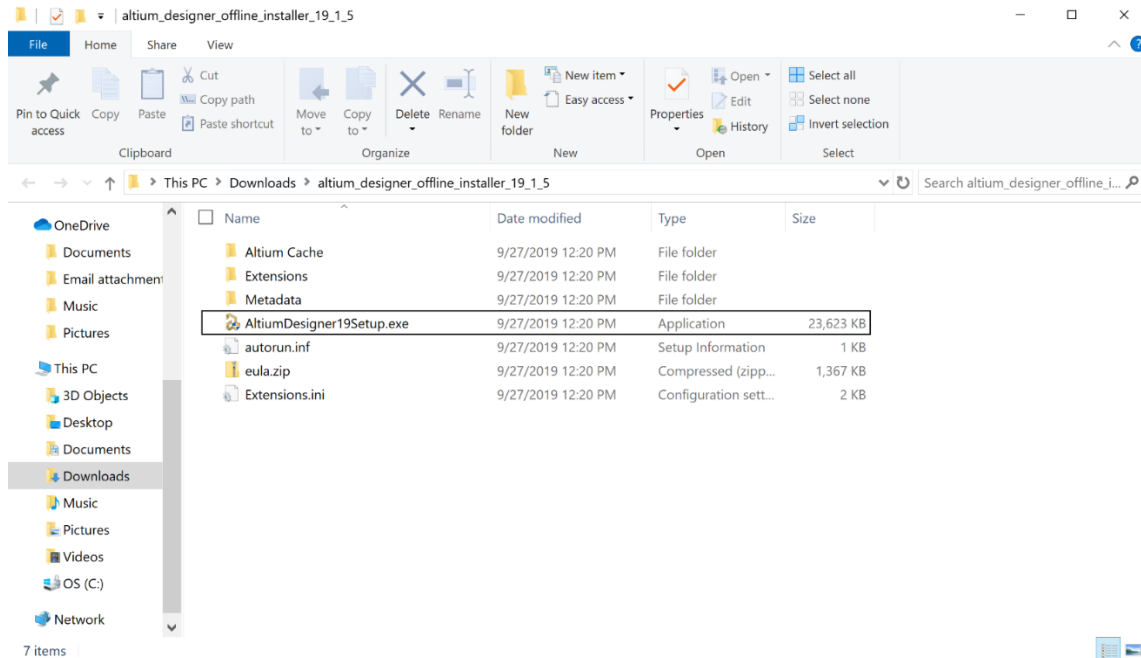


4. Follow through the default installation settings as shown below.

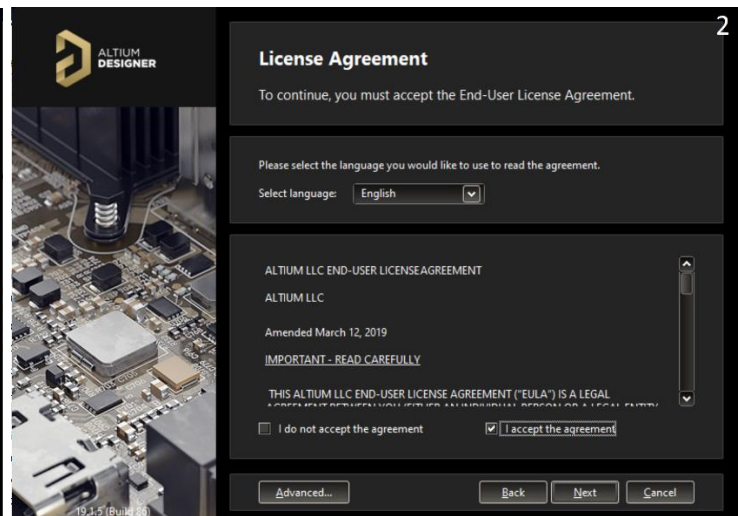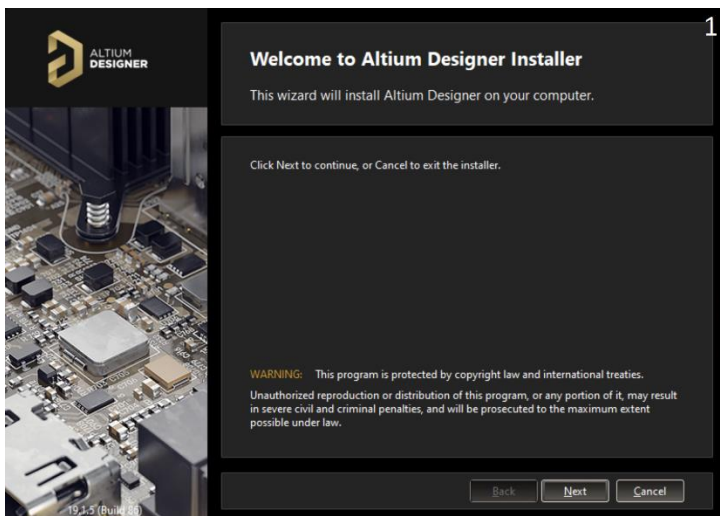


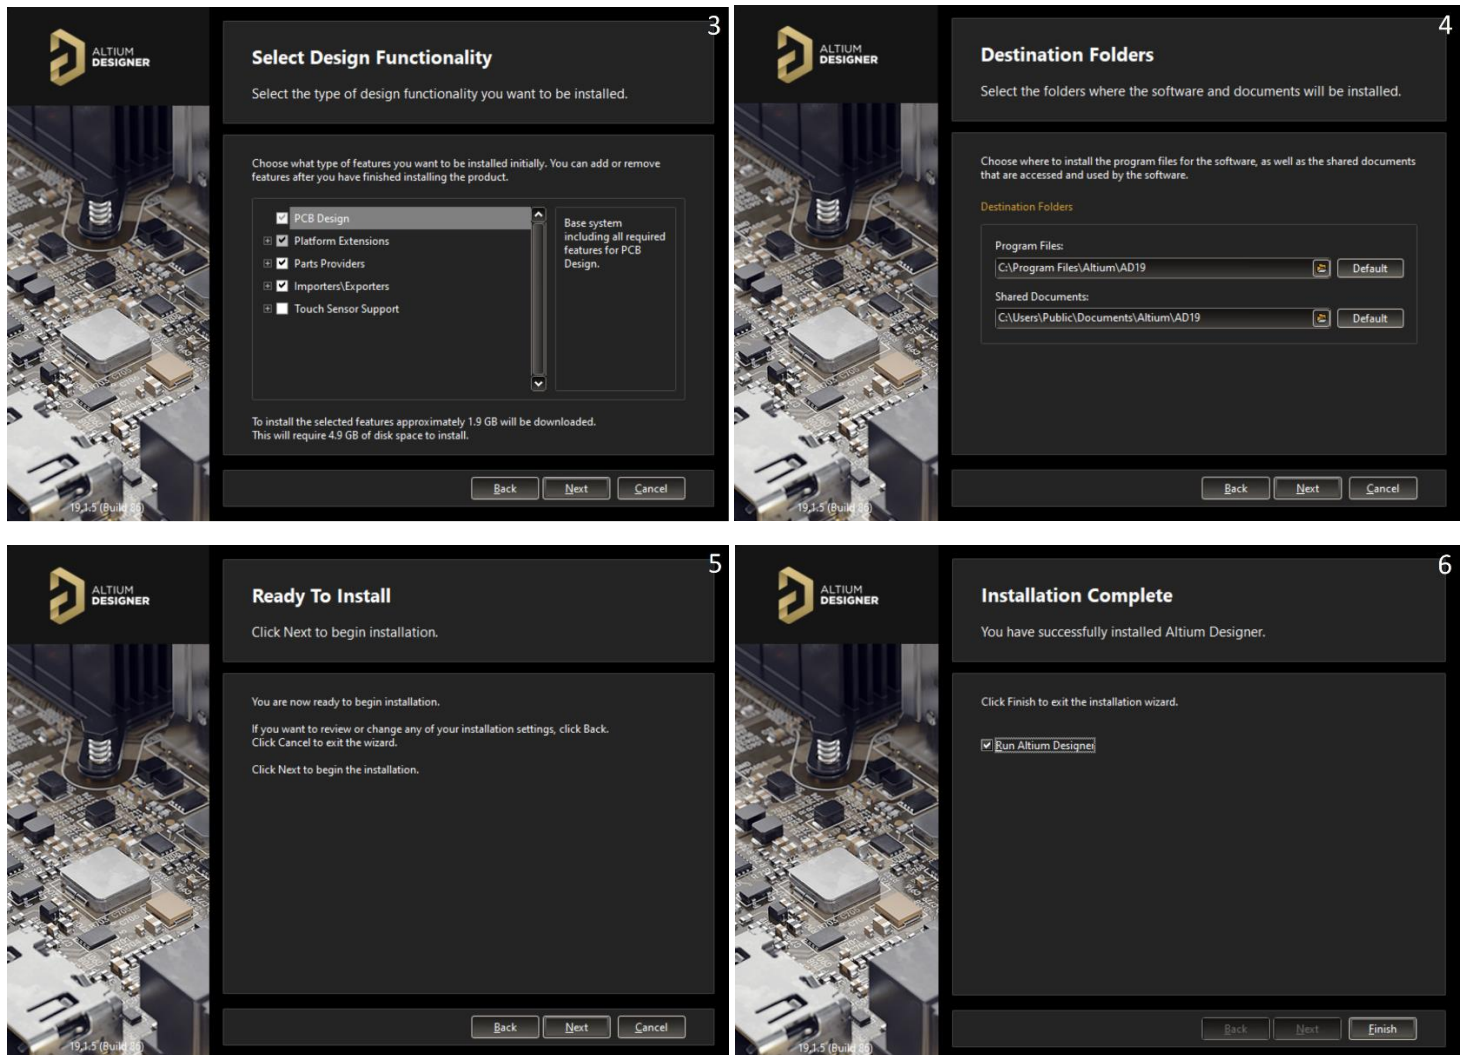

5. Once installed and opened you should see the below screen:
6. Click on “Setup Private License Server”

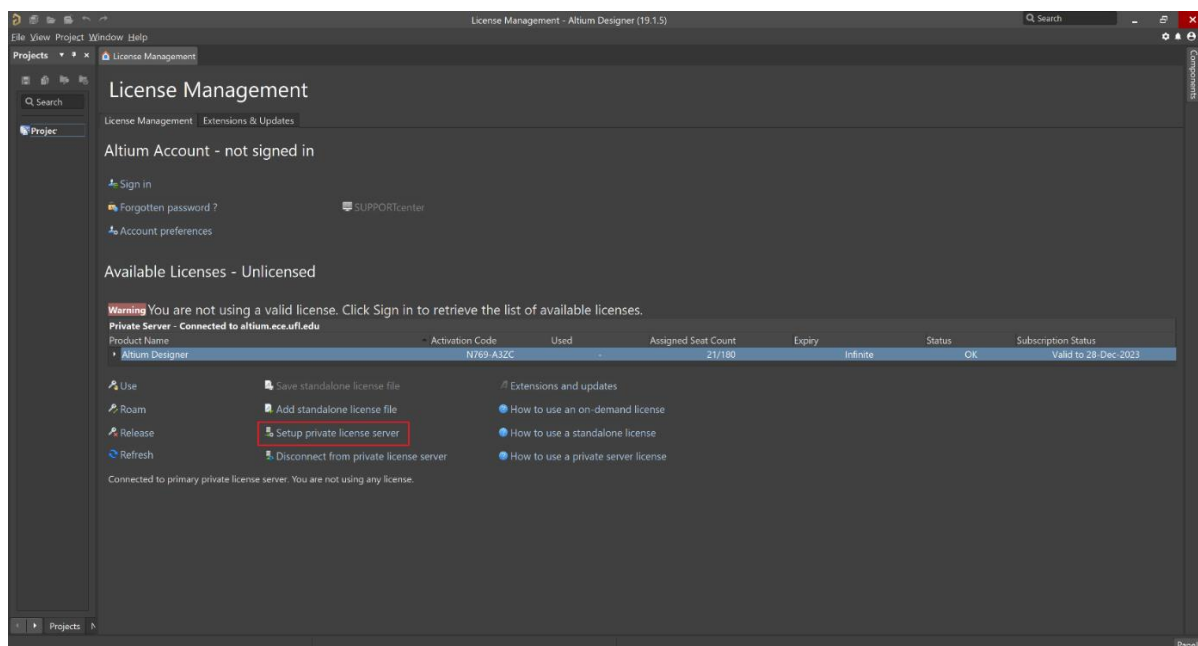

7. Set up the screen as shown below (make sure that you're on the UF network):

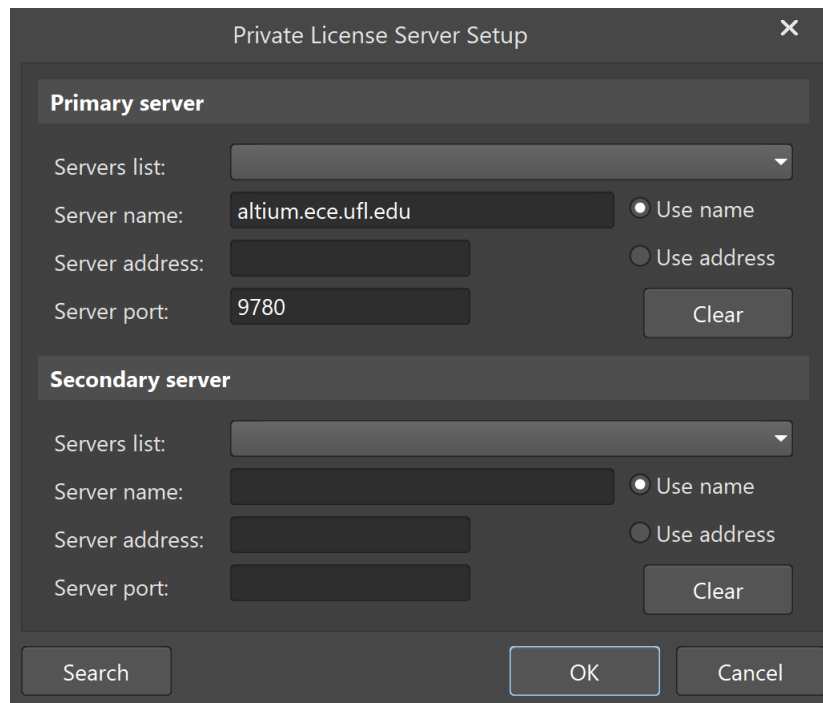

The image shows a 'Private License Server Setup' dialog box. It has two sections: 'Primary server' and 'Secondary server'. Each section contains a 'Servers list' dropdown, a 'Server name' text box, a 'Server address' text box, and a 'Server port' text box. In the 'Primary server' section, 'Server name' is set to 'altium.ece.ufl.edu' and 'Server port' is set to '9780'. There are radio buttons for 'Use name' and 'Use address'. A 'Clear' button is next to the 'Server port' text box. At the bottom of the dialog are 'Search', 'OK', and 'Cancel' buttons.

8. If you did everything correctly, you should see the following screen:

