



# Front Panel

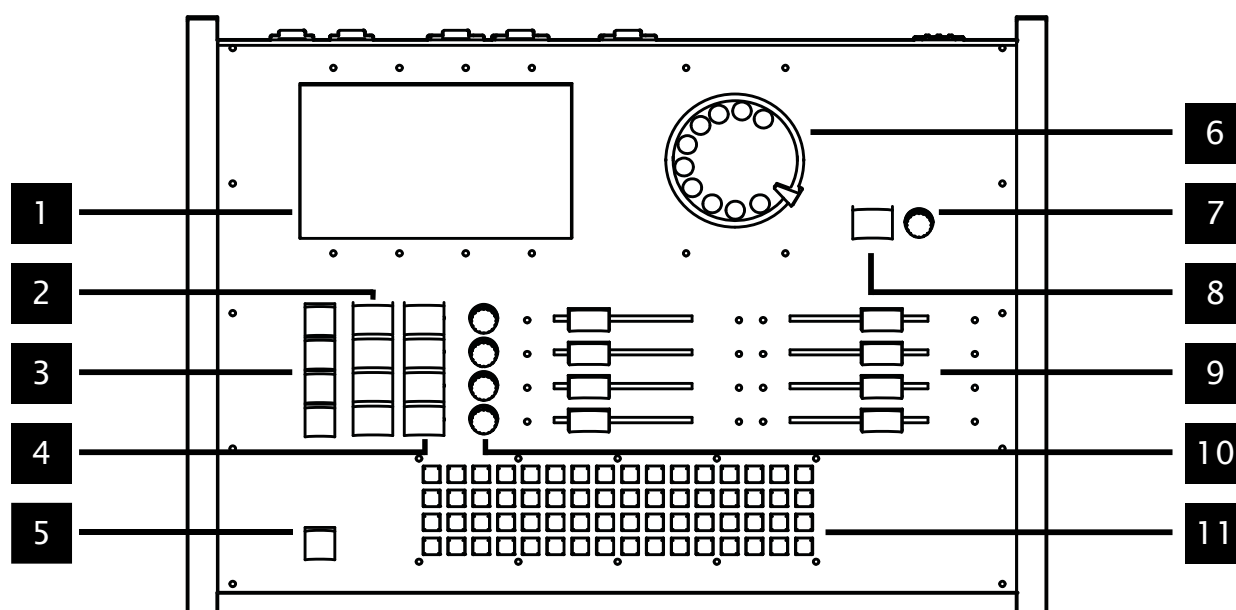

<b>1</b>	Sample Selection Display	s.11	<b>6</b>	Sample Selection Dial	s.16
<b>2</b>	Load Sample Buttons	s.12	<b>7</b>	Tempo Knob	s.17
<b>3</b>	Prelisten Buttons	s.13	<b>8</b>	START/STOP Button	s.18
<b>4</b>	LOOP Buttons	s.14	<b>9</b>	In- and Out-Point Fader	s.19
<b>5</b>	Listen Button	s.15	<b>10</b>	Sample Tempo Knobs	s.20
			<b>11</b>	Sequencer	s.21

## Front Panel

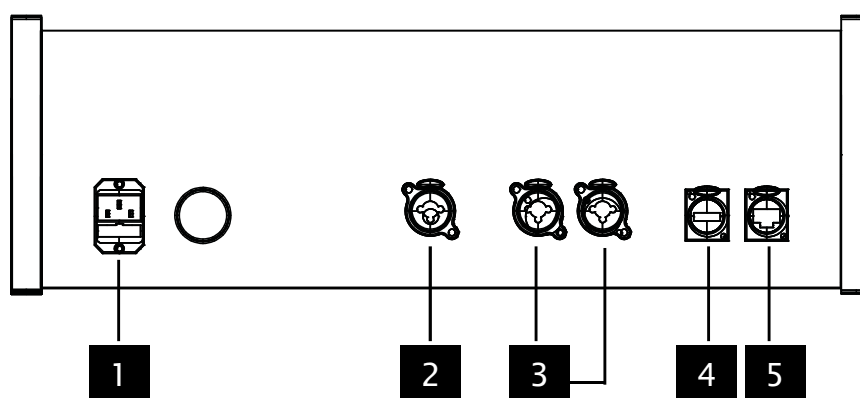

<b>1</b>	Power Connector & Switch	s.11	<b>2</b>	CLOCK Output	s.16
<b>3</b>	Audio Output L+R	s.12	<b>4</b>	USB Connector	s.17
<b>5</b>	RJ45 Network Connector	s.12			