



**Usewood**

**USEVOLT**

## **USEWOOD TOUCHSCREEN USER MANUAL**

Usewood Forest Tec Oy  
[www.usewood.fi](http://www.usewood.fi)  
Usevolt Oy  
[www.usevolt.fi](http://www.usevolt.fi)

# Table of content

---

1	Introduction	1
2	Task bar	2
3	Log in	4
4	Home	5
5	Dashboard	6
6	Settings	7
6.1	General . . . . .	7
6.2	Valves . . . . .	8
6.3	Implement settings . . . . .	10
6.3.1	UW180s measuring settings . . . . .	11
6.3.2	UW180s valve settings . . . . .	12
7	System	14
7.1	Settings . . . . .	14
7.2	Diagnostics . . . . .	15
7.2.1	MSB diagnostics . . . . .	16
7.2.2	ECU diagnostics . . . . .	17
7.3	Log . . . . .	18
7.4	System restore . . . . .	19

# 1 Introduction

---

This user manual provides the user with necessary information to use Usewood touchscreen supplied in Usewood small forestry machines ([Usewood Forest Master](#), [Usewood Log Master](#) and [Usewood Combi Master](#)). The main purpose of the touchscreen is to provide the machine operator an interface for configuring and monitoring the machine. Knowing how to use the touchscreen is vital, since many machine parameters can be adjusted only via the touchscreen. Not configuring the machine properly can lead in a unintended stress on the machine which might shorten it's lifetime or cause a safety hazard.



## General Warning Symbol

General warning symbols are shown in the manual to indicate important points relating to safety. Whenever you come across the symbol, pay close attention to the potential risk of accident, read the section indicated by the symbol carefully, and inform other people of the matter.

## 2 Task bar

The task bar shows useful process data and it's visible in all screens. Taskbar is also used to display warning and error messages to the user.

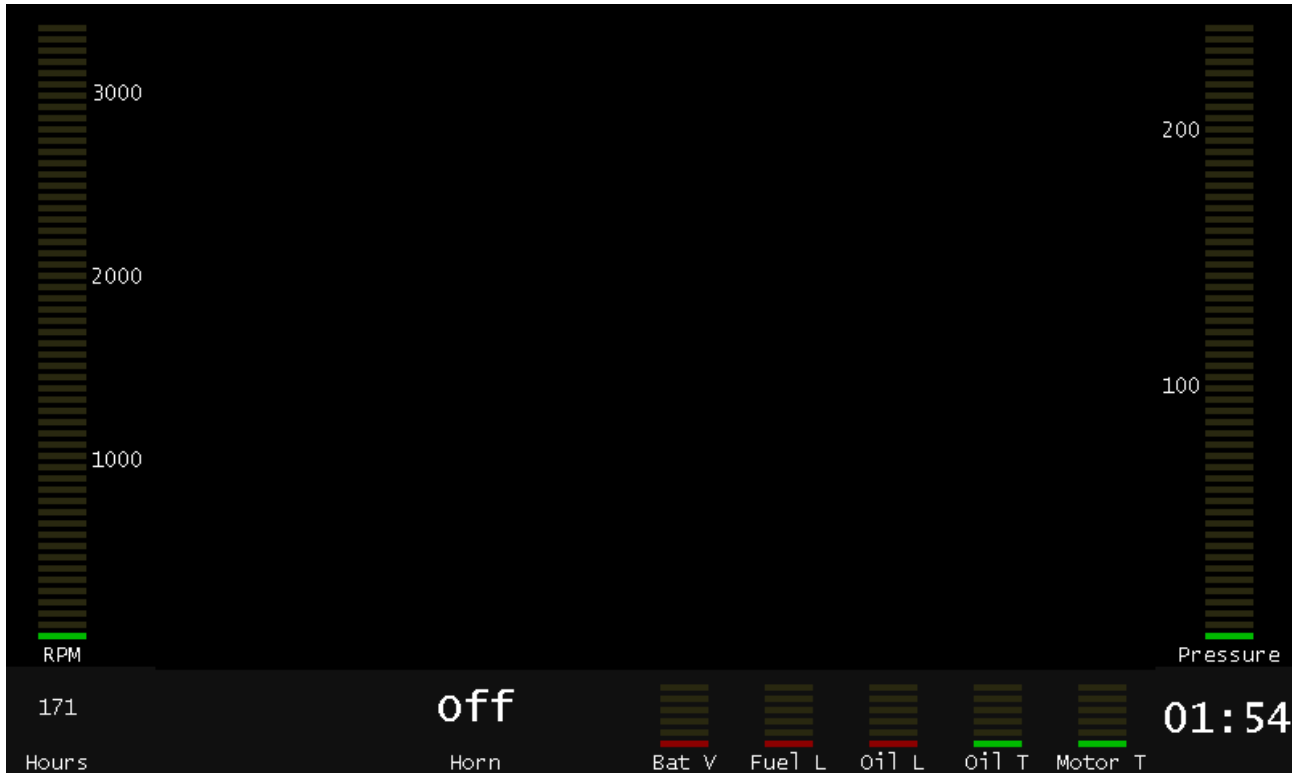


Figure 2.1: Task bar

RPM	The engine rounds per minute.
Pressure	Hydraulic pressure going from the hydarulic pump.
Hours	The usage hours of the machine. Hour counter value cannot be changed, it is increased all the time when the machine is powered on.
Horn	Pressing this blows the machine horn.
Bat V	Battery voltage. Letting the battery voltage drop too low may damage the battery.
Fuel L	Fuel level. Indicates how much fuel is left in the fuel tank.
Oil L	Hydraulic oil level. Indicates how much hydraulic oil is in the hydraulic oil tank.
Oil T	Hydraulic oil temperature. Indicates the hydraulic oil temperature measured from the tank line.
Motor T	Engine temperature. Indicates the temperature of the engine cooling water.
Clock	Shows the current time. Refer to <a href="#">section 7.1</a> on how to set the time.



### Warning

Letting the battery voltage drop too low or the hydraulic oil temperature or engine temperature get too high might cause permanent damage to the machine. User should monitor these constantly to prevent unnecessary damage to the machine.

### 3 Log in

Log in screen is shown when the system is powered. It shows a list of users available on the machine. By default the user which was used last time is selected. Selecting a different user causes the touchscreen to load user specific parameters to the forestry machine. On the left side of the screen is the list of all drivers added to the system. The default driver is named **Usewood** and up to 4 drivers can be added.

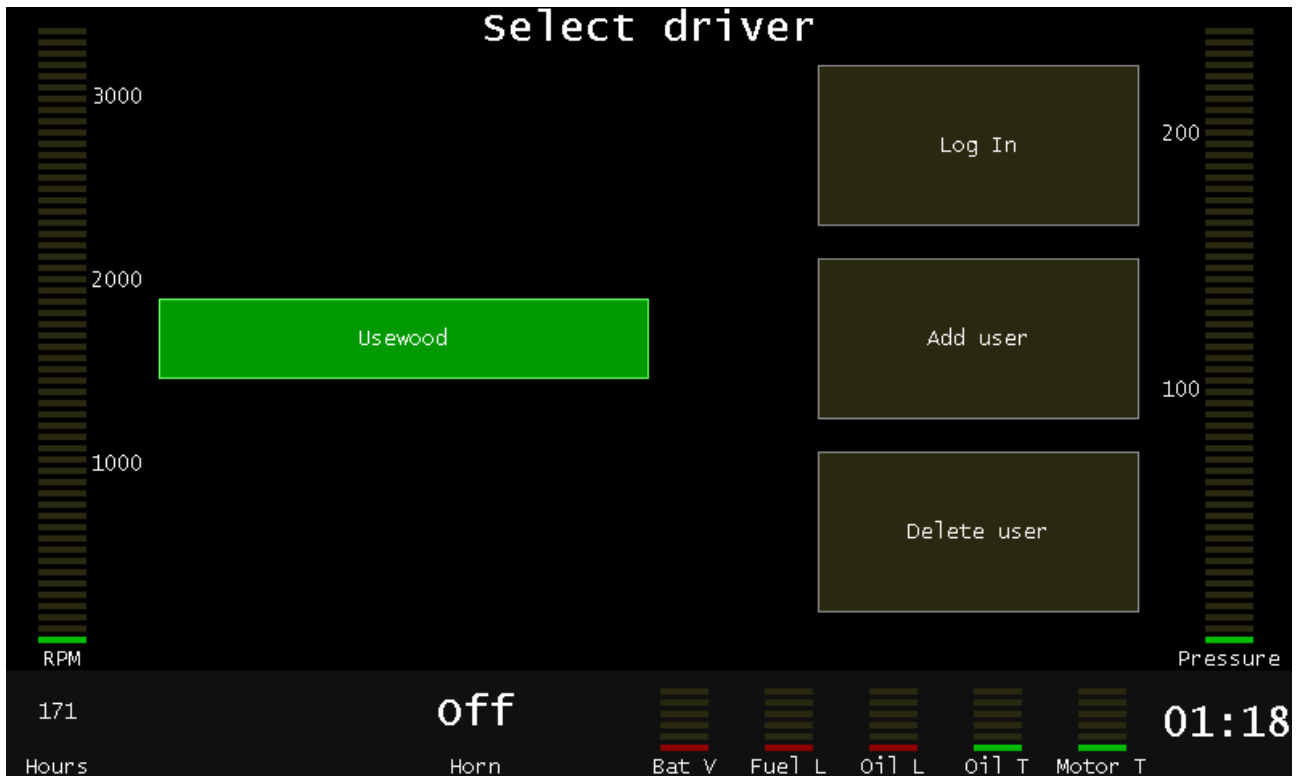


Figure 3.1: Log in screen

Log in	Logs in the currently selected user from the left side of the screen and loads the user specific parameters to the machine.
Add user	Creates a new user. An onscreen keyboard is shown which should be used to define the name of the new user.
Delete user	Deletes the currently selected user from the user list. If only one user is defined, it cannot be deleted. Deleting a user deletes it's parameters and the operation cannot be undone.

# 4 Home



Figure 4.1: Home screen

Dashboard	Displays the dashboard. Dashboard works as the main working screen for UW180s harvesting head.
Settings	Displays the user specific settings. Machine’s parameter configuration is mostly done in settings. All settings are user dependant and changing settings for one user doesn’t affect to the other users.
System	Displays the system related settings and diagnostics. Provides additional information about the control system. Some information might need deeper knowledge of the machine to be relevant.
Log out	Logs out the current user and return back to Log in screen specified in <a href="#">chapter 3</a> .

# 5 Dashboard

The content of the dashboard depends on the selected implement. [Figure 5.1](#) shows the dashboard content when UW180s harvester head is selected since other implements don't provide useful information on the dashboard. For more info on selecting the implement, see [section 7.1](#).

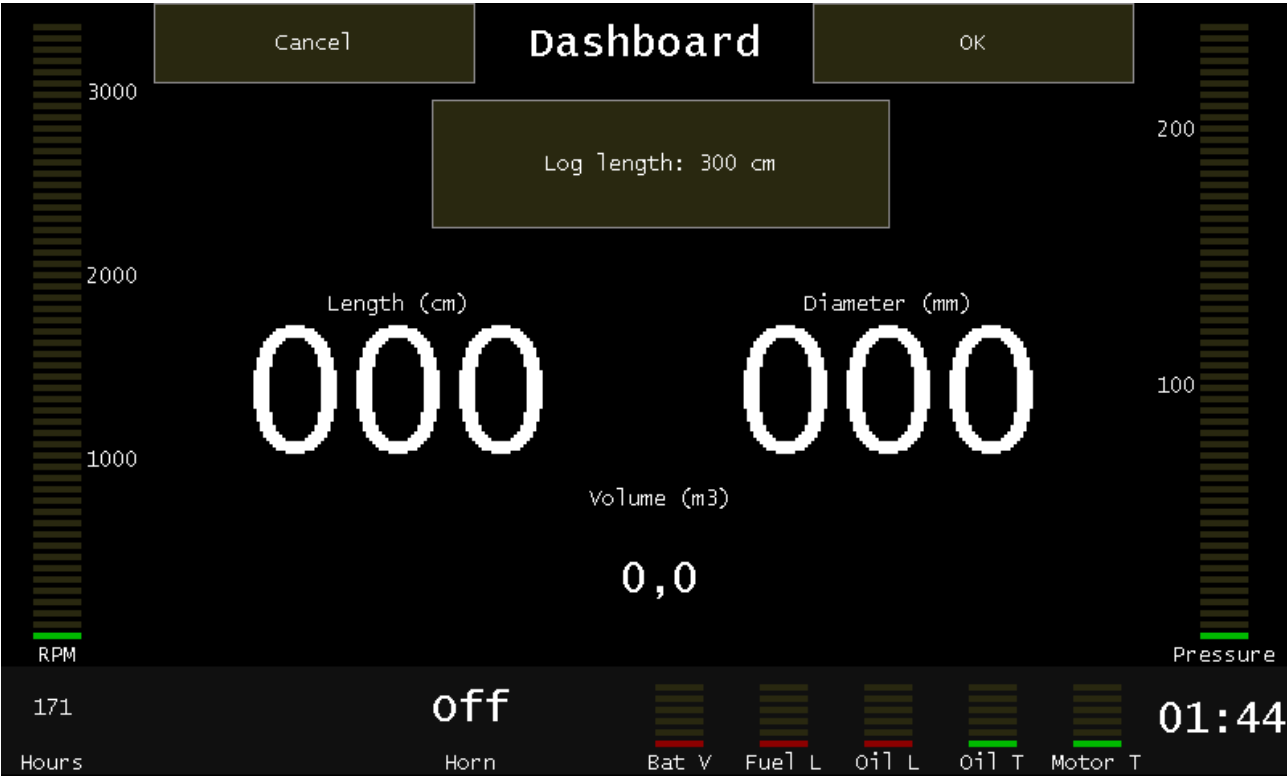


Figure 5.1: Dashboard screen

Cancel & OK	Both <b>Cancel</b> and <b>OK</b> buttons return back to Home screen.
Log length	Toggles the target log length defined in the Uw180s implement settings ( <a href="#">subsection 6.3.1</a> ). Target log length is useful only if the UW180s harvester head has a length measurement assembled.
Length	Displays the current log length in centimeters if the length measurement is assembled and enabled.
Diameter	Displays the current log diameter in centimeters if the width measurement is assembled and enabled.
Volume	Displays the total log volume done throughout the working day if both length and diameter measurement are assembled and enabled.



## 6 Settings

Settings menu is used to change the user specific parameters. Changing the settings affect the system instantly but they are saved only after pressing **OK**. Pressing the **Cancel** button reverts the parameters to their previous values. settings are organized in tabs named:

- General settings (section 6.1)
- Valve Configurations (section 6.2)
- Implement settings (section 6.3)

which all will be defined in the coming sections.



### Warning

When the machine cannot be broken by setting the parameters to wrong values, it is however possible to decrease the performance and life time of the machine. Settings are designed so that all parameters in the machine can be configured. Thus it is the user's responsibility to ensure correct operation of the machine after configuring the parameters.

### 6.1 General

General settings are an exception to all other settings since they are not saved permanently. Each time the device is started, general settings are set to their default values.

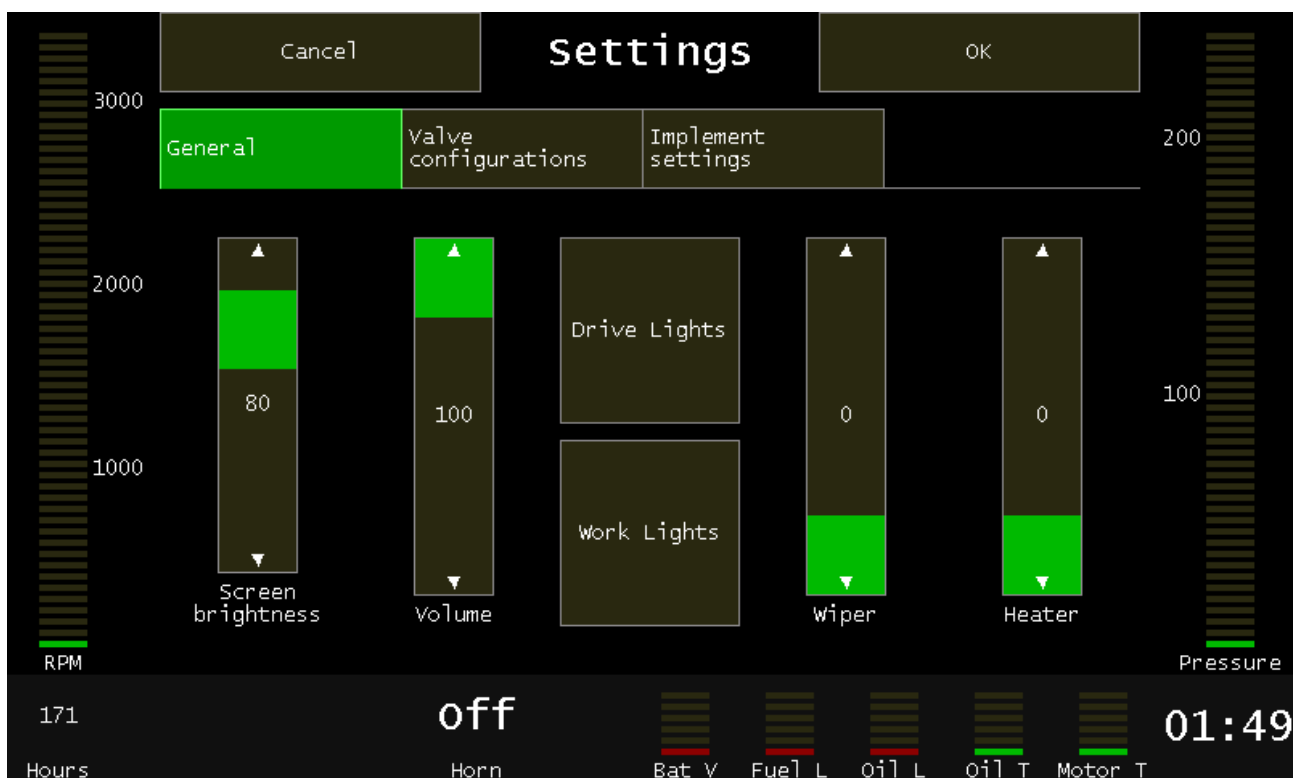


Figure 6.1: General settings screen

<b>Screen brightness</b>	Sets the touchscreen brightness. Defaults to 80 %. Using the screen on full brightness might warm up the display noticeably.
<b>Volume</b>	Sets the touchscreen volume level. If the touchscreen doesn't have audio hardware installed, settings the volume does nothing.
<b>Drive Lights</b>	Sets the driving lights on or off. Driving lights have two white LED lights forward and one red LED light backwards.
<b>Work Lights</b>	Sets the work lights on or off. Work lights have two white LED lights on left and right, as well as one white LED light in the boom.
<b>Wiper</b>	Sets the wind screen wiper speed. The amount of different wiper speed is set according to the machine hardware.
<b>Heater</b>	Sets the cabin heater speed. The amount of different heater speed is set according to the machine hardware.

## 6.2 Valves

Hydraulic valve configurations is one of the most important things every user should calibrate. Valve configurations provide a way to individually configure each hydraulic valve in the machine according to the user's liking.



### Warning

Good and throughout valve configuration greatly enhances the machine's driving experience. However, bad configuration can make the machine hard to operate or even dangerous. Always use caution when configuring the hydraulic valves.

Each valve has same set of parameters. The base machine valves are machine dependent and on **Usewood**

**Forest Master** available valves are:

- Boom lift
- Boom fold
- Boom rotate
- Driving
- Steering
- Left support leg
- Right support leg

Tapping any of the valve names bring up that valve's configuration screen. [Figure 6.3](#) is used as an example of valve configurations, however, all other valves can be configured exactly same way.

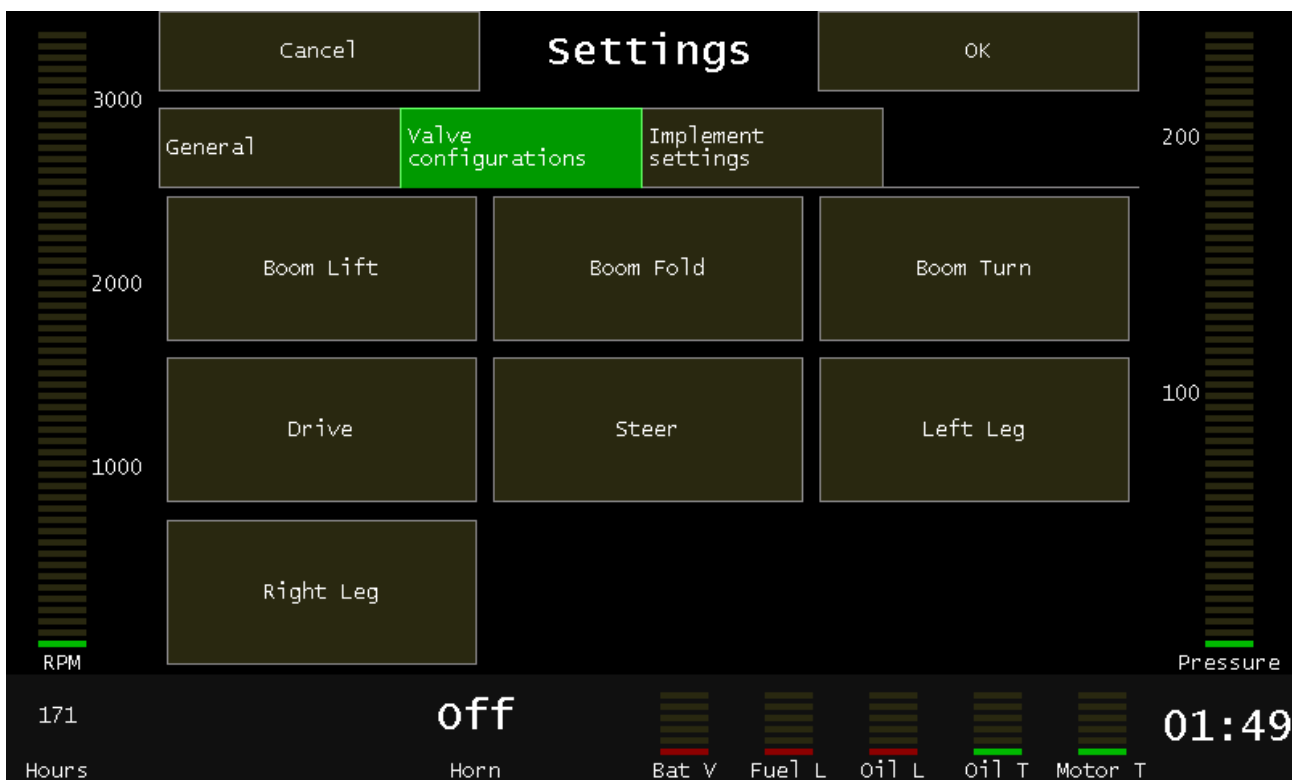


Figure 6.2: Base machine valve settings

Back	Returns back to the valve configuration screen.
Boom Lift	Name of the current valve to be configured.
Invert Direction	Inverts the hydraulic valve operation direction. All valves have a forward and backward movement. Toggling this button causes the direction of the movements to be swapped.
Forward min speed	Defines the minimum control current in the forward direction. All valves have a small offset before the oil start to flow trough them. This parameter compensates that offset to enhance the control of the valve.
Forward max speed	Defines the maximum control current in the forward direction. Easy to understand as the maximum speed of the movement, this parameter affects the maximum oil flow going through the valve.
Acceleration	Defines the acceleration ratio of how smoothly the control system increases the valve control current to the value given by the driver. The smaller acceleration value is, the smoother the machine is to operate. However, too small acceleration value increases the machine's reaction time and decreases the driver's "touch" to the machine.
Backward min speed	Same as <b>Forward min speed</b> but in opposite direction.
Backward max speed	Same as <b>Forward max speed</b> but in opposite direction.
Deceleration	Defines the deceleration ratio of how smoothly the control system decreases the valve control current towards zero. The smaller the value is, the longer the movement seems to go on before stopping. However, too big value causes the valve to shut off too fast causing shaking and vibrations stressing the machine.

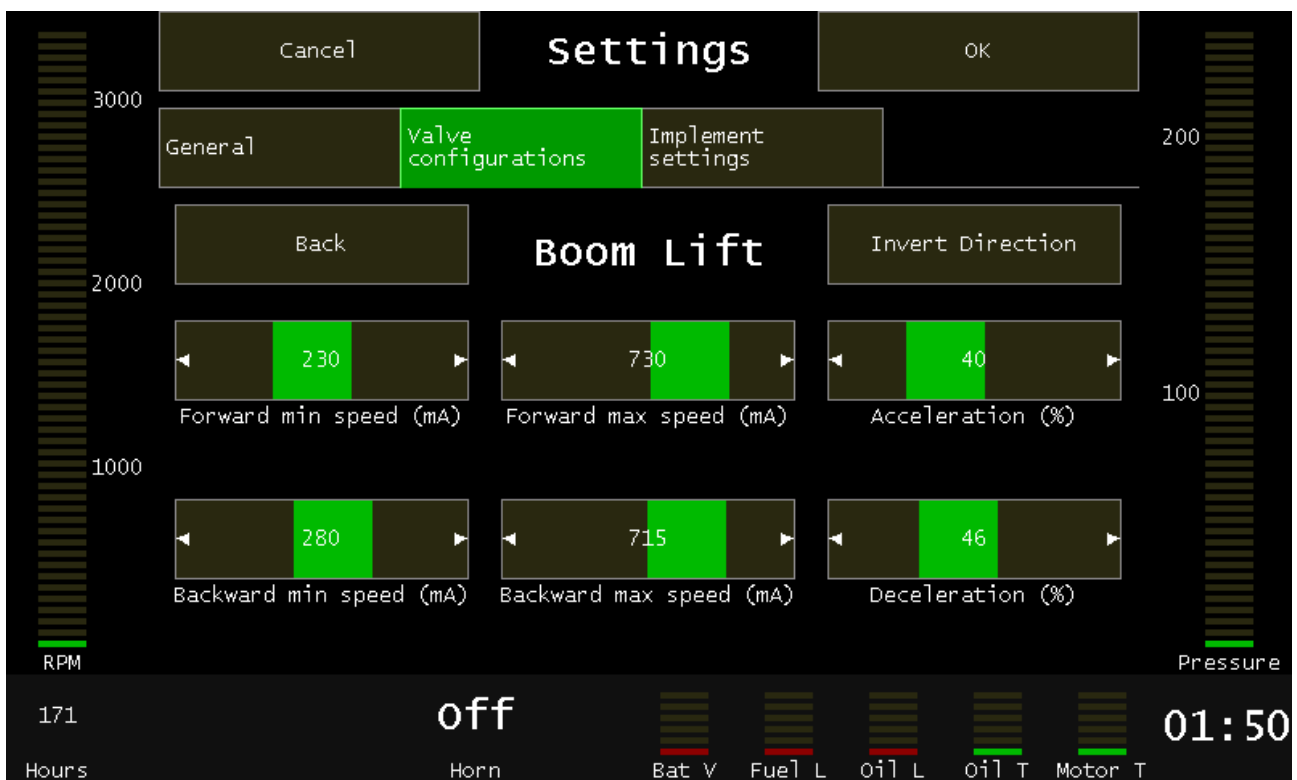


Figure 6.3: Individual valve settings screen

**Warning**

The minimum speeds should be configured carefully. Too big minimum speed values will cause the valves to supply too much oil flow even when the driver controls the machine very carefully.

**Warning**

The deceleration should be configured very carefully. Too small value will cause the machine to move after the driver has stopped controlling it, which might cause a severe risk of damaging the vehicle or even injury to the driver.

### 6.3 Implement settings

Implement settings are used to configure the settings in the currently selected implement. For more info on selecting the implement, refer to [section 7.1](#). This manual shows only UW180s harvester head's settings since they are the most complicated. All other implements are configured similar way.

<b>Log Measurement</b>	UW180s measurement device settings are used to enable or disable the measuring system as well as calibrating it.
<b>Valve Configurations</b>	UW180s hydraulic valve configurations. Similar to base machine valve configurations in <a href="#">section 6.2</a> .



Figure 6.4: Implement settings screen

### 6.3.1 UW180s measuring settings

Back	Returns back to UW180s Implement settings screen
Enabled	When selected (button is green), the measuring device is enabled.
Log length 1	The 1st log target length in millimeters.
Log length 2	The 2nd log target length in millimeters.
Length Calibration	Calibrates the length measurement. The value indicates how logn distance the log travels on each length measurement sensor's pulse. Increasing the calibration value decreases the actual length of the logs.
Volume Calibration	Calibrates the volume calculation. Works as a after-scaler in the volume calculation. Increasing the calibration value causes the calculated volume to increase as well.

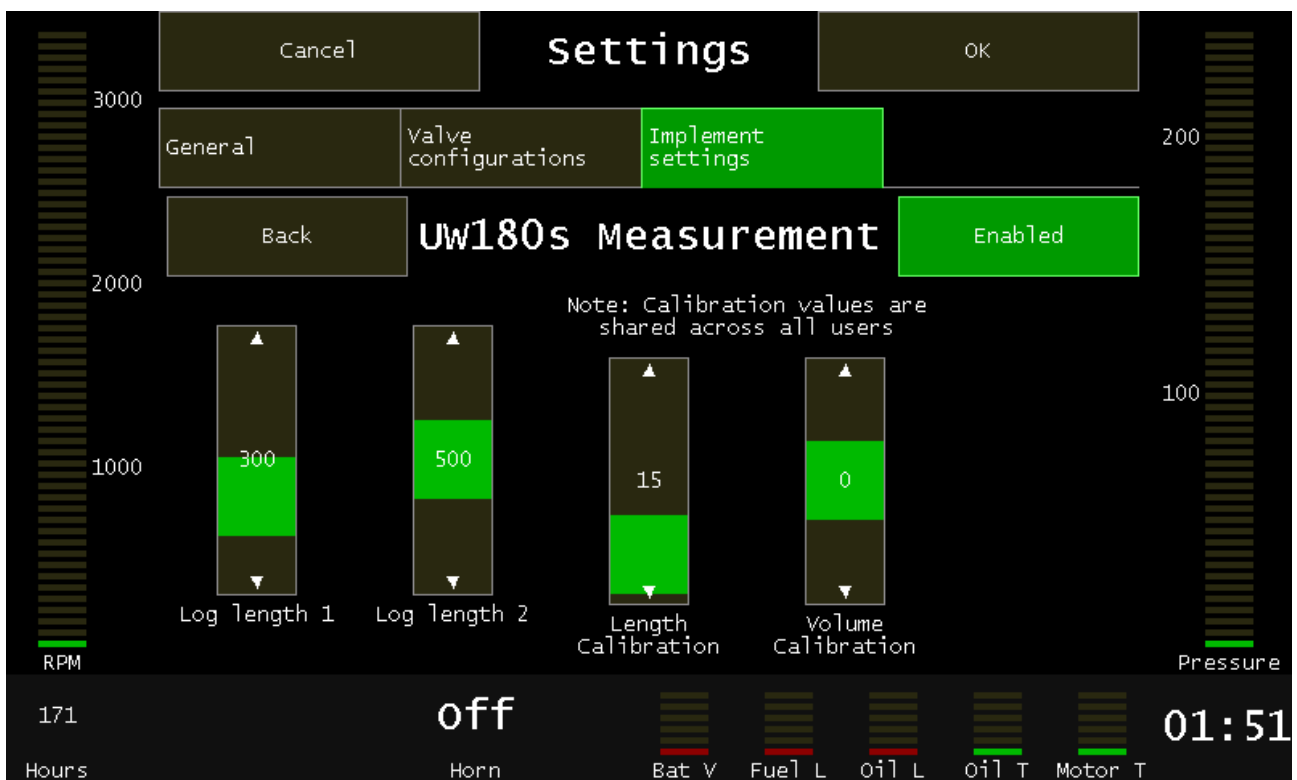


Figure 6.5: UW180s measurement settings screen

### 6.3.2 UW180s valve settings

Valve settings work in a similar manner as base machine valve configurations in [section 6.2](#), except they might not implement as many configurable parameters. Usually at least **Maximum speed** and **Inverse direction** is implemented.

<b>Wheels</b>	Wheels open / close valve settings
<b>Wheels feed</b>	Wheels feeding valve settings
<b>Delimbers</b>	Delimbers open / close valve settings
<b>Saw</b>	Saw in / out valve settings
<b>Tilt</b>	Harvester head tilting valve settings
<b>Rotator</b>	Rotator valve settings



Figure 6.6: UW180s valve settings screen

## 7 System

System menu is organized in the same manner as **Settings** shown in [chapter 6](#). **OK** button saves the changes to system settings and returns to the **Home** screen and **Cancel** button reverts the changes.

### 7.1 Settings

System settings are settings which affect the whole system. They are shared across all users.

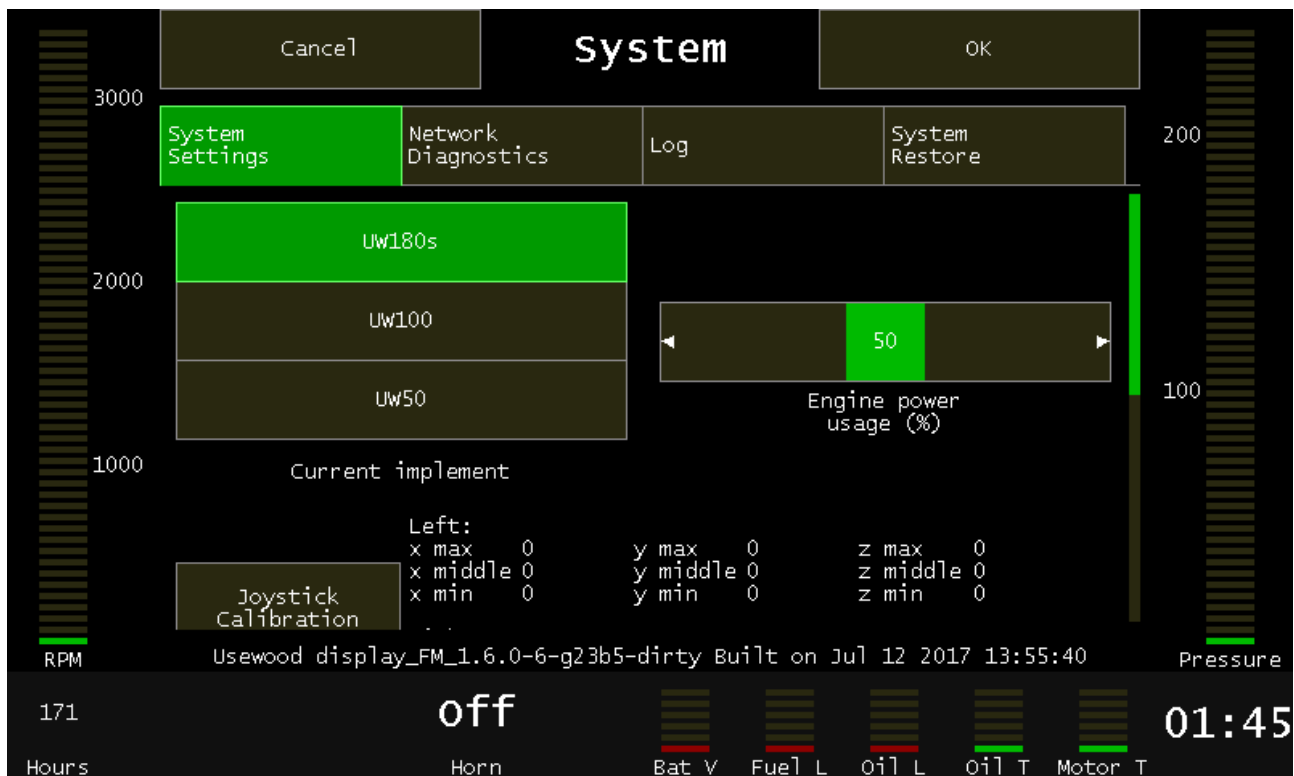


Figure 7.1: System settings screen 1/2

Current Implement	Chooses the current implement physically connected to the machine's boom. Possible values are <b>UW180s</b> harvester head, <b>UW100</b> grapple and <b>UW50</b> brushwood cutter.
Engine power usage	Defines how much power the hydraulic pump takes from the engine. Increasing this value might cause the engine to shut down when the hydraulic system is drawing too much power from the engine. Setting this value too low reduces the machine performance by not providing enough power to the hydraulic system.
Joystick Calibration	When pressed, the joystick calibration is started. This procedure cannot be undone. The joysticks are calibrated by moving through all axes (X, Y and thumb switch) and finally pressing the <b>Joystick Calibration</b> again. Calibration needs to be done usually only when old joysticks are replaced with new ones.
Date and time	Sets the date and time. Time is shown in the task bar's bottom right corner.



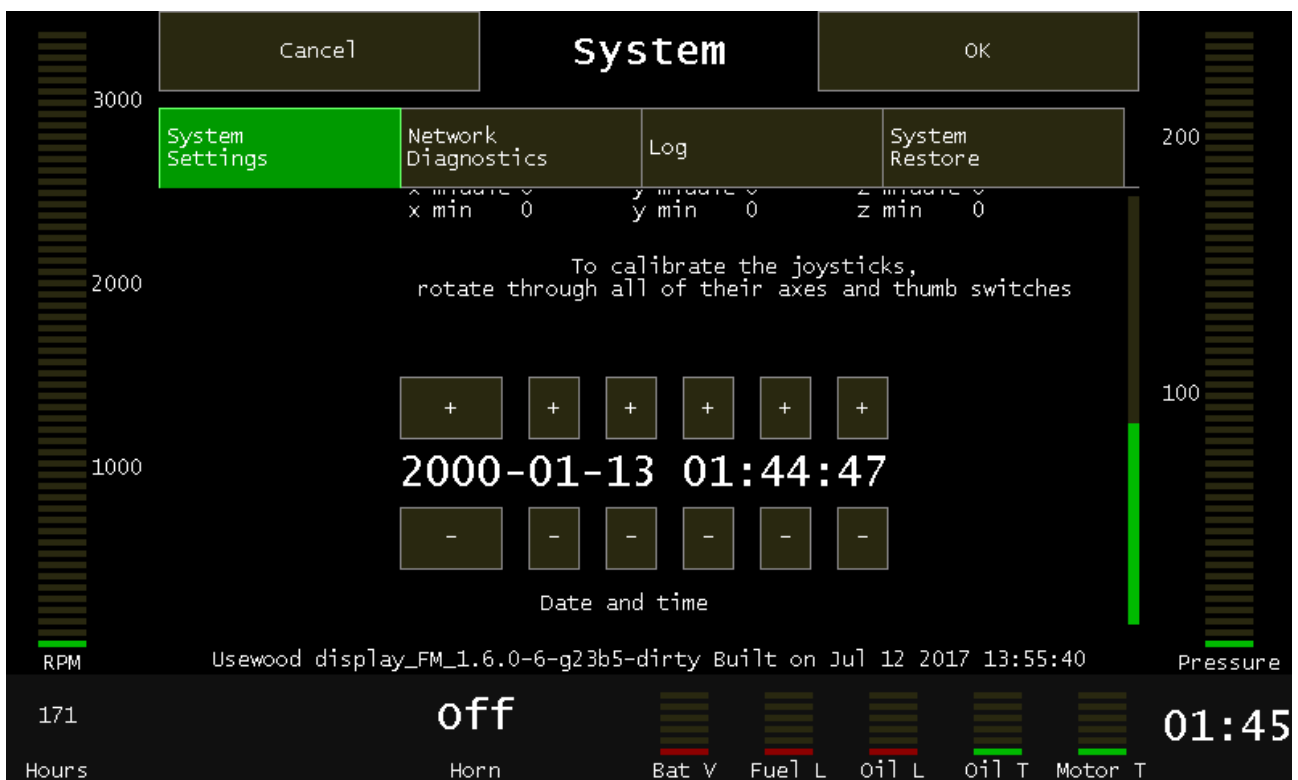




Figure 7.2: System settings screen 2/2



**Warning**

Failure to calibrate joysticks will cause the machine to be unusable.



**Warning**

If date and time resets every time the touchscreen is started, the RTC battery inside the touchscreen has run empty. Please replace the battery with CR2032 type battery or contact Usewood customer service.

## 7.2 Diagnostics

Diagnostics are meant as a control system debugging. All data going in the machine's control system is shown on this tab. Usewood forestry machines have a distributed control system which consists of several controllers. These are:

MSB	Main Supply Board, provides main power to all electronics.
CSB	Ceiling Supply Board, provides power to lights, wiper and cooler in the cabin ceiling.
ECU	Base machine hydraulic controller, controls all base machine hydraulic valves.
Left Keypad	the left joystick & keypad controller.
Right Keypad	the right joystick & keypad controller.
Pedal	used for driving the machine.
UW180s	UW180S Hydraulic controller, controls all hydraulic controllers in the UW180s harvester head.
UW180s MB	UW180s measurement device.



Figure 7.3: System diagnostics screen

While most of the data shown in this screen is useful only when the machine malfunctions, some of them are useful for normal operation as well. These are explained in the coming sections.

### 7.2.1 MSB diagnostics

**MSB** gives most of the data shown in the task bar. The **MSB diagnostics** screen can be used to check the actual numerical values of the battery voltage, fuel level, hydraulic oil level, hydraulic oil temperature, motor temperature and engine RPM.



Figure 7.4: MSB diagnostics screen

### 7.2.2 ECU diagnostics

**ECU diagnostics** screen can be used to see hydraulic valve control current for each individual valve. This is useful for investigating problems related to hydraulic valve control.

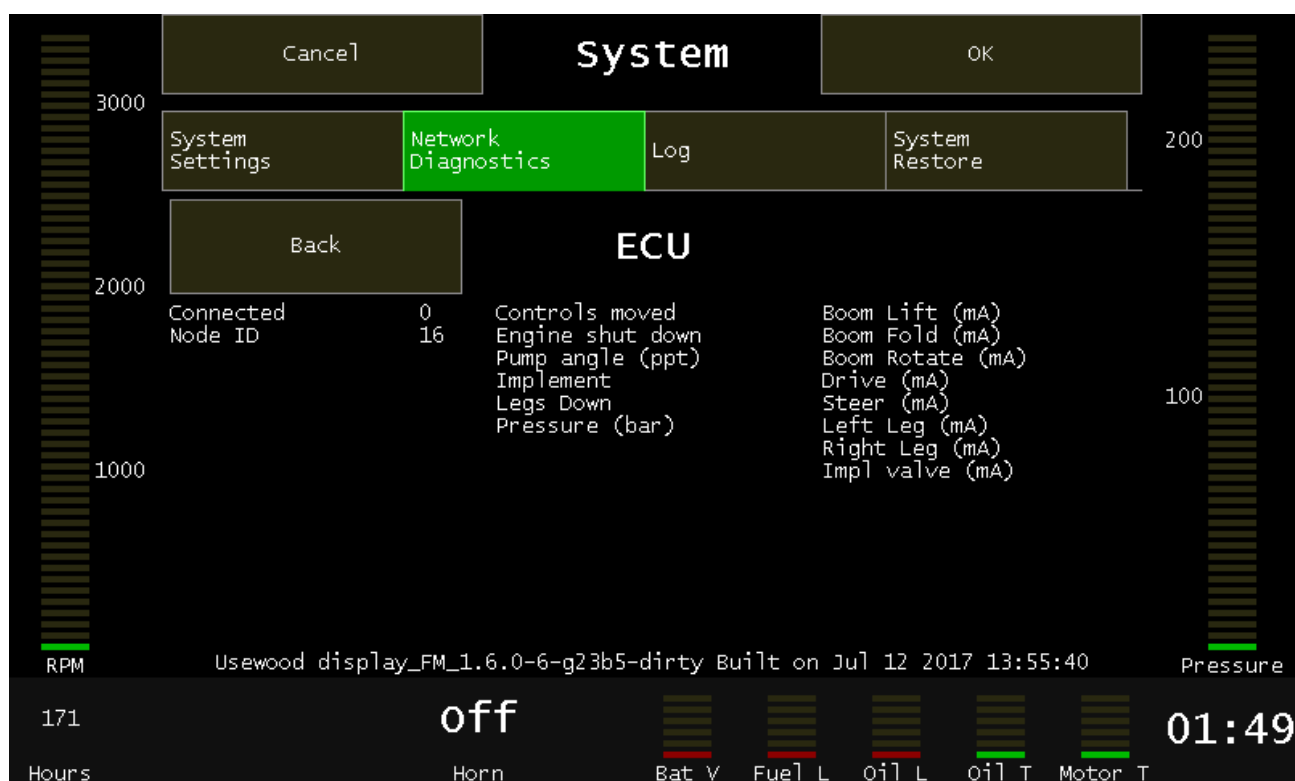


Figure 7.5: ECU diagnostics screen

### 7.3 Log

**Log** shows a log of currently active error and warning messages. Error and warning messages also appear on the taskbar and warning messages can be acknowledged by tapping on them. However, error messages need to be acknowledged from this **System Log** screen.

<b>Acknowledge</b>	Acknowledges the selected error or warning message.
<b>Previous Page</b>	Moves through the error and warning message pages if more than 5 messages are active at the same time.
<b>Next Page</b>	Moves through the error and warning message pages if more than 5 messages are active at the same time.



Figure 7.6: Log screen

## 7.4 System restore

**System Restore** restores the factory default parameters. This permanently deletes all user specific data from the system.

### Restore System Defaults

Pressing this button 10 s restores system default parameter values.

If for some reason the display is unable to start at all, system defaults can also be restored by pressing the screen when the touchscreen is starting up.

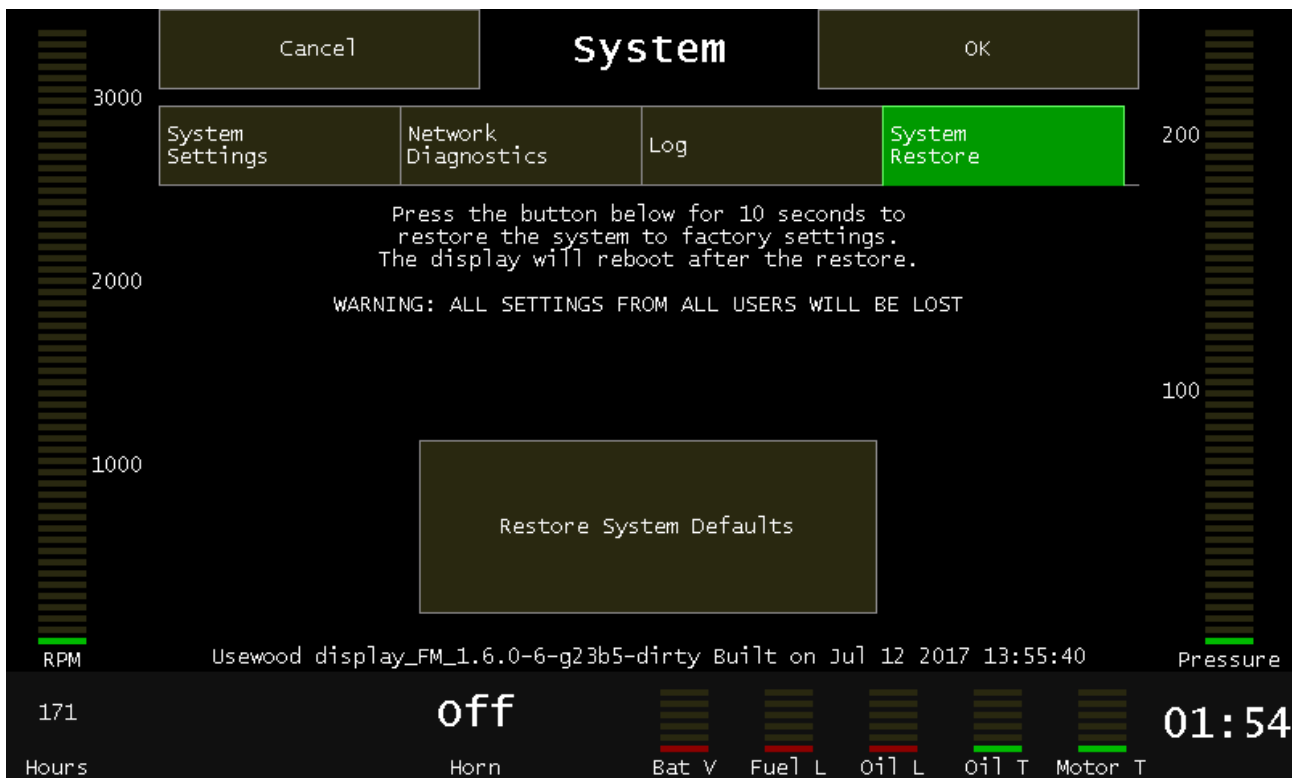


Figure 7.7: System restore screen