


TrueFace6000FP Back to Back (Connection Diagram)



TrueFace6000FP with Push Button (Connection Diagram)

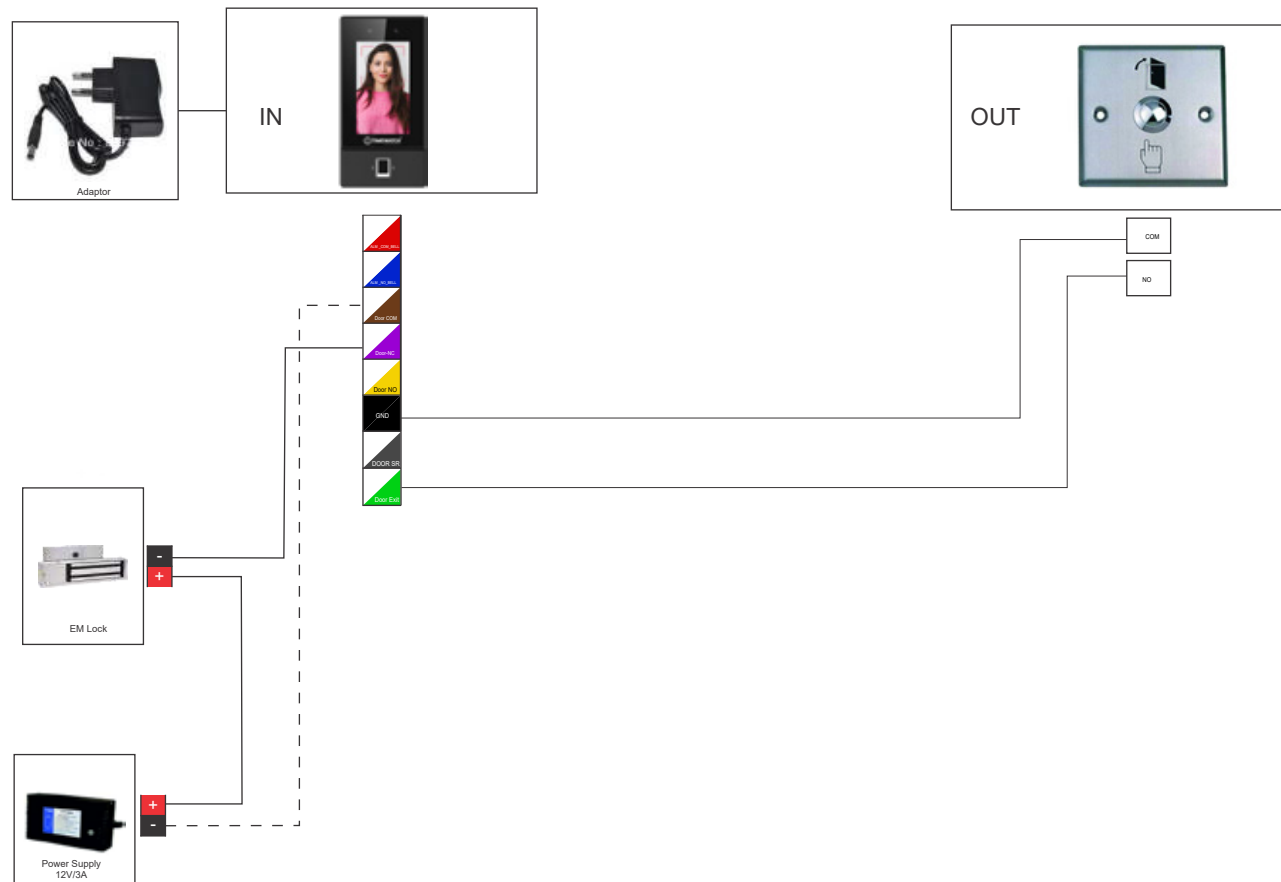

TrueFace6000FP with any Wiegand Reader (Connection Diagram)

