

PL-8: ANALOG/MOTOR DRIVER/DISPLAY

(pg 1 of 3)

Item	RR	Part No.	Description
1a	8.1/ 8.1.1	3-79281-01	Display Assy (includes display and keypad enclosure)
1b		3-79280-01	Keypad Enclosure (touchpad)
1c		LN 03D40-01	Overlay (alpha template)
2		44534-101	Foam, Display
3	8.3	3-47125-01	Analog Bd.
4		14107-021	Fuse, 4A Slo Blo
5	8.5	3-47240-01	Motor Driver Bd.
6		3-47221-01	Ribbon Cable #10, Digital I/O to Analog Bd.

Item	RR	Part No.	Description
7		3-47220-01	Ribbon Cable #2, Digital I/O to Motor Driver Bd.
8		3-04822-01	Ribbon Cable #6, Analog Bd to Motor Driver Bd.
9		3-04834-01	Ribbon Cable #7, Analog to CPU
10		3-79229-01	Cable, Analog to MEIA Lamp P/S
11		3-04827-01	Cable, Ribbon Keypad to I/O Bd.

Additional parts listed on next page.

3 Parts Lists

LCx[®] Analyzer Service Manual (Text P/N 47278-102)

PL-8: Analog/Motor Driver/Display

3 - 24

Block/board
diagrams

PL-8
illustration

Chapter
Contents

Manual
Contents

CD Main
Screen

Index

PL-8: Analog/Motor Driver/Display (pg 2 of 3)

Item	RR	Part No.	Description
12		3-04817-01	Cable, Ribbon Display to I/O Bd.
13		3-47075-01	Assy, LLS/Analog, Cable
14		3-44836-01	D.W. Cable #9 Assy, Analog/HV P/S
15		14351-061	Spacer, Circuit Bd.
16		3-47210-01	Cable, Sensor Bracket

Block/board
diagrams

PL-8
illustration


Chapter
Contents

Manual
Contents

CD Main
Screen

Index

PL-8: Analog/Motor Driver/Display (pg 3 of 3)

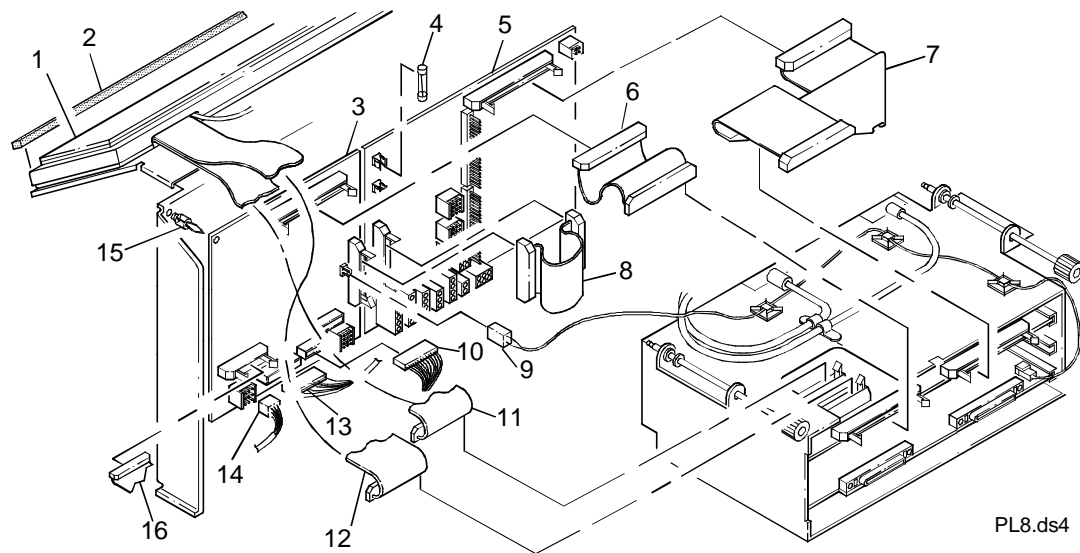

3 Parts Lists LCx[®] Analyzer Service Manual (Text P/N 47278-102)

PL-8: Analog/Motor Driver/Display

3 - 26

Block/board
diagrams

PL-8
parts list

Chapter
Contents

Manual
Contents

CD Main
Screen

Index