


VP-5: BAR CODE ADJUSTMENT (pg 1 of 2)

Time: 10 minutes

Purpose: To adjust Bar Code Reader focus for maximum reading capability

1. Adjust Bar Code Reader for maximum CNTS:
 - a. Loosen Clamp Screw.
 - b. Place Bar Code Reader over WHITE area to adjust.
 - c. Adjust Bar Code Reader up or down to obtain maximum CNTS:
 - (1) Loosen thumbscrew.

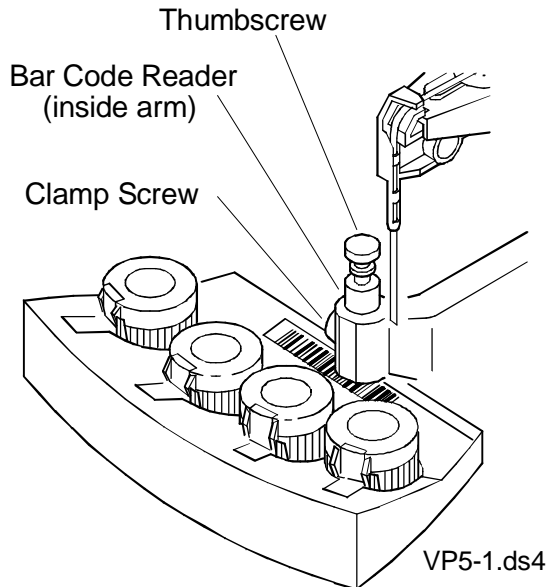

VP-5: Bar Code Adjustment (pg 2 of 2)

1. (cont)

CAUTION !

DO NOT use sharp object to push up on Bar Code Reader.

(2) Press Bar Code Reader up.

(3) Turn thumbscrew down, pushing Bar Code Reader down until maximum CNTS are displayed.

d. Tighten Clamp Screw.

2. Perform Bar Code Reader Check (VP-4).