

## PL-5: PUMP (pg 1 of 2)

Item	RR	Part No.	Description
1	5.1	3-41308-01	Pump Assy
2		3-04490-01	Cover, Pump
3	5.3	LN 9A42-85	Multivalve Block
4		LN 9520-86	Buffer Inlet Tubing Assy
5		3-04561-01	Door Sensor Assy
6		47055-103	Buffer Tray Assy w/Sensor (See #8)
7	5.7	3-62115-01	LLS Bd Assy (mounts on Power Supply)
8	5.8	3-47074-01	Buffer Sensors Cable
9		LN 9A42-14	Interconnect Tubing
10	5.10/ 5.12	LN 9520-13	Sample Syringe with Interconnect Tubing

Item	RR	Part No.	Description
11		44194-101	Nut Retainer
12	5.10/ 5.12	LN 9520-14	Diluent Syringe
13		14453-003	Thumbscrew, Multivalve Block
14		31312-102	Pump Bracket

Item	Part No.	Description
S1	14494-004	Screw, PHP 6-32 x .250
S2	14494-208	Screw, PHP 8-32 x .250
S3	14490-223	Screw, PHP 10- 32 x .500
S4	14490-155	Screw, PHP 6-32 x .250
S5	14494-306	Screw, PHPM 10-32 x .375

### 3 Parts Lists

LCx<sup>®</sup> Analyzer Service Manual (Text P/N 47278-102)

### PL-5: Pump

3 - 17

Block/board  
diagrams

PL-5  
illustration


Chapter  
Contents

Manual  
Contents

CD Main  
Screen

Index

## PL-5: Pump (pg 2 of 2)

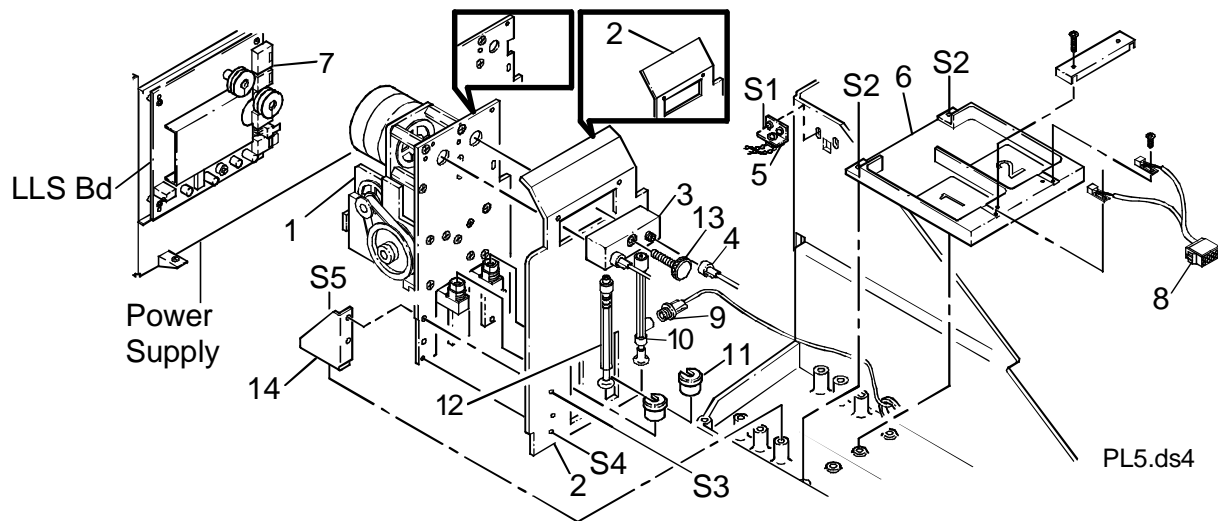

### 3 Parts Lists LCx<sup>®</sup> Analyzer Service Manual (Text P/N 47278-102)

### PL-5: Pump

3 - 18

Block/board  
diagrams

PL-5  
parts list

Chapter  
Contents

Manual  
Contents

CD Main  
Screen

Index