

## PL-2: INTERNAL COVERS (pg 1 of 3)

Item	RR	Part No.	Description
1		L/N 9A42-61	Wash Station with Item 4
2	2.3	14453-009	Screw, 4-40 x 0.500
3		3-47082-01	Shroud, Reagent
4		47045-101	Waste Tubing 9"
5		LN 6208-21	Waste Bottle
7	2.7	47046-102	Cover, Protective Wire*
8	2.8	47049-101	Cover, Air Duct
9		3-44461-01	Fitting Waste Disposal
10		3-35776-01	Fitting, Quick Disconnect
11		3-47002-01	Amplification Vial Retainer
12		LN 9A42-81	Continuous Waste Tubing Assy (has 2 fittings: Item 10 and quick disconnect elbow 43329-101)

\* Cover, Protective Wire [mates w/ Interior Cover 47057-102 and up (PL-10)]

Additional parts (not shown in illustration):  
3-47075-01 Assy, Buffer Mgmt, LLS, Analog, Cable

LN 6208-22 Waste Cap

*PL-2 screws/washers table on next page.*

## PL-2: Internal Covers (pg 2 of 3)

Item	Part No.	Description
S1	14494-108	Screw, PHPM 6-32 x .50 (for manual AVR)
S2	10854-410	Screw, PHP 6-32 x .312
S3	10859-308	Screw, FHP 4-40 x .250
S4	10854-432	Screw, PHP 6-32 x 1.00
S5	14494-105	Screw, PHP 6-32 x .312
S6	10854-308	Screw, PHP 4-40 x .250
W1	10890-012	Washer, Flat #6 (for manual AVR)
W2	10893-003	Washer, Lock, #6

Block/board  
diagrams

PL-2  
illustration


Chapter  
Contents

Manual  
Contents

CD Main  
Screen

Index

## PL-2: Internal Covers (pg 3 of 3)

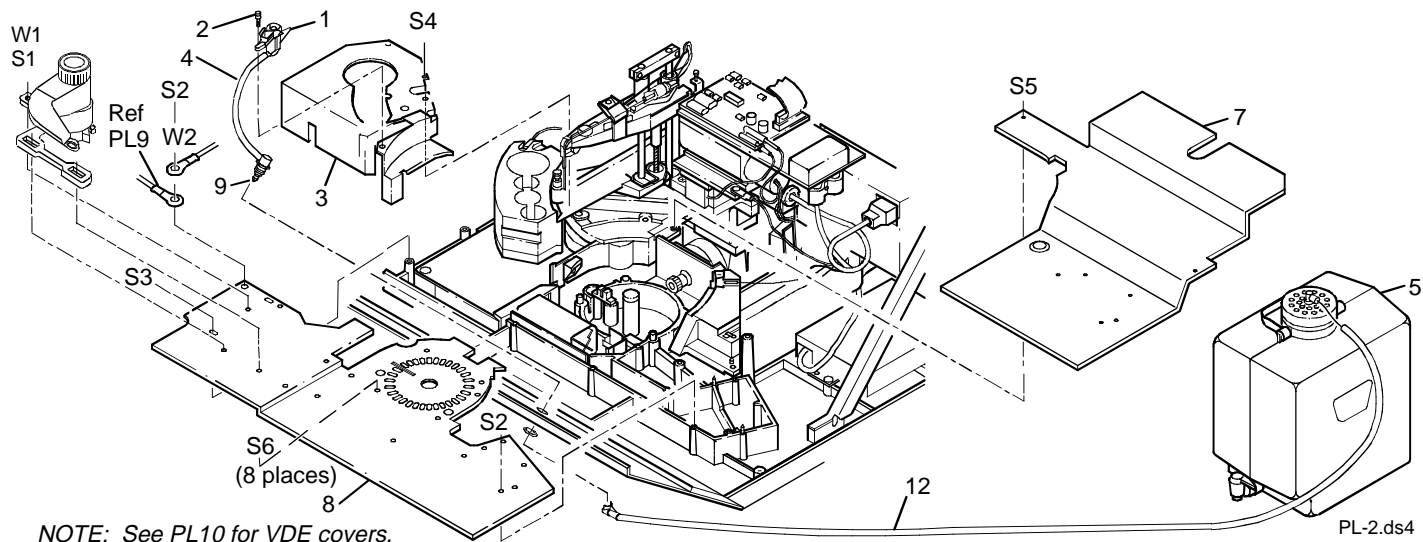

### 3 Parts Lists LCx<sup>®</sup> Analyzer Service Manual (Text P/N 47278-102)

### PL-2: Internal Covers

3 - 10

Block/board  
diagrams

PL-2  
parts list

Chapter  
Contents

Manual  
Contents

CD Main  
Screen

Index