




IP-5 Error codes 1, 2 (pg 1 of 2)


EC-1: Motor Driver cable disconnected

EC-2: Analog board cable disconnected

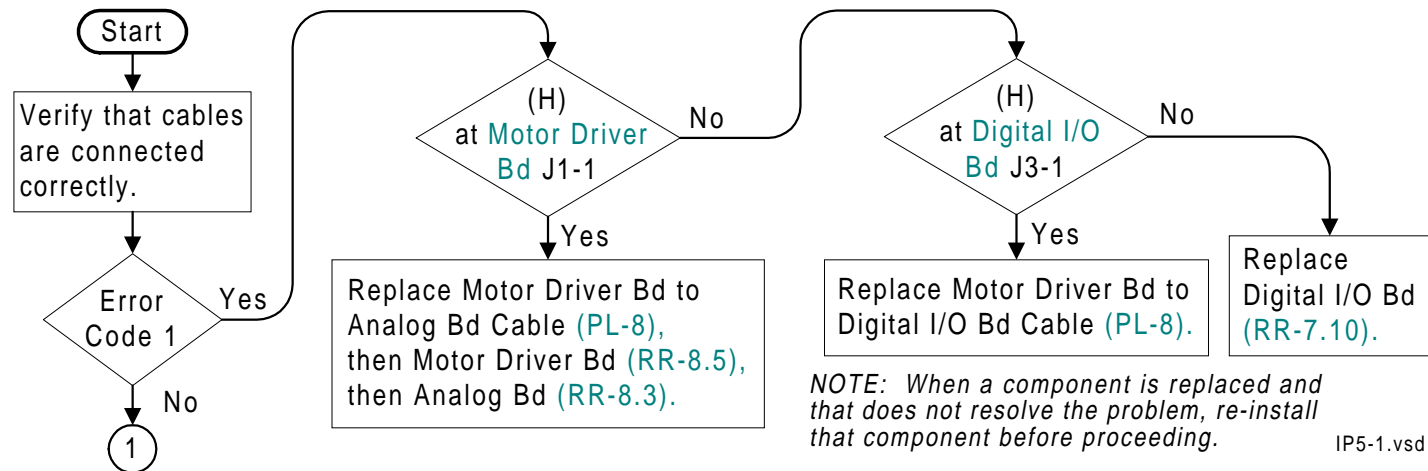

IP5-1.vsd

IP-5 Error codes 1, 2 (pg 2 of 2)

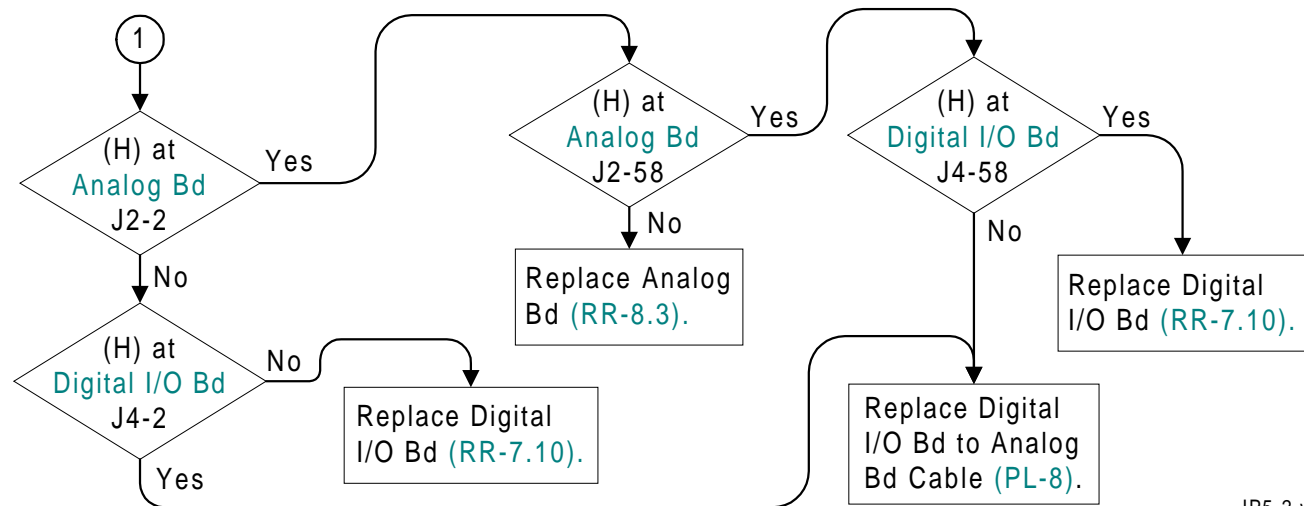

IP5-2.vsd