

VP-55: RS-232 BRACKET CENTERING (pg 1 of 1)




Time: 5 minutes

Purpose: To align the RS-232 bracket in the center of Enclosure opening

NOTE: A computer printer cable may be used as a physical verification of the RS-232 bracket alignment.

1. Ensure that Enclosure is in place and latched.
2. Note direction that RS-232 Bracket needs to be moved to be centered.
3. Remove Enclosure ([RR-1.3](#)).

4. Adjust RS-232 Bracket:
 - a. Loosen 2 mounting screws.
 - b. Move bracket. Tighten screws.

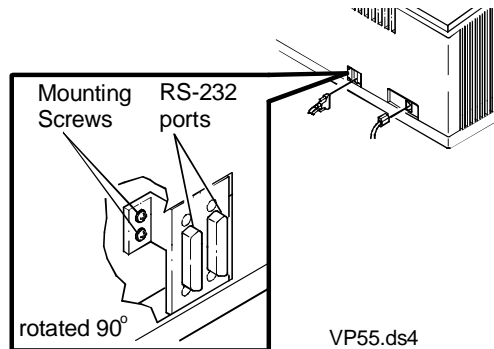

5. Replace and latch Enclosure.
6. Check RS-232 Bracket. Repeat procedure until bracket is centered.