

PL-1: COVERS (pg 1 of 3)

Item	RR	Part No.	Description
1		3-04535-01	Door, Printer
2		3-04388-02	Door, Personality Module
3	1.3	47004-103	Enclosure, (w/Doors & Labels)
4		04385-103	Door, Front
5		3-04386-01	Door, Buffer Bottle
6		45839-101	Serial Number Label
9		04429-104	Front Panel
10		14242-019	Door Sensor Reflective Tape
11		14451-204	Shoulder Screw
12		14542-109	Washer, Flat

Item	RR	Part No.	Description
13		14545-002	Washer, Latch
14		14494-206	Locking Screw
15		04527-101	Guide, Snap Slide
16		14629-002	Latch
17		04532-108	Hinge, Left, Assy, (Front Door)
18		04532-107	Hinge, Right, Assy, (Front Door)

*PL-1 screws/washers table on next page.
Additional parts (not shown) listed on next page.*

PL-1: Covers (pg 2 of 3)

Item	RR	Part No.	Description
S1		14494-106	Screw, PHP 6-32 x .375
S2		14494-206	Screw, PHP 8-32 x .375
R1		14659-016	Retaining Ring

Additional parts (not shown in illustration):

44461-101 Fitting, Waste Disposal

04932-103 Pin Hinge (Printer Door)

04932-104 Pin Hinge (Personality Module Door)

4A91-01 Air Deflector

Block/board
diagrams

PL-1
illustration


Chapter
Contents

Manual
Contents

CD Main
Screen

Index

PL-1: Covers (pg 3 of 3)

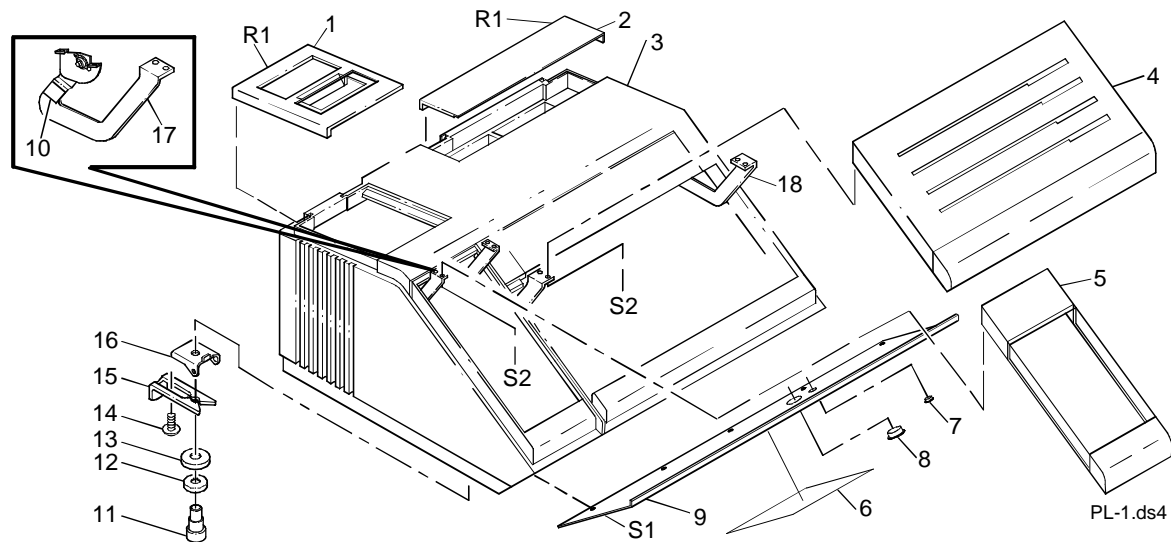

3 Parts Lists LCx[®] Analyzer Service Manual (Text P/N 47278-102)

PL-1: Covers

3 - 7

Block/board
diagrams

PL-1
parts list

Chapter
Contents

Manual
Contents

CD Main
Screen

Index