


EXP-02

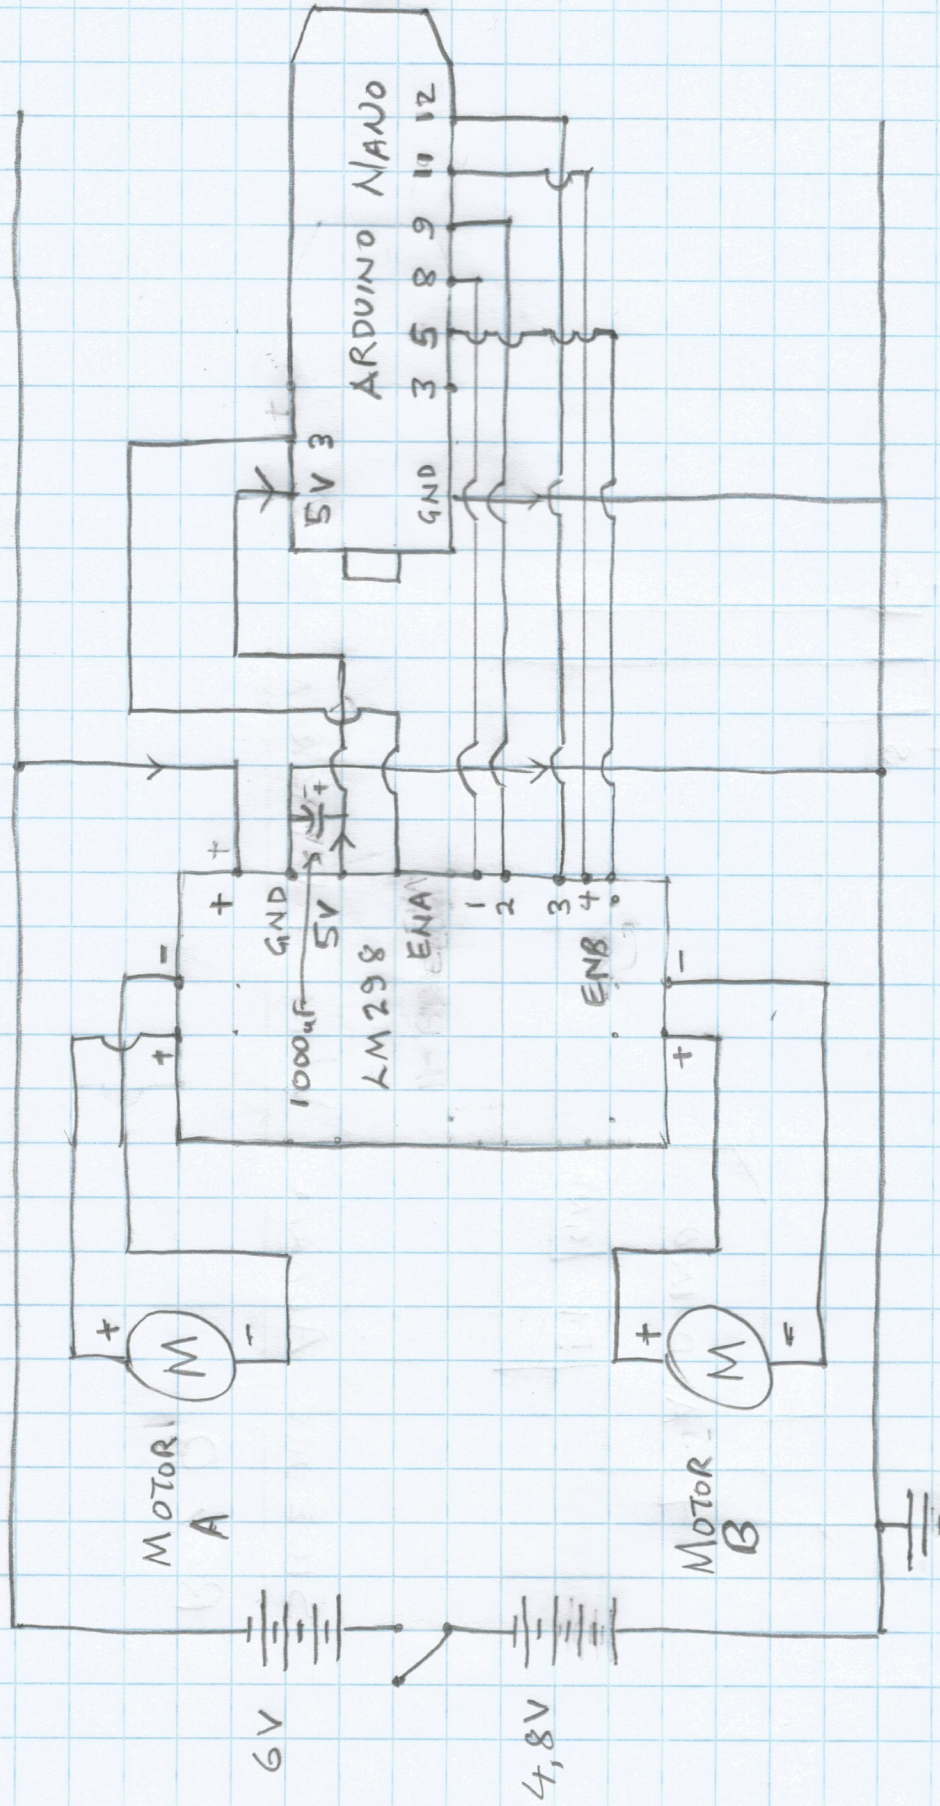

NOTES:-

1. Always disconnect the 5V supply to the Arduino before uploading a sketch. Because the Arduino will supply power to the motors through the 5V pin, when the USB power is connected. This could damage the Arduino.

2. When the Arduino is powered through the 5V pin, that supply is not regulated by the Arduino.