
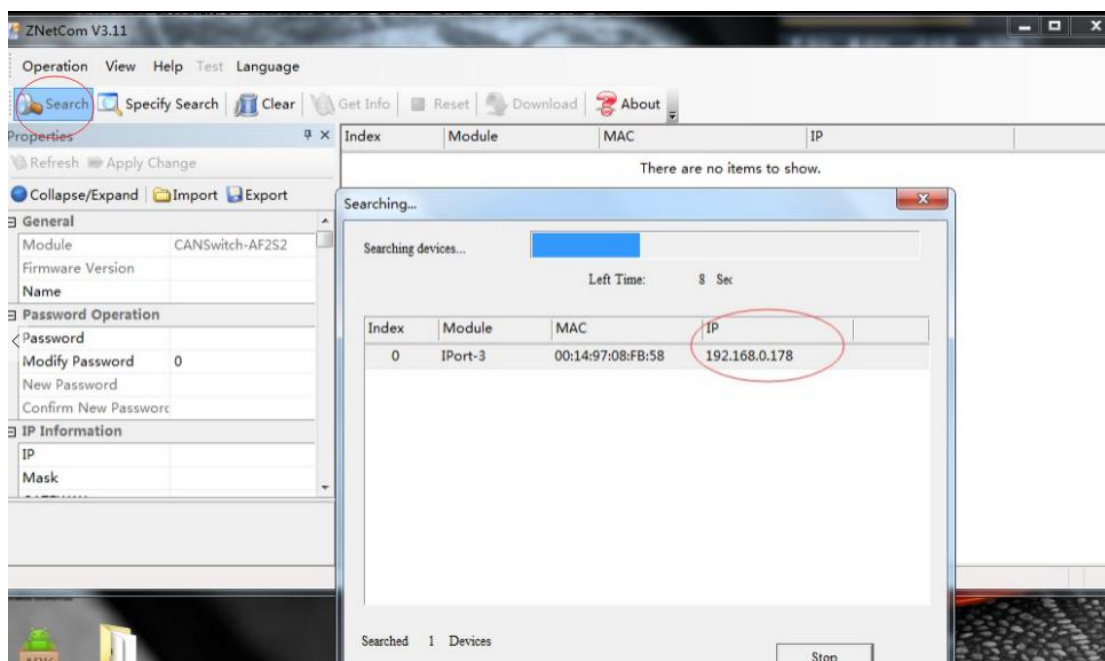




The tcp/ip default parameter of reader (It's better to don't change the parameter) , as follows:


IP address: 192.168.0.178

Net mask: 255.255.255.0


Port number: 4001

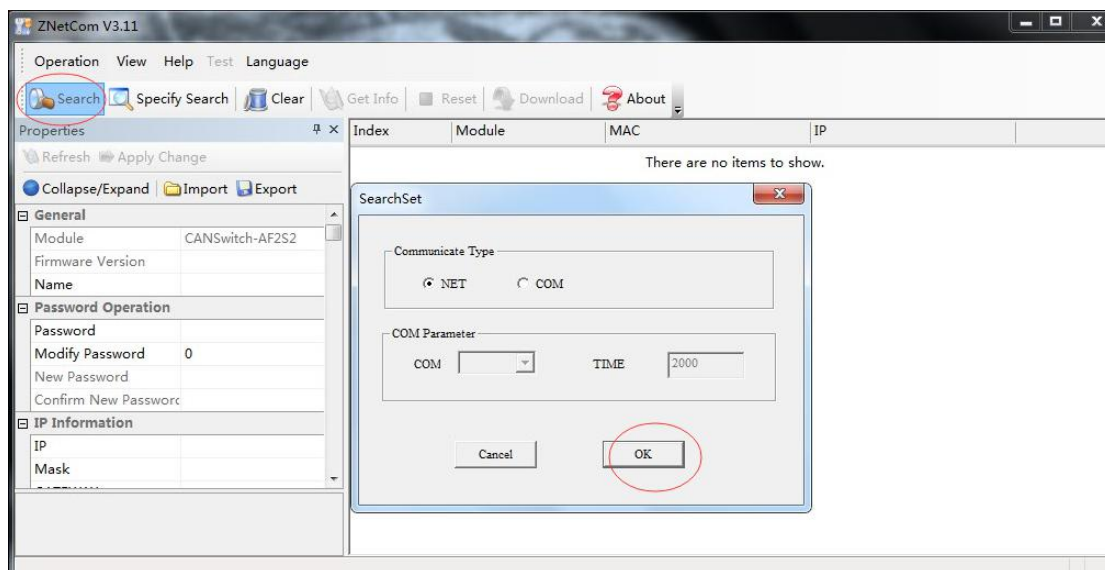


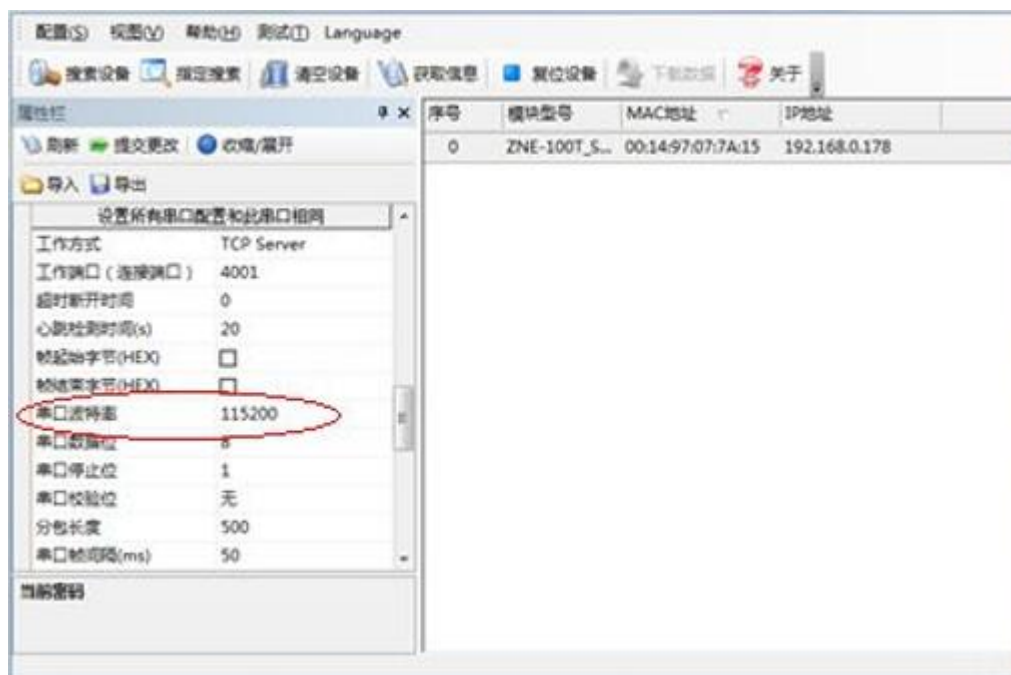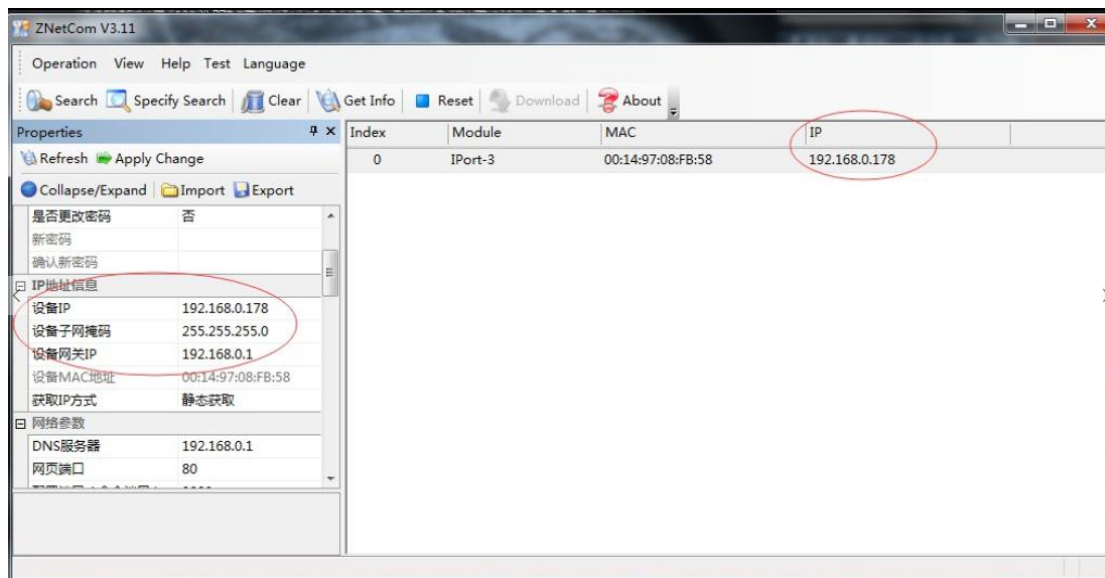

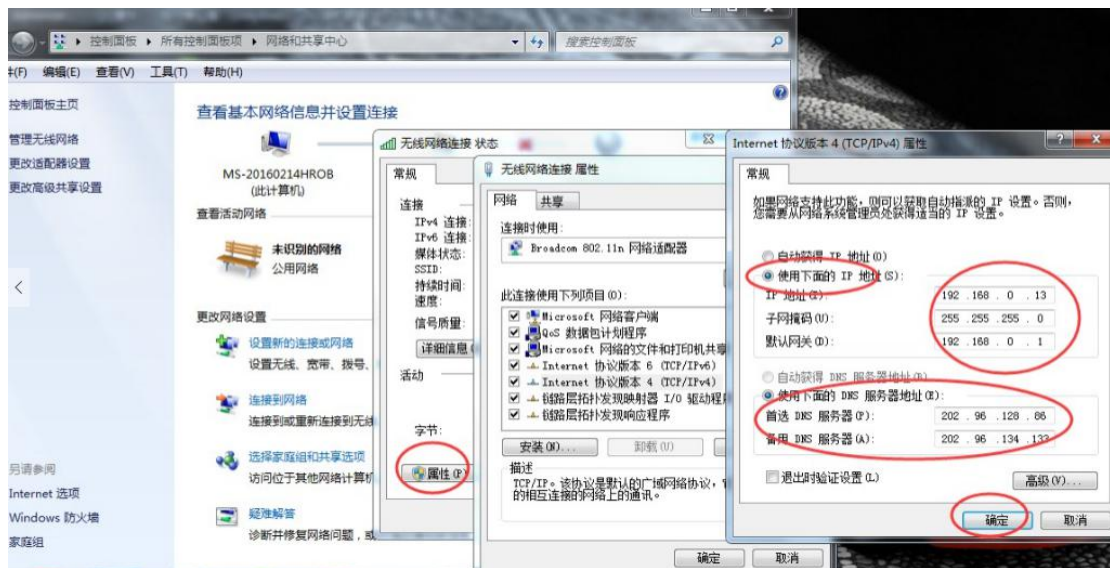

Back to test reader by test demo

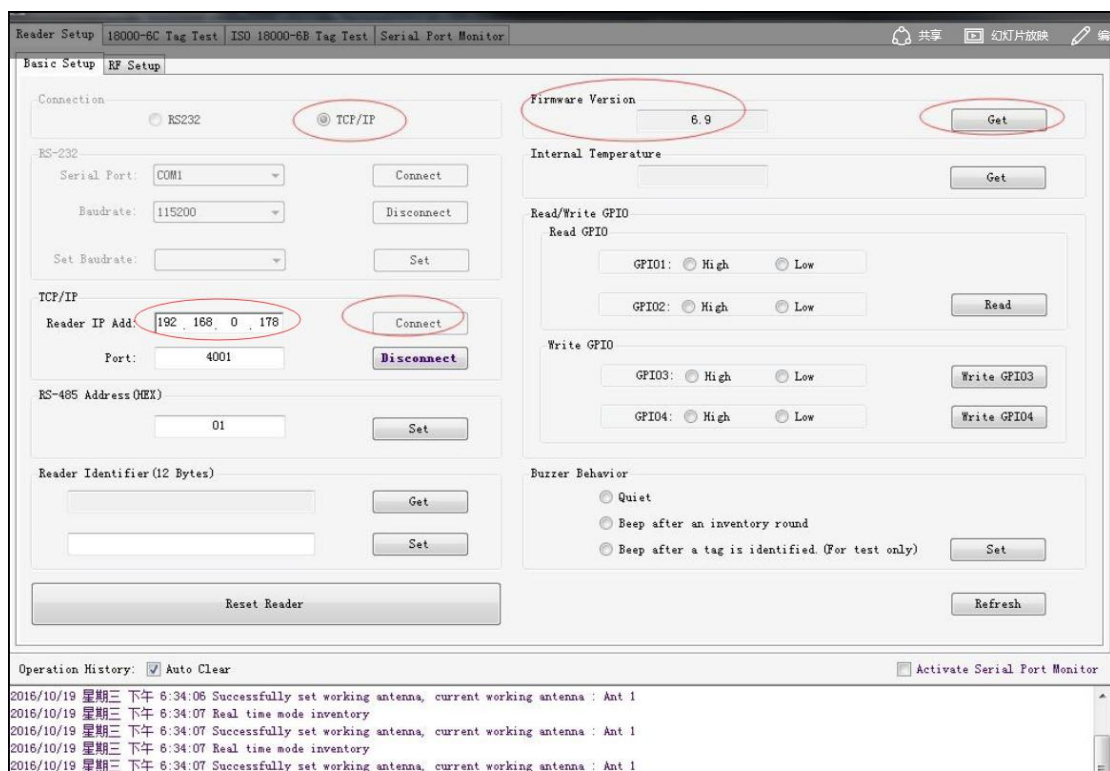

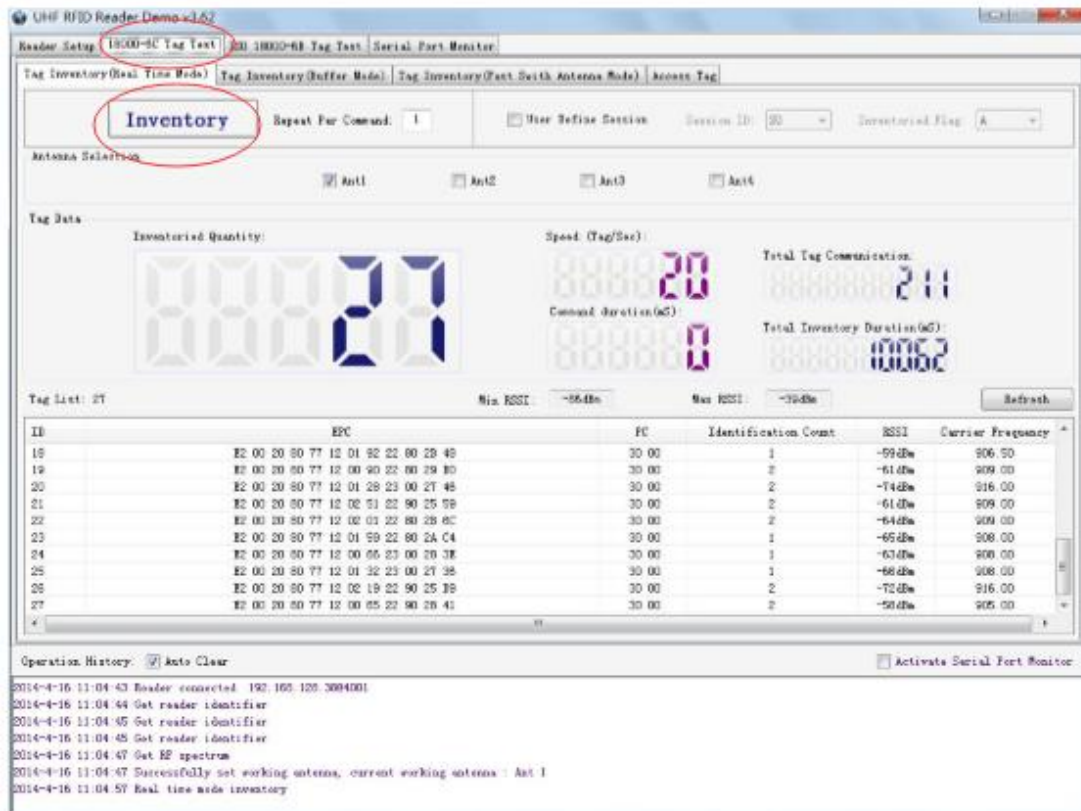

IF you want to change the ip adress, pls input 88888 in 当前密码 ,and then aslo need change the IP address of pc ,the way the same as the above.

