

Packing List

With your order you should receive...

- 1 - 6' RCA Video/Audio Cable (1)
- 1 - Power Supply (2)
- 1 - Remote (3)
- 1 - DVD Player (4)



Basic Operation Of Player

The V2200 comes shipped to you set in mode 1 (6) (auto start, auto play and auto repeat). This means once you have connected the player to a TV and power, all you have to do is load your DVD in the drive slot (7). Within about 14 seconds the movie should begin to play and the player will be automatically set to auto repeat. The player has 3 operational modes (mode 4 & 5 are not active). You can switch between modes by pressing the "Mode" button on the player (8) or on the remote (14/15/16). When a new mode is selected the DVD player will power off then back on (there is a 4 second delay when using the buttons on the player (instant when using the remote).

- Mode 1 - Auto plays / repeats the largest title of the DVD
- Mode 2 - Auto plays / repeats all titles in order
- Mode 3 - Standard, manual dvd operation



Basic Operation Of Player - Remote

Since you purchased this player as a simple reliable auto play, auto repeat device, the remote is rarely needed. However there are a few unique functions that you may use in the basic operation. Since some applications call for numerous players in the same close proximity, we have incorporated "Power Off" (only), "Power On" (only) and "Eject" (only) buttons. With these buttons you can have 10 DVD players in 1 room and if you want to power them all off, simply press the "Stand By" button (9) as many times as it takes for all the players to go into stand by mode (red light will be illuminated (10)). With other DVD players, pressing the power button multiple times will turn on some players and turn others off. We incorporated the same functionality with "Power On" (11) and "Eject" (12) buttons.

Basic Operation Of Player - Power Off & Notes

If you wish to turn the power off to the player you can press the "Stand By" (9) button on the remote or the "Power" button (13) front of the player. When the power to the player is off, the light on the front of the player will turn red (10). The player is powered down and only the light remains on (uses almost no electricity).




Connections

The 2200 has an external power supply. This helps reduce heat inside the player. Simply connect the enclosed power to the 12V jack **(17)** on the back of the player.

Next you simply need to connect the DVD player to your TV or monitor. The 2200 has 3 available video output options.... Composite video **(18)** - single yellow RCA jack , S-Video **(19)** - single 4 pin jack below yellow RCA and

Component Video **(20)** - 3 RCA jacks (red/green/blue) in the middle of the player. Also known as RGB output. All 3 of these connections can be used. They can also be used at the same time, in case you want to connect 3 TV's at once. The HDMI jack **(21)** on the back of the player is not available on this model. We don't have a unit currently available with HDMI output.

The 2200 has 4 audio outputs... Right/Left 1 and Right/Left 2. These outputs work the same. You can choose either set (right/left 1 or right/left 2) for your audio. If you need a mono output, use the right output of either set and change your audio out settings in the "Setup" **(31)** section (see page 3 for details).

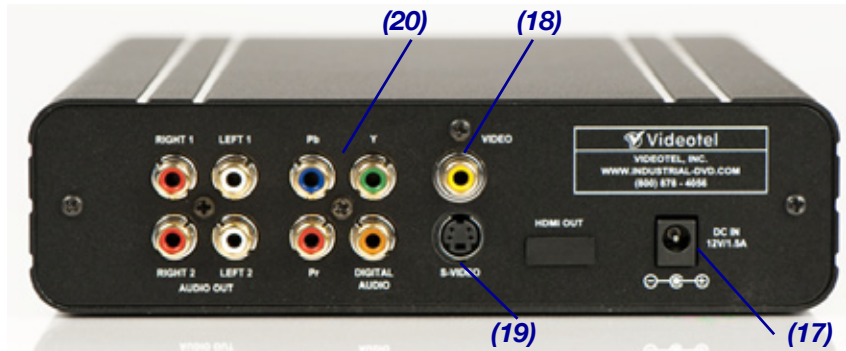

Remote functions - part 2

Aside from the "Power On", "Stand By", "Eject" and "Mode" buttons described in page 1 all the remaining buttons are fairly standard. This list below goes over the basic function of each of the remaining buttons.

(22) "Display" - This will rotate 4 modes of current title/chapter and time title elapsed/title remaining/chapter elapsed/chapter remain/Off

(23) "Arrows/Enter" - These buttons would be used on a disc menu or when using the set up menu of the player.

(24) "Menu" - This will bring up the root menu of your DVD. Please note that when in "Mode 1" or "Mode 2" the player will auto select a menu option within a few seconds. Use "Mode 3" to avoid this.

(25) "Rewind" - Each button press will increase the rewind speed as follows 2x / 4x / 8x / 16x / 32x / then back to play.

(26) "Play" - This will play your movie if stopped or paused and depending on your DVD, it may begin playing an option when on a menu.

(27) "Chapter Back" - Will advance backwards through chapters (only in the current title, once you get to the last chapter, it will stop or start at 1 again, depending on how the DVD is made).

(28) "Stop" - This will stop the movie and bring up the default screen.

(29) "Subtitle" - Pressing this button will scroll through all available subtitle languages (if available).

(30) "Volume Up/Down" - Pressing these buttons will adjust the output volume of the dvd player. Important note: When changing discs, putting the player into stand by or powering on the player, the volume defaults back to maximum.

(31) "Setup" - This is used to access the DVD players operational menu. There are a few dozen options that 99% of people won't need to change, but in case you want to change the screen output, logo screen, audio out, etc...see page 3.

(32) "Mute" - This will mute all the audio coming out of the player.

(33) "Fast Forward" - Each button press will increase the fast forward speed as follows: 2x / 4x / 8x / 16x / 32x / then back to play.

(34) "Pause" - This will pause the current DVD playing. Press again to play or press the "Play" button **(26)**.

(35) "Chapter Forward" - Will advance forward through chapters (only in the current title, once you get to the last chapter, it will stop or start at 1 again, depending on how the DVD is made).

(36) "Repeat" - This button will allow you to select a different repeat option. Each button press with scroll though the following options: Chapter repeat / Title repeat / All (entire disc repeat) / Off

