


VOICE RECORDER

Instructions for use

❖ Keypad

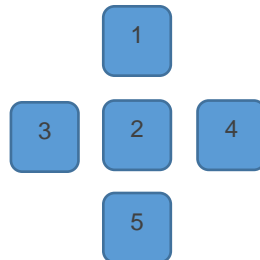

i 1 – **Record / Stop Button**

2 – **Play / Stop Button** – To play and stop the recordings, '**No**' command in delete mode

3 – **Previous Button** – To load the previous recording, Selecting the frequency scale

4 – **Next Button** – To load the next recording, Selecting the filter

5 – **Delete Button** – Used to delete a recording

Additionally, there is a volume controller beside the keys.

❖ When the device is powered up the screen looks like this. This is the pause state. No actions will happen.



Voice Recorder

i If SD card is not inserted the device won't work. There will be an error message.



Error

Insert the SD card and power it up again.

- ❖ When in the pause state press 'Record' to start recording.

Recording

Press '**Record**' again to stop recording.

saved

i Do not remove the SD card while recording.

- ❖ When in the pause state press 'Play'. That will guide you to play mode.

Ready to Play

A.WAV

i If there are no valid recordings in the SD card It will give you a message and will go back to pause mode.

(Valid means this device accepts recording names like A.WAV, B.WAV, ..., Z.WAV)

No Tracks

- Press '**Next**' and '**Previous**' to toggle between recordings. (Recordings will be in alphabetic order i.e.. A.WAV, B.WAV,,Z.WAV)
- Player holds only 15 recordings.
- Then press '**Play**' again. It will bring you to the frequency change requirement checking mode.

SCL M

1 X

- Press '**Next**' button to change '**M**'(H, L, B, S, X) and press '**Previous**' to change '**SCL**'(1, 2, 3)
 - SCL - Frequency scale (Default = 1)
 - 1 - normal frequency
 - 2 - 2x frequency
 - 3 - 3x frequency

- M - Filtering method (Default = 'X')
 - X - No filtering
 - H - High pass (cut off = 1000Hz)
 - L - Low pass (cut off = 500Hz)
 - B - Band pass (1000Hz - 2000Hz)
 - S - Frequency shift (1000Hz)
- After selecting frequency changes press '**Play**' again.
 - If you didn't select any filters (M = X), the recording will play as you click play.
 - If You select value for **M** it will take some time to process the recording. After processing it will play.

(Processed recording will be named by adding a prefix to the original wav file name.
Prefixes- M values)

Processing

If 'M' is selected

Playing

A.WAV

Playing the recording

- At the end of play it will display a message. (Or you can press '**Play**' when playing the recording to stop the play.)

Playing


End of Play

i *If the device fails to open the file specified, it will give an error.*

Error

(Possible reasons will be SD card is removed before playing or unknown malfunction in firmware)

- ❖ When you are in the play mode you can delete the recording if you want. Press 'Delete' to proceed. It will give you a prompt.



Delete?
DELETE NO(Play)

Press '**Delete**' again to proceed.



Deleted

Press '**Play**' to avoid deleting.



Not Deleted