

Last Modified: 5-10-2010	6.4 K	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000003ZUA001X
Title: MIRROR (INT): INNER REAR VIEW MIRROR: COMPONENTS (2010 4Runner)		


COMPONENTS

ILLUSTRATION

w/ EC Mirror:

w/ Rear Monitor:


INNER REAR VIEW MIRROR
ASSEMBLY

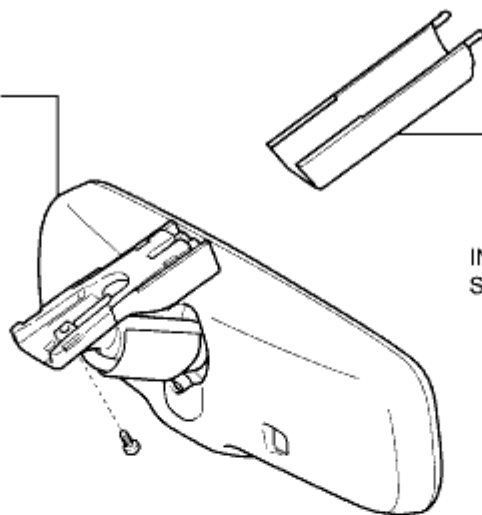

INNER REAR VIEW MIRROR
STAY HOLDER COVER

w/o Rear Monitor:


INNER REAR VIEW MIRROR
ASSEMBLY

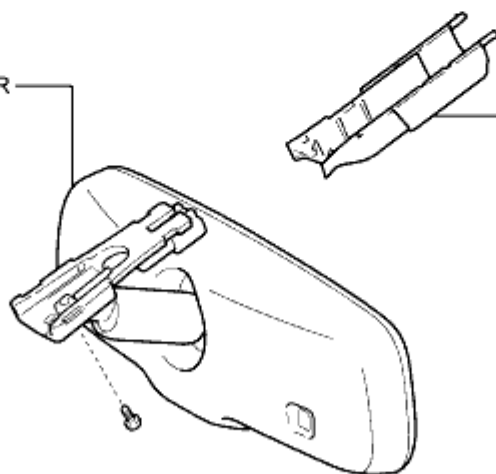

INNER REAR VIEW MIRROR
STAY HOLDER COVER

ILLUSTRATION

w/o EC Mirror:

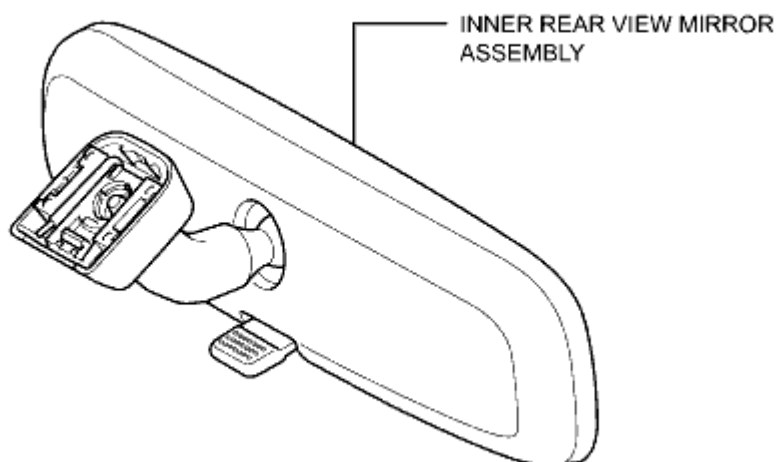

0




TOYOTA


Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM0000014CM019X
Title: MIRROR (INT): INNER REAR VIEW MIRROR: REMOVAL (2010 4Runner)		

REMOVAL

1. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/o EC Mirror)

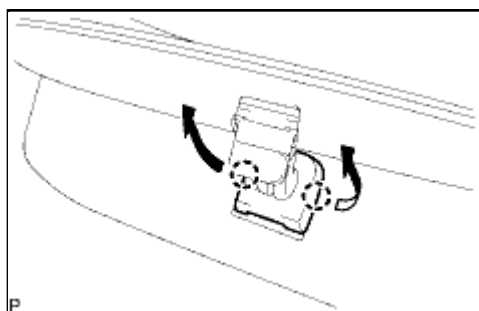


(a) Pinch the cover and detach the 2 claws. Then remove the cover.

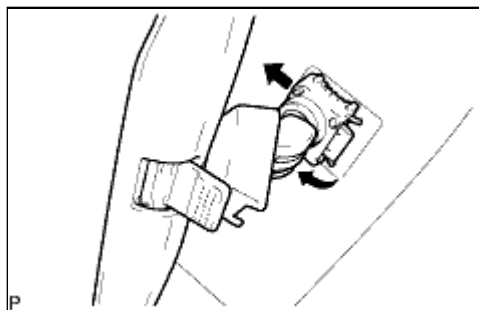

(b) Push the lever, and then slide and remove the inner rear view mirror.


2. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

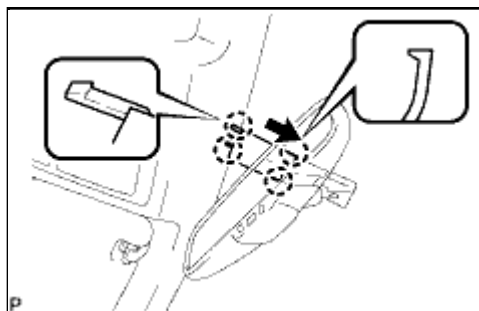


(a) w/ Rear Monitor:

- (1) Slide the inner rear view mirror stay holder cover in the direction indicated by the arrow in the illustration to detach the 2 claws from the roof headlining. Then detach the 2 claws of the inner rear view mirror stay holder cover from the mirror and remove the inner rear view mirror stay holder cover.

(b) w/o Rear Monitor:

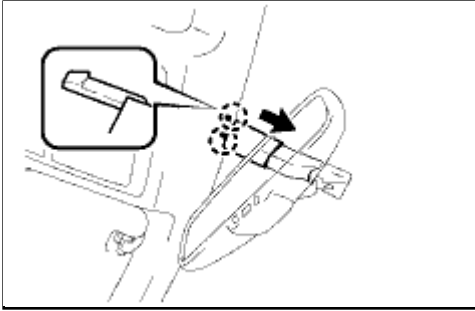


- (1) Detach the 2 claws and slide the inner rear view mirror stay holder cover in the direction indicated by the arrow in the illustration.

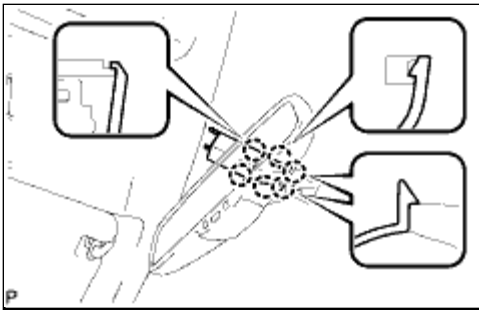

- (2) Detach the 6 claws and remove the inner rear view mirror stay holder cover.

3. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

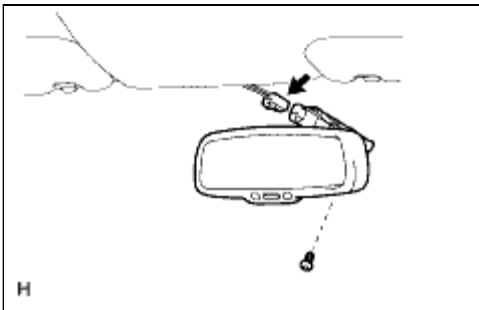

- (a) Disconnect the connector.

- (b) Using a T20 "TORX" socket wrench, remove the screw and inner rear view mirror.

Last Modified: 5-10-2010	6.4 G	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM000002104009X
Title: MIRROR (INT): INNER REAR VIEW MIRROR: INSPECTION (2010 4Runner)		

INSPECTION

1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

(a) w/ Rear Monitor:

Check operation of the electrochromic mirror.

Text in Illustration

*1	Black-colored Tape
*a	Component without harness connected (Inner Rear View Mirror Assembly)
*b	Bright
*c	Dark

- (1) Connect the positive (+) lead of the battery to terminal 1 and the negative (-) lead to terminal 2.
- (2) Check that the LED labeled A in the illustration is illuminated.
- (3) Attach black-colored tape to the forward sensor to prevent it from sensing light.
- (4) Shine an electric light on the mirror. Check that the mirror surface changes from bright to dark.

HINT:

When the environment is very bright, the antiglare operation may occur immediately after the tape is applied.


If the result is not as specified, replace the inner rear view mirror.


(b) w/o Rear Monitor:

Check operation of the electrochromic mirror.

Text in Illustration

*1	Black-colored Tape
----	--------------------

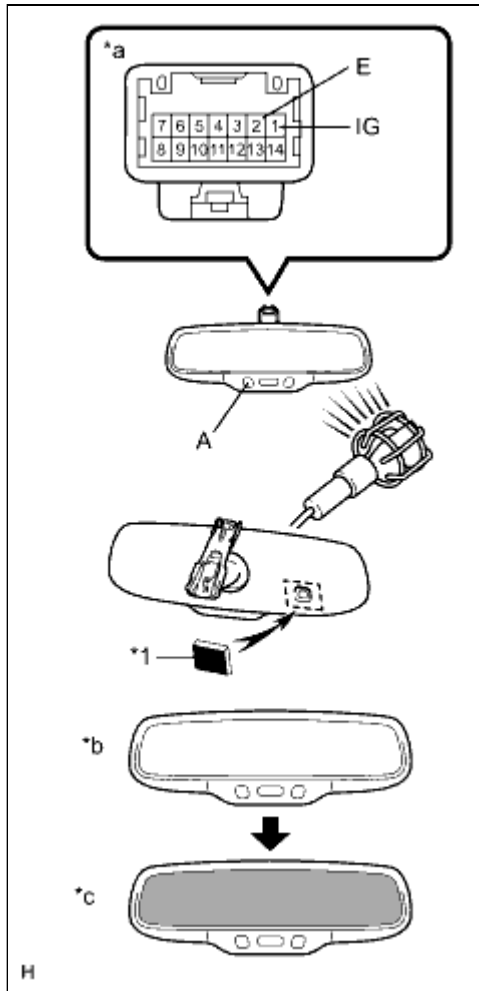

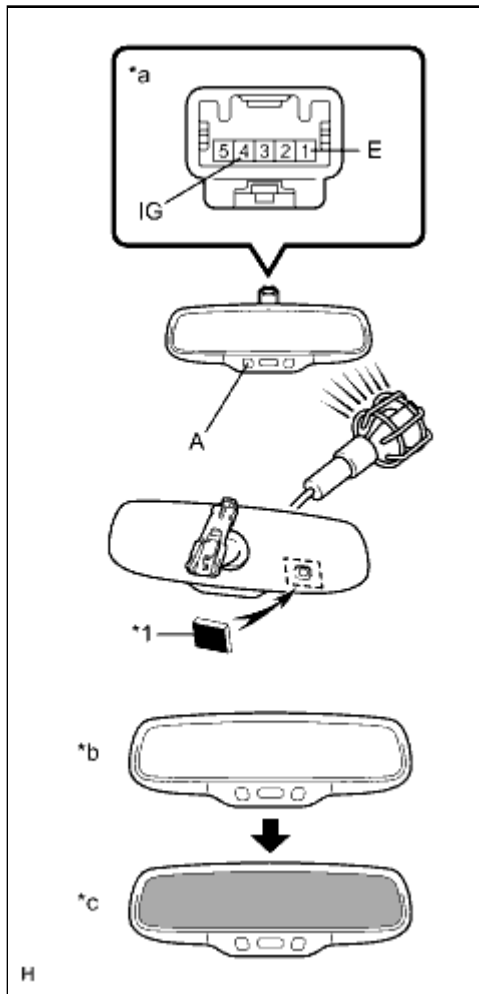

*a	Component without harness connected (Inner Rear View Mirror Assembly)
*b	Bright
*c	Dark

- (1) Connect the positive (+) lead of the battery to terminal 4 and the negative (-) lead to terminal 1.
- (2) Check that the LED labeled A in the illustration is illuminated.
- (3) Attach black-colored tape to the forward sensor to prevent it from sensing light.
- (4) Shine an electric light on the mirror. Check that the mirror surface changes from bright to dark.

HINT:

When the environment is very bright, the antiglare operation may occur immediately after the tape is applied.

If the result is not as specified, replace the inner rear view mirror.




Last Modified: 5-10-2010	6.4 A	From: 200908
Model Year: 2010	Model: 4Runner	Doc ID: RM0000014CL01LX
Title: MIRROR (INT): INNER REAR VIEW MIRROR: INSTALLATION (2010 4Runner)		

INSTALLATION

1. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

- (a) Using a T20 "TORX" socket wrench, install the inner rear view mirror with the screw.
- (b) Connect the connector.

2. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

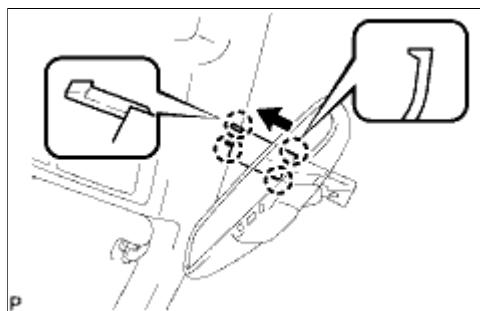


(a) w/ Rear Monitor:

- (1) Attach the 2 claws of the inner rear view mirror stay holder cover to the mirror. Then slide the inner rear view mirror stay holder cover in the direction indicated by the arrow in the illustration to attach the 2 claws to the roof headlining and install the inner rear view mirror stay holder cover.


(b) w/o Rear Monitor:

- (1) Attach the 6 claws.

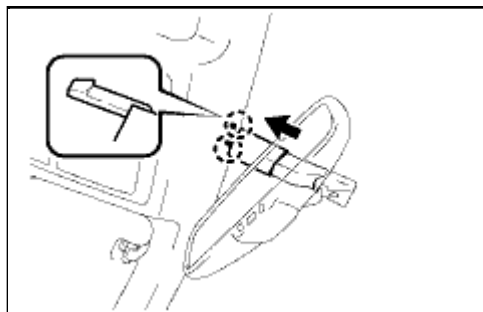


- (2) Slide the inner rear view mirror stay holder cover in the direction indicated by the arrow in the illustration and attach the 2 claws to install it.

3. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/o EC Mirror)

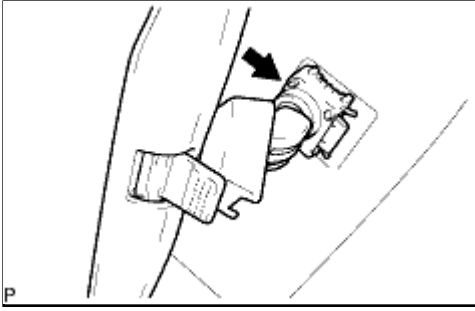

(a) Slide and install the inner rear view mirror as shown in the illustration.

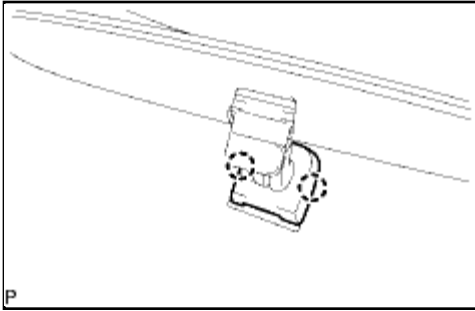

(b) Attach the 2 claws to install the cover.