

Multi-channel Vibrating wire & Analog signal Acquisition Instrument VTN4XX

(V: Vibrating wire T: Temperature N: ANalog)

User Manual (V1.02 For HW110)

HEBEI WINCOM TECHNOLOGY CO., LTD

October 2018

Multi-channel

Vibrating wire & Analog signal

Acquisition Instrument

Overview

VTN4XX is a multi-channel vibration wire, temperature, and analog sensor signal acquisition device, which can collect and store up to 32 channels vibrating wire frequency, 32 channels temperature sensor (NTC or DS18B20) and 32 channels analog quantity sensor (voltage or current) in real time or in full automatic timing. An adjustable power output can supply power to other sensors. The programmable multi-channel 16 DAC output can be used to convert the vibrating wire frequency into analog signal or for output control (H or L). RS485 data interface, industrial MODBUS or customized AABB simple communication protocol can directly access existing measurement and control systems (such as PLC, wireless transmission device, etc.).



(Violet Red)



(Medium Blue)



(Dim Gray)

Characteristics

- **Dimensions:** 200mm*123mm*23mm
- **Power Supply:** DC8~24V @500mA
- **Power Consumption:** <60mW(average, current consumption 5mA)
- **Electrical Interface:** Spring press connector
- **Input Signal:** Up to 32 vibrating wire +32 temperature +32 voltage or current
- **Measuring Rate:** Advanced FER(Fast Excitation Reading) 200ms/CH
16 channel frequency measurement in 3 seconds, 32 channel in 5 seconds
- **Digital Interface:** RS485@MODBUS standard industrial communication protocol, Communication rate 1.2~256kbps
- **Analog Interface:** 1 channel programmed power output +16 channel analog output
- **Parameter Setting:** The parameters can be set using a dial switch, key or an instruction
- **Work Mode:** Real-time online and automatic startup
- **Memory Space:** 8Mbytes(2 years) 16Mbytes(4 years) 32Mbytes(8years)
- **Temperature Range:** -40~85°C
- **Other Features:** Key + digital tube parameter setting, real-time data display, power supply low reminder, radio frequency or mobile network wireless function expansion

Characteristics

(Environment Temperature = 25 °C, VIN = 12 v)

Parameter	Test Conditions	Min	Typ	Max	Unit
Power Supply					
VIN		8	12	24	V
VOUT		1.5		VIN	V
I _{WORK}			---		mA
I _{SLEEP}			2.5		uA
digital interface RS485					
Communication Rate		1.2	9.6	256	Kbps
Differential Driver Output	RL = 100Ω	2.0			V
Output High Voltage		2.9			V
Output Low Voltage				0.4	V
Input Resistance			12		KΩ
Load Capacity					
Vibrating wire (frequency) sensor					
Measured Frequency Range		100		8000	Hz
Excitation Voltage	Low-voltage sweep	3		20	V
	High-voltage pulse	30		220	V
Frequency Resolution			0.01		Hz
Frequency Accuracy		0.01		0.05	Hz
Rate of Frequency Measurement	High-voltage pulse		1		S/CH
	Frequency feedback sweep	0.1			S/CH
	Full frequency sweep	1		10	S/CH
Temperature (NTC) sensor					
Resistance Range		1	2	10	KΩ
Temperature Resolution			0.1		°C

Temperature Accuracy			0.3		°C
ADC					
Voltage Range		Custom	5	Custom	V
Current Range		Custom	20	Custom	mA
Resolution	12 bits ADC		1/4095		
	16 bits ADC		1/65535		
DAC					
Voltage Range		0		4.095	V
Resolution			1/4096		
Short-circuit Current				25	mA
Other					
RTC Accuracy			2	3.5	ppm
Auto Start Interval		10	3600	65535	sec
Internal Storage			8	32	MByte
External Storage				32	G
Operation Temperature		-40		+85	°C

Ordering Information



- **VTN:** Mixed signal collector (vibrating wire, temperature, analog)
- **A:** Number of embedded VM devices (1~4)
- **B:** Number of vibrating wire channels by two digits (04, 08, 16, 32)

	TYPE	Vibr	NTC/ DS18B20	ADC (16bits)	DAC	MSRP (CNY)
BASE vibrating wire	VTN208	8	8/8	0(0)	0	
	VTN216	16	16/2	0(0)	0	
	VTN416	16	16/16	0(0)	0	
	VTN432	32	16/4	0(0)	0	
standard	VTN208S	8	8/8	16(4)	16	
	VTN216S	16	16/2	8(4)	8	
	VTN416S	16	16/16	16(0)	16	
	VTN432S	32	16/4	8(4)	8	
PLUS	VTN416P					
	VTN432P					
	VTN416x					
	VTN432x					
CUSTOM						

Note: other models are available. Up to 32 channels for vibrating string, 32 channels for temperature or analog quantity, and 16 channels for digital-analog conversion.

Mass purchase can be customized firmware and working logic, can directly external or internal embedded wireless function devices.

Optional built-in battery, can work continuously for no less than 1 year without external battery.



Contents

目录


Overview	2
Characteristics	2
Characteristics	3
Ordering Information	5
Contents.....	6
Structure	8
Dimension.....	9
Interface Definition.....	10
Cautions	12
2. Hardware Interface.....	13
2.1 Power Port.....	13
2.2 User Interface	13
2.2.1 Button	13
2.2.2 Indicator lamp.....	14
2.2.3 Nixie tube	14
2.2.4 Toggle switch	15
2.3 Communication Interface	16
2.4 Sensor Interface	17
2.4.1 Coil interface of vibrating wire sensor.....	17
2.4.2 Temperature sensor interface	17
2.4.3ADC interface.....	18
2.4.4DAC interface.....	18
3. Work Mode	18
4. Normal Operation	18
4.1 Startup & Shutdown.....	18
4.2 Data Viewing.....	19
4.3 Modify Parameters.....	20
5. Communication Protocol	21

Register mechanism.....	21
Data mode	21
Communication Protocol	21
5.1 MODBUS communication protocol.....	21
5.2 AABB communication protocol	22
5.3 \$String communication protocol	24
5.4 Check code algorithm.....	25
5.5 Register (parameters) summary table	26
6. Start To Use	28
6.1 Preparation before power on.....	28
6.2 Communication interface parameter configuration	29
6.3 Read Real-time data and parameter.....	30
6.4Channel assignment	31
6.5 Parameter setting of vibrating wire sensor.....	31
6.6 Parameter setting of Temperature Sensor.....	32
6.7 Parameter setting of ADC	32
6.8 Factory parameter setting	33
6.9 View production information	35
6.10 Data storage and Send	36
6.11 Export the stored data.....	37
6.12 Use DAC	37
7. Frequently Asked Questions	39
Summary table of \$string instructions	41
Summary table of @string instructions.....	42
Summary table of DOS instructions.....	42

Structure

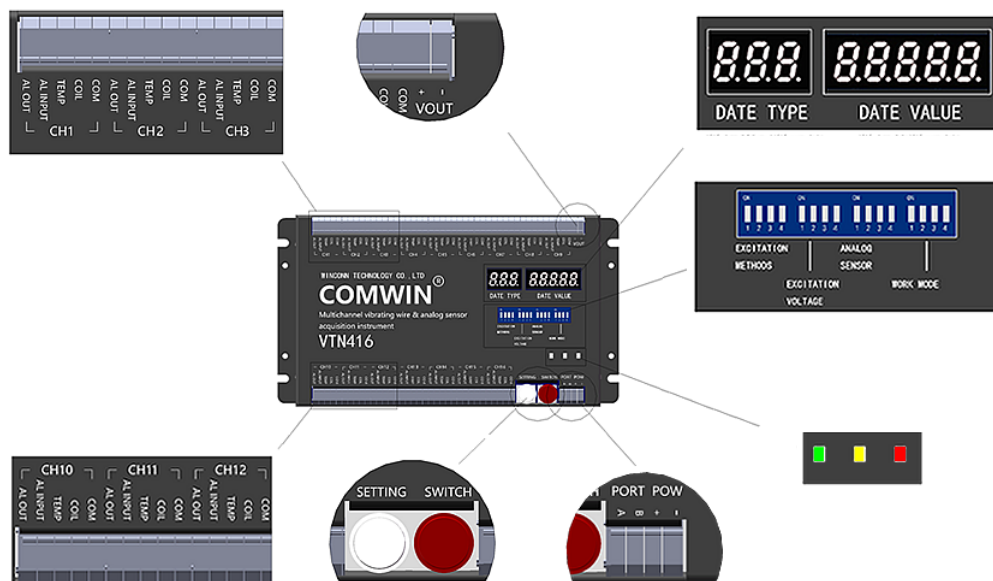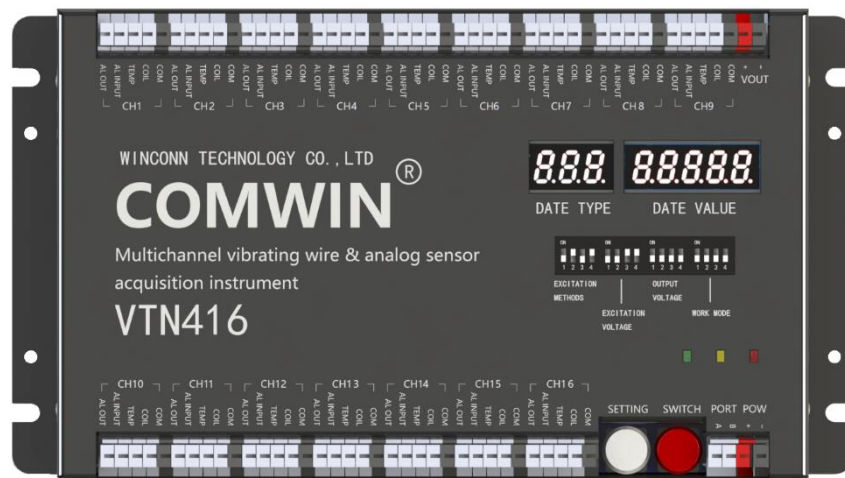

Dimension

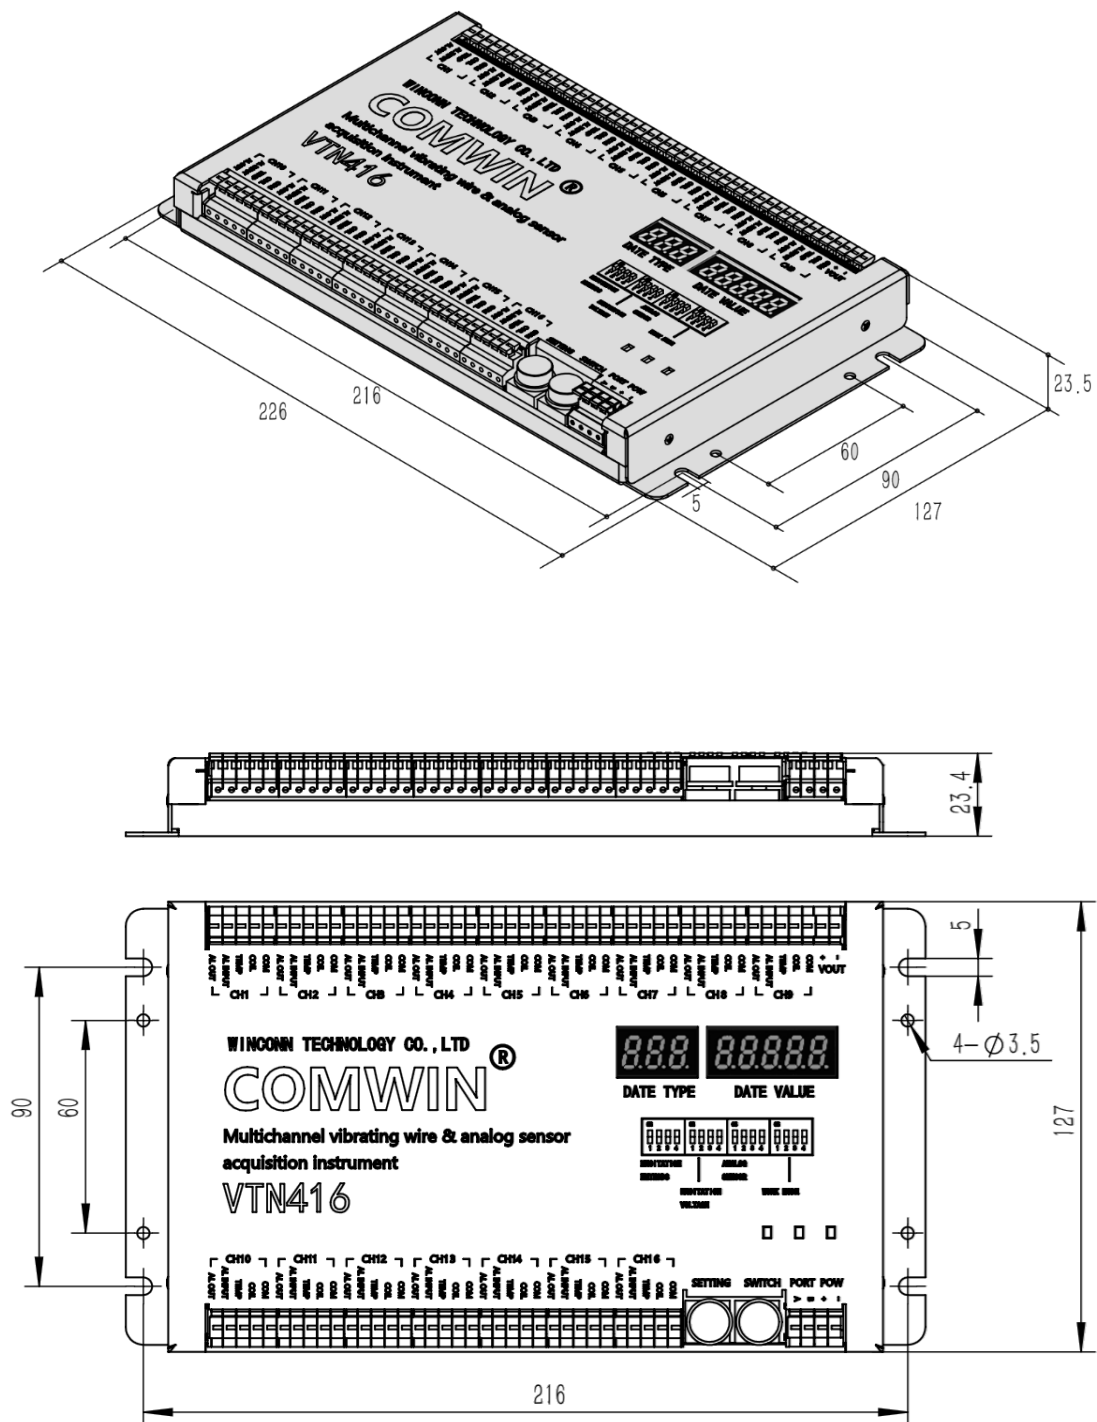

Interface Definition

47	VOUT-	VOUT-	VOUT
46	VOUT+	VOUT+	VOUT
45	Sensors	COM	VOUT
44	Fre CH 09	COIL	CH09
43	Temp CH 09	TEMP	CH09
42	ADC CH 09	AIN	CH09
41	DAC CH 09	AOUT	CH09
40	Sensors	COM	CH09
39	Fre CH 08	COIL	CH08
38	Temp CH 08	TEMP	CH08
37	ADC CH 08	AIN	CH08
36	DAC CH 08	AOUT	CH08
35	Sensors	COM	CH08
34	Fre CH 07	COIL	CH07
33	Temp CH 07	TEMP	CH07
32	ADC CH 07	AIN	CH07
31	DAC CH 07	AOUT	CH07
30	Sensors	COM	CH07
29	Fre CH 06	COIL	CH06
28	Temp CH 06	TEMP	CH06
27	ADC CH 06	AIN	CH06
26	DAC CH 06	AOUT	CH06
25	Sensors	COM	CH06
24	Fre CH 05	COIL	CH05
23	Temp CH 05	TEMP	CH05
22	ADC CH 05	AIN	CH05
21	DAC CH 05	AOUT	CH05
20	Sensors	COM	CH05
19	Fre CH 04	COIL	CH04
18	Temp CH 04	TEMP	CH04
17	ADC CH 04	AIN	CH04
16	DAC CH 04	AOUT	CH04
15	Sensors	COM	CH04
14	Fre CH 03	COIL	CH03
13	Temp CH 03	TEMP	CH03
12	ADC CH 03	AIN	CH03
11	DAC CH 03	AOUT	CH03
10	Sensors	COM	CH03
9	Fre CH 02	COIL	CH02
8	Temp CH 02	TEMP	CH02
7	ADC CH 02	AIN	CH02
6	DAC CH 02	AOUT	CH02
5	Sensors	COM	CH02
4	Fre CH 01	COIL	CH01
3	Temp CH 01	TEMP	CH01
2	ADC CH 01	AIN	CH01
1	DAC CH 01	AOUT	CH01

VTN416 (T1616_A1600_D16)

CH10	CH11	CH12	CH13	CH14	CH15	CH16	KEY	PORT	POW
48	49	50	51	52	53	54	55	56	57
58	59	60	61	62	63	64	65	66	67
68	69	70	71	72	73	74	75	76	77
87	88	89	90	91	92	93	94	95	96
97	98	99	100	101	102	103	104	105	106
115	116	117	118	119	120	121	122	123	124
132	133	134	135	136	137	138	139	140	141
150	151	152	153	154	155	156	157	158	159
168	169	170	171	172	173	174	175	176	177
187	188	189	190	191	192	193	194	195	196
205	206	207	208	209	210	211	212	213	214
222	223	224	225	226	227	228	229	230	231
240	241	242	243	244	245	246	247	248	249
267	268	269	270	271	272	273	274	275	276
285	286	287	288	289	290	291	292	293	294
303	304	305	306	307	308	309	310	311	312
321	322	323	324	325	326	327	328	329	330
339	340	341	342	343	344	345	346	347	348
357	358	359	360	361	362	363	364	365	366
375	376	377	378	379	380	381	382	383	384
393	394	395	396	397	398	399	400	401	402
411	412	413	414	415	416	417	418	419	420
429	430	431	432	433	434	435	436	437	438
447	448	449	450	451	452	453	454	455	456
465	466	467	468	469	470	471	472	473	474
483	484	485	486	487	488	489	490	491	492
493	494	495	496	497	498	499	500	501	502
511	512	513	514	515	516	517	518	519	520
529	530	531	532	533	534	535	536	537	538
547	548	549	550	551	552	553	554	555	556
565	566	567	568	569	570	571	572	573	574
583	584	585	586	587	588	589	590	591	592
593	594	595	596	597	598	599	600	601	602
611	612	613	614	615	616	617	618	619	620
629	630	631	632	633	634	635	636	637	638
647	648	649	650	651	652	653	654	655	656
665	666	667	668	669	670	671	672	673	674
683	684	685	686	687	688	689	690	691	692
693	694	695	696	697	698	699	700	701	702
711	712	713	714	715	716	717	718	719	720
729	730	731	732	733	734	735	736	737	738
747	748	749	750	751	752	753	754	755	756
765	766	767	768	769	770	771	772	773	774
783	784	785	786	787	788	789	790	791	792
793	794	795	796	797	798	799	800	801	802
811	812	813	814	815	816	817	818	819	820
829	830	831	832	833	834	835	836	837	838
847	848	849	850	851	852	853	854	855	856
865	866	867	868	869	870	871	872	873	874
883	884	885	886	887	888	889	890	891	892
893	894	895	896	897	898	899	900	901	902
911	912	913	914	915	916	917	918	919	920
929	930	931	932	933	934	935	936	937	938
947	948	949	950	951	952	953	954	955	956
965	966	967	968	969	970	971	972	973	974
983	984	985	986	987	988	989	990	991	992
993	994	995	996	997	998	999	1000	1001	1002

47	VOUT-	VOUT-	VOUT
46	VOUT+	VOUT+	
45	Sensors	COM	
44	Fre CH 17	COLA	
43	Fre CH 18	COLB	CH09
42	Temp CH 17	A/TEMPN	
41	DAC CH 09	AO	
40	Sensors	COM	
39	Fre CH 15	COLA	CH08
38	Fre CH 16	COLB	
37	Temp CH 16	A/TEMPN	
36	Temp CH 15	AO/TEMP	
35	Sensors	COM	CH07
34	Fre CH 13	COLA	
33	Fre CH 14	COLB	
32	Temp CH 14	A/TEMPN	
31	Temp CH 13	AO/TEMP	CH06
30	Sensors	COM	
29	Fre CH 11	COLA	
28	Fre CH 12	COLB	
27	Temp CH 12	A/TEMPN	CH05
26	Temp CH 11	AO/TEMP	
25	Sensors	COM	
24	Fre CH 09	COLA	
23	Fre CH 10	COLB	CH04
22	Temp CH 10	A/TEMPN	
21	Temp CH 09	AO/TEMP	
20	Sensors	COM	
19	Fre CH 07	COLA	CH03
18	Fre CH 08	COLB	
17	Temp CH 08	A/TEMPN	
16	Temp CH 07	AO/TEMP	
15	Sensors	COM	CH02
14	Fre CH 05	COLA	
13	Fre CH 06	COLB	
12	Temp CH 06	A/TEMPN	
11	Temp CH 05	AO/TEMP	CH01
10	Sensors	COM	
9	Fre CH 03	COLA	
8	Fre CH 04	COLB	
7	Temp CH 04	A/TEMPN	CH00
6	Temp CH 03	AO/TEMP	
5	Sensors	COM	
4	Fre CH 01	COLA	
3	Fre CH 02	COLB	CH00
2	Temp CH 02	A/TEMPN	
1	Temp CH 01	AO/TEMP	

VTN432 (T2404_A0000_D08)

POW	-N/A	-N/A	98
	+N/A	+N/A	58
PORT	DX/B		78
	DX/LV		38
KEY	HCL	button	
	IWS_Y3K	[HCLIWS]	
CH16	GNL	button	
	_SET_Y3K	[TTTISE]	
CH15	WOC	Sensors COM	28
	VOIO	Fre CH 31	18
	COILB	Fre CH 32	08
	NTEMPN	Temp CH 24	62
CH14	OV	16 H C C A C	82
	WOC	Sensors COM	22
	VOIO	Fre CH 26	92
	COILB	Fre CH 30	52
CH13	NTEMPN	Temp CH 23	72
	OV	15 H C C A C	32
	WOC	Sensors COM	22
	VOIO	Fre CH 27	12
CH12	VOIO	Fre CH 25	99
	COILB	Fre CH 26	59
	NTEMPN	Temp CH 21	79
	OV	13 H C C A C	39
CH11	WOC	Sensors COM	29
	VOIO	Fre CH 23	19
	COILB	Fre CH 24	09
	NTEMPN	Temp CH 20	65
CH10	OV	12 H C C A C	85
	WOC	Sensors COM	25
	VOIO	Fre CH 21	55
	COILB	Fre CH 22	55
CH09	NTEMPN	Temp CH 19	75
	OV	11 H C C A C	35
	WOC	Sensors COM	25
	VOIO	Fre CH 19	15
CH08	COILB	Fre CH 20	05
	NTEMPN	Temp CH 18	67
	OV	10 H C C A C	87
	VOIO	Fre CH 18	05

Cautions

✓ Case Ground

The equipment power supply negative pole (case) should be connected with the earth reliably, Otherwise, it may lead to signal acquisition noise or shock hazard.

✓ Prevent Electrostatic

Static electricity can cause serious damage to instrument components and accessories.

✓ Do not overvoltage

Use only the power cord and power adapter provided by the product manufacturer.

✓ Do not exceed the drive capacity

Connect other devices strictly in accordance with the power output and analog output indicators specified in this manual, and do not overload.

✓ Handle with care

Strong vibration shall be prevented during operation and transportation.

✓ Avoid pressing

There is no load-bearing capacity in the equipment shell, and extrusion deformation can cause short circuit between the metal shell and the internal electronic components.

✓ avoid the rain

This product does not have the waterproof ability, and is not allowed to contact with the water in any form, do not install in the outdoor environment.

✓ Dry storage

For a long time stored in a humid environment, the enclosure and internal electronic components will rust. Before connecting the power source, the equipment should be dry on the outside and inside.

✓ careful of range

Do not attempt to connect the signal line beyond the measured range to the input terminal.

✓ Replace button batteries on time

Low internal clock battery power can cause the device to fail to work properly and it is recommended to replace it every one to two years.

2. Hardware Interface

2.1 Power Port

2.1.1 Input Power

VTN4XX can automatically adapt to the wide voltage power supply of dc8-24v, with a maximum current consumption of about 500mA. It is recommended to use a power source with output capacity greater than 1A to power the equipment. The working power supply provides power for both the excitation of the vibrating wire sensor and the output VOUT of the power supply. The voltage of the working power supply should not be lower than the expected excitation voltage and output voltage.

Recommended: DC12V @2A power supply.

Warning: this equipment does not have overvoltage and polarity reverse connection protection measures. If the maximum voltage or reverse connection is exceeded, permanent damage will be caused.

2.1.2 Output Power

VOUT interface can output controlled voltage, output voltage is set by dial switch, output range is 5.0V~VIN-1.0V, maximum output current 3A.Can be controlled via digital interface to enable or disable voltage output.

2.1.3 Back up Supply

The device is equipped with a real-time clock button battery, which can keep the clock running when the external power supply is cut off, or automatically start up when the device is shut down. Button battery model is CR1220 or ML1220. Please use the same model as the original battery when replacing.

Suggestion: replace the spare battery (clock button battery) every 1-2 years.

Warning: when the standby battery power is low or exhausted, it will cause real-time clock reset and fail to complete automatic startup.

2.2 User Interface

2.2.1 Button

VTN4XX has two light touch buttons, through which data viewing and parameter modification can be completed.

Short press: press the button once within 1 second;

Long press: hold the button for at least 3 seconds before releasing.

State	Button	Event	Description
power off	SWITCH	Long	Power on (display next class/save data)
Data view		Short	next data item
	SETTING	Short	Previous data item
		Long	Shutdown (enter parameter edit mode)
Data modification	SWITCH	Short	Modify to the next available value
	SETTING		Modify to the Previous available value
	SWITCH	Long	Exit the parameter edit mode ①
	SETTING		Exit the parameter edit mode ②
Note①: Parameter restored after restart; Note②: Permanent save			

2.2.2 Indicator lamp

VTN4XX has three indicators from right to left: power indication, data transmission indication and operation status indication.

- Power supply indication (red) : it is always on after starting up
- Data transfer indication (yellow) : flashing when receiving or sending data
- Operational status indicator (green) : flashing once per second during normal operation

2.2.3 Nixie tube

VTN4XX has two 8-segment digital tubes for displaying data categories, data Numbers, and data values.

The first digital tube is three bits: the following is called "data name digital tube". The first represents the data category, and the last two represent the data item Numbers.

The second digital tube is five bits: it is called "data value digital tube". Displays current data or parameter value.


8.8.8 0.0.0.0.0: FXX, frequency data, XX is the channel number, and the last 5 digits are frequency values

8.8.8 0.0.0.0.0: TXX, temperature data, XX is the channel number, and the latter 5 are temperature values

8.8.8 0.0.0.0.0: AXX, ADC data, XX is the channel number, and the last 5 bits are the conversion values

8.8.8 0.0.0.0.0: PXX, parameter data, XX is parameter address, and the last 5 bits are current parameter values

2.2.4 Toggle switch



Excitation Method



Slow Excitation Voltage



Output Voltage



Work Mode

The relation between dial switch and output voltage

Value	Bits Stat				Vol	Value	Bits Stat				Vol
	1	2	3	4			1	2	3	4	
0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	5.0	8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	17.0
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	6.5	9	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	18.5
2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	7.5	10	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	20.0
3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9.0	11	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	21.0
4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	11	12	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	23.0
5	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	12.5	13	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	24.5
6	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	13.5	14	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	26.0
7	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	15.0	15	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	27.0

■: ON; □: OFF

The relation between dial switch and Excitation Voltage Source(VSEN)

Value	Bits Stat				Vol	Value	Bits Stat				Vol
	1	2	3	4			1	2	3	4	
0	×	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	5.0	4	×	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	11
1	×	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	6.5	5	×	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	12.5
2	×	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	7.5	6	×	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	13.5
3	×	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	9.0	7	×	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	15.0

■: ON; □: OFF; ×: Ignore

The energy to excite the vibrating wire sensor comes from VSEN, The high voltage required for impulse excitation can be obtained through VSEN. When the frequency sweeping method is used to excite the sensor, VSEN is the excitation voltage.

bit	Functional description		Descr
1	use more compatible excitation method		Improved compatibility, but longer measurement time
	<input type="checkbox"/>	Normal	
	<input checked="" type="checkbox"/>	Slow	

The relation between dial switch and Excitation Method

Value	Bits Stat				激励方法	Descr
	1	2	3	4		
0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HPM	Pulsed Excitation,120V

1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>		Pulsed Excitation,150V
2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		Pulsed Excitation,200V
3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	FFF	Frequency feedback fixed frequency sweep method ①
4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	FFG	Frequency feedback gradient frequency sweep method ①
5	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	FFF	Frequency feedback fixed frequency sweep method ②(recommended)
6	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	FFG	Frequency feedback gradient frequency sweep method ②
7	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	SGF1	Piecewise frequency sweep 1,300~1500Hz
8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SGF2	Piecewise frequency sweep 2,1500~2700Hz
9	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	SGF3	Piecewise frequency sweep 3,2700~3900Hz
10	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	SGF4	Piecewise frequency sweep 4,3900~5100Hz
11	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	FFS	Full frequency sweep,300Hz~5000Hz
12~14	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				Undefined
15	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		*The excitation method is no longer controlled by the dial code switch and can be switched by modifying the register EX_METH

Note①: First excitation method is HPM; Note②: First excitation method is FFS

The relation between dial switch and Work Mode

bit	Functional description		Descr
4	Power on control switch		
	<input type="checkbox"/>	Startup manually or automatically and shut down automatically	
	<input checked="" type="checkbox"/>	Connect the power immediately to start, never shut down	Power on and off are controlled by input power
3	Working mode switch		
	<input type="checkbox"/>	manual	
	<input checked="" type="checkbox"/>	Automatic timed start	
2,1	Reserved		

2.3 Communication Interface

The equipment has a standard three-wire RS232 or two-wire RS485 interface with the main features as follows:

Communication rate:1200、4800、9600、14400、19200、38400、57600、115200、128000、256000bps

Data bits: 5, 6, 7, 8

Parity bit: None, Odd, Even

Stop bit: 1, 1.5, and 2

Recommendation: use low communication rate for remote communication.

2.4 Sensor Interface

VTN4XX has 16 groups of sensor physical interfaces, each group is composed of 5 terminals and marked with Numbers 1-5. Among them, terminal 1 (wiring hole) is the common terminal COM and the color is black. The five terminals are defined as follows:

Sensor interface definition For VTN416

Number	Name	Color	Descr
1	COM	Black	Common, Connect the negative pole of the sensor
2	COIL		Connect the anode of the coil of the vibrating wire
3	TEMP		Connect the anode of the temperature sensor
4	AIN		Analog signal input
5	AOUT		Analog signal output

Sensor interface definition For VTN432

Num	Name	Color	Descr
1	COM	Black	Common, Connect the negative pole of the sensor
2	COILA		Connect the anode of the coil of the vibrating wire ^①
3	COILB		Connect the anode of the coil of the vibrating wire ^①
4	AIN/TEMP		Analog signal input/ temperature sensor ^②
5	AOUT/TEMP		Analog signal output/ temperature sensor ^②
Note①: Each group can connect two coils. All 16 groups can measure 32 frequency.			
Note②: Set by the manufacturer before delivery			

2.4.1 Coil interface of vibrating wire sensor

It's made up of COM and COIL, Connect the positive and negative poles of the coil.

Tip: the coil of vibrating wire sensor does not distinguish between positive and negative poles.

2.4.2 Temperature sensor interface

The temperature sensor interface is represented on the housing by TEMP or TEMPN, TEMP means that this channel can connect DS18B20 or NTC (configured via software),

and TEMPN means that this channel can only connect thermistor NTC. The device can be connected with thermistor with nominal value of 1k~10k.

2.4.3ADC interface

VTN4XX provides the "analog-to-digital" conversion function of 4-channel 16-bit resolution and 16-channel 12-bit resolution, and it can be configured with software to add constants and multiply constants to each channel to directly convert analog signals to physical values. The input range of the analog signal (voltage or current) is fixed at the factory, and the maximum and minimum values can be checked through parameters (generally 0~10V or 0~20mA).

Warning: connection of voltage or current beyond the acquisition range will result in permanent damage to the channel and the equipment will be unable to be used in severe cases.

2.4.4DAC interface

VTN4XX provides analog output channels with 16 channels at 12-bit resolution. Through parameter configuration, it can be specified whether the analog output channel can be controlled by the instruction (programmable). When the analog output is not programmable, each channel is controlled by the device internally, and the output voltage signal represents the frequency value.

3. Work Mode

VTN4XX has three working modes: real-time online, timed startup and manual startup. All three work modes are set by dial - code switch. See "2.2.3 dial switch" for details.

- **Real-time Online:** Start up immediately after connecting the external power source, never shut down, and measure the channel sensors in real time.
- **Timed Startup:** Startup according to the preset time interval, collect and store data and send data, automatically shut down after the work is completed, start up again automatically after the preset time interval, and run in a loop.
- **Manual Startup:** Power on only by manual button, when no operation timeout after automatic shutdown.

4. Normal Operation

4.1 Startup & Shutdown

4.1.1 Startup

VTN4XX has three ways of starting up: manually starting up, automatically timing starting up and power-on starting.

Power-on starting: When the fourth bit of "work mode dial code switch" is ON, it can be started up by connecting the external power supply directly.

Automatically timing starting up: The device will start up automatically at a preset time interval.

Manually starting up: In the shutdown state, press the [SWITCH] button and hold it for 3 seconds. The digital tube displays "416S 1.0.2" **8.8.8 500.00**. When the buzzer is heard, release the button.

4.1.2 Shutdown

When the dial code switch on the power on is ON, it will be ON until the external power source is removed (never off).

When the dial code switch on the power on is OFF, it will automatically shut down after completing the automatic working process or no operation timeout.

Manual power off: long press [SETTING] key, the digital tube shows "BYE" **8.8.8 8.8.8.8.8**, release the key.

4.1.3 Version Information

At startup, Digital tube display device model and firmware version number and the device outputs a string containing the device model and version information via a digital interface, as shown below:

```
===== COPYRIGHT INFORMATION =====
TYPE:      VTN416B
COPYRIGHT: Copyright(c)2010-   HEBEI WINCOM TECH CO.,LTD.All Rights
Reserved
SITE:      http://www.winkooo.com

===== VERSION INFORMATION =====
TYPE:      VTN416B
HWVER:     100
SFVER:     100
```

Please note if the equipment version information is consistent with this manual, and ask us for the applicable user manual if necessary.

During device operation, you can get version information by sending string instruction \$INFO to the device, as shown in "6.9 view production information".

4.2 Data Viewing

By pressing the button, the digital tube can display real-time data and operation parameters of different categories. The data name digital tube shows 3-digit symbol, the first digit is the letter, representing data category, and the last two are the Numbers of data. Data categories are denoted by letters, F denotes frequency categories, T (lowercase t) denotes temperature categories, and P denotes system parameter categories.

4.2.1 Frequency data

Frequency value is represented by FXX, XX represents channel number, short press [SWITCH] to display the next channel, short press [SETTING] to display the prior channel, long press [SWITCH] to display the next category data.

4.2.2 Temperature data

Temperature value is represented by TXX, XX represents channel number, short press [SWITCH] to display the next channel, short press [SETTING] to display the prior channel, long press [SWITCH] to display the next category data.

4.2.3 ADC Data

ADC value is represented by AXX, XX represents channel number, short press [SWITCH] to display the next channel, short press [SETTING] to display the prior channel, long press [SWITCH] to display the next category data.

4.2.4 System Parameters

System Parameters value is represented by PXX, XX represents parameter address, short press [SWITCH] to display the next parameter, short press [SETTING] to display the prior parameter, long press [SWITCH] to display the next category data.

4.3 Modify Parameters

The method to modify a parameter by using the button is as follows:

(1) On the system parameter page (PXX page), press [SWITCH] or [SETTING] to select the parameter item to be modified.

(2) Long press [SETTING], and when the digital tube of data value starts flashing, it indicates that the current state of parameter modification has been entered.

(3) Click [SWITCH] to SWITCH the current parameter value to the next standby value or click [SETTING] to SWITCH the current parameter value to the previous standby value.

(4) Long press [SETTING] or [SWITCH] to indicate that the modification of this parameter has been completed when the digital tube of data value does not flash.

Note: long press [SWITCH] or [SETTING] to exit the parameter modification state. The difference is that the parameter value will be saved permanently by the latter.

Use instructions to modify parameters, See "5. Communication protocol" for details.

5. Communication Protocol

Register mechanism

VTN4XX internal maintenance has several registers, and the device completes the measurement of the vibrating wire sensor under the control of the register parameter values. The value of the register always exists as an integer. The basic operation unit is "word" (2-byte integer, big-end mode). There are two types of power-off saving and power-off loss (corresponding to the two attributes of "read/write" and "read only").

Data mode

The register data value is in big endian mode, the high byte of the data is stored in the low address of the memory, and the low byte of the data is stored in the high address of the memory. When the data frame is transmitted, the low byte is transmitted first and then the high byte is transmitted. . Each register corresponds to two bytes, then the value of a single register = low byte value * 256 + high byte value.

Communication Protocol

This device supports the standard industrial MODBUS communication protocol (03, 04, 06 instruction codes), simple AABB protocol and \$string instruction set. Both protocols support "One host multiple slave" application structure based on device address and bus connection. In the bus, the VTN4XX is always used as a slave (Passively wait for instructions, do not upload data actively).

5.1 MODBUS communication protocol

Under the MODBUS protocol, all registers in VTN4XX are defined as "hold registers" (see MODBUS communication protocol standard description). The device supports multiple consecutive register reads, single register writes, multiple consecutive register writes. Three kinds of instructions, the corresponding instruction codes are 0x03, 0x06.

(1) 03 (0x03) and 04 (0x04) instruction code: read multiple consecutive register data, the instruction format is as follows

Instruction data frame structure

address code	Function code 0x03	Start address	Number of registers	CRC
1 byte	1 byte	2 byte	2 byte	2 byte

Return data frame structure

address code	Function code 0x03	Data length	Datas	CRC
--------------	--------------------	-------------	-------	-----

1 byte	1 byte	2 byte	n byte	2 byte
---------------	--------	--------	--------	--------

Example: Read the device register value with address 0x01, the register start address is 0, and 10 registers are read continuously.

The host sends the command: 0x01 0x03 0x00 0x00 0x00 0x0A **0xC5 0xCD**

The slave return: 0x01 0x03 0x14 0x00 0x01 0x00 0x60 0x00 0x00 0x00 0x00 0x00
0x00 0x00 0x01 0x01 0xF4 0x00 0x00 0x00 0x64 0x00 0xC8 **0x5F 0x8F**(*underscore is the 10 register values*)

When reading multiple consecutive registers, do not exceed 64 registers in a single read. Do not attempt to read a non-existing register.

(2) 06 (0x06) instruction code: modify the value of a single register, the instruction format is as follows

Instruction data frame structure

address code	Function code 0x06	Register address	Register value	CRC
1 byte	1 字节	2 byte	2 byte	2 byte

Return data frame structure

address code	Function code 0x06	Register address	Register value	CRC
1 byte	1 byte	2 byte	2 byte	2 byte

Example: Modify the value of register 8 in the device with address 0x01 to 100.

The host sends the command: 0x01 0x06 0x00 0x08 0x00 0x64 0x09 0xE3

The slave return: 0x01 0x06 0x00 0x08 0x00 0x64 0x09 0xE3

5.2 AABB communication protocol

AABB communication protocol is a non-standard custom protocol. Compared with MODBUS communication protocol, the structure is simpler and the instruction generation method is easier, which is convenient for quick test. The AABB communication protocol supports single register reads and writes two instructions.

(1) Read a single register

Instruction data frame structure

head 0xAA 0xBB	address code	Register address	Add check
2 byte	1 byte	1 byte	1 byte

Return data frame structure

head 0xAA 0xBB	address code	Register address	Register value	Add check
2 byte	1 byte	1 byte	2 byte	1 byte

Command header: fixed to hexadecimal AABB

Address code: The address of the VM3XX device (1~255, where address 255 is the general address, see the description of the following "Universal Device Address" for details)

Register address: The address of the register to be accessed (0~63). The highest bit of the register address byte is the read/write flag. When it is 0, it indicates the read register. When it is 1, it indicates the write register.

Add check: the sum of all previous data, 0xAA + 0xBB + address code + register address, when the checksum exceeds 255, only the low byte is used. In the following example, the checksum = 0xAA + 0xBB + 0x01 + 0x08 = 0x016E, then only 0x6E is used as the final checksum.

Example: Read the device register value with address 0x01, register address is 8

The host sends the command: 0xAA 0xBB 0x01 0x08 0x6E

The slave returns a response: 0xAA 0xBB 0x01 0x08 0x00 0x60 0xCE

(2) Modify a single register

Instruction data frame structure

head 0xAA 0xBB	address code	Register address 0x80	Register value	Add check
2 byte	1 byte	1 byte	2 byte	1 byte

In the write register instruction, the most significant bit of the register address byte should be 1, that is, the address value is "OR" with 0x80.

Return data frame structure

head 0xAA 0xBB	address code	Register address	Register value	Add check
2 byte	1 byte	1 byte	2 byte	1 byte

Example: Modify the device register value with address 0x01, the register address is 8, and the modified value is 100.

The host sends the command: 0xAA 0xBB 0x01 0x88 0x00 0x64 0x52

Slave return response: 0xAA 0xBB 0x01 0x08 0x00 0x64 0xD2

(3) Universal device address

The AABB communication protocol supports the device's general address. Regardless of the current address of the device, using 0xFF as the address to send read and write instructions to the device, the device can respond correctly.

Example: Use the general address to read register 8 of any device

The host sends the command: 0xAA 0xBB 0xFF 0x08 0x6C

The slave returns a response: 0xAA 0xBB 0x01 0x08 0x00 0xC8 0x36

Note: When multiple devices are connected to the bus (usually RS485 bus), all devices on the bus will respond to the command when the general address is used, resulting in the instruction not working properly.

Note: It is strictly forbidden to use a general address to modify the device address in a bus connected to multiple VM3XX devices.

Device address register (0x00)

Bit	symbol	value	description	Reset value
bit15:8			Not yet defined	0
bit7:0		1~254	Device address	1

5.3 \$String communication protocol

String communication protocol is a custom string communication protocol with English character '\$' as a fixed frame head. It can read and write single register (parameter), which is convenient for quick and easy testing.

(1) Read a single register

Instruction data frame structure

head \$GETP	separator '='	Register address	\r\n
5 byte	1 byte	1~2 byte	2 byte

Return data frame structure

head \$REG	separator[Register address	separator]	separator '='	Register value	\r\n
4 byte	1 byte	1~3 byte	1 byte	1 byte	1~5 byte	2 byte

Example: read the value of the register (register address is 21)

The host sends the command: \$GETP=21\r\n

The host sends the command: \$REG[21]=96\r\n

(2) Modify a single register

Instruction data frame structure

head \$GETP	separator '='	Register address	separator ','	Register value	\r\n
5 byte	1 byte	1~2 byte	1 byte	1~5 byte	2 byte

Return data frame structure: OK\r\n

Example: the modified register (address 21) has a value of 1152

The host sends the command: \$SETP=21,1152\r\n

The host sends the command: OK\r\n

Note: after the parameter is modified using the string instruction, it is saved using \$SAVE.

5.4 Check code algorithm

Whether the instruction is sent to the module or the response data returned by the receiving module, the data verification should be strictly performed. In rare cases, there will be errors in the response data returned by the module, and the verification of the data frame can completely avoid reading the wrong data.

(1) CRC16-MODBUS

```
unsigned int crc16(unsigned char *dat, unsigned int len)
{
    unsigned int crc=0xffff;
    unsigned char i;

    while(len!=0)
    {
        crc^=*dat;
        for(i=0;i<8;i++)
        {
            if((crc&0x0001)==0)
                crc=crc>>1;
            else
            {
                crc=crc>>1;
                crc^=0xa001;
            }
        }
        len-=1;
        dat++;
    }
    return crc;
}
```

(2) And check

```
unsigned char AddCheck(unsigned char *dat,unsigned char count)
{
    unsigned char i,Add=0;
```

```

for (i=0;i<count;i++)
    Add+=dat[i];
return Add;
}

```

5.5 Register (parameters) summary table

System parameters

Addr	Mark		Descr	Unit
0	ADDR	R/W	Device Address	
1	BAUD	R/W	Communication rate	100bps
2	WKMOD	R	Work Model	
11	DISP_SEC	R/W	Display Seconds	sec
12	SHDN_SEC	R/W	Shutdown Seconds	sec
17	EX_METH	R	Excitation Method	
19	TEMPTYPE	R/W	Type of temperature sensor	
20	NTC_B	R/W	B value of thermistor	
21	DT_YEAR	R/W	RTC - Year	
22	DT_MONTH	R/W	RTC - Month	
23	DT_DAY	R/W	RTC - Day	
24	DT_HOUR	R/W	RTC - Hour	
25	DT_MIN	R/W	RTC - Min	
26	DT_SEC	R/W	RTC - Sec	

Automatic start parameters

Addr	Mark		Descr	Unit
6	STORE_MIN	R/W	Data Storage Interval	min
7	SEND_MIN	R/W	Data Send Interval	min

Data send parameters

Addr	Mark		Descr	Unit
4	SENDMOD	R/W	send mode	
5	DATPRO	R/W	Data Protocol	
9	SMIN_SEC	R/W	Sending time limit	

Real-time data

Addr	Mark		Descr	Unit
61	DAC_FRE_TH	R/W	DAC Fre range	
62	DAC_PRG_EN	R/W	DAC programmable	
64~79	DAC01~DAC16	R/W	DACs Values	
80	SYSERR	R		
81	STT_NUM	R		
82	SYS_FUN	R		
83	VIN	R	Battery Vol, Input Vol	mV
84	VSEN	R	Excitation Voltage	mV
85	VOUT	R	Output Vol	mV
87	INDISK_TOTAL	R		

88	INDISK_FREE	R			
89	INDISK_USED	R			
100~163	CH01~CH64	R	Chs values		

6. Start To Use

6.1 Preparation before power on

(1) Set Work Mode

Set to power-on start work mode: switch the dial code switch of work mode to ON, and the dial code switch to OFF.

Set to manual startup mode: switch the dial code switch of work mode to OFF, and the dial code switch to OFF.

Set to auto start mode: switch the dial code switch of work mode to OFF, and the dial code switch to ON.

(2) Set Excitation Method

Set the excitation method according to the above definition of the dial code switch. The recommended method is 5 or 3. Namely: The second and fourth digits of the dial code switch are switched to ON. Or the third and fourth digits of the dial code switch are switched to ON.

(3) Set Excitation Voltage

The recommended excitation voltage is about 8V, that is: dial code switch, bit 3 switch to ON and the other bit to OFF.

(4) Set Output Voltage

If the output power is used to supply power to other devices or sensors, the dial switch shall be set according to the applicable voltage range of the external device. If the output power is not used, it is recommended to set the output voltage to be close to the voltage of the input voltage POW.

(5) Connected sensors

Connect all sensors to corresponding terminals (see "interface definition" for terminal definition).

(6) Connect the power and turn it on

When VTN4XX is connected to the power supply (note that the voltage range is DC8~24V), indicator light and digital tube can be observed when the working mode is "power-on mode"; if the working mode is "manual power on mode" or "automatic power on mode", long press the [SWITCH] button to start up. The device that is set to start working mode automatically and regularly needs to be started manually at least once before it can take effect.

Power supply negative GND must be reliably connected to earth.

6.2 Communication interface parameter configuration

Physical configuration refers to the configuration of communication rate, data bit, stop bit and check bit of digital interface. These parameters can be modified through buttons or digital interfaces, which are stored in the communication rate register BAUD and the auxiliary function register AUX. Register BAUD.[11:0] is used to set the communication rate, in units of 100bps, for example: 96 means the communication rate is 9600bps, and 1152 means the communication rate is 115200bps. Register AUX.[1:0] is used to set the data number of the interface, AUX.[3:2] is used to set the check bit, and AUX.[5:4] is used to set the stop bit.

Communication rate register BAUD

Bit	symbol	value	description				Reset value
bit15:2		0	Reserved				0
bit11:0		communication rate, unit is 100bps					96
		value	rate	value	rate		
		12	1200 bps	384	38400 bps		
		24	2400 bps	576	57600 bps		
		48	4800 bps	1152	115200 bps		
		96	9600 bps	1280	128000 bps		
		144	14400 bps	2560	256000 bps		
		192	19200 bps				

Auxiliary function register AUX

Bit	symbol	value	description	Reset value
bit15:6		0	Reserved	0
bit5:4		stop bit		0
		0	1 bit	
		1	2 bit	
		2		
		3		
bit3:2		check bit		0
		0	NONE	
		1	ODD	
		2	EVEN	
bit1:0		data bit		3

		0	5 bit	
		1	6 bit	
		2	7 bit	
		3	8 bit	

Possible interface parameter values of the AUX register (register low by 6 bits)

check bit	data bit	stop bit	value	
NONE	7	1	0x02(2)	
NONE	8	1	0x03(3)	Default
NONE	7	2	0x12(18)	
NONE	8	2	0x13(19)	
ODD	7	1	0x06(6)	
ODD	8	1	0x07(7)	
ODD	7	2	0x16(22)	
ODD	8	2	0x17(23)	
EVEN	7	1	0x0A(10)	
EVEN	8	1	0x0B(11)	
EVEN	7	2	0x1A(26)	
EVEN	8	2	0x1B(27)	

6.3 Read Real-time data and parameter

See "4.2 data view" for the method of viewing real-time data using buttons and digital tube. In addition, the digital interface can be used to send register read instruction to obtain real-time data and parameters.

For example, read parameter values using MODBUS communication protocol: read 32 parameters

Send instructions to the device: 01 03 00 00 00 20 44 12(Start with register 0 and read 32 registers)

Device response: 01 03 40 *00 01 00 60 00 00 00 03 00 00 00 02 00 05 00 0A 00 05 00 3C 02 D0 00 1E 00 78 1F 40 00 06 00 64 07 D0 00 05 00 82 00 02 0F 6E 00 12 00 0A 00 10 00 0B 00 37 00 0A 00 00 00 00 00 00 00 01 00 78* 04 41

The italic character is the returned register value, and each two bytes represents a register.

For example, Read channel data using MODBUS communication protocol: CH01~CH64

Send instructions to the device: 01 03 00 64 00 40 05 E5(Start with register 100 and read 64 registers)

[illegible]

The italic character is the returned channels value, and each two bytes represents a channel.

6.4 Channel assignment

VTN4XX has 64 read-only registers to store the real time value of the sensor. The order of channel data type is: frequency, temperature (NTC or DS18B20), ADC12 value and ADC16 value. According to the equipment type, ADC12 or ADC16 can be configured as NTC thermistor.

Channel assignment

VTN416		VTN432	
Registers(Addr)	data type	Registers(Addr)	data type
CH01~CH16(100~115)	frequency 1~16	CH01~CH32(100~131)	frequency 01~32
CH17~CH32(116~131)	temperature 1~16	CH33~CH36(132~135)	temperature 1~4
CH37~CH52(136~151)	ADC12 1~16	CH37~CH52(136~151)	NTC or ADC12
CH53~CH56(152~155)	ADC16 1~4	CH53~CH56(152~155)	NTC or ADC16
CH57	Reserved		
CH58	Synchronous update with VOUT register, unit mV		
CH59	Synchronous update with VSEN register, unit mV		
CH60	Synchronous update with VIN register, unit mV		
CH61~CH64	Reserved		

6.5 Parameter setting of vibrating wire sensor*

The value of EX_METH is controlled by the dial switch. When the dial switch is 0xF(15), the value of EX_METH can be modified by communication protocol or button.

Please refer to the above "2.3 parameter modification" for the parameter modification

steps through the dial code switch.

The instructions to modify parameters through MODBUS or AABB communication protocol are as follows:

Instructions described	MODBUS	AABB
Modified excitation method is 0	01 06 00 11 00 00 D9 CF	AA BB 01 91 00 00 F7
modified excitation method is 1	01 06 00 11 00 01 18 0F	AA BB 01 91 00 01 F8
modified excitation method is 2	01 06 00 11 00 02 58 0E	AA BB 01 91 00 02 F9
modified excitation method is 3	01 06 00 11 00 03 99 CE	AA BB 01 91 00 03 FA
modified excitation method is 4	01 06 00 11 00 04 D8 0C	AA BB 01 91 00 04 FB
modified excitation method is 5	01 06 00 11 00 05 19 CC	AA BB 01 91 00 05 FC
modified excitation method is 6	01 06 00 11 00 06 59 CD	AA BB 01 91 00 06 FD
modified excitation method is 7	01 06 00 11 00 07 98 0D	AA BB 01 91 00 07 FE
modified excitation method is 8	01 06 00 11 00 08 D8 09	AA BB 01 91 00 08 FF
modified excitation method is 9	01 06 00 11 00 09 19 C9	AA BB 01 91 00 09 00
modified excitation method is 10	01 06 00 11 00 0A 59 C8	AA BB 01 91 00 0A 01
modified excitation method is 11	01 06 00 11 00 0B 98 08	AA BB 01 91 00 0B 02

The instructions to modify parameters through the \$string instruction are as follows:

\$SETP=17,X\r\n // X is the value of the excitation method(0~11)

6.6 Parameter setting of Temperature Sensor

VTN4XX has two temperature interfaces, one is a DS18B20 and NTC interface (called TEMP interface), and the other is an NTC interface Shared with ADC (called TEMPN interface). This section is only for the first.

Select different temperature sensors by setting the value of register TEMP_TYPE, TEMP_TYPE=0 means the temperature sensor is DS18B20, TEMP_TYPE=1~10 means the temperature sensor is a thermistor NTC, and the value (1~10) set is the nominal resistance value of the thermistor. When configured as NTC, the NTC key parameter B register NTC_B needs to be modified synchronously. The default value of NTC_B register is 3950.

Please refer to the above "2.3 parameter modification" for the parameter modification steps through the dial code switch.

Use the digital interface to send instructions to modify parameters, not listed here, please refer to "5 communication protocol".

6.7 Parameter setting of ADC

Each ADC channel has three configurable parameters: additive constant, multiplication constant and channel type code.

Channel type code: A calculation method that defines the final value of the ADC channel.

channel type code	
0	Disable this channel
1	Update to the CHXX register using the AD value
2	$CHXX = (AD + \text{additive constant}) * \text{multiplication constant}$
3	This channel is NTC, the value of CHXX is temperature
4~15	Function is not defined yet
The channel type code is written out of the factory and cannot be changed by the user	

Channel additive constant setting instruction

\$A16A=XXXXX,XXXXX,XXXXX,XXXXX\r\n XXXXX is additive constant of each channel

\$A12A=XXXXX,XXXXX,XXXXX,.....,XXXXX\r\n

Channel multiplication constant setting instruction

\$A16M=XXXXX,XXXXX,XXXXX,XXXXX\r\n XXXXX is multiplication constant of each channel

\$A12M=XXXXX,XXXXX,XXXXX,.....,XXXXX\r\n

The additive constant is a 16-bit signed integer with a range of -32768~+32767

The multiplication constant is a 16-bit signed integer with a range of -32768~+32767 and a unit of 0.0001, namely -3.2768~3.2767.

Note: when configured as NTC, the nominal resistances and B values are Shared with the parameters in the previous section.

Note: the ADC channel parameters can be viewed using the \$INFO instruction, as shown in "6.9 production information".


6.8 Factory parameter setting

Three types of system parameters are stored inside the device: user parameters, factory parameters and default parameters.

user parameters: Also known as "working parameters", it can be modified and saved, and automatically loaded every time it is powered up. Modification of parameters and operation logic of devices in the process of using devices refer to user parameters, and user parameters are the most frequently used parameter categories.

Factory parameters: Parameters stored in separate partitions. When the "restore factory parameters" instruction is received, the factory parameters are loaded and the user parameters are overwritten. In the process of device startup, if abnormal user parameters are detected, the device will automatically load the factory parameters and cover the user parameters. These parameters has been set by the manufacturer, it is not recommended to modify it (use with caution).

Default parameters: The default parameter is a set of fixed parameters, which can only ensure the communication of the device. The user cannot change the default parameters in any way. When factory parameters are restored, the default system parameters will be automatically loaded if communication parameters are found wrong, so that basic digital communication can be carried out.

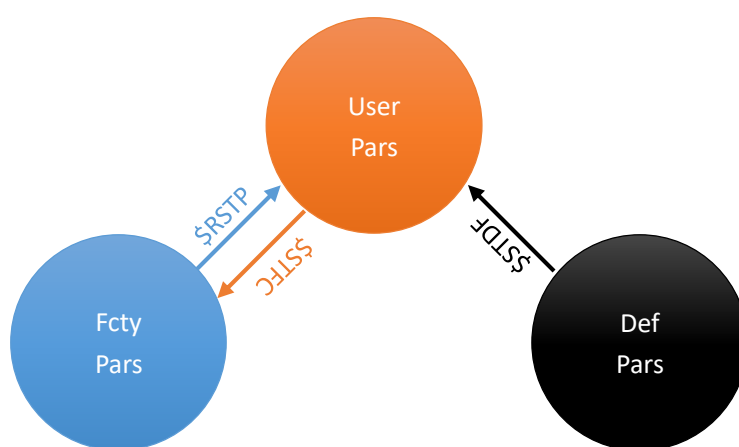

6.8.1 Restore factory parameters

Read the parameters from the factory parameter area and override the user parameters.

Hardware method:

During the startup process, keep the key "SETTING" to press down. At this point, the digital tube display (416 RSTP) **8.8.8 8.8.8.8** indicates that the parameter restored successfully.

Software method:

`$RSTP\r\n`

Return string after device response: `OK\r\n`

6.8.2 Modify factory parameters

Writes to the factory parameter area with the current user parameters. ***This operation***

is recommended for professional use, ordinary users do not easily modify factory parameters.

Software method:

\$STFC\r\n

Return string after device response: OK\r\n

Hardware method:

Press [SETTING] to perform the manual shutdown operation. When the digital tube is prompted to shut down (BYE) **8.8.8. 8.8.8.8.8.**, press [SWITCH] and release [SETTING]. The digital tube display (BYE STFC) **8.8.8. 8.8.8.0.0.** indicates that the current parameters have been successfully written into the factory parameter area.

6.8.3 Restore default parameters

Load the device's pre-set fixed parameters into user parameters. The instructions are as follows:

\$STDF\r\n

Return string after device response: OK\r\n

6.9 View production information

Command \$INFO\r\n to view production information and channel parameters.

MCODE=017CC993190000A4

M DATE: 1810

F DATE: 1811

VMINFO: 6XX4 4

ADC16INFO: 1 1 1 1

ADC12INFO: 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

ADC16ACONST: 1 2 3 4

ADC16MCONST: 10000 10000 10000 10000

ADC12ACONST: 0 0 0 0 0 0 0 0 0 0 0 0

ADC12MCONST: 10000 10000 10000 10000 10000 10000 10000 10000
10000 10000 10000 10000

M DATE: Manufacture Date, YYYY

F DATE: Factory Date, YYYY

VMINFO: VM Module model, number, number of channels

ADCXXINFO: The channel type code of ADCXX

ADCXXACONST: additive constant of ADCXX

ADCXXMCONST: multiplication constant of ADCXX, Unit: 1/10000

6.10 Data storage and Send

Automatic storage and Send

The automatic storage and automatic send is effective only when the device is in "automatic timing startup mode". In this mode, the register STORE_MIN is used to set how long the interval is for data saving, and the register SEND_MIN is used to set how long the interval is for data sending, both of which are in "minutes". Note that the value of the register SEND_MIN should be a multiple of STORE_MIN. For example, if STORE_MIN is set to 5 minutes, the value of SEND_MIN should be set to 5, 10, 15, 20, etc.

When VTN4XX is working in the automatic startup mode, the sensors data acquisition, storage and sending are automatically completed after each startup, and automatically shut down after completion of the work. According to the signal quality of the external sensor, the time of the whole working process will be different. Register SMIN_SEC is used to set the minimum time length of the working process after each automatic startup, Unit is "seconds". If the measurement of all channels cannot be completed after the time specified by SMIN_SEC, the device will save or send data after the time specified by SHDN_SEC and then shut down.

The data is sent prefixed with the string "\$CHDAT=", followed by the 64 channel value of the MODBUS protocol. Examples are as follows:

```
24 43 48 44 41 54 3D 01 03 80 34 72 00 00 00 00 00 00 00 00 00 00 35 AF 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 FF FF FF FF FF FF FF FF FF
FF FF FF FF FF FF 01 2F 01 5F 00 CE 00 F6 00 E7 01 0A 01 74 01 3B 01 5C 01 1C 01
4F 00 C4 01 06 01 4E 01 2A 01 4A FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF
01 18 (The above data are all in hexadecimal)
```

24 43 48 44 41 54 3D: ASCII code for the string "\$CHDAT="

The following content is MODBUS protocol 64 channel data

01 03 80: Register value output by device 01, total 128 bytes data (each 2 bytes represents a register)

34 72: Channel 1 value, 0x3472=13426, i.e.: 1342.6Hz

• • • • •

FF FF: Channel 64 value

01 18: CRC16

Manual data storage

Long press the [SWITCH] button, do not release the button when the digital tube displays the type SWITCH, and automatically store a piece of data after about 2 seconds. The digital tube displays "DAT SAVOK" **888.88888**, and the short buzzer indicates successful storage.

6.11 Export the stored data

The saved data can be downloaded using FileSYNC (a dedicated tool). See "FileSYNC user manual" for details.

6.12 Use DAC

VTN4XX has 16 channels of DAC output at most, the corresponding register is DAC01~DAC16 (address 64~79), the optional resolution is 8-bit, 10-bit and 12-bit, and the output voltage range is 0~4095mV. When the register DAC_PRG_EN is set to 1, the output voltage of each channel can be controlled by writing a millivolt unit voltage value to the register DACXX. When the register DAC_PRG_EN is set to 0, the output of the 16-channel DAC will automatically synchronize with the measured frequency value. The range of frequency value is set by the register DAC_FRE_TH. The upper limit of frequency value is defined by the high byte, and the lower limit of frequency is defined by the low byte. The units are all "100 Hz". **In particular, when DAC_FRE_TH=0x0000, 0~4095mV represents 0~4095Hz.**

VTN416 has 16 DAC channels and VTN432 has 8.

When the DAC is programmable, if only 0 or 4095 (output 0mV and 4095mV) is written to the DACXX register, the DAC channel is similar to the IO port and can be used to control the external device switch.

DAC Working register DAC PRG EN

Bit	symbol	value	description	Reset value
bit15:4		0	Reserved	0
bit3:1			DAC channel state at startup	0
		0	Hi-Z	
		1	Low, 0mV	
		2	Mid, 2048mV	
		3	High, 4096mV	
		4	The DACXX value saved last time	
bit0			DAC Programmable	0

		0	Unprogrammable, the output voltage represents the measured frequency value	
		1	Programmable, output voltage controlled by DACXX register	

7. Frequently Asked Questions

7.1 Device cannot be started

- (1) Check whether the power connection is correct, the input voltage range should be DC8~24V, and the load capacity should not be lower than 1A, and the positive and negative connections are correct. If the battery polarity is reversed, the equipment will be permanently damaged even if it is not switched on.
- (2) Check whether the power output connection load is too large, and restart it after disconnecting from the load when necessary.
- (3) In case of battery power supply, measure whether the battery voltage is too low while keeping the power button pressed.

7.2 Can't communication

- (1) Check whether the type of digital interface is correct. This device has two interfaces, RS232 and RS485, which share the terminals of digital interface. The upper computer should use the correct interface connection before normal communication.
- (2) Check whether the wiring sequence is correct.
- (3) The communication rate does not match. Try to use the button to restore the factory setting and then use the 9600bps rate for sending and receiving test.

7.3 Automatic mode failure

- (1) Try to start the machine manually and check whether the date and time are correct. If the date and time are not correct, replace the internal button battery.
- (2) Check whether the time register value setting related to the automatic mode is correct, and note the data unit.

7.4 frequency is 0

- (1) Not connected sensor or poor contact, or the sensor circuit is open circuit or short circuit, please disconnect sensor and terminal equipment of electric resistance sensor is normal after (most of the vibrating wire sensor coil resistance between 100 ~ 2 k Ω).
- (2) The Excitation method is not correct, please confirm again whether the equipment you use supports the current setting.
- (3) The Excitation voltage selection is too low or too high. The recommended Excitation voltage source is 5-10v. Please check whether the setting of the voltage dial switch is correct.

7.5 Frequency values are unstable

- (1) Adjust the excitation voltage dial switch and use higher excitation voltage source (e.g., 10V).
- (2) Adjust the dial code switch of the excitation method, and the fifth excitation method is recommended.
- (3) Use the slow measurement scheme (switch the second bit of the dial code switch in work mode to ON).

- (4) Shorten the length of the cable between the sensor and the device, or use a low resistivity cable with good shielding performance.
- (5) The equipment case or the power supply negative terminal must be reliably connected with the earth (ground wire).
- (6) Replace the linear power supply or use the battery power supply and disconnect any lines related to alternating current.
- (7) Disconnection all terminals except the vibrating wire sensor (other sensors, power output, digital interface, etc.); use the digital tube to view data; only connect single sensor if necessary.
- (8) Check whether there is strong electromagnetic interference and large ac equipment around the measuring system (such as power distribution frame, motor, large engineering equipment, radio, etc.).
- (9) The return signal of some sensors is very weak and vulnerable to the influence of the excitation signal of other channels, which will result in the data of this channel approaching that of other channels. It is recommended to change the sensor manufacturer or consult us to get the recommended sensor model.

Digital tube display content comparison table

VTN416

category	data description	register
F01~F16	Frequency value of vibration wire sensor channel 1~ channel 16	CH01~CH16
T01~T16	Temperature value of vibration wire sensor channel 1~ channel 16	CH17~CH32
A01~A16	12 bit resolution ADC value, channel 1~16	CH37~CH52
A17~A20	16 bit resolution ADC value, channel 1~4	CH53~CH56
A21		CH57
A22	Output voltage	CH58(VOUT)
A23	Excitation voltage	CH59(VSEN)
A24	Input voltage	CH60(VIN)

VTN432

category	data description	register
F01~F32	Frequency value of vibration wire sensor channel 1~ channel 32	CH01~CH32
T01~T04	Temperature value of vibration wire sensor channel 1,5,9,13	CH33~CH36
A01~A16	12 bit resolution ADC value, channel 1~16	CH37~CH52
A17~A20	16 bit resolution ADC value, channel 1~4	CH53~CH56
A21		CH57
A22	Output voltage	CH58(VOUT)
A23	Excitation voltage	CH59(VSEN)
A24	Input voltage	CH60(VIN)

Summary table of \$string instructions

Instruct	Functional description
\$GETP=AA\r\n	Read the register value, AA is the register address
\$SETP=AA,BB\r\n	Modify the register value. BB is the register value
\$INFO\r\n	Get Version Information
\$ERIF\r\n	

\$SAVE\r\n	Save User Parameters
\$REST\r\n	Restart
\$STDN\r\n	Shutdown
\$RSTP\r\n	Load Factory
\$STFC\r\n	Write Factory(used with caution)
\$STDF\r\n	Load Default
\$A16A=XXXXX,XXXXX,XXXXX,XXXXX\r\n	Set ADC16 additive constant
\$A16M=XXXXX,XXXXX,XXXXX,XXXXX\r\n	Set ADC16 multiplication constant
\$A12A=XXXXX,XXXXX,XXXXX,.....,XXXXX\r\n	Set ADC12 additive constant ^①
\$A12M=XXXXX,XXXXX,XXXXX,.....,XXXXX\r\n	Set ADC12 multiplication constant ^①
\$CHDAT=(133 byte)	Active upload of 64 channel data
Note ^① : ADC12 has 16 channels and requires 16 sets of parameters	

Summary table of @string instructions

Instruct	Functional description
@SETDT:YYYY/MM/DD HH:mm:ss\r\n	Set the clock value
@STTN=NUM\r\n	Set transparent transmission, 0 is impervious, 1~4 corresponds to vibrating wire module 1~4
@ENDOS	Enter DOS mode to operate internal files
@EXDOS	Exit DOS mode

Summary table of DOS instructions

Instruct	Functional description
FORMAT\r\n	Format internal storage
DIR1	
DIR2	
TYPE	Prints the contents of the file
MD	Create a new directory
NF	Create a new file
DF	Delete file
UP	Upload files to the device
DN	Download files from the device
This instruction set is valid only if the device is in DOS mode	

HEBEI WINCOM TECHNOLOGY CO., LTD

Address: CHUANGYE BUILDING YANJIAO DEVELOPMENT
ZONE LANGFANG CITY HEBEI PROVINCE CHINA

Technical support: +86 0316-3093523

Website: www.winkooo.com

MAIL: info@geo-ins.com info@geo-explorer.cn