



AAAA LCD Clock Demo User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, PIC³² logo, rPIC and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.


FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Omniscient Code Generation, PICC, PICC-18, PICDEM, PICDEM.net, PICKit, PICtail, REAL ICE, rLAB, Select Mode, Total Endurance, TSHARC, UniWinDriver, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2010, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

ISBN: 978-1-60932-601-2

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949:2002 ==

Table of Contents

Preface	5
Chapter 1. Introduction	
Chapter 2. Operating Instructions	
2.1 LCD Layout	10
2.2 Initial Power Up	10
2.3 Setting Time and Formats	11
2.4 Additional Information	11
Chapter 3. Bill of Materials	
Chapter 4. Optional Features	
4.1 Programming Port	16
4.2 The Piezo Buzzer	16
4.3 Auto Power-down	16
4.4 Energizer AAAA (E96) Battery	17
Appendix A. Schematic Diagram	
Worldwide Sales and Service	20

AAAA LCD Clock Demo User's Guide

NOTES:

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXXA”, where “XXXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE on-line help. Select the Help menu, and then Topics to open a list of available on-line help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the AAAA LCD Clock Demo User's Guide. Items discussed in this chapter include:

- About this Guide
- Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Development Systems Customer Change Notification Service
- Customer Support
- Document Revision History

ABOUT THIS GUIDE

Document Layout

This document describes how to operate the AAAA Clock Demo Board and details on its features. The manual layout is as follows:

Chapter 1. Introduction – an overview of the AAAA Clock demo and its features

Chapter 2. Operating Instructions – how to set the time and other settings

Chapter 3. Bill of Materials – a brief description of the power supply

Chapter 4. Optional Features – a brief description of the capacitive sense

Appendix A. Schematic Diagram – schematics for the AAAA Clock Demonstration Board.

AAAA LCD Clock Demo User's Guide

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>PICDEM LCD 2 User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	A binary number	'b00100, 'b10
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
0xnnnn	A hexadecimal number where n is a hexadecimal digit	0xFFFF, 0x007A
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

RECOMMENDED READING

This user's guide describes how to use the AAAA Clock Demo. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

Readme Files

For the latest information on using other tools, read the tool-specific Readme files in the Readmes subdirectory of the MPLAB® IDE installation directory. The Readme files contain update information and known issues that may not be included in this user's guide.

The following documents are comprehensive references for the AAAA Clock Demo:

"Capacitive Touch Using Only an ADC (CVD)" AN1298

"Design Practices for Low-Power External Oscillators" AN1288

"PIC16F1933 Data Sheet"

"MCP9701A Data Sheet"

"MCP1624 Data Sheet"

"Energizer Data Sheet" (<http://data.energizer.com/PDFs/E96.pdf>)

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

AAAA LCD Clock Demo User's Guide

DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on Customer Change Notification and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers and other language tools. These include the MPLAB C18 and MPLAB C30 C compilers; MPASM™ and MPLAB ASM30 assemblers; MPLINK™ and MPLAB LINK30 object linkers; and MPLIB™ and MPLAB LIB30 object librarians.
- **Emulators** – The latest information on Microchip in-circuit emulators. This includes the MPLAB ICE 2000 and MPLAB ICE 4000.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debugger, MPLAB ICD 2.
- **MPLAB® IDE** – The latest information on Microchip MPLAB IDE, the Windows® Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB SIM simulator, MPLAB IDE Project Manager and general editing and debugging features.
- **Programmers** – The latest information on Microchip programmers. These include the MPLAB PM3 and PRO MATE® II device programmers and the PICSTART® Plus and PICKit™ development programmers.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://support.microchip.com>

DOCUMENT REVISION HISTORY

Revision A (October 2010)

- Original version of this document.

Chapter 1. Introduction

The AAAA LCD Clock Demo demonstrates how a PIC[®] microcontroller can run from a single AAAA 1.5V battery. An MCP1624 boost controller is used, which is capable of starting with an input voltage as low as 0.65V to boost a single AAAA battery up to 3.3 volts. Also included are capacitive sense buttons for configuring the clock, an MCP9701A analog temperature sensor, a custom LCD and the ability to measure the battery voltage. The design also has the option for an external buzzer and auto shut-down by means of additional components, but these are not part of the standard assembly.

The clock displays time, temperature and battery voltage. The PIC16F1933 uses the 32.768 KHz crystal to clock the internal timer, which then generates the interrupt that causes the device to wake from Sleep. This interrupt updates the time, runs the capacitive sensors and samples the voltage and temperature. While the microcontroller is awake, it runs using the internal 500 KHz oscillator, executing instructions quickly and allowing more time in Sleep.

Please note that this demo board is not intended to be an extreme low-power demonstration. Changes can be made to the hardware and source code that will improve the overall power consumption and extend the battery life. For example, utilizing low-power modes on the LCD drive, reducing the sample rate of the capacitive sensors until an initial touch is sensed, sampling temperature less often, optimizing code to run faster and sleep longer will reduce power consumption to extend battery life.

Pads for connection to a PICKit[™] 2 or PICKit 3 programmer have been included for users who wish to modify or write new firmware. The source code is available at <http://www.microchip.com/AAAA>.

The following features have not been implemented in the demo board, but are additional possible projects:

- Add an audible alarm using a Piezo buzzer and drive it using the PWM
- Implement auto power-down on the power supply
- Take the current demo source code and, while keeping the same functionality, reduce the current consumption as much as possible by only changing the code
- By using the auto power-down on the power supply, attempt to reduce the overall current consumption even more without changing the functionality

Some hints and tips are found later in this document.


Chapter 2. Operating Instructions

The following instructions are for version 1.04 of the firmware as shipped, which varies slightly from the instructions on the packaging.

2.1 LCD LAYOUT

The LCD has five different zones that we use. They are highlighted in the image below.

FIGURE 2-1: LCD ZONES

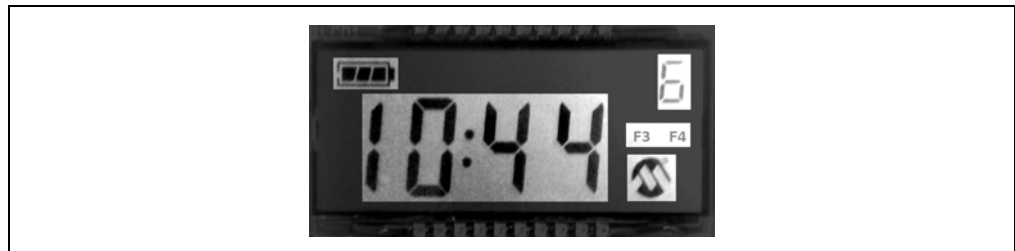

1. The battery level indicator is shown on the top left. When empty, the battery should be replaced.
2. The top right has a single seven-segment digit that is used to indicate AM *P*, PM *P*, Temperature *t*, Battery Voltage *b* or a 10 second count if in 24 hour mode.
3. On the right side, F3 and F4 are used to show when a capacitive button has been pushed.
4. In the right bottom corner is the Microchip Technology Inc. logo, which blinks every second.
5. The remainder of the display is a four-digit, seven-segment display which displays the time, temperature or battery voltage.


2.2 INITIAL POWER UP

On insertion of an AAAA battery (Energizer E96), the display will show the following:

1. Firmware version (1.04)
2. Temperature in Centigrade
3. Battery voltage in Volts
4. The time of 12:00A
5. This sequence then repeats from 2

2.3 SETTING TIME AND FORMATS

FIGURE 2-2: MODE AND SET BUTTONS

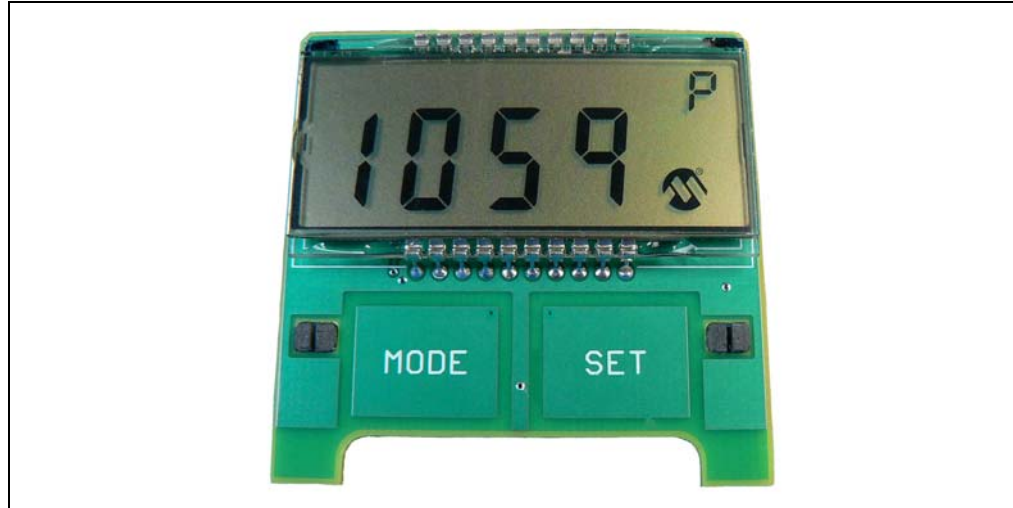

1. To enter the setup, press and hold the MODE button. After approximately 3 seconds, the hours should start flashing. Release the MODE button.
2. You can now set the hours by pressing and holding the SET button.
3. Press MODE until the minutes are flashing, then release the button.
4. You can now set the minutes by pressing and holding the SET button.
5. Press MODE until the **A**, **P** or **24** is flashing, then release the button.
6. You can now choose between AM, PM and 24 hour modes
7. Press MODE until the temperature is displayed and the **C** or **F** is flashing, then release the button.
8. You can now select between Centigrade **C** and Fahrenheit **F** by pressing SET.
9. Pressing MODE will now return you to the normal display.

2.4 ADDITIONAL INFORMATION

2.4.1 Boost Supply

The MCP1624 is a compact, high-efficiency, fixed frequency, synchronous step-up DC-DC converter. It provides an easy-to-use power supply solution for applications powered by one battery, making it ideal for this demonstration.

Low-voltage technology allows the regulator to start-up without high in-rush current or output voltage overshoot from a low 0.65V input. High efficiency is accomplished by integrating the low resistance N-Channel Boost switch and the synchronous P-Channel switch. All compensation and protection circuitry are integrated to minimize external components. For standby applications, the MCP1624 operates and consumes only 19 μ A while operating at no load. Output voltage is set by a small external resistor divider.

Testing the AAAA LCD Clock Demo shows that the power supply would keep running well below 0.65V. However, it is not recommended to run an alkaline battery at less than 0.6V since the battery could corrode and potentially leak. An optional circuit can be used to prevent current drain below 0.6V, which is described later in this user's guide.

For more information, please refer to the MCP1624 data sheet.

2.4.2 Capacitive Sense

This demonstration uses the Capacitive Voltage Divider (CVD) method for its simplicity of operation and relatively low power consumption.

The AAAA LCD Clock Demo board runs the capacitive touch as part of the interrupt routine every time the processor wakes from Sleep. In v1.04, this interrupt occurs eight times per second giving enough samples to have a responsive button press without consuming excessive amounts of power. Power consumption could be further reduced by sampling at a slower rate until the first user touch is made.


For detailed information about CVD, please refer to AN1298 “*Capacitive Touch Using Only an ADC (CVD)*”.

2.4.3 LCD

The PIC16LF1933 has a built-in multiplexed LCD peripheral driving the custom LCD used. There are modes available that allow lower power consumption. However, these are not used in this demo, so it is possible to reduce the power consumption further. Source code to do this may be provided at a later date.

The LCD layout is shown in Figure 2-3.

FIGURE 2-3: LCD LAYOUT

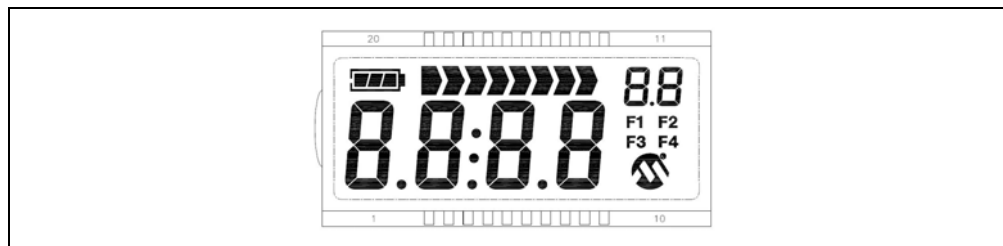

Because of the limited pins on the part used, the chevrons and one of the smaller 7-segment digits are not implemented, so only 48 out of the 64 segments are used in this demo.

The full data sheet for this display can be downloaded from <http://www.microchip.com/AAAA>.

This display is multiplexed in a 4x16 configuration with a total of 64 segments.

Driving conditions for the LCD are 1/4 Duty, 1/3 Bias, 3.3V.

The files `lcd.c` and `lcd.h` configure the LCD driver, map the individual LCD segments and create a basic character set that is used in the clock demo. This simple LCD driver can easily be modified for use with other LCD displays and PIC microcontrollers.

The LCD controller is configured to use the medium power reference, which gives a better contrast ratio and runs off the 32.768 KHz external oscillator. There are more power efficient modes that can be used, but the contrast on the LCD will be reduced.

One of the LCD controller options shares the time between the higher power reference and the low power reference. This reduces the average power consumption while still maintaining good contrast. For details, see the PIC16F1933 Data Sheet section 26.4.3 “*Automatic Power Mode Switching*”, since it explains in detail how this mode operates and can reduce power consumption.

2.4.4 Crystal Capacitor Calculation

The 32.768 KHz crystal for keeping time requires careful selection of the load capacitors. If the incorrect values are used, the time can be incorrect by minutes in a day. Using a 20 ppm crystal, the clock should be able to achieve an accuracy of +/- 1.73 seconds per day (10.51minutes/year) or better.


To achieve this, the following information is needed:

1. The expected total capacitance loading on the crystal, usually given in the crystal's data sheet.
2. The total capacitance of the PCB and Microcontroller on the oscillator pins.

On the AAAA Clock Demo board, an Abracon ABS13-32.768 KHz-T crystal was used. From its data sheet, this crystal requires an effective loading capacitance (CL) of 12.5 pF. Measuring the Capacitance of the OSC pins on the PIC16F1933 was around 1 pF. The stray capacitance of the PCB was measured around 1 pF.

The equivalent circuit is shown in Figure 2-4.

FIGURE 2-4: EQUIVALENT CIRCUIT

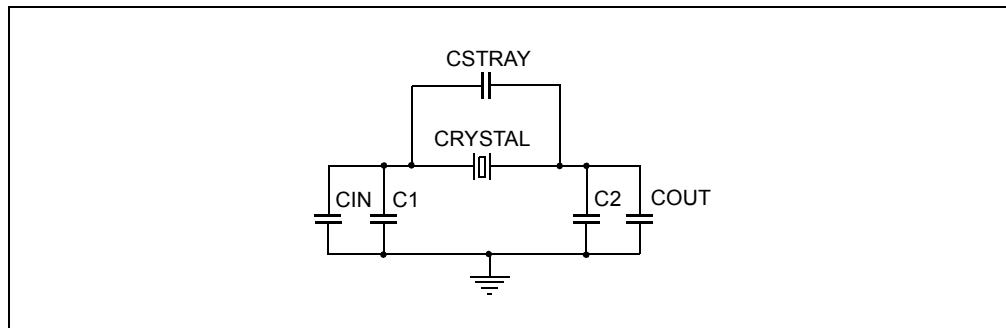

CL is the total load capacitance that the crystal sees. From this circuit, the calculation is as follows:

EQUATION 2-1:

$$CL = \frac{(CIN + C1) \times (COUT + C2)}{CIN + COUT + C1 + C2} + CSTRAY$$

We need to solve for C1 and C2. Since we want C1 = C2, and since CIN = COUT, we can use the following calculation:

EQUATION 2-2:

$$CL = \frac{(C1 + CIN) \times (C1 + CIN)}{(C1 + CIN) \times 2} + CSTRAY$$

$$CL - STRAY = \frac{C1 + CIN}{2}$$

$$C1 + CIN = (CL - CSTRAY) \times 2$$

$$C1 = ((CL - CSTRAY) \times 2) - CIN$$

$$C1 = ((12.5 - 1) \times 2) - 1$$

$$C1 = C2 = 22pF$$

This is a standard value capacitor which was then fitted to the board and tested over a 72 hour period. Compared to an accurate clock, the time shift over the 72 hours was less than 1 second, which is well within the 20 ppm specified for the crystal.

For more information, please read “*Design Practices for Low-Power External Oscillators*” (AN1288).

2.4.5 Temperature Sensor

An MCP9701A analog temperature sensor is used on this board. The default software only allows for temperatures greater than zero degrees Centigrade.

The 10-bit ADC is used with the 2.048V internal voltage reference. The MCP9701A uses 19.5 mV / °C and 0°C offset of 400 mV. To save power, the following sequence is performed:

1. Power up the MCP9701A and the internal 2.048V reference.
2. Delay to allow outputs to stabilize.
3. Sample the ADC.
4. Power down the MCP9701A.

Calculating the temperature is done as follows:

1. Take the 10-bit result and multiply it by two (left shift by one bit). The resulting value is now mV due to using the 2.048V reference.
2. Subtract 400 mV from the result.
3. Multiply by 10 since we are doing integer math only.
4. Divide by 195 (19.5 mV per °C x 10 = 195)
5. The result is now in °C (Tc)

To convert to °F (Tf), the standard formula is:

EQUATION 2-3:

$$T_f = (9 / 5) \times T_c + 32$$

Since $9/5 = 1.8$ and we are using integer math, the following calculation can be used:

EQUATION 2-4:

$$T_f = ((18 * T_c) / 10) + 32$$

The source code differs slightly because an additional x10 has been used after calculating °C. This was done to shift the resulting value one digit to the left so that **C** or **F** could be displayed to the right of the temperature.

Using an MCP9700 temperature sensor would have simplified the math, since it uses 10 mV/°C. Since the LSB is 2 mV, this gives 5 LSBs per °C. The MCP9701 uses 19.5 mV/°C, which gives close to 10 LSBs per °C. This is ideal if we want to display 1/10°C on the display.

Chapter 3. Bill of Materials

TABLE 3-1: BILL OF MATERIALS

Qty	Part	Value	Manufacturer	Manufacturer Part#	Digikey Part#
	CAPACITORS				
3	C1,C4,C9	0.1 μ F	Generic X7R		490-1524-2-ND
2	C2,C3	22 pF	Generic COG		445-1273-2-ND
1	C5	4.7 μ F	Generic Y5V		PCC2474TR-ND
1	C6	10 μ F	Generic Y5V		445-1593-2-ND
	RESISTORS				
1	R1	100K	Generic 5%		RMCF1/16100KJRTR-ND
1	R2	976K 1%	Generic 1%		311-976KHRCT-ND
1	R3	562K 1%	Generic 1%		311-562KHRTR-ND
1	R4	10K	Generic 5%		RMCF1/1610KJRTR-ND
2	R5,R8	4.7K	Generic 5%		RMCF1/164.7KJRTR-ND
1	R11	1K	Generic 5%		RMCF1/161KJRTR-ND
1	C8	0R	Populate C8 with 0R		RMCF1/160RTR-ND
	INDUCTORS				
1	L1	4.7 μ H	Murata	LQM21FN4R7M70L	490-4028-2-ND
	LCD				
1	LCD1	Custom	Focus Displays		
	SEMICONDUCTOR				
1	U1	PIC16LF1933	Microchip	PIC16LF1933-I/SO	
1	U2	MCP9701AT	Microchip	MCP9701AT-E/TT	
1	U3	MCP1624	Microchip	MCP1624T-I/CHY	
	CRYSTAL				
1	Y2	32.768 KHz	ABRACON	ABS13-32.768KHZ-T	535-9165-2-ND
	MISC				
1	B2	AAAA	Energizer	UM6	
1	AAAA Battery	AAAA Battery	Energizer	E96	

Chapter 4. Optional Features

Appendix A. “Schematic Diagram” shows additional options to program the clock, add a piezo buzzer and an auto power-down option.

4.1 PROGRAMMING PORT

The programming port is based on the PICkit™ 3 header. To program the AAAA Clock demo, there are two options for connecting to the board using a PICkit 3.

Option 1: Using a 0.1"x6-way pin header, insert it into the PICkit 3 and hold onto the surface mount pads to program the part. The plastic stand will need to be removed to do this, and it is not 100% reliable. Pogo pins would improve reliability.

Option 2: Solder a 0.1"x6-way pin header to the surface mount pads. Use hot glue to secure the header to the board to prevent it from breaking tracks. This method is more difficult to implement, but is more reliable if you intend to connect to the programmer on a regular basis. The hot glue is a crucial step; if it is missed, the pads will delaminate and break connection after a few uses.

4.2 THE PIEZO BUZZER

Connector J4 can be used to connect a disc type piezo buzzer to add an audible alarm option. This pin is connected to RC6, which is the PWM output channel P3A. It is possible to add code to set the time for an alarm, and then use PWM to drive the Piezo to generate a suitable alarm sound.

Please note that if the auto power-down circuit is used, you cannot add the piezo buzzer.

4.3 AUTO POWER-DOWN

Since running a single cell battery below 0.6V risks battery leakage, there is an option to add a self-booting and auto power-down circuit. Remove the resistor in C8's position and then add C8, R9 and R10, as shown in the schematic in Appendix A.

The theory behind this circuit is that when a fresh battery is inserted, the voltage at pin 2 on the MCP1624 spikes to 1.5V because of capacitor C8. The MCP1624 then starts and remains running long enough to pull the EN pin high through R9. The PIC16LF1933 checks the battery on a regular basis and, if the voltage on the battery drops below a specific threshold (for example 0.63V), it then pulls the EN pin on the MCP1624 Low, which turns the power supply off.

It may also be possible to use this feature to shut off the regulator for short periods of time to let the output voltage drift down a little, then re-enable it to boost back up. This may help reduce the overall power consumption by reducing the average quiescent current used by the regulator itself. This would only be effective when the circuitry the regulator is supplying is in its minimum current draw mode. Larger capacitance on the 3.3V rail may extend the time that the regulator can be off.

Please note that none of the above has been tested.

4.4 ENERGIZER AAAA (E96) BATTERY

The AAAA Clock Demo uses the Energizer E96, which is smaller than an AAA.

At the time of document publication, the AAAA was a very new release of battery which is ideal for products that need a smaller diameter, for example laser pointers, LED flashlights and other pen size devices.


- Max Diameter: 8.3 mm (0.327")
- Max Length: 42.5 mm (1.673")
- Typical Weight: 6.5 grams (0.2 oz)
- Nominal Capacity: 600 mA/H @ 10 mA (continuous discharge down to 0.8V)

For the Energizer E96 data sheet, refer to: <http://data.energizer.com/PDFs/E96.pdf>.

Note: Energizer and other marks are trademarks of Energizer and are used with permission. Energizer is not affiliated with Microchip Technology Inc.

Appendix A. Schematic Diagram

FIGURE A-1: SCHEMATICS

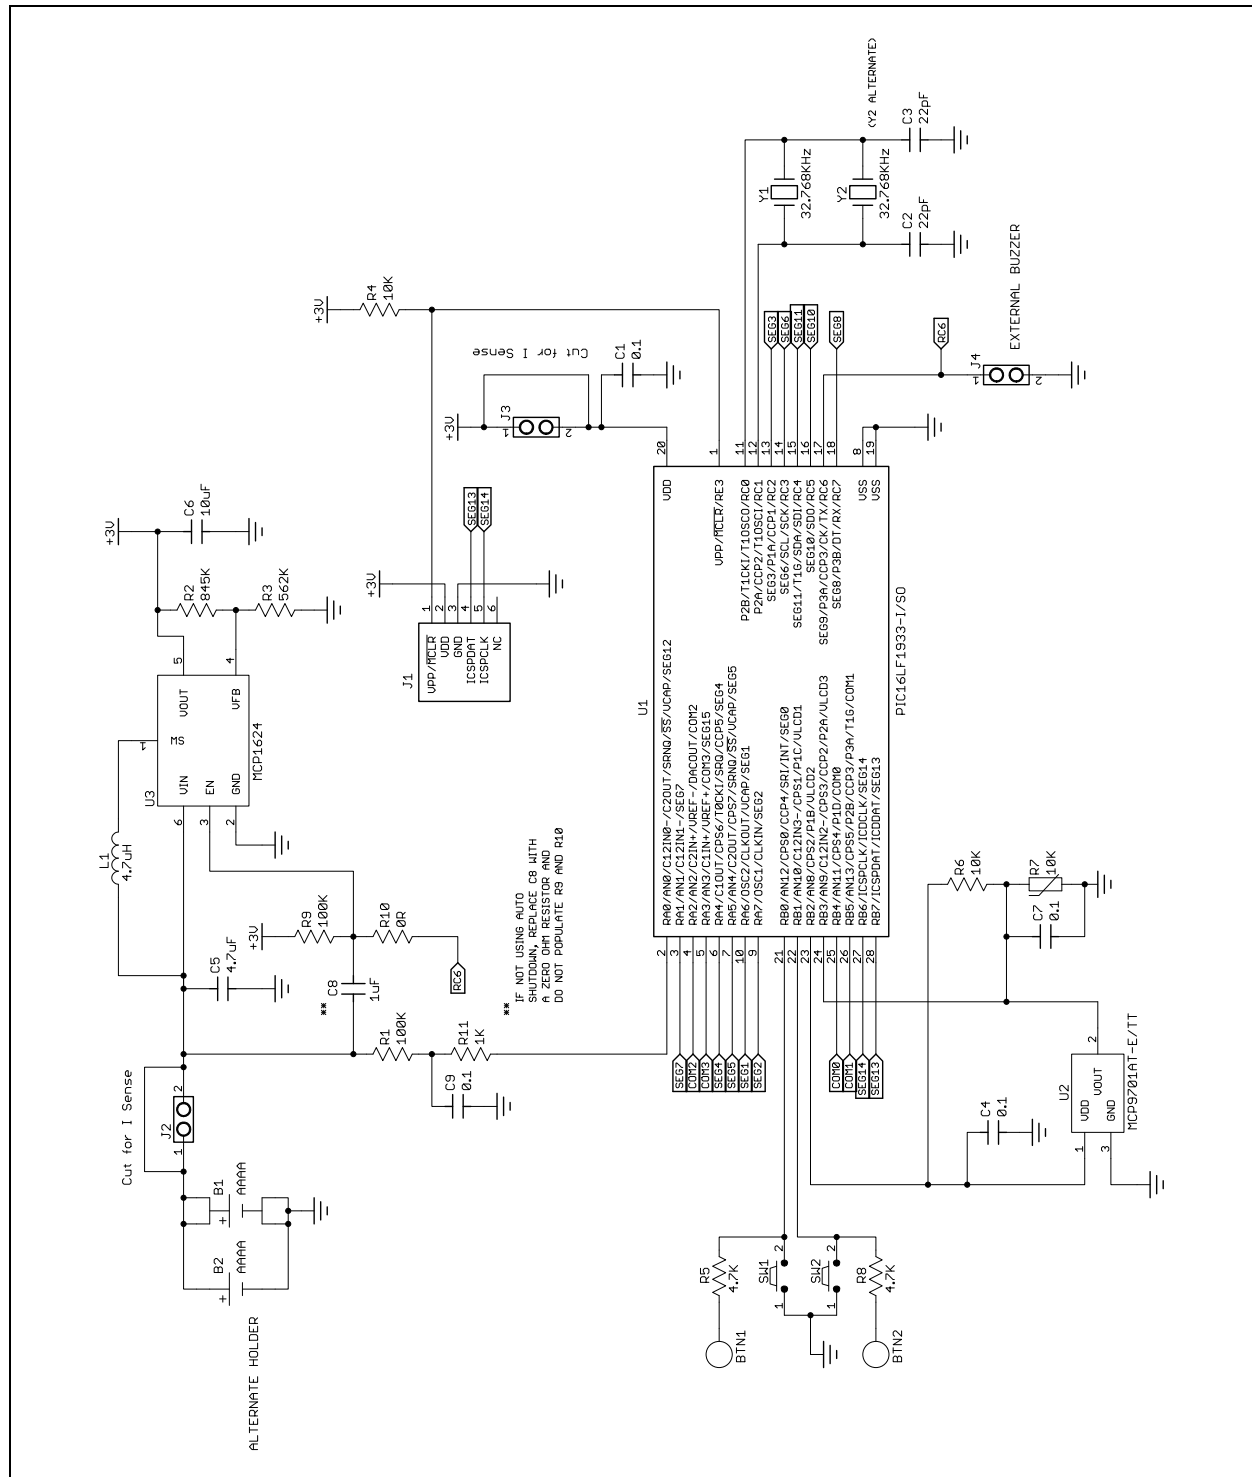

Index

Numerics

32.768 KHz Crystal	9
500 KHz Oscillator	9

A

AAAA Battery	10
--------------------	----

B

Battery Level Indicator	10
Battery Voltage	10

C

Customer Notification Service	8
Customer Support	8

D

Documentation	
Conventions	6
Layout	5

E

Energizer E96	10
---------------------	----

I

Internet Address	7
------------------------	---

L

LCD Layout	10
lcd.c	12
lcd.h	12

M

Microchip Internet Web Site	7
Microchip Technology Inc. logo	10
MODE Button	11
Multiplexed LCD	12

P

PIC16F1933 Data Sheet	12
PICKit™ 2	9
PICKit™ 3	9
Piezo Buzzer	9

R

Reading, Recommended	7
----------------------------	---

S

SET Button	11
------------------	----

T

Temperature	10
Centigrade	11
Fahrenheit	11

W

WWW Address	7
-------------------	---

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://support.microchip.com>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland
Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Kokomo
Kokomo, IN
Tel: 765-864-8360
Fax: 765-864-8387

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

Santa Clara
Santa Clara, CA
Tel: 408-961-6444
Fax: 408-961-6445

Toronto
Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office
Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8528-2100
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Chongqing
Tel: 86-23-8980-9588
Fax: 86-23-8980-9500

China - Hong Kong SAR
Tel: 852-2401-1200
Fax: 852-2401-3431

China - Nanjing
Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8203-2660
Fax: 86-755-8203-1760

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian
Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Xiamen
Tel: 86-592-2388138
Fax: 86-592-2388130

China - Zhuhai
Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444
Fax: 91-80-3090-4123

India - New Delhi
Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune
Tel: 91-20-2566-1512
Fax: 91-20-2566-1513

Japan - Yokohama
Tel: 81-45-471- 6166
Fax: 81-45-471-6122

Korea - Daegu
Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur
Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang
Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-6578-300
Fax: 886-3-6578-370

Taiwan - Kaohsiung
Tel: 886-7-213-7830
Fax: 886-7-330-9305

Taiwan - Taipei
Tel: 886-2-2500-6610
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham
Tel: 44-118-921-5869
Fax: 44-118-921-5820