



# Main power stage to switch the heating current for the JUT


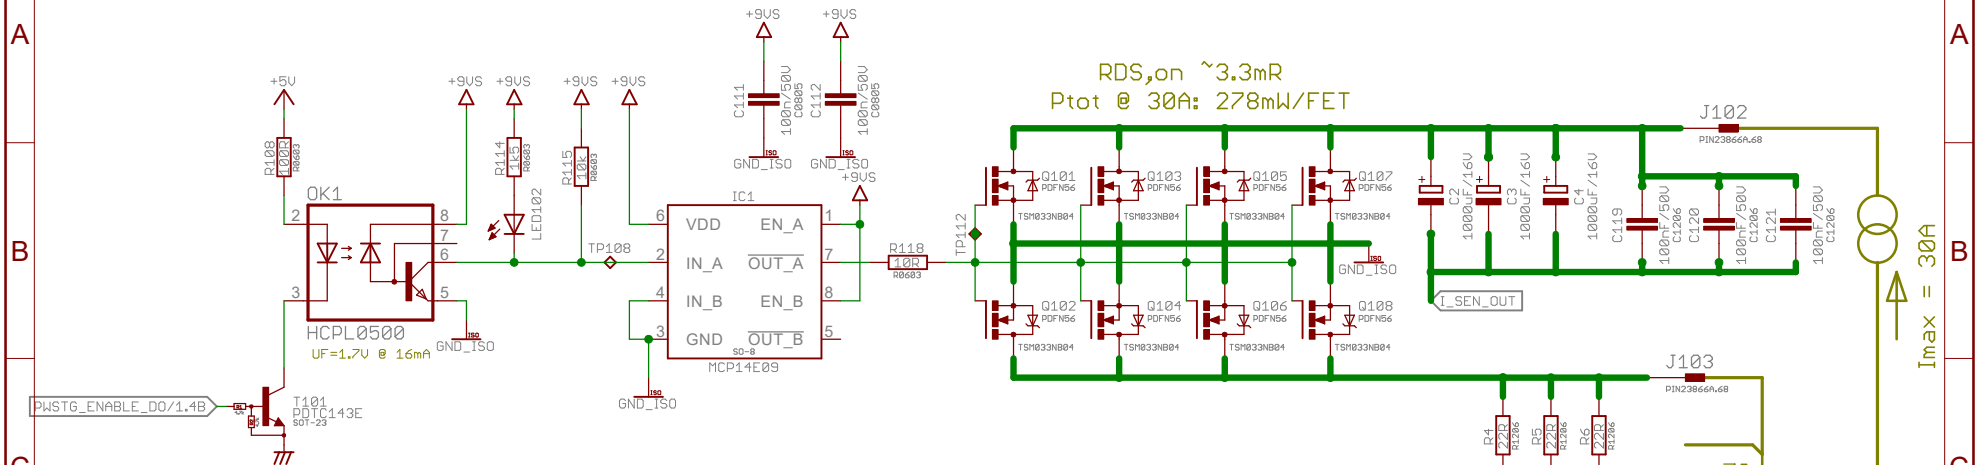


## Heating current measurement

Replaceable with INA128

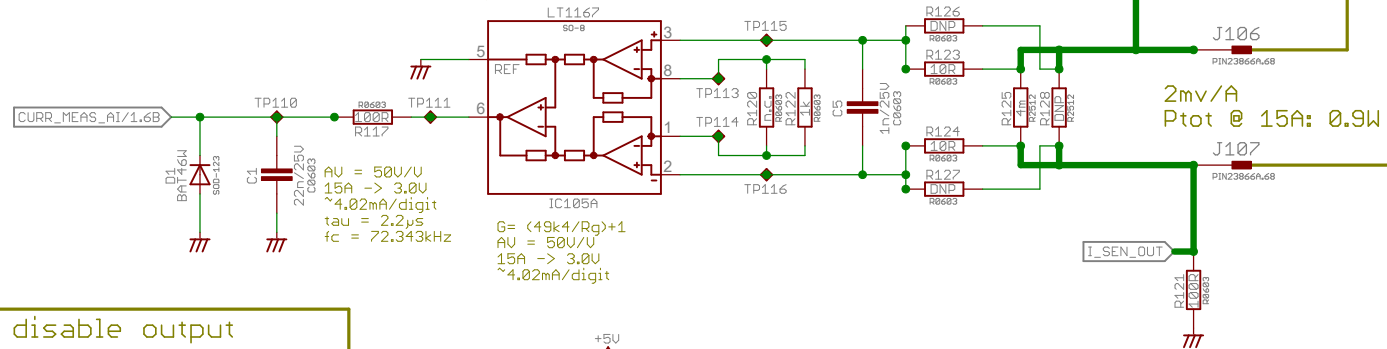

## External power supply disable output

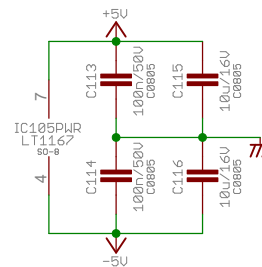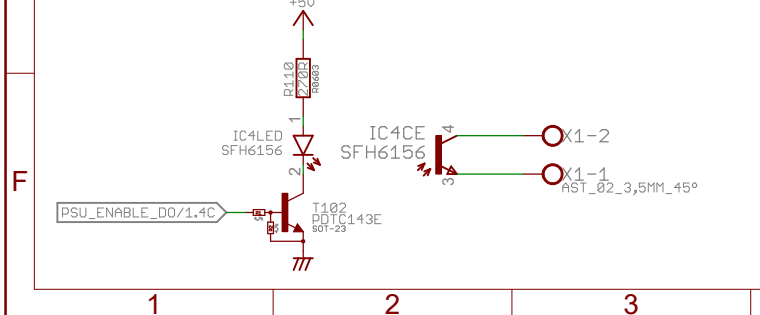

uTTA_V2.2_Power	
Version: 2.2	
06.05.2025 21:39:15	
Sheet: 2/3	

# Isolated power supply circuit for the gate driver

