

# **Virtuoso Width Spacing Patterns User Guide**

**Product Version IC23.1  
November 2023**

© 2023 Cadence Design Systems, Inc  
Printed in the United States of America.

Cadence Design Systems, Inc. (Cadence), 2655 Seely Ave., San Jose, CA 95134, USA.

Open SystemC, Open SystemC Initiative, OSCI, SystemC, and SystemC Initiative are trademarks or registered trademarks of Open SystemC Initiative, Inc. in the United States and other countries and are used with permission.

**Trademarks:** Trademarks and service marks of Cadence Design Systems, Inc. contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 800.862.4522. All other trademarks are the property of their respective holders.

**Restricted Permission:** This publication is protected by copyright law and international treaties and contains trade secrets and proprietary information owned by Cadence. Unauthorized reproduction or distribution of this publication, or any portion of it, may result in civil and criminal penalties. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. Unless otherwise agreed to by Cadence in writing, this statement grants Cadence customers permission to print one (1) hard copy of this publication subject to the following conditions:

1. The publication may be used only in accordance with a written agreement between Cadence and its customer.
2. The publication may not be modified in any way.
3. Any authorized copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement.
4. The information contained in this document cannot be used in the development of like products or software, whether for internal or external use, and shall not be used for the benefit of any other party, whether or not for consideration.

**Disclaimer:** Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

Cadence is committed to using respectful language in our code and communications. We are also active in the removal and replacement of inappropriate language from existing content. This product documentation may however contain material that is no longer considered appropriate but still reflects long-standing industry terminology. Such content will be addressed at a time when the related software can be updated without end-user impact.

**Restricted Rights:** Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor

# Contents

## 1

<b><u>Width Spacing Patterns</u></b> .....	1
<u>Pattern Flips</u> .....	4
<u>Identification of the First Period</u> .....	5
<u>Repeat Modes</u> .....	6
<u>Width Spacing Pattern Support in Virtuoso Tools</u> .....	10

## 2

<b><u>Width Spacing Pattern Definition</u></b> .....	11
<u>Technology Database WSPs</u> .....	11
<u>Creating a User-Defined Purpose for WSPs</u> .....	12
<u>Display Resource File</u> .....	13
<u>Design WSPs</u> .....	14
<u>Creating and Modifying WSPs</u> .....	14
<u>Importing WSPs from Another Design</u> .....	28
<u>Generation of WSPs from Existing Shapes</u> .....	29
<u>Generate of WSPs from Existing Shapes</u> .....	30
<u>Specifying WSP Options</u> .....	33
<u>SKILL Functions for Width Spacing Patterns</u> .....	39
<u>Technology Database SKILL Functions</u> .....	39
<u>Design Database SKILL Functions</u> .....	39

## 3

<b><u>Track Pattern Assistant</u></b> .....	41
<u>Launching the Track Pattern Assistant</u> .....	41
<u>Track Pattern Assistant Scope</u> .....	43
<u>Track Pattern Assistant Toolbar</u> .....	44
<u>Track Pattern Table</u> .....	45
<u>Expanding and Collapsing the Layers</u> .....	47
<u>Enabling and Disabling WSSPDefs</u> .....	49

# Virtuoso Width Spacing Patterns User Guide

---

<u>Showing and Hiding WSSPDefs and SPDefs</u>	50
<u>Specifying the Active Patterns</u>	50
<u>Showing WSSPDef Information</u>	51
<u>Controlling the Visibility of Track Patterns</u>	53
<u>Track Pattern Assistant Filters</u>	55
<u>Saving and Restoring Filter Settings</u>	61
<u>Choosing the Track Pattern Display Mode</u>	63
<u>Committing Active WSSPDefs as Global Defs</u>	66
<u>Creating Width Spacing Pattern Regions</u>	67
<u>Editing Width Spacing Pattern Regions</u>	74
<u>Stretching Width Spacing Pattern Regions</u>	77
<u>Choosing the Global Grid Settings</u>	79
<u>Pulling Up Patterns from a Subcell</u>	82
<u>Pushing down WSSPDefs in EIP</u>	83
<u>Pushing down WSSPDefs in Hierarchy</u>	85
<u>Launching the WSP Manager</u>	87
<u>Launching the WSP Active Checker</u>	89
<u>Track Pattern Assistant Customization</u>	91
<u>Creation and Editing of Related Snap Pattern Group</u>	93
<u>Generating Shapes for Layout Verification</u>	95

## A

<u>WSP Forms Reference</u>	99
<u>Create/Edit Related Snap Pattern Group</u>	100
<u>Shape Generator</u>	101
<u>WSP Manager</u>	102
<u>Edit</u>	102
<u>Import</u>	105
<u>Derive</u>	107
<u>Options</u>	109

## B

<u>WSP Environment Variables</u>	113
<u>activateNewPatterns</u>	116
<u>activeSetsVisibility</u>	117

## Virtuoso Width Spacing Patterns User Guide

---

<u>autoClearOnLayerChange</u>	118
<u>autoComputePeriod</u>	119
<u>defNameEditing</u>	120
<u>enableAutoPushdown</u>	121
<u>firstTrackOffset</u>	122
<u>hoff</u>	123
<u>ignoreBlockagesForInit</u>	124
<u>ignoreLOPins</u>	125
<u>importCellName</u>	126
<u>importLibName</u>	127
<u>importViewName</u>	128
<u>includeBlockages</u>	129
<u>patternRepeat</u>	130
<u>period</u>	131
<u>periodOffset</u>	132
<u>pushdownLayers</u>	133
<u>removePriorPushdown</u>	134
<u>renameDefs</u>	135
<u>repeatOffset</u>	136
<u>shiftColor</u>	137
<u>showFCG</u>	138
<u>showFCGGUI</u>	139
<u>smartSnap</u>	140
<u>spacingMode</u>	141
<u>syncActive</u>	142
<u>tpaAutoRegionNameFromRSP</u>	143
<u>tpaFilterFile</u>	144
<u>tpaShowDisabled</u>	145
<u>tpaShowWSPBtn</u>	146
<u>trackColor</u>	147
<u>trackColumns</u>	148
<u>useAspectRatio</u>	149
<u>usePaletteVisibility</u>	150
<u>verbose</u>	151
<u>wspTemplateCell</u>	152
<u>wspTemplateFile</u>	153

# Virtuoso Width Spacing Patterns User Guide


---

## Width Spacing Patterns

Width Spacing Patterns (WSPs) are used in advanced node designs to create tracks with specific widths and spacing for correct-by-construction track-based routing. Virtuoso® Layout Suite L now supports Width Spacing Patterns (WSP) to create tracks in the layout. WSPs are an advanced form of snap pattern definitions (SPDef) that define the tracks on which shapes can be placed.

WSPs are defined in the technology database and the design using the following layer rules:

- `widthSpacingPattern` (WSP) defines tracks as width and spacing pairs. Each width spacing pattern can span one or more periods. The first track of a pattern is anchored to the global period grid using an offset, as shown in the following figure. Width spacing patterns are not associated with a specific metal layer or direction.

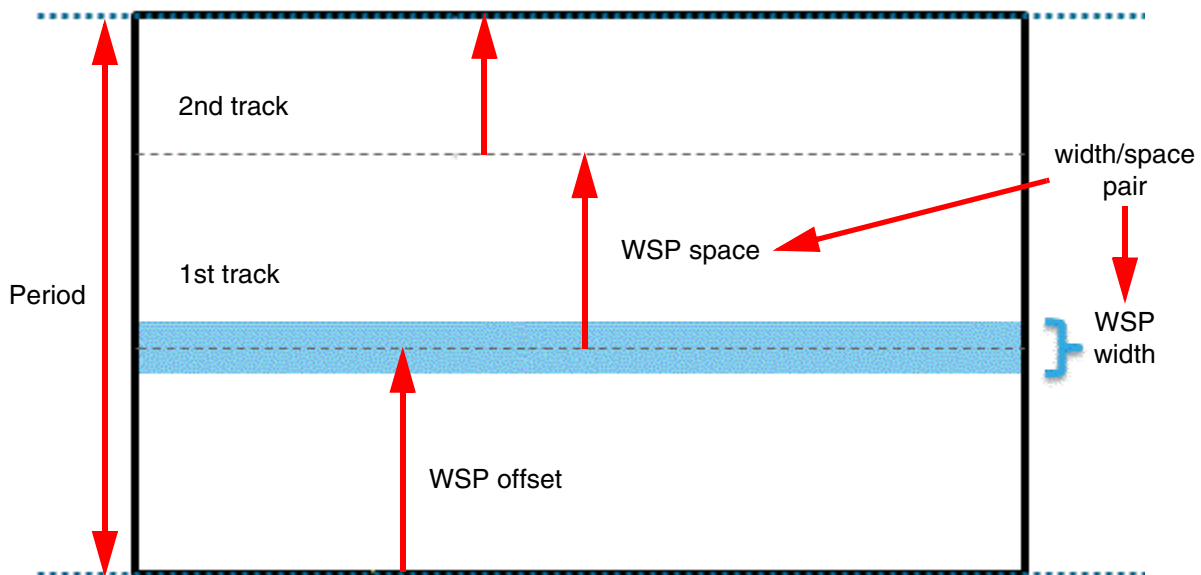

- `widthSpacingPatternGroups` are collections of width spacing patterns.
- `widthSpacingSnapPatternDefs` (WSSPDef) define the following:
  - The *layer-purpose pair* for the WSSPDef.


## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Patterns

- ❑ The *period* (the spacing between coarse-grain period tracks).
- ❑ The *direction* in which the period spacing is applied.
- ❑ The *offset* (distance of the nearest period track to the anchor reference).
- ❑ The *snapping layers* to which the WSSPDef applies.
- ❑ The allowed `widthSpacingPatterns` and `widthSpacingPatternGroups` for the WSSPDef.
- ❑ The default active pattern (WSP).

WSSPDefs can apply to a global grid and/or to a *pattern region*.

The following figure illustrates the WSSPDef attributes. In this case, the track pattern spacing is vertical, so the tracks are horizontal. There is no SnapBoundary or PR boundary, so periods are offset from the origin axis. A pattern region layer-purpose pair and a snapping layer are defined. The polygon on the specified layer-purpose pair specifies the region to which the WSSPDef applies.

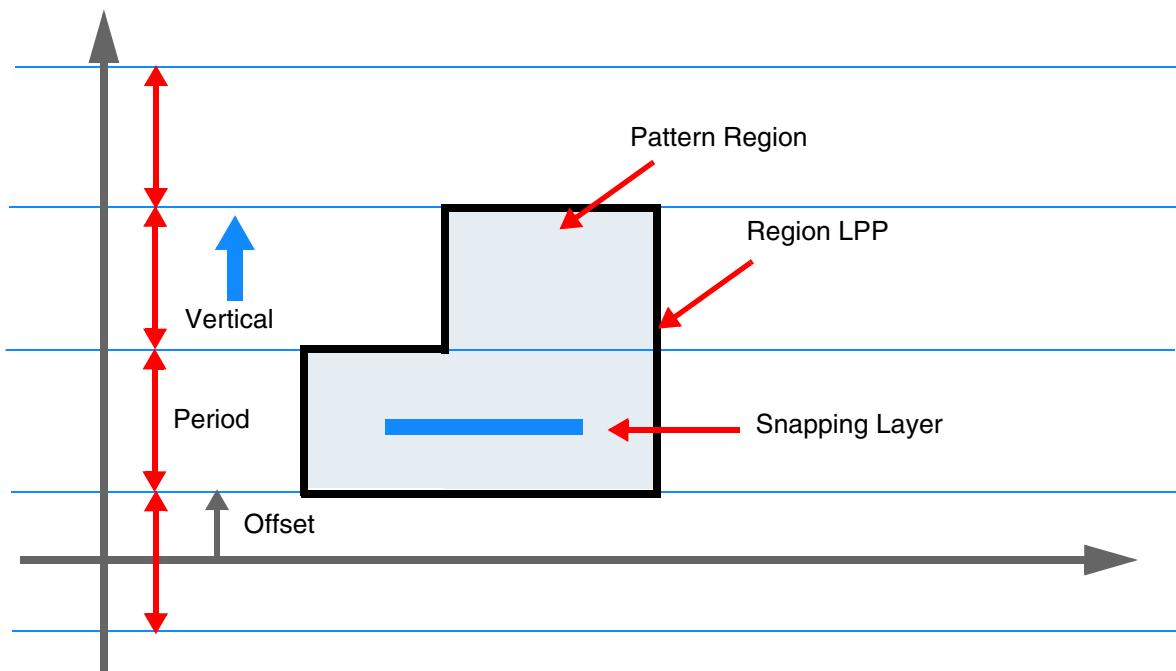

In the following figure, the red dotted lines indicate the global period grid in each stripe of the period grid. This grid is anchored to the PR boundary through the offset for the WSSPDef.




# Virtuoso Width Spacing Patterns User Guide

## Width Spacing Patterns

The green dotted lines indicate the first track in each period. The global default active pattern is applied outside pattern regions, and its offset specifies the distance from the period grid line to the first wiring track.

Finally, a region shape is used to apply a non-default active pattern within an area of the cellview. The active pattern specified on the region overrides the global default active pattern and its offset specifies the location of the first track.

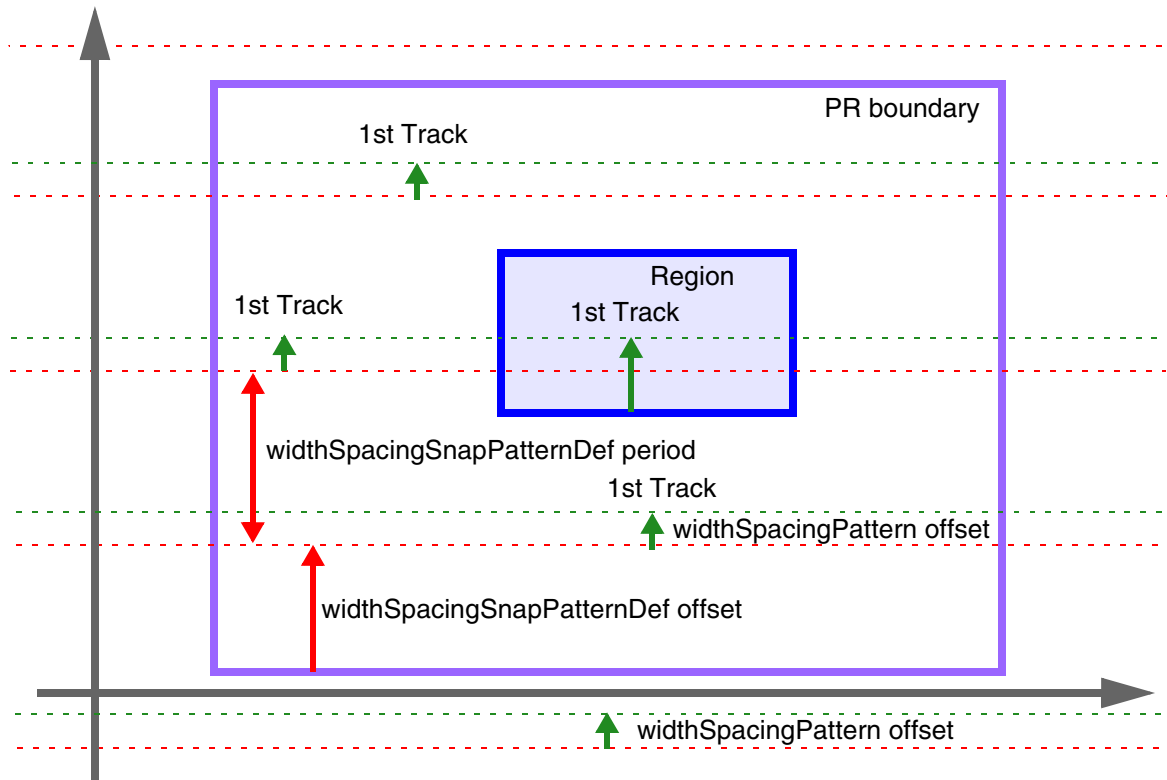

- `relatedSnapPatterns` are predefined groupings of SPDefs and WSSPDefs. `relatedSnapPatterns` create groups of regions in the layout.

### ***Related Topics***

[Pattern Flips](#)


[Width Spacing Pattern Support in Virtuoso Tools](#)

## Pattern Flips

In a standard WSP grid, the pattern offset is always relative to the bottom-left edge of a region and the pattern tracks are applied toward the top-right edge of the region. This is also referred to as *stepping*.

A common placement strategy flips instances in alternating rows so that they can share a common power or ground rail. This strategy requires that routing tracks for these instances be flipped in the same manner.

The following example has three rows of devices. The devices in the middle row are flipped. This allows the middle row to share the power rail with the row below it and share the ground rail with the row above it.

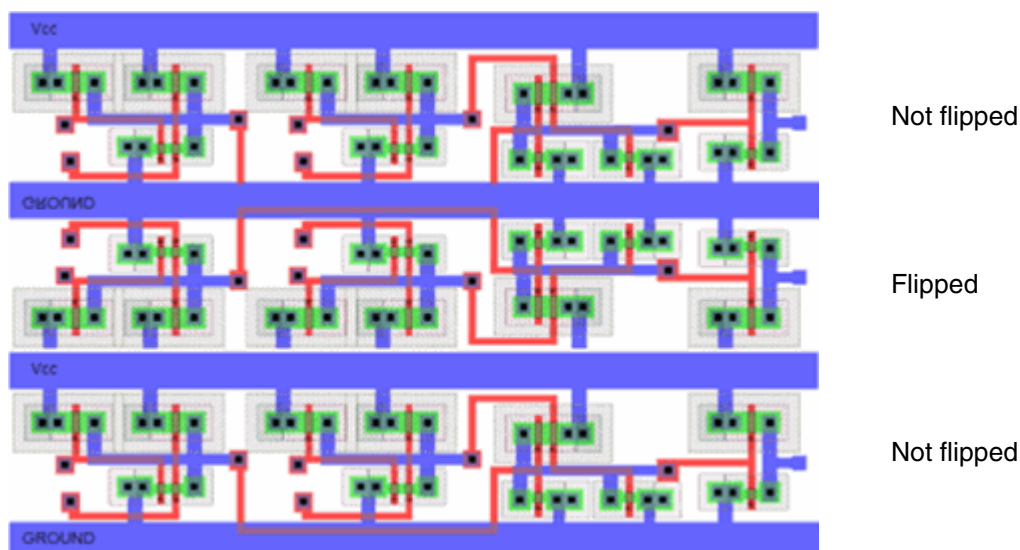


A common usage model is to define the WSP period to match the row height. If this model was used for the example above, the figure would represent three periods. The tracks in the middle region must be flipped so that they align with the existing wires in the instance master.

Pattern flipping can be applied to the global grid or to a pattern region and is set with reference to the *first period*. The first period can be flipped or not flipped, as specified by the *repeat mode*, and all other periods alternate accordingly.

## Identification of the First Period

- For global grids, the first period is anchored by the offset reference. Usually this is the period closest to the bottom-left edge of the PR boundary or origin axis, unless the global grid offset is larger than one period.
- Consider a cellview with a vertical global grid (horizontal tracks) where the offset reference is "boundary" and the global grid offset is 10nm. The bottom edge of the first period is 10nm above the bottom edge of the PR boundary.

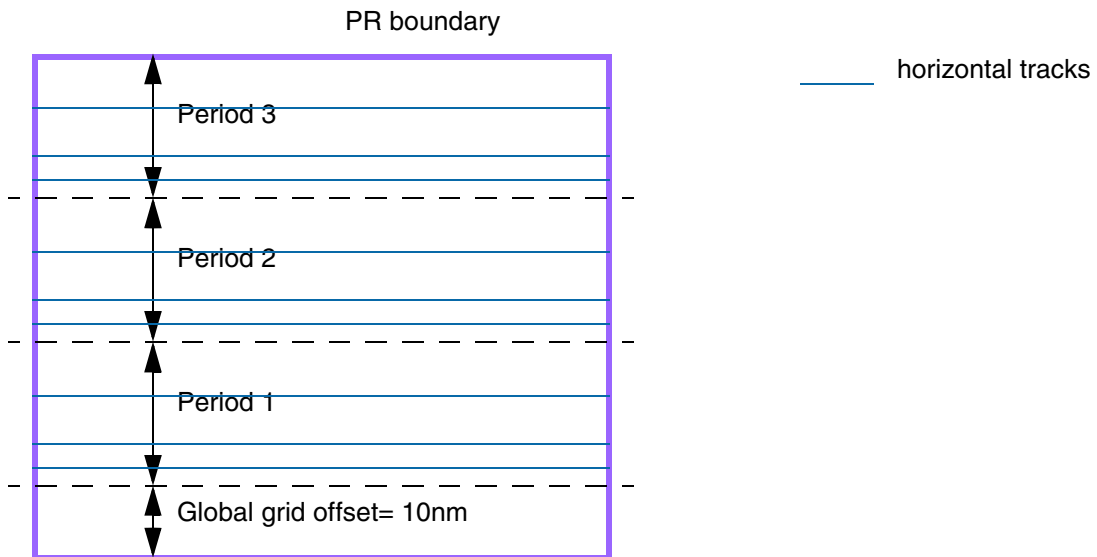


# Virtuoso Width Spacing Patterns User Guide

## Width Spacing Patterns

---

- ❑ Consider a cellview with its global grid offset reference set to "origin" and a horizontal grid direction (vertical tracks). If the global grid offset is zero, then the period with the left edge at the vertical origin axis is the first period.

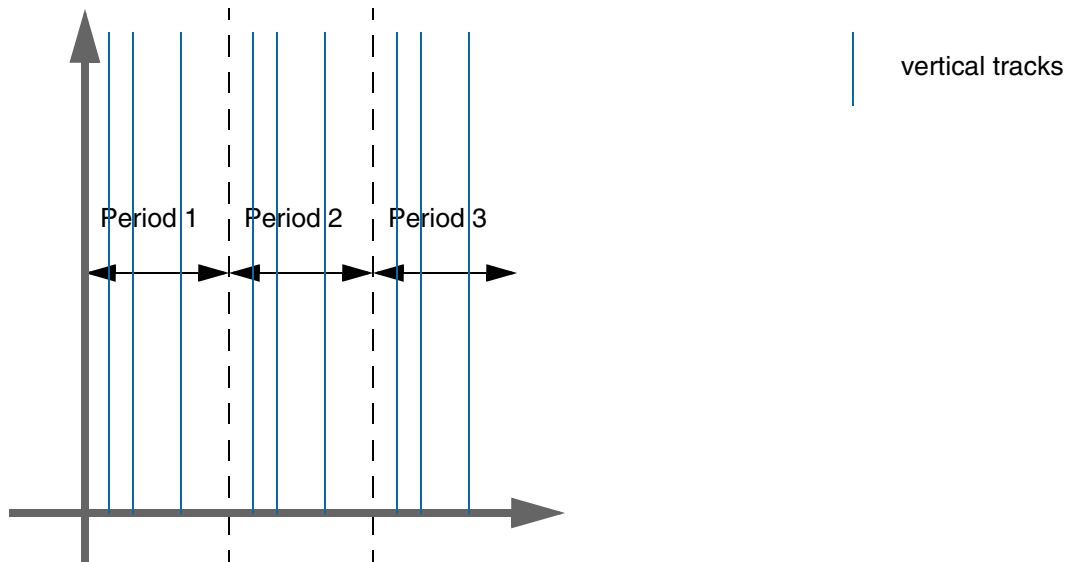

- For regions, the first period is at the bottom-left of the region shape.

## Repeat Modes

Repeat modes determine how a pattern is interpreted for use in adjacent periods. The allowed and default repeat modes are specified on a [widthSpacingPattern](#); the repeat mode can be specified in the layout on global grids and pattern regions.

The allowed repeat mode attribute ('allowedRepeatMode') indicates how a pattern is allowed to repeat when a region stretches across more than one period, and the default repeat mode attribute ('defaultRepeatMode') is used to initialize the repeat mode on regions and global grids when they are first created.

In a layout:

- A repeat mode can be defined at the following two levels:
  - ❑ On a region: A region has a set of allowed patterns and a repeat mode can be specified for each pattern.
  - ❑ On a global grid: Each global grid also has a set of allowed patterns and a repeat mode can be specified for each pattern. A global grid in a cellview is identified by a global `widthSpacingSnapPatternDef`.


## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Patterns

- A repeat mode defined on a global grid or a pattern region can be of one of the following types:
  - *Stepped*: The pattern is the same in every period.
  - *Flipped Odd*: The pattern is flipped in every other period. The first period is not flipped.
  - *Flipped Even*: The pattern is flipped in every other period. The first period is flipped.

A repeat mode is not inherited and does not have a look-up precedence. As a result, when the repeat mode of the global grid changes, the regions on that global grid are not affected. However, when a region with a pattern for which the repeat mode is set is copied, the repeat mode is also copied to the newly created region.

The following example illustrates how a pattern in a region appears when "even" and "odd" flipped repeat modes are applied to the pattern:

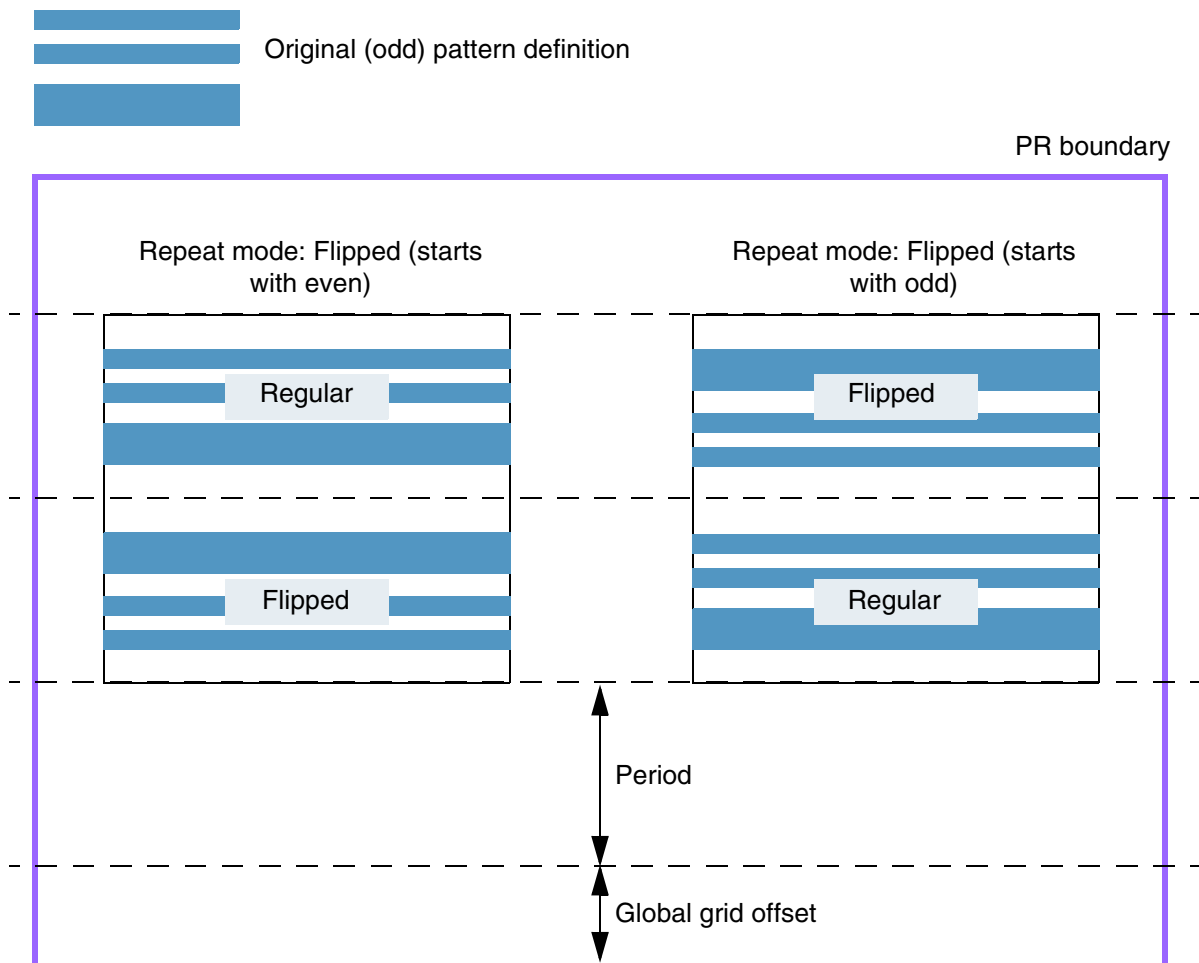

# Virtuoso Width Spacing Patterns User Guide


## Width Spacing Patterns

When a starting color is assigned to the pattern, the starting color always applies to the bottom-most track in the pattern, regardless of whether the pattern is flipped or not. This ensures tracks have alternating colors across the cellview.

### Patterns with Zero Offset

When a pattern has zero offset, the centerline of the first track is located on the period line or the bottom edge of the region. In a legal pattern, the height of the pattern needs to be compatible with the period and the height of the region. Therefore, a track at offset zero is also present on the top period line or the top region boundary. When a pattern with zero offset is flipped, the top and bottom tracks overlap and are merged into one single track.

The following example illustrates how a pattern with zero offset appears when "even" and "odd" flipped repeat modes are applied to the pattern in a region:

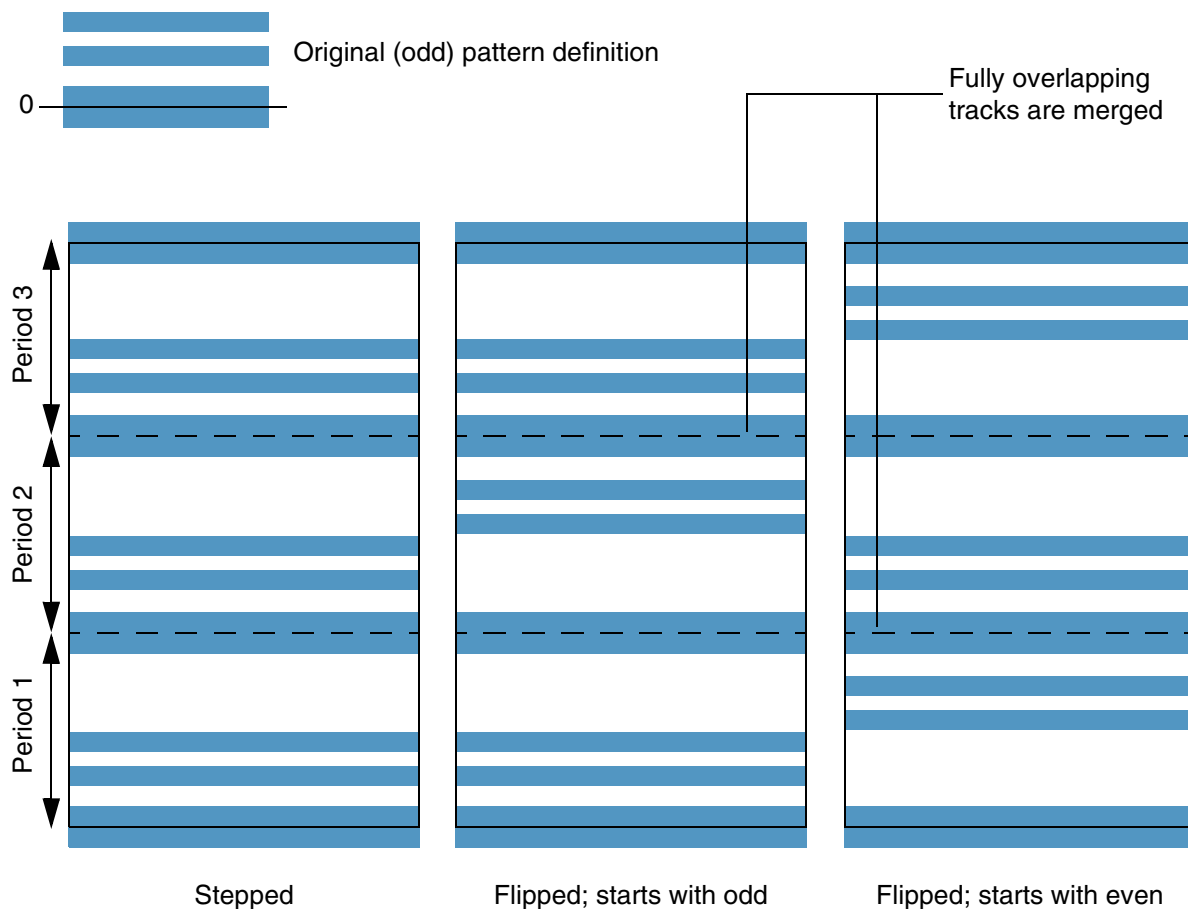

# Virtuoso Width Spacing Patterns User Guide

## Width Spacing Patterns

---

### ***Related Topics***

[Width Spacing Pattern Support in Virtuoso Tools](#)

[Width Spacing Patterns](#)

## Width Spacing Pattern Support in Virtuoso Tools

Once you have created tracks in the layout using WSPs, you can do the following:

- Snap wires to tracks, as described in [Width Spacing Pattern Support in Wire Editing](#).
- Snap objects to tracks during layout editing, as described in [Width Spacing Patterns Support in Layout Editing](#).
- Check shapes in the layout for WSP conformance using the Batch Checker, as described in [WSP Active Checking](#), or using the `wspCheckActive` SKILL function.

You can use the environment variable, `WSP_ACTIVECHECK_WIRETYPESALLOWED_ON_NOWIRETYPETRACK`, to allow the shapes on the specified wire type, `wireTypeName`, to be created on WSP tracks with no wire type. This ensures that no violations are reported in WSP checker. Use the following command:

```
setenv WSP_ACTIVECHECK_WIRETYPESALLOWED_ON_NOWIRETYPETRACK  
"wireTypeName"
```

- Use the Annotation Browser to view and manage the WSP Active check violation markers that are created by the Batch Checker or running the `wspCheckActive` SKILL function, as described in [Finding Violations](#).
- Translate your design to Stream format, as described [Design Translation Using XStream Translator](#). If you use WSP regions, your layer mapping file must have a `WSPRegionType` qualifier set, as described in [Layer Mapping Support for Region Shapes](#).

### ***Related Topics***

[Pattern Flips](#)

[Width Spacing Patterns](#)



---

## Width Spacing Pattern Definition

---

Width spacing patterns can be defined in the technology library or in the design database.

- **Technology library WSPs:** WSPs in a technology library can be used by all cellviews that are attached to that library.
- **Design WSPs:** Design WSPs can be used only in the current design, and can be created and modified.

### *Related Topics*

[Technology Database WSPs](#)

## Technology Database WSPs

WSPs that are defined in a technology database can be used by all cellviews that are attached to that library.

To create width spacing patterns in the technology file, you set the following:

- Definition of pattern-related constructs

Construct	Required/ Optional
<a href="#">widthSpacingPattern</a>	Required
<a href="#">widthSpacingPatternGroups</a>	Optional
<a href="#">widthSpacingSnapPatternDefs</a>	Required
<a href="#">relatedSnapPatterns</a>	Optional

- Placement and Alignment constraints

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

These constraints enable WSSPDefs to be used in the global grid for layout editing. The library-wide default set of enabled global WSSPDefs can be specified by a `snapGridVertical` and/or `snapGridHorizontal` constraint in the ASCII technology file foundry constraint group. These constraints can be overridden in the design to enable WSSPDefs other than the global defaults, as described in [Specifying the Active Patterns](#).

## Creating a User-Defined Purpose for WSPs

Multiple WSPs can be assigned to a WSSPDef and multiple WSSPDefs can be on a single layer-purpose pair. If you use WSP Manager to create design WSPs, they are assigned to the `track` purpose for the layer. If you define WSPs in a technology file or using SKILL functions, you can assign them to a predefined purpose (Cadence recommends using the `track` purpose) or a user-defined purpose. To define a purpose to be used for WSPs, see [To define a purpose for WSPs, you must provide the following in the technology file:](#).

To define a purpose for WSPs, you must provide the following in the technology file:

- A user-defined purpose for the grid type

The parent purpose for the user-defined purpose must be "annotation". For example,

```
techPurposes (
; ( PurposeName # [abbrev] [parent purpose] )
...
( type1 30000 RG1 'parent "annotation" )
...
)
```

- Layer-purpose pair using the specified user-defined purpose

For example,

```
techLayerPurposePriorities (
; ( LayerName Purpose )
...
( Metal2 type1 )
...
)
```

Using this example, if `Metal2:type1` is specified as the layer-purpose pair for a width spacing snap pattern definition, then the rectangles and polygons on `Metal2:type1` identify regions for the definition.

- Display packet and attributes associated with the layer-purpose pair

For example,

```
techDisplays (
; ( LayerName Purpose Packet Vis Sel Con2ChgLy DrgEnbl Valid )
...
( Metal2 type1 m2t1 t t nil t t )
...
)
```

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

To display WSPs on the user-defined purpose, you must set the display resource file, as described in [Display Resource File](#).

### Display Resource File

To display width spacing patterns, the `display.drf` file can include definitions for the outline, full, track, and period display packets. For example,

```
drDefinePacket (
; ( Display PacketName           Stipple LineStyle Fill      Outline FillStyle)
  ( display m2WSP                blank  dash      red        red outline)
  ( display m2WSP_snapPatternFull x      solid    redWeak   red outlineStipple)
  ( display m2WSP_snapPatternTracks x      longDash red        red outline)
  ( display m2WSP_snapPatternPeriod x longDashThick red        red outline)
)
...
);
```

In this example, `m2WSP` is the display packet associated with the layer-purpose pair (`"Metal2" "type1"`), which was used to create the `WSSPDef` for one of the `Metal2` grids.

### ***Related Topics***

[Design WSPs](#)

## Design WSPs

Design WSPs can be used only in the current design, and can be created and modified.

## Creating and Modifying WSPs

Use WSP Manager to create and modify width spacing patterns, import width spacing patterns from other designs, and generate width spacing patterns from existing shapes in the layout canvas.

1. To use WSP Manager, choose *Create – P&R Objects – Width Spacing Patterns*.

The WSP Manager form is displayed.

WSP Manager

Edit

Import

Derive

Options

Pattern

Name

Layer

Track Direction

☐ Auto-Compute Period

0

Period Offset

0

► Period Repeat

Allowed Repeat Mode: **any**; Default Repeat Mode: **none**; Repeat Offset: **all**

Tracks

0 tracks

Track Color

Alternate

First Track Offset

0

Width	Spacing	Repeat	Wire Type	Color	Display Packet

Create

View

Clear

Delete

Close

Help

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

#### 2. Click a tab for the action that you want:

☐ *Edit*

Follow the procedure in [Creating and Modifying WSPs](#).

☐ *Import*

Follow the procedure in [Importing WSPs from Another Design](#).

☐ *Derive*

Follow the procedure in [Generation of WSPs from Existing Shapes](#).

☐ *Options*

Follow the procedure in [Specifying WSP Options](#).



#### Video

For a video overview of this feature, see [Introducing WSP Manager](#) on Cadence Online Support.

In the *Edit* page of WSP Manager, you can create and modify width spacing patterns.

#### 1. Specify a new pattern name in the *Name* field or choose a pattern from the drop-down list box.

Pattern names in the drop-down list have one of the following formats:

*pattern\_name*

The existing pattern is in the design database.

*pattern\_name* ( *techlib\_name* )

The existing pattern is in the specified technology library.

*pattern\_name* \* ( *techlib\_name* )

The existing pattern is in the specified technology library and is used in multiple layers or by multiple WSSPDefs.

*pattern\_name* ! ( *techlib\_name* )


The existing pattern is in the specified technology library but is not assigned to any WSSPDef.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

Examples of these formats are shown below:

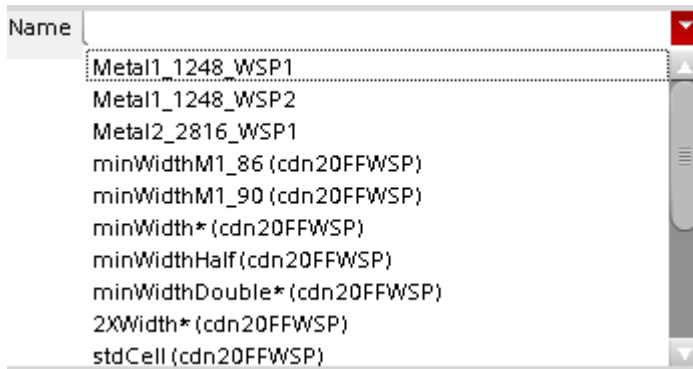

***If you modify a pattern that is in the technology library, the pattern is copied to the design database. Cadence strongly recommends that you change the name of the pattern to avoid conflicts with the technology library pattern.***



When naming patterns, Cadence recommends that the name begin with the name of the layer.

2. Choose a *Layer* from the drop-down list box.

Layers in the list are specified in the `validLayers` constraint of the `wireConstraintGroup` constraint group. This constraint group is specified by the `wireConstraintGroup` environment variable that can be set in the *Wire Editing* section of the Layout Editor Options form.

The drop-down list box also shows the preferred routing direction graphically, if set, for each of the layers.

3. Choose a *Track Direction* from the drop-down list box.

**Note:** When you set the *Layer*, the *Track Direction* is automatically set to the preferred routing direction for the selected layer.

4. Specify the *Period*, in microns, or choose *Auto-Compute* to compute the period based on the track setup and show the computed value in the *Period* field. When *Auto-Compute* is enabled, the *Period* is not editable. Valid *Period* values are greater than 0 microns.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

5. Specify the *Period Offset* (global pattern offset), in microns, that is the distance from the start of the pattern to the PR boundary, if it exists, or to the origin in the axis specified by the *Track Direction*.
6. Specify the tracks for the pattern, as described in [Specifying WSP Tracks](#).
7. Specify the period repeat options, as described in [Specifying WSP Period Repeat Options](#).
8. Click *View* to preview the width spacing pattern tracks without saving them in the design database. This button is active only when all the required fields have been set.
9. When all the required fields have been set and you are satisfied with the pattern, click *Create* (for a new pattern) or *Update* (for an existing pattern) to save it in the design database.

**Note:** There must be at least one track in the *Tracks* table and the pattern height (sum of widths and spacings in the *Tracks* table) cannot be greater than the *Period*.

The CIW shows the name of the WSSPDef that is created for the pattern. If this is the first pattern for the layer, it will be the active pattern and can be viewed in the canvas. If it is not the first pattern for the layer, then you need the WSSPDef and WSP names to activate the pattern using the *Track Pattern* assistant.

There are additional buttons at the bottom of the WSP Manager *Edit* page to do the following:

■ **Clear**

Clears the fields and the track setup, and resets the fields to values stored in the environment variables for the form, listed in [wspTemplateFile](#).

■ **Delete**

Removes the current pattern from the design database.



**Video**

For a video overview of this feature, see [WSP Manager: Creating and Modifying WSPs](#) on Cadence Online Support.

## Customizing the WSP Manager Tracks Table Columns

To change the width of a column:

- ➡ Click the column separator in the header row and move it left or right.

To reorder the columns:

## Virtuoso Width Spacing Patterns User Guide


### Width Spacing Pattern Definition

---

- ➔ Grab the column name in the header row and move it left or right to the new position.

To add or remove columns:

- ➔ Right-click in the table header row, then choose the columns to display from the list.

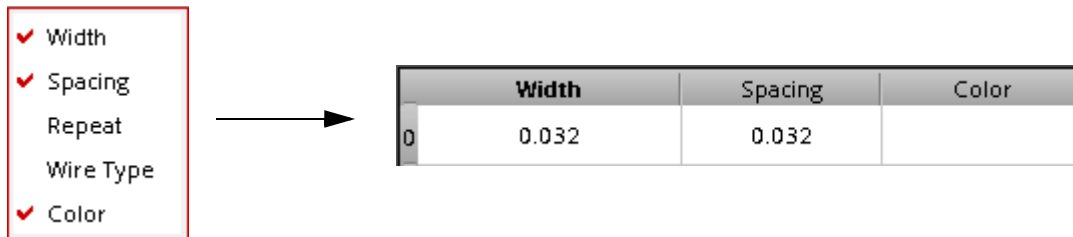


### Saving a Modified WSP

If you modify a WSP in the *Edit* page of WSP Manager, the *Save Changes* dialog box appears if you do not choose *Update* before attempting to do one of the following:

- Switch to another window.
- Switch to another existing WSP from the *Name* field drop-down list box.

You can choose to save the modified WSP, discard the changes, or cancel.

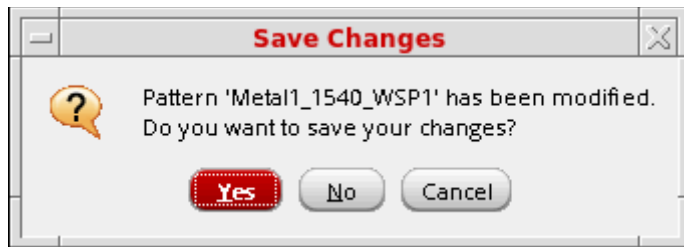

**Note:** If you modify a WSP, then type a new pattern name in the *Name* field before saving the changes, the current settings are used for the new pattern and the *Save Changes* dialog box will not be shown.

### Specifying WSP Tracks

The *Tracks* group at the bottom of the WSP Manager *Edit* page lets you configure the tracks for the pattern, and choose options for the track color, spacing mode, and first track offset.



# Virtuoso Width Spacing Patterns User Guide

## Width Spacing Pattern Definition


### Important

You should always specify the *Layer* before adding the tracks so that the correct width and spacing defaults can be used.

#### 1. Choose the *Track Color* from the drop-down list box:

##### ☐ *Alternate*

Track colors are automatically assigned based on the color of the first colored track. The color of each subsequent track in the pattern is shifted from the previous track, as shown below.

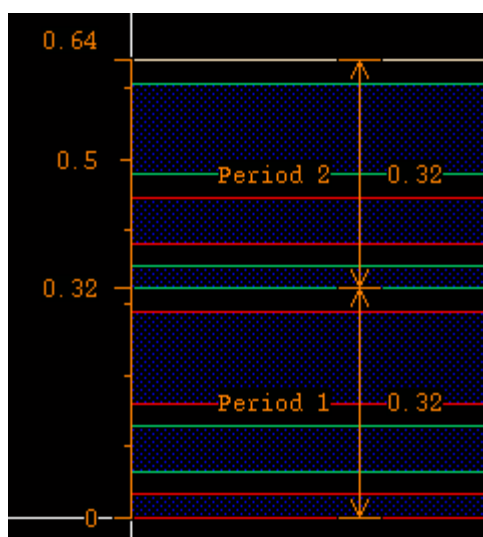

Track Color: Alternate

Spacing Mode: Edge to Edge

First Track Offset: 0

	Width	Spacing	Color
0	0.032	0.032	Mask1
1	0.064	0.032	Mask2
2	0.128	0.032	Mask1

In *Alternate* mode, only the first track color is selectable. Track colors alternate in the pattern and through period repeats.

In the *Tracks* table, only the color of the first track can be assigned to one of the mask colors defined for the layer. The color of each subsequent track will be shifted, including through period repeats.

##### ☐ *As Specified*

The color for each track in the pattern must be assigned directly in the *Tracks* table and will be the same for period repeats.

##### ☐ *As Specified with Period Shift*


## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

The color for each track in the pattern must be assigned directly in the *Tracks* table. When a pattern is repeated, the color will be shifted for the next period.

	Width	Spacing	Color
0	0.032	0.032	Mask2
1	0.032	0.032	
2	0.064	0.032	Mask1

The same pattern is used for both of the examples below.

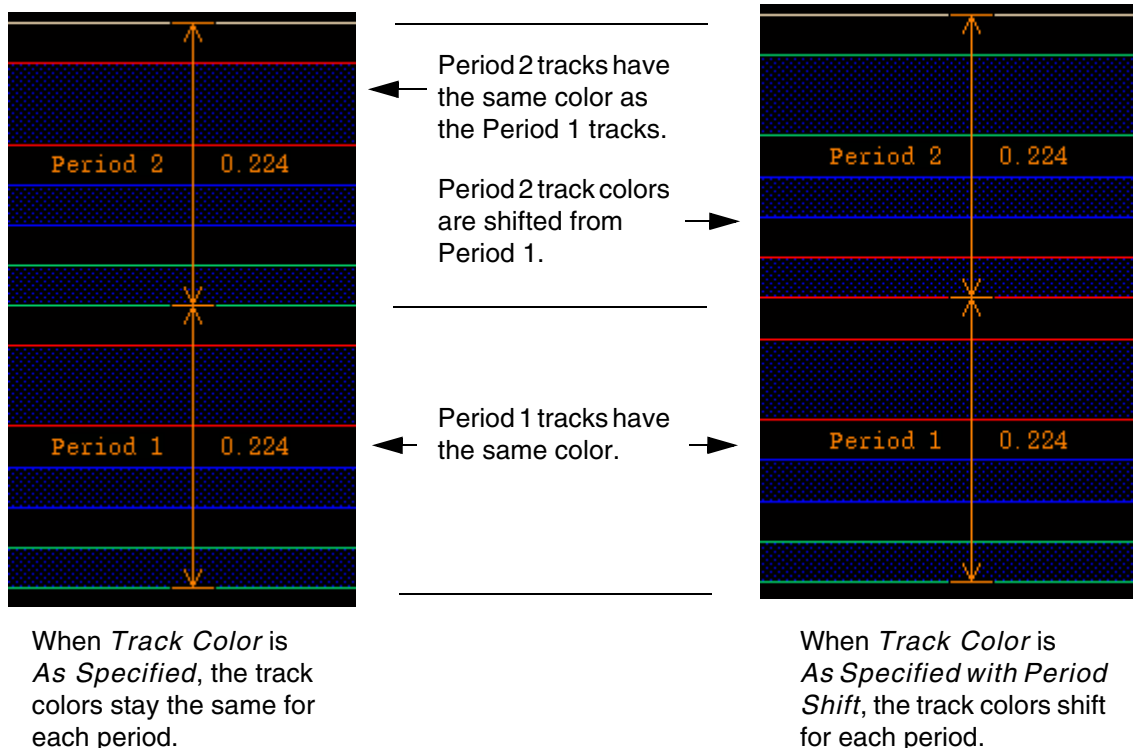

## 2. Specify the *First Track Offset* as a floating number.

This is the distance, in microns, between the first period track and the start of the period. To understand how the *First Track Offset* value is affected by the *Spacing Mode*, see [How Spacing Mode and First Track Offset Are Related](#).

## 3. For each track, specify the following in the table:

- ☐ *Width* is the track width as a floating number, in microns.
- ☐ *Spacing* is the distance between this track and the next track, measured using the *Spacing Mode*, in microns. By default, spacing is computed automatically, but you can manually override the value. For more information, see [Spacing Computation for Tracks](#).

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

- ❑ *Repeat* lets you repeat the track width, spacing, and wire type multiple times instead of re-entering each row. The track color follows the sequence specified by *Track Color* in the *Tracks* group box. You can show repeated rows individually in the table by using the *Expand Row* option, described in [Using the WSP Manager Tracks Table Options](#).
- ❑ *Wire Type* is the wire type for the track. Specify a wire type or choose a wire type from the drop-down box that lists predefined signal types (sigTypes) and wire types defined in other patterns.
- ❑ *Color* is the track color. Choose uncolored (blank), or a valid mask color for the layer from the drop-down list box.

If the *Track Color* in the *Tracks* group box is *Alternate*, only the first track color can be chosen. The color for all the other tracks will be shifted, in order, through the valid mask colors and cannot be changed.

- ❑ *Display Packet* is the display packet name for the WSP track.

### Spacing Computation for Tracks

By default, *Spacing* values are automatically computed and are highlighted in light blue. When you manually override a spacing value, it will no longer be highlighted in the *Tracks* table. You can re-enable the computation for a spacing value, as described in [Using the WSP Manager Tracks Table Options](#).

The computed spacing value for a track is the minimum spacing, as defined in the technology library, based on the width of the track and the next track.

For the last track of a pattern, if *Auto-Compute* is not selected and the track spacing is computed (highlighted in light blue), the spacing is set so that the pattern fills the period.

### How Spacing Mode and First Track Offset Are Related

The *Spacing Mode* setting determines the minimum allowed *First Track Offset* value, as shown in the table below:

Spacing Mode	First Track Offset Minimum
<i>Center to Center</i>	0
<i>Edge to Edge</i>	negative one-half of the first track width

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

When you change the *Spacing Mode* value, the *First Track Offset* value is automatically adjusted to maintain the position of the tracks.


- *Spacing Mode* changed from *Edge to Edge* to *Center to Center*

A value equal to one-half of the first track width is added to the *First Track Offset* value.

- *Spacing Mode* changed from *Center to Center* to *Edge to Edge*

A value equal to one-half of the first track width is subtracted from the *First Track Offset* value.


In the figure below, the same pattern is shown with different values for *Spacing Mode* and *First Track Offset*. A *Center to Center* spacing mode with a *First Track Offset* of 0 is the same as the *Edge to Edge* spacing mode with a *First Track Offset* equal to negative one-half of the first track width.

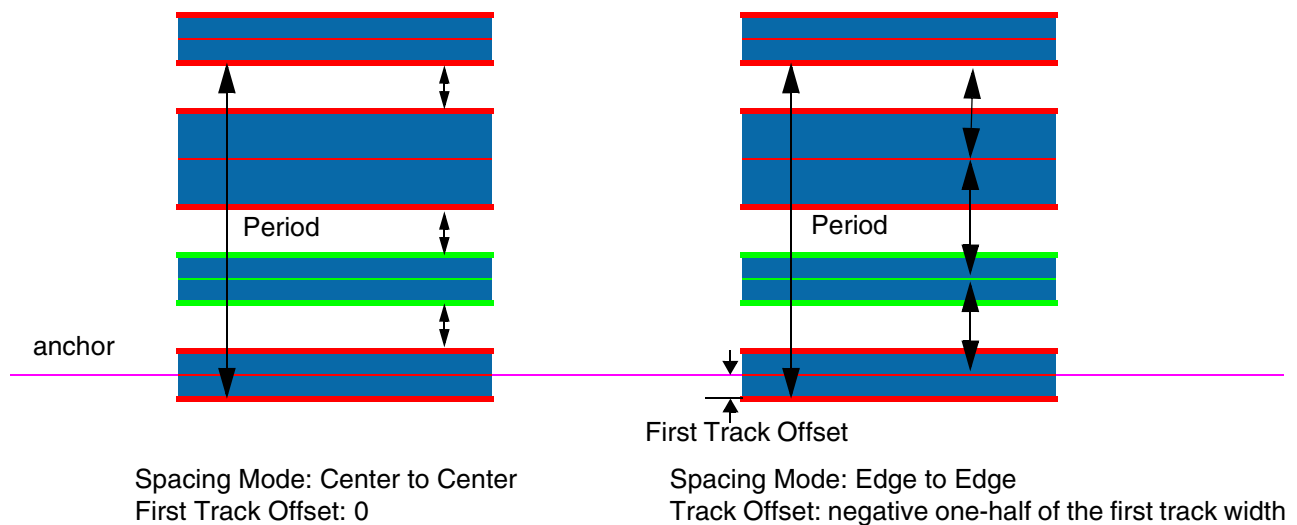

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

Similarly, an *Edge to Edge* spacing mode with a *First Track Offset* of 0 is the same as the *Center to Center* spacing mode with a *First Track Offset* of equal to one-half of the first track width.

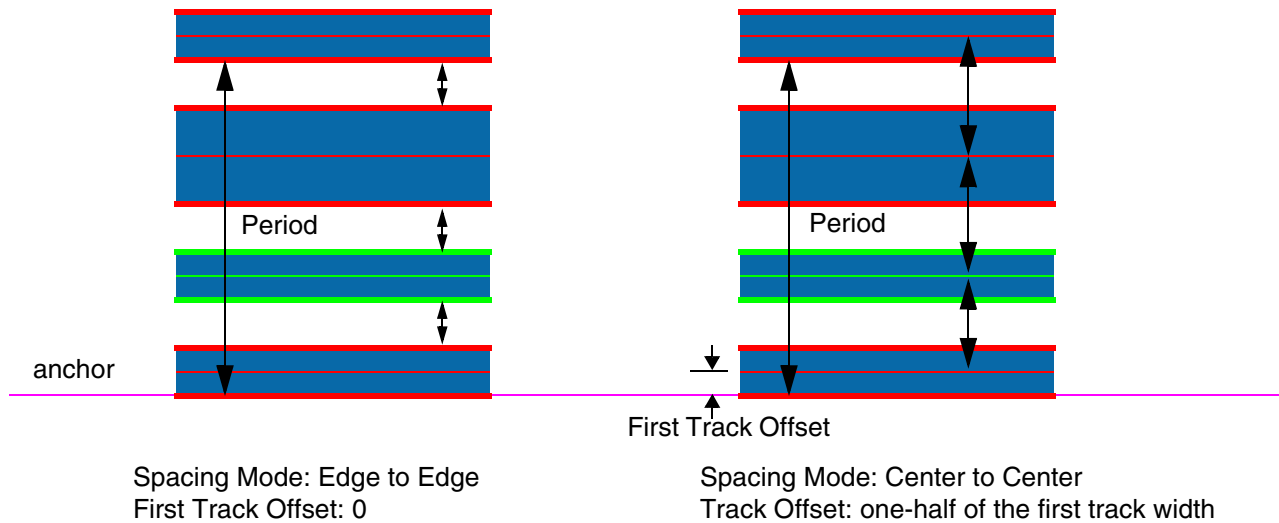

### Using the WSP Manager Tracks Table Options

To access additional WSP Manager *Tracks* table options:

1. (Optional) Choose multiple rows in the *Tracks* table by doing one of the following:

- ☐ Click and drag over the rows, or click the first row, then **Shift**+click the last row to select consecutive rows.
- ☐ Click the first row, then **Control**+click the other rows to select non-consecutive rows.

2. Right-click a selected *Tracks* table field or an unselected field in the table.

The *Tracks* RMB options pop-up window appears. If you clicked on a previously unselected field, it is now the only selected field. Options in the following steps operate on the rows of the selected fields.

3. Choose an option from the list:

- ☐ *Use computed spacing* is enabled by default. Spacing values with this option enabled are highlighted in light blue. This option is shown in the *Tracks* RMB options

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

pop-up window only when a selected field is in the *Spacing* column. For information on the computation methods, see [Spacing Computation for Tracks](#).

	Width	Spacing
0	0.032	0.032
1	0.032	0.064
2	0.032	0.132

← The spacing for these two tracks are computed by the system.  
←


- ❑ *Insert Row* inserts a row above the selected row with *Width* equal to the minimum width. If multiple rows are selected, one row is inserted for each of them.
- ❑ *Duplicate Row* inserts a copy of the selected row above the selected row. If multiple rows are selected, one row is inserted for each of them.
- ❑ *Expand Row* flattens a row that has repeats, to show each row individually in the table.
- ❑ *Repeat from Period* sets the *Repeat* column for the current row to the maximum number of repeats possible to fit into the period with the existing tracks. This option cannot be used when more than one row is selected or *Auto-Compute* is enabled for the period.
- ❑ *Delete Row* removes the selected rows. The spacing for the last track of the pattern is adjusted so that the period is not changed. *First Track Offset* is adjusted if all of the following are true:
  - Row 0 is selected.
  - *Spacing Mode* is *Edge to Edge*.
  - *First Track Offset* is less than negative one-half of the second row width.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

For these cases, *First Track Offset* is changed to negative one-half of the new row 0 width, as shown in the example below:

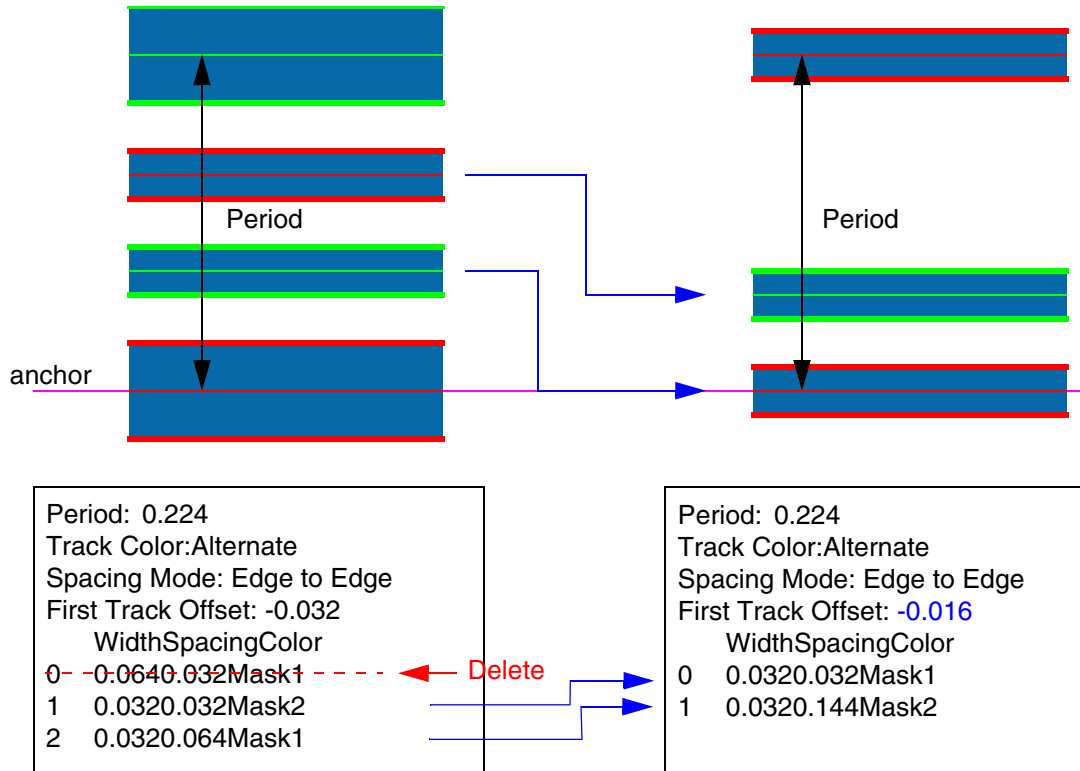

In this example, *First Track Offset* is -0.032, which is less than negative one-half of the second row width (-0.016). When row 0 is removed, *First Track Offset* is adjusted to -0.016 to maintain the relative position of the first track with respect to the anchor.

- ❑ *Undo* reverses the last *Tracks* table change, such as adding or deleting; duplicating a row; and changing a width or color. *Tracks* table changes are stored in the *Tracks* table stack that is reset when the table is saved or you switch to a different pattern. You can undo a series of changes from the stack.
- ❑ *Redo* reapplies a change that was reversed by an *Undo*.
- ❑ *Initialize from layout* automatically generates the tracks from standard cells. This option enables you to automatically generate WSPs based on standard cells with subcells placed in rows to determine the period height and track pattern.

The WSP Manager observes objects in the standard cells and creates a WSP pattern from those objects. The stop level specified on the Display Options form is used to determine the level of hierarchy relevant for extracting the WSP pattern.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

The palette visibility of objects also determines the objects used to derive the WSP pattern.

To automatically generate tracks, you must select the layer from the *Layer* field. The track direction is automatically selected based on the preferred routing direction. When you select the *Initialize from layout* option in the *Tracks* RMB options pop-up window, the tracks table is populated based on the cells placed in the current design. You can now view the tracks that have been automatically created and then create and save the WSP to the cellview.


In case the selected layer has no objects, the tracks that are automatically generated are based on the minimum width and minimum space. The number of tracks are based on the number of masks for that layer in the technology file.

### Specifying WSP Period Repeat Options

By default, this group is minimized and shows the current settings for the group fields.



1. Click the expand button to the left of *Period Repeat* to change the group field settings.

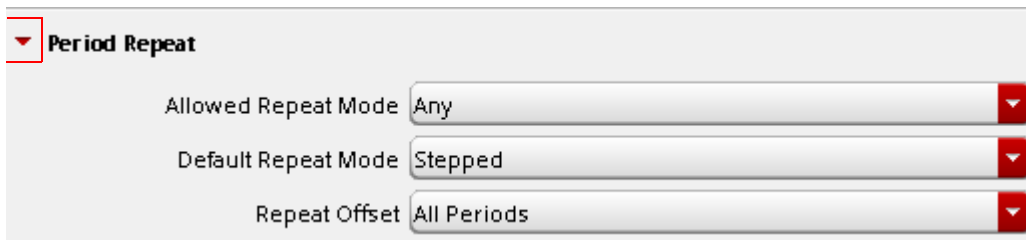

2. Choose the *Allowed Repeat Mode* from the drop-down list box.

- ☐ *Any*

The pattern can be stepped or flipped when it is repeated.

- ☐ *None*

The pattern cannot be repeated. This is used for single period patterns, typically transitional patterns that are only used to create a region. This setting is not allowed for the active pattern of the global grid.

- ☐ *Stepped Only*



## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

The pattern can only be stepped when it is repeated.

☐ *Flipped Only*

The pattern can be flipped in every other period repeat.

**Note:** If *Allowed Repeat Mode* is changed to *None* for an active global pattern, the associated WSSPDef will be removed from the allowed patterns in the *Track Pattern* assistant. Conversely, if an existing pattern is changed from *Allowed Repeat Mode None* to another value, it will be allowed as an active global pattern in the *Track Pattern* assistant. For more information, see [Specifying the Active Patterns](#).

3. Choose the *Default Repeat Mode* from the drop-down list box. This initializes the repeat mode when this pattern is used for regions and global grids.

☐ *None*

There is no repeat mode set for this pattern.

☐ *Stepped*

The pattern is the same in every period.

☐ *Flipped Starts with Odd*

The pattern is flipped in every other period. The first period is not flipped.

☐ *Flipped Starts with Even*

The pattern is flipped in every other period. The first period is flipped.

4. Choose the *Repeat Offset* from the drop-down list box.

☐ *First Period Only*


The *First Track Offset* will be used only for the first period.

☐ *All Periods*

The *First Track Offset* will be used for each period.

## Importing WSPs from Another Design

In the *Import* page of WSP Manager, you specify a cellview from which to import WSPs. Only design WSPs can be imported from another design, not technology library WSPs. Regions are not copied from the other design. You cannot import a design to itself.

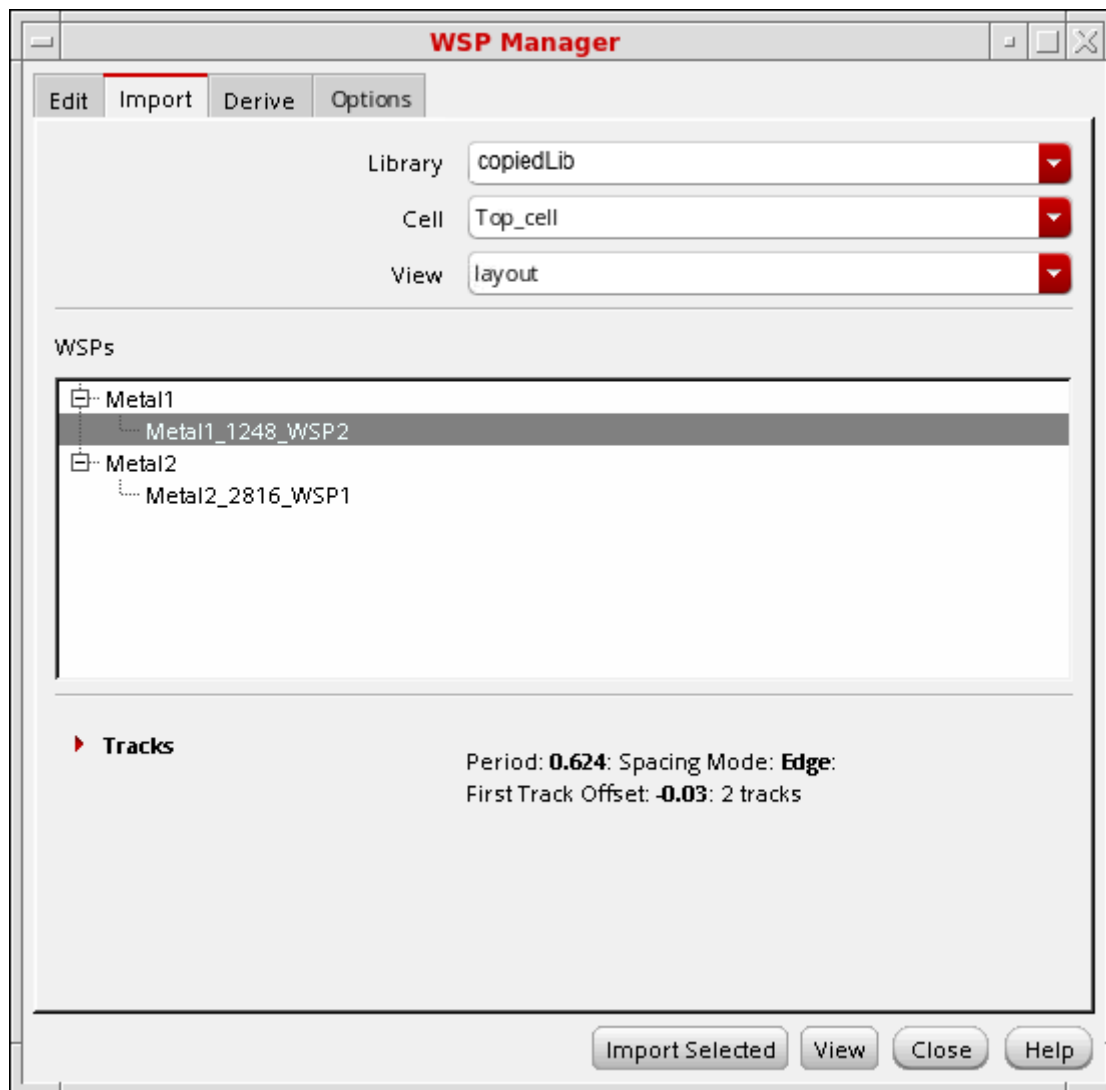

1. Choose the *Library*, *Cell*, and *View* names from the respective drop-down list boxes.

The *WSPs* section shows the width spacing patterns, grouped by layer, from the design database.

2. (Optional) Choose a pattern in the *WSPs* section to show the track details in the *Tracks* table.

**Note:** To view the track details, only one pattern can be selected.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

- a. (Optional) Click *View* to preview the pattern tracks. This button is active only when a pattern is selected in the *WSPs* section.
3. Click *Import Selected* to import the width spacing patterns that are selected in the *WSPs* section to the current design. This button is active only when at least one pattern is selected in the *WSPs* section.

**Note:** After you select the *Import All* or *Import Selected* option, if the design has existing WSPs with the same name as those that are being imported, you are prompted with a dialog box where you can choose to overwrite these WSPs during import.



#### Video

For a video overview of this feature, see [WSP Manager: Importing WSPs from Another Cellview](#) on Cadence Online Support.

## Generation of WSPs from Existing Shapes

In the *Derive* page of WSP Manager, you can generate width spacing patterns from existing shapes within a region of the layout canvas, based on the width, spacing, and color of the shapes.

The guidelines for generating WSP tracks are listed below:

- The visible shapes on all the visible hierarchy levels are considered.
- Only one WSP track is created for multiple shapes on the same layer with the same width, color, and centerline. If there is a colored shape that either overlaps or is next to a gray shape with the same width and centerline, only the colored track is created.
- The routing direction is determined by evaluating the following conditions, in order:
  - ☐ If the width/height ratios for all the shapes on a layer in the search box are consistent, then the routing direction is the direction where the length is more. For example, if all the same-layer shapes in the search box are longer in the vertical direction, then the routing direction is vertical.
  - ☐ If the routing direction cannot be determined by the width/height ratio, then the preferred routing direction for the layer is used, unless it is bidirectional.
  - ☐ If neither of the first two conditions is met, then no WSP is generated.
- Tracks are modeled for the shapes that are fully or partially inside the search box. If the centerline of the track is within the search box, or on the left or bottom edge of the search box, then the track is included in the generated WSP.
- The generated WSP is anchored to the PR boundary, if it exists, or to the origin.


## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

- Tracks are not generated for labels in the design.

## Generate of WSPs from Existing Shapes

To generate WSP tracks, follow the steps listed below:

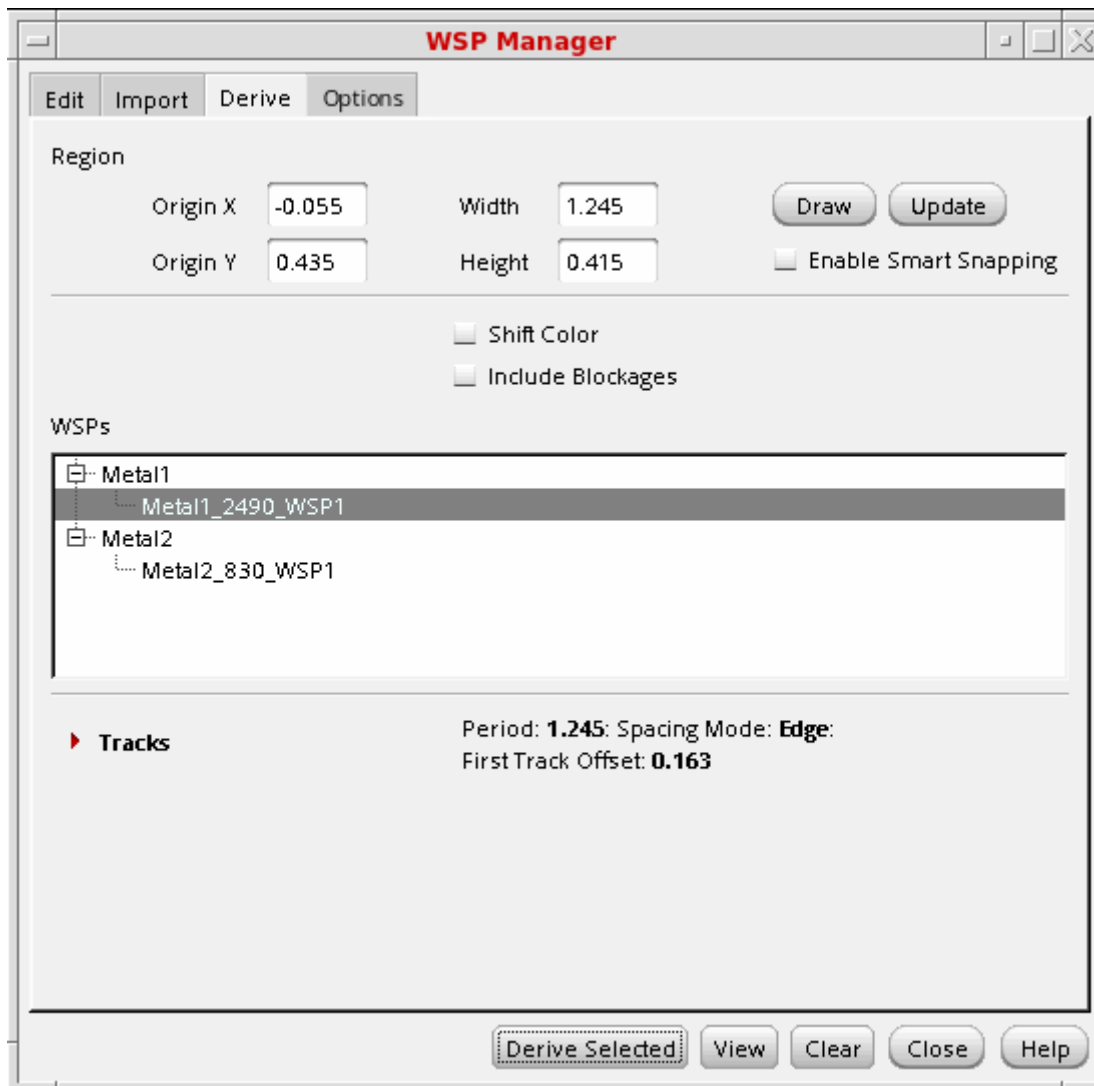


1. Set the search box *Region* using one of these methods:

- ❑ Click *Draw*, then draw the rectangular search box in the canvas.
- ❑ Set the *Origin X*, *Origin Y*, *Width*, and *Length* fields manually, then click *Update*.


## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

Width spacing patterns are generated for the shapes in the search box, subject to the WSP Manager Derive Options, and are listed in the *WSPs* group box, grouped by layer.

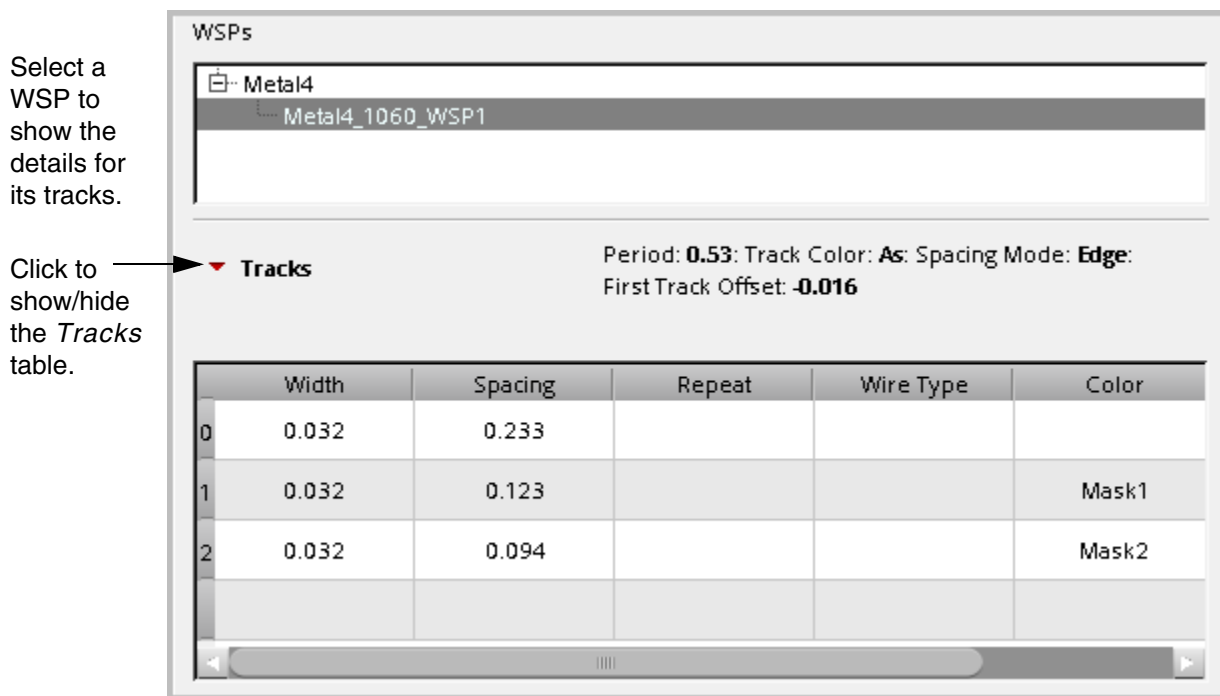

If a generated WSP matches an existing WSP in the current design or technology, it is identified in the *WSPs* group box as follows:

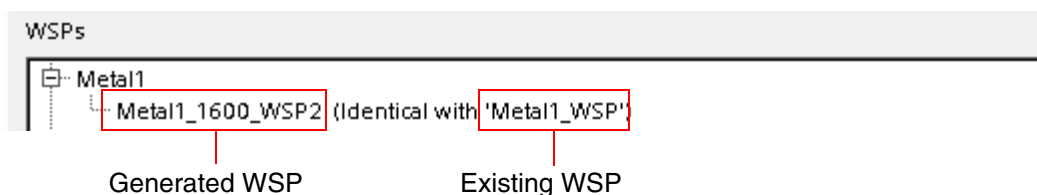

2. (Optional) Double-click a WSP name in the *WSPs* list to edit the name.

Valid names can include only letters (A-Z, a-z), digits (0-9), underscore (\_), and hyphen (-), and cannot begin with an underscore or a hyphen.

- a. (Optional) Click *View* to preview the pattern tracks. This button is active only when a pattern in the *WSPs* section is selected.

3. Choose one or more WSPs in the *WSPs* group box by doing one of the following:

- ☐ Click a WSP.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

- ❑ Click and drag over the WSP names, or click the first WSP, then `Shift`+click the last WSP to select consecutive WSPs.
- ❑ Click the first row, then `Control`+click the other rows to select non-consecutive WSPs.
- ❑ Press `Control`+`a` to select all the WSPs.

**Note:** To prevent the creation of duplicate WSPs, exclude the generated WSPs that are labeled as *Identical with an existing WSP*.

4. Click *Derive Selected* to import the selected WSPs to the current design and show the tracks in the canvas.

**Note:** The shapes on the "annotation" purpose are ignored when generating width spacing patterns from existing shapes.



#### Video

For a video overview of this feature, see [WSP Manager: Generating WSPs from Shapes](#) on Cadence Online Support.

### WSP Manager Derive Options

When generating WSPs from existing shapes, you have the following options:

- *Enable Smart Snapping*  
Snaps to objects in the canvas when drawing the search box.
- *Shift Color*  
Shifts track colors when a pattern is repeated.
- *Include Blockages*  
Generates tracks for blockage shapes.

## Specifying WSP Options

In the *Options* page of WSP Manager, you can specify the options to be used when creating, modifying, copying, or generating width spacing patterns.




1. Choose the *Spacing Mode* from the drop-down list box, *Center to Center* or *Edge to Edge*.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

The center-to-center spacing between two tracks equals the edge-to-edge spacing between the tracks plus one-half the width of each track, as shown below:

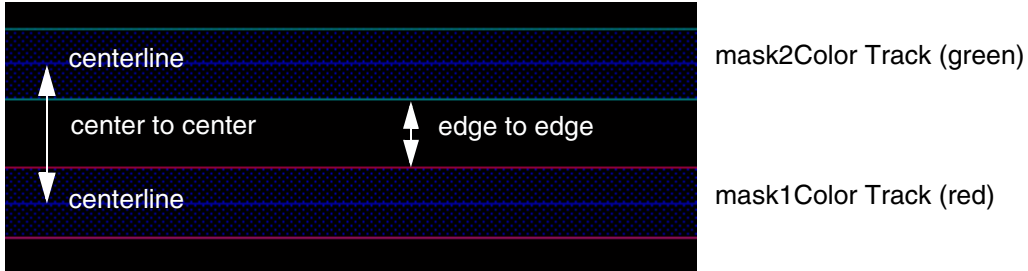

To understand how changing the *Spacing Mode* setting affects the *First Track Offset* value, see [How Spacing Mode and First Track Offset Are Related](#).




## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

The following example shows the effect of the *Shift Color* and *Include Blockages* options.

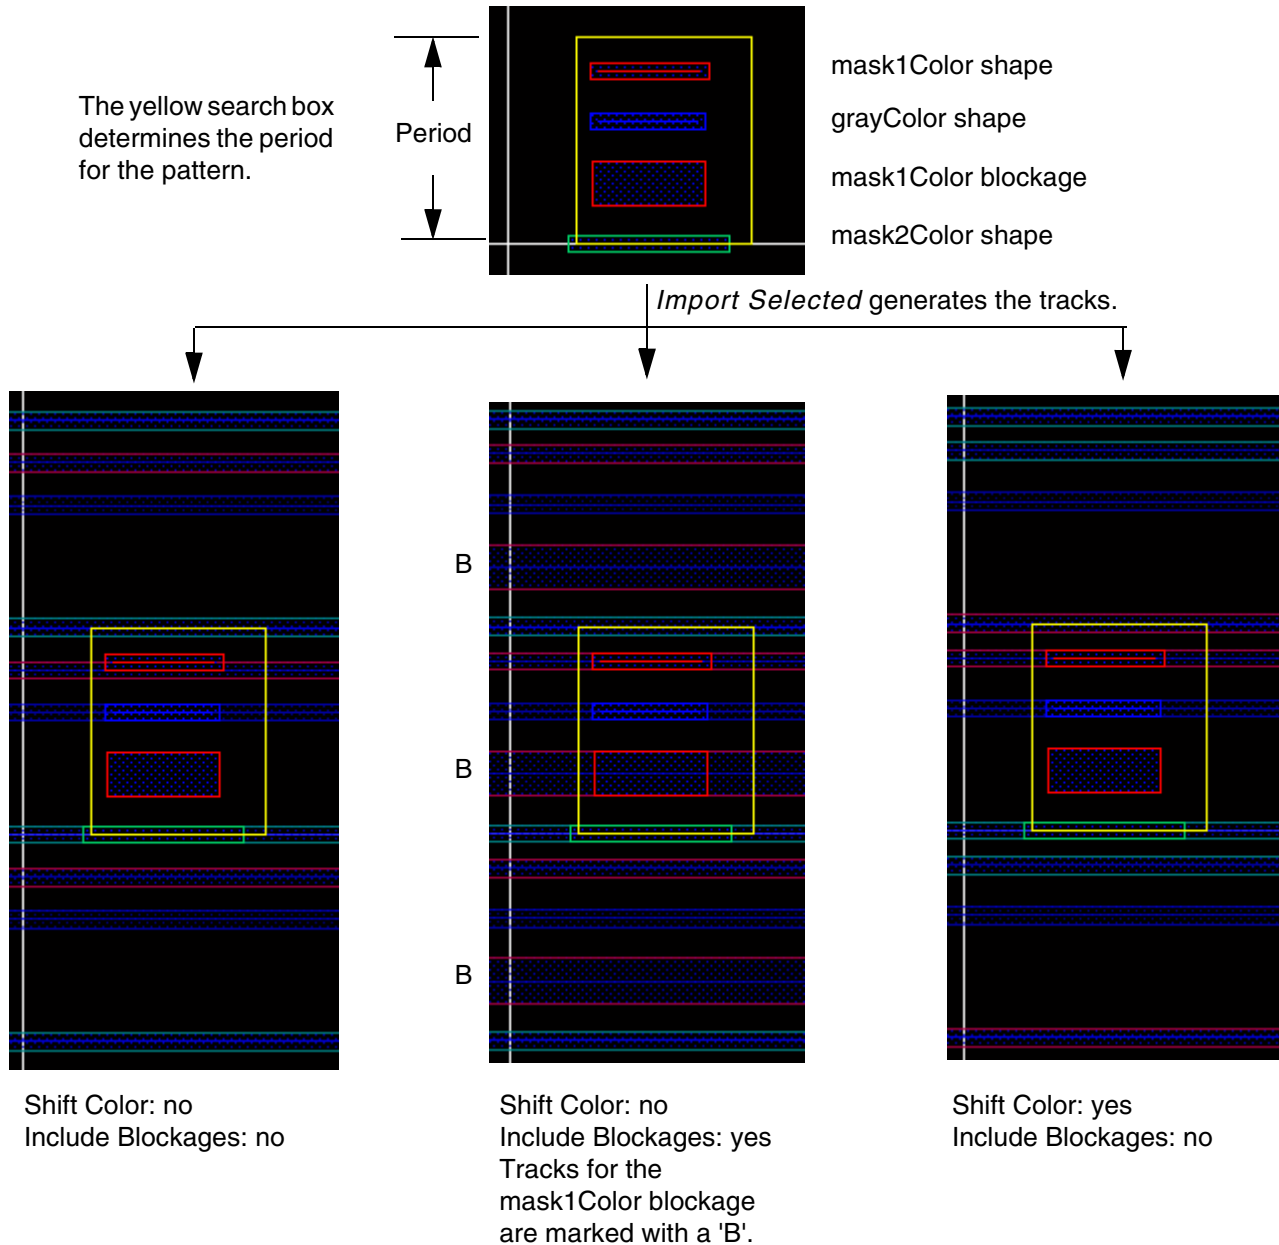

2. Click the *Auto clear name on layer change* check box to automatically clear the name in the *Layer* field on the *Edit* tab when you change the layer name.
3. Choose the *Editing Mode* from the drop-down list box, *Use WSP Manager (Pattern Viewer read-only)* or *Use Pattern Viewer (Period and Track table read-only)*.


## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

❑ *Use WSP Manager (Pattern Viewer read-only)*

Lets you update the tracks on the *Edit* tab. Then, you can preview the tracks.

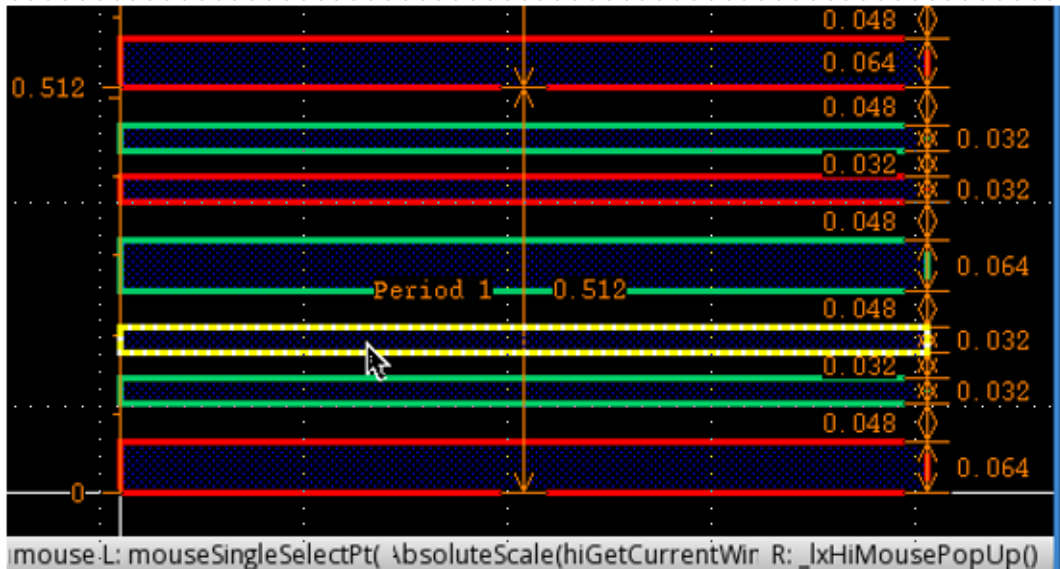

Tracks preview

❑ *Use Pattern Viewer (Period and Track table read-only)*

Lets you edit the tracks graphically. The tracks table is updated based on the edits in the preview. You must make the edits in the first period region. The edits you can

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

make include creating shapes, changing the colors of tracks, or deleting, stretching, or moving tracks.

	Width	Spacing	Repeat	Wire Type	Color
0	0.064	0.048			Mask1
1	0.032	0.032			Mask2
2	0.032	0.048			Mask1
3	0.064	0.048			Mask2
4	0.032	0.032			Mask1
5	0.032	0.048			Mask2

Tracks table

4. Click the *Enable new def as global* check box to make the new WSSPDef as a global WSSPDef and is set globally active if there are no pre-existing globally active definitions on the same layer.
5. Click the *Enable def name editing* check box to display the *WSP Def Name* field on the *Edit* tab that lets you modify the WSSPDef name. The new name is used to create the WSSPDef.
6. Click the *Filter Layers to valid routing layers* to filter the layers listed in the *Layers* field on the *Edit* tab to valid routing layers.
7. Click the *Use canvas visibility* check box to use the visibility options specified in the Palette assistant and *Display Levels: Stop* in the [Display Options form](#).
8. Click the *Ignore blockages* check box to include or exclude blockages when creating tracks.
9. Click the *Ignore top level pins* check box to include or exclude pins at the top level when creating tracks.
10. Click the *Verbose mode* check box to display debug messages in the CIW.
11. Click the *Use aspect ratio of shapes* check box to ignore the shapes that are not drawn along the right direction.

## Virtuoso Width Spacing Patterns User Guide

### Width Spacing Pattern Definition

---

The shapes on the "annotation" purpose are ignored when initializing width spacing patterns from layout.

When you copy a related snap pattern, it's attributes are also copied.

#### ***Related Topics***

[Technology Database WSPs](#)

[SKILL Functions for Width Spacing Patterns](#)

## SKILL Functions for Width Spacing Patterns

You can use SKILL functions to create, find, and access `widthSpacingPattern`, `widthSpacingPatternGroup`, and `relatedSnapPatterns` objects in both the design and technology databases. In addition, these functions are used to create, find, and access `widthSpacingSnapPatternDefs` in the technology database.

WSP functions also have the ability to access the attributes of a given object, find an object of a specific type using the object name, and get a list of all the objects of a specific type in both the technology and design databases.

For the SKILL functions associated with the *Track Pattern* assistant, see [Track Pattern Assistant Functions](#).

### Technology Database SKILL Functions

- [Width Spacing Pattern SKILL Functions](#)
- [Width Spacing Snap Pattern Def SKILL Functions](#)
- [Width Spacing Pattern Groups SKILL Functions](#)
- [Related Snap Patterns SKILL Functions](#)

### Design Database SKILL Functions

- [Width Spacing Pattern Functions](#)
- [Width Spacing Pattern Group Functions](#)
- [Width Spacing Snap Pattern Def Functions](#)
- [Related Snap Pattern Functions](#)
- [Pattern Region Functions](#)

### ***Related Topics***

[Technology Database WSPs](#)

[Design WSPs](#)

# **Virtuoso Width Spacing Patterns User Guide**

## **Width Spacing Pattern Definition**

---

---

## Track Pattern Assistant

---

Use the *Track Pattern* assistant to choose the width spacing patterns for a region or global area that are displayed as tracks on the canvas.

The *Track Pattern* assistant is a dockable assistant for enabling the predefined WSSPDefs for the global grid and choosing the active pattern and optional wire type for enabled WSSPDefs from the allowed patterns. To show only a subgroup of available patterns, you can filter WSSPDefs by group, name, and period, and filter patterns by name and wire type. Filter settings can be saved to memory or to a file and be restored later. You can control the visibility of the active patterns in the canvas. Width spacing pattern regions can be created and edited using sub-forms.

Only the WSSPDefs with a specified snapping layer will be shown in the *Track Pattern* assistant and its subforms, such as *Create Region*. WSSPDefs without a snapping layer are automatically filtered out.

### Launching the Track Pattern Assistant

Use one of the following methods to access the *Track Pattern* assistant:


- Select *Window – Assistants – Track Pattern*.
- Right-click in the main menu and select *Assistants – Track Pattern*.

Once selected, the *Track Pattern* assistant is added as a docked assistant pane within the current session window. By default, the *Track Pattern* assistant is positioned on the right side of the layout window.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

The *Track Pattern* assistant Graphical User Interface (GUI) is divided into sections:

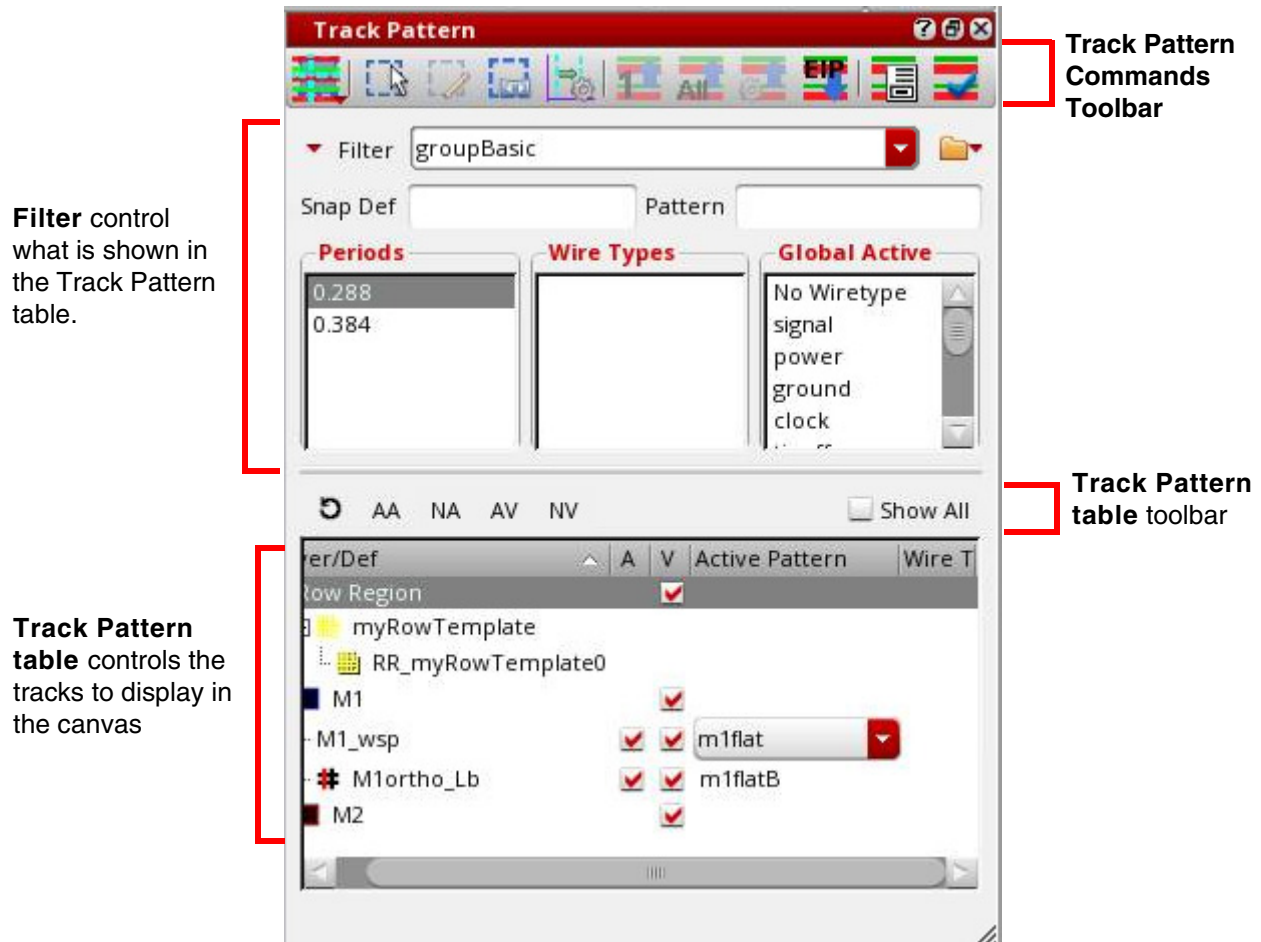

- The top section has a toolbar that contains buttons for Track Pattern commands. You can open the following forms:

- ☐ [Choosing the Track Pattern Display Mode](#)
- ☐ [Creating Width Spacing Pattern Regions](#)
- ☐ [Editing Width Spacing Pattern Regions](#)
- ☐ [Stretching Width Spacing Pattern Regions](#)
- ☐ [Choosing the Track Pattern Display Mode](#)
- ☐ [Choosing the Track Pattern Display Mode](#)
- ☐ [Choosing the Track Pattern Display Mode](#)
- ☐ [Pulling Up Patterns from a Subcell](#)



## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

- ❑ [Pushing down WSSPDefs in EIP](#)
- ❑ [Launching the WSP Manager](#)
- ❑ [Launching the WSP Active Checker](#)
- The next section shows filters that control what is shown in the Track Pattern table. For more information, see [Track Pattern Assistant Filters](#). There are also fields for saving, loading, and deleting filter settings, as described in [Saving and Restoring Filter Settings](#).
- Using controls in the Display section, you can choose which active patterns are visible in the canvas. These controls are described in the [Controlling the Visibility of Track Patterns](#) section.
- The bottom section shows the Track Pattern table of active patterns for WSSPDefs and SPDefs grouped by layer with display controls to show or hide the active patterns in the canvas. For more information, see [Specifying the Active Patterns](#).
- The bottom-left corner of the form shows the *Track Pattern* assistant scope, described in [Track Pattern Table](#).

Pattern flipping can be specified for global grids, as described in [Choosing the Track Pattern Display Mode](#), and for regions as described in [Creating Width Spacing Pattern Regions](#) and [Editing Width Spacing Pattern Regions](#).

### ***Related Topics***

[Track Pattern Assistant Filters](#)

[Track Pattern Assistant Customization](#)

## **Track Pattern Assistant Scope**

The regions selected in the canvas determine the *Track Pattern* assistant scope, which is shown at the bottom-left corner of the GUI. The scope controls the patterns that are shown in the Track Pattern table, and what is displayed in the *Periods* and *Wire Types* fields of the *Filter* section as described below.

- No region or multiple pattern region groups

When no width spacing pattern region or multiple pattern region groups are selected in the canvas, the *Track Pattern* assistant *Filter* section and table apply to the global area of a width spacing pattern grid. The *Track Pattern* assistant scope is blank.

- One pattern region group

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

When one pattern region group is selected in the canvas, the *Track Pattern* assistant *Filter* and table apply only to that pattern region group. The Track Pattern scope shows `Pattern Region Group` with the region name, if specified.








### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)





## **Track Pattern Assistant Toolbar**

The following table describes the Track Pattern assistant toolbar buttons.

Icon	Command	Description
	<i>Display Mode</i>	Controls the display of boundaries and track elements in the canvas. You can choose one of the following from the list: <i>Full</i> , <i>Tracks</i> , <i>Boundary</i> , <i>Periods</i> , and <i>Period and Tracks</i> .
	<i>Create Region</i>	Creates width spacing pattern regions for areas where you want to use a grid that is different from the global grid.
	<i>Edit Region</i>	Changes the attributes associated with WSP regions such as the region name, allowed patterns and pattern groups, the active pattern, wire types, and repeat mode.
	<i>Stretch Region</i>	Stretches a width spacing pattern region based on the <i>Number of X periods/Number of Y periods</i> or a combination of <i>X Step/Y Step</i> and <i>Multiplier</i> .
	<i>Design Settings</i>	Specifies the repeat mode, DEF offsets, and the offset reference for the WSSPDefs in the design:
	<i>Pull Up One</i>	Pulls up the WSSPDefs for only this instance.
	<i>Pull Up All</i>	Pulls up the WSSPDefs for all the instances of an instance master.

# Virtuoso Width Spacing Patterns User Guide

## Track Pattern Assistant

Icon	Command	Description
	<i>Pull Up WSPs For Layers</i>	Pulls up the WSPDefs for all instances of a layer.
	<i>EIP Auto Pushdown Options</i>	Snaps the pins in a subcell to the top-level WSP tracks.
	<i>WSP Manager</i>	Launches the WSP Manager from the <i>Track Pattern</i> assistant.
	<i>WSP Active Checker</i>	Launches the <i>WSP Active Checker</i> from the <i>Track Pattern</i> assistant.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Scope](#)

## **Track Pattern Table**

The key components for establishing tracks using width spacing patterns are:

- [widthSpacingPattern](#) (required)
- [widthSpacingPatternGroups](#) (optional)
- [widthSpacingSnapPatternDefs](#) (required)
- [relatedSnapPatterns](#) (optional)

These are set in the technology file or for the design and are shown in the Track Pattern table with the following columns:



## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

#### ■ *Layer/Def*

Shows the defined WSSPDefs and SPDefs for each layer. SPDefs will not have entries in the *Active Pattern* or *Wire Types* columns. An SPDef is the active pattern if it is enabled.

#### ■ *A (Globally Active)*

Enables or disables the globally active WSP in the canvas.

#### ■ *V (Visibility)*

Shows or hides the active pattern in the canvas.

If one or more patterns are visible in the canvas, when you click the *V (Visibility)* column, all patterns are hidden. In case, no patterns are visible, when you click *V (Visibility)*, all patterns are visible.


#### ■ *Active Pattern*

Selects the active WSP for each WSSPDef.

#### ■ *Wire Types*

Selects the active wire types for the active pattern. If no wire type is shown, then all the wire types for the active pattern are active.

If the environment variable `APR.device.grid wireTypeAbbrev` is set from the Map WSP Wire Type to Symbol form in the Routing assistant, the *Wire Type* column displays the wire type symbols as well.

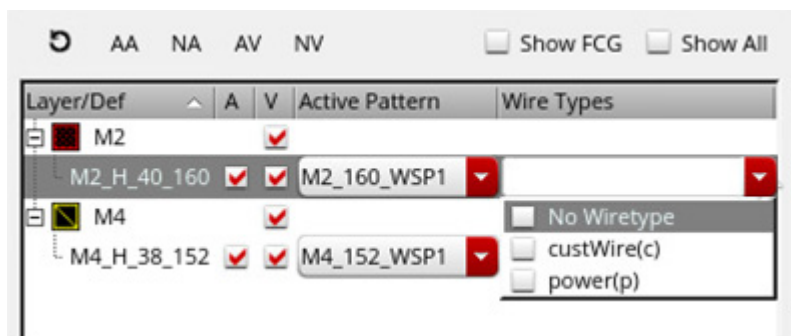


The global grid typically has one WSSPDef per layer, and each WSSPDef can have one or more allowed patterns and/or pattern groups, but only one active pattern. Entries in the table can be filtered, as described in [Track Pattern Assistant Filters](#). Filters can be cleared, as described in [Clearing Filters](#).

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant


For WSSPDefs, the active WSP must be in a WSSPDef that is enabled in the *Track Pattern* assistant. To enable a WSSPDef, see [Enabling and Disabling WSSPDefs](#).

In addition to WSSPdefs, you can also view row templates in the *Track Pattern* assistant.

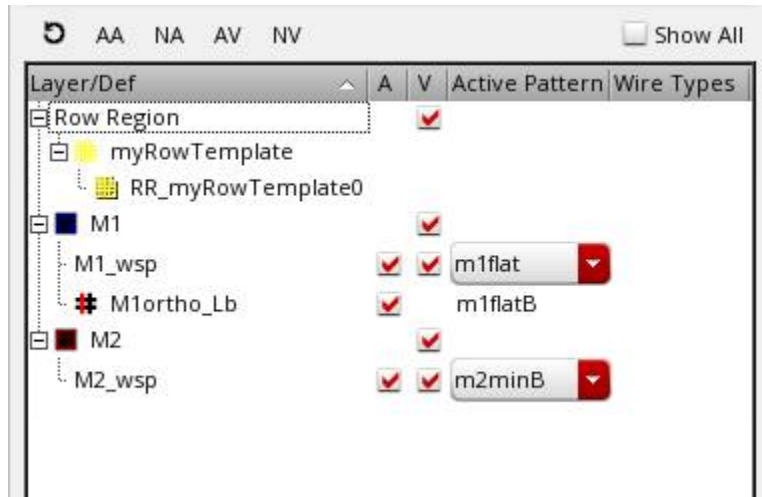

The Track Pattern table displays the row template used to create the row region. The row region is displayed under the row template.

You can use the RMB menu to remove the constraint overrides for each WSSPDef. Those that do not have a cellview constraint are grayed out.

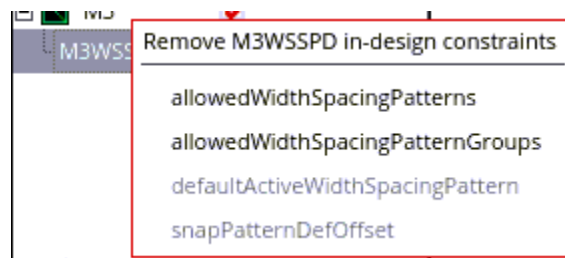

### Related Topics

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

## Expanding and Collapsing the Layers

To show the WSSPDefs and SPDefs for a layer in the Track Pattern table:


## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

- ➔ Click the plus sign (+) to the left of the layer name.

The WSSPDefs and SPDefs for the layer will be shown below the layer name.

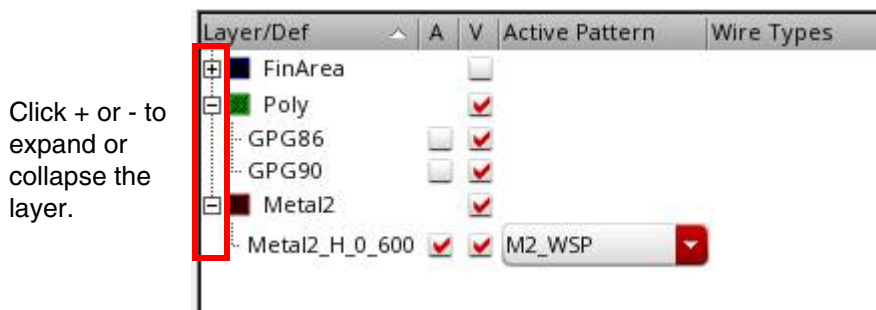

To hide the WSSPDefs and SPDefs for a layer in the Track Pattern table:

- ➔ Click the minus sign (-) to the left of the layer name.

Only the layer name will be shown.

To toggle between expanding and collapsing all the layers:

- ➔ Shift+click *Reset*.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)


[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Enabling and Disabling WSSPDefs

You can change the active pattern only for the WSSPDefs that are enabled.

When selected, WSSPDefs and SPDefs are displayed in the table.

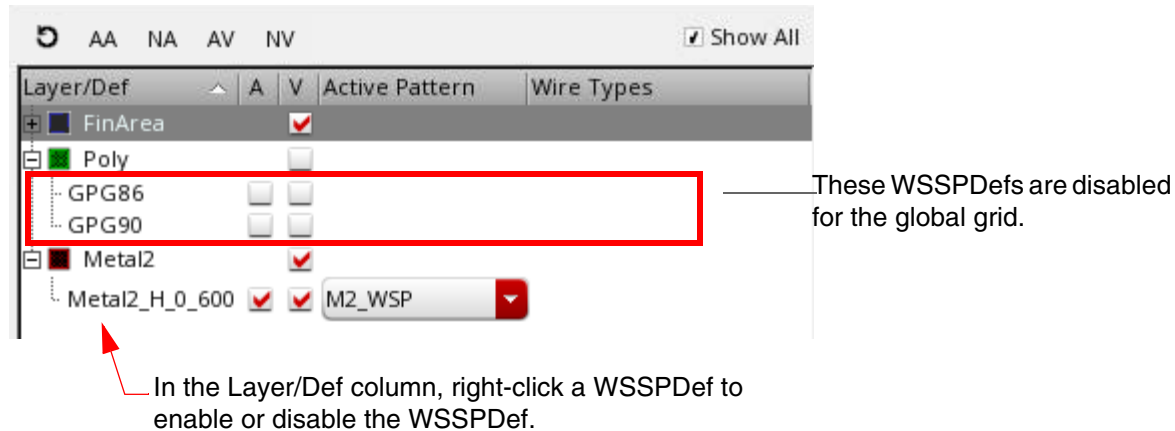

To enable a WSSPDef:

1. Choose the *Show all* check box to show the WSSPDefs in the table, as described in [Filtering by Related Snap Patterns](#).
2. Click the *A* column check box for the desired WSP.

The *Active Pattern*, *Wire Types*, and *Visibility* for the WSSPDef will be selectable.

To disable an enabled WSSPDef:

- ➔ Click the *A* column check box for the desired WSP to deselect it.

If *Show all* is not selected, the WSSPDef will be removed from the Track Pattern table. The *Periods* and *Wire Types* lists in the *Filter* section will include periods for only the enabled WSSPDefs, and wire types for all the active patterns of only the enabled WSSPDefs, respectively.

## Related Topics

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Showing and Hiding WSSPDefs and SPDefs

By default, WSSPDefs and SPDefs are not shown in the Track Pattern table.

To show the WSSPDefs and SPDefs:

- ➔ Select the *Show all* check box.

The WSSPDefs and SPDefs will be shown in the table. The *Active Pattern*, *Wire Types*, and *Visibility* for the WSSPDefs will not be selectable. The *Periods* and *Wire Types* lists in the *Filter* section will include periods for the WSSPDefs, and wire types for all the active patterns of the WSSPDefs, respectively.

To hide the WSSPDefs and SPDefs:

- ➔ Deselect the *Show all* check box.

All WSSPDefs and SPDefs will be removed from the Track Pattern table. The *Periods* and *Wire Types* lists in the *Filter* section will include periods for only the enabled WSSPDefs, and wire types for all the active patterns of only the enabled WSSPDefs, respectively.

The *Show all* check box can also be set using the `tpaShowDisabled` environment variable.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Specifying the Active Patterns

Each WSSPDef has a default active pattern. If a WSSPDef has more than one allowed pattern, you can change the active pattern using the *Track Pattern* assistant.

To choose the *Active Pattern* for a layer in the Track Pattern table, do the following:

1. If needed, click the plus sign (+) to the left of the layer name to expand the layer and show the WSSPDefs for the layer.
2. Click *Show all* if the WSSPDef for the desired WSP is disabled and not visible in the table.



## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant


3. Click the *A* column check box for the desired WSP if the WSSPDef is currently disabled.
4. Choose a WSP from the *Active Pattern* drop-down list of allowed patterns.

The selected WSP is the active pattern for the layer.

**Note:** A single-height (non-repeating) pattern cannot be set as the active pattern for a layer in the global grid, but can be used in regions.

5. (Optional) Choose one or more wire types from the *Wire Types* drop-down list.

The active pattern specifies the width and spacing for a set of tracks. Each track can have an optional wire type. If *Wire Types* is empty, then tracks will be created in the canvas for all wire types in the active WSP. Otherwise, tracks will be created only for the selected wire types. The following example shows different Wire Types selections for Metal2, Metal3, and Metal4.

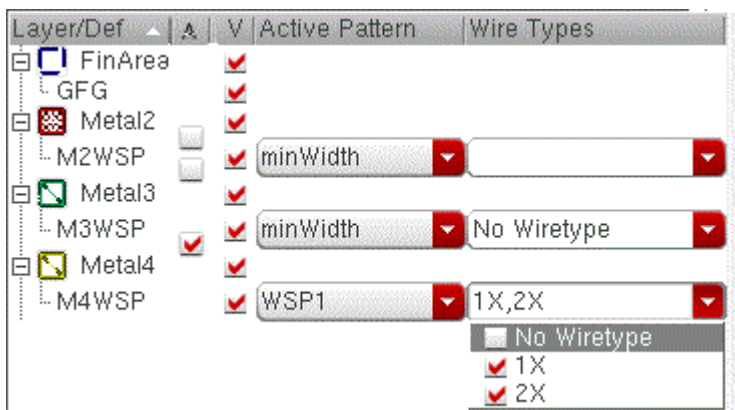

Tracks will be created on Metal2 for all wire types in the minWidth pattern.

Only tracks with no wire type in the minWidth pattern will be created on Metal3.

Only tracks with a wire type of 1X or 2X in the WSP1 pattern will be created on Metal4.

### Related Topics

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

### Showing WSSPDef Information

To show the information for a WSSPDef in the Track Pattern Assistant:


- ➔ Place the pointer over the WSSPDef name in the table.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

The WSSPDef name, period, offset, direction, active pattern, and snap layer are displayed.

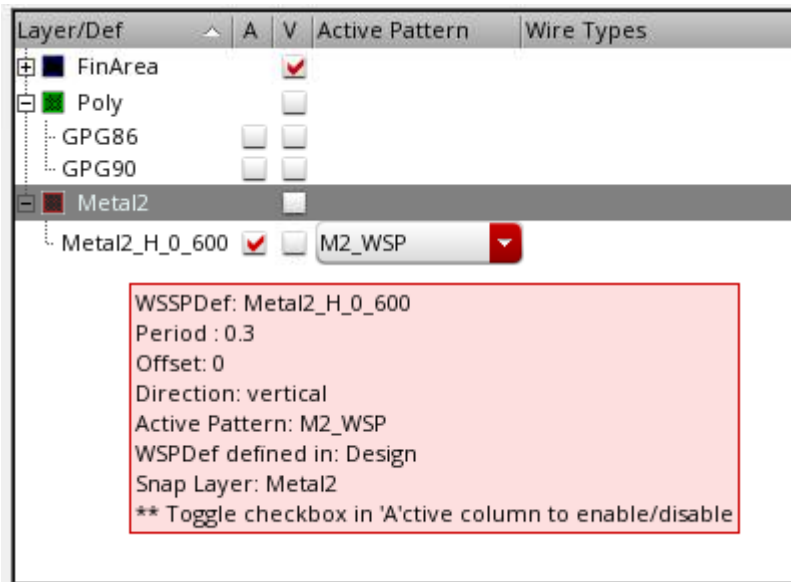

### ***Related Topics***


[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Controlling the Visibility of Track Patterns

You can control the visibility of the track patterns in the canvas using the *Track Pattern* assistant.

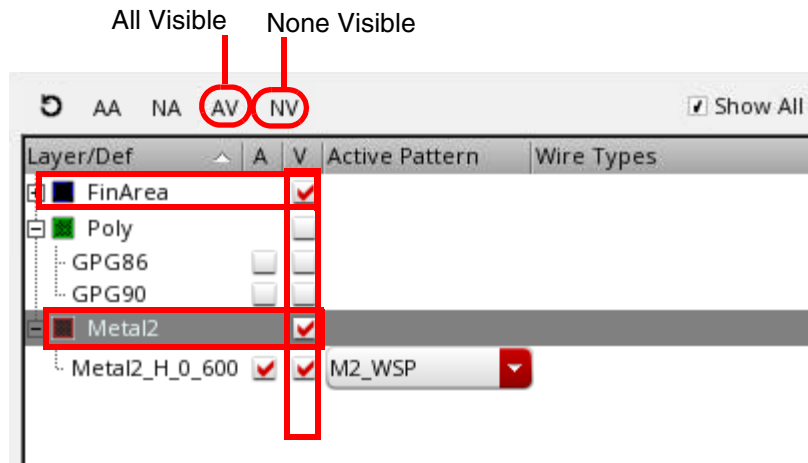

To show or hide the active pattern for an enabled WSSPDef:

- ➔ Click in the Visibility column for the WSSPDef to toggle the setting.

To show or hide the active patterns for a layer:

- ➔ Click in the Visibility column for the layer to toggle the setting.

To show all the active patterns for the global grid and regions in the canvas:

- ➔ Click *AV*.

To hide all the patterns in the canvas:

- ➔ Click *NV*.

To show or hide all active patterns in the canvas:

- ➔ Click *AA*.

To show or hide none active the patterns in the canvas:

- ➔ Click *NA*.

To reset all filters and turn off the visibility of patterns:

- ➔ Click the reset icon.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

You can also control visibility of the track patterns from the *Grids* panel of the [Palette Assistant](#). You can control the visibility of both routing and orthogonal WSSPDefs using the *V* column in the *Grids* panel of the Palette assistant. When an orthogonal WSSPDef is both active and visible, you can see the grid lines on the canvas. However, even if the WSP has a width value and the display mode is *Full*, the orthogonal WSSPDefs only show a centerline.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)


## Track Pattern Assistant Filters

There are several ways to filter the WSSPDefs and SPDefs that are shown in the Track Pattern table.

Set *Filter* to show only WSSPDefs in the table for a selected RSP or matching a saved filter.

Filter WSSPDefs and SPDefs shown in the table by *Snap Def*, *Pattern*, *Periods*, and *Wire Types*.

Choose *Show all* to show WSSPDefs and SPDefs in the table.

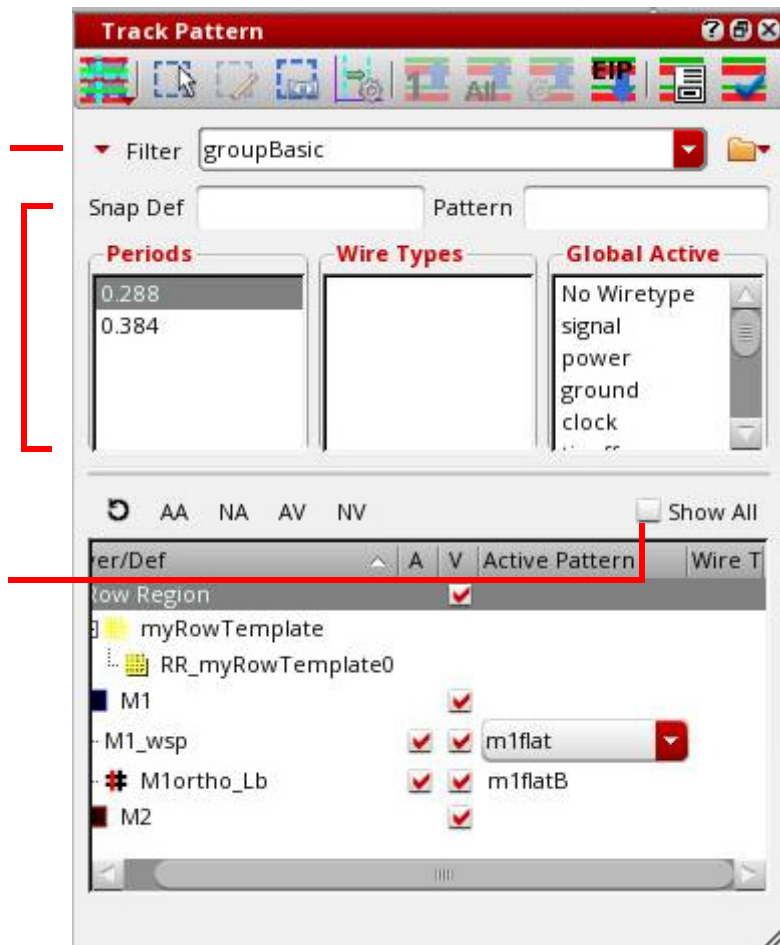


You can collapse or expand the *Filter* section using the disclosure button. This lets you view more of the WSSPDef state information in the *Tracks* table.

By default, the *Filter* section is collapsed.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

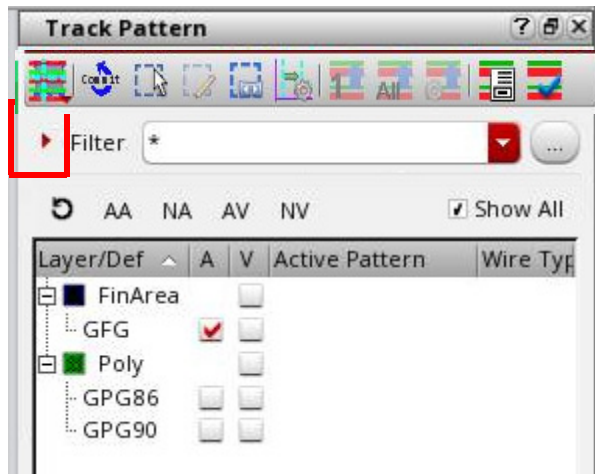

To reduce the clutter in the table and show only the active patterns, WSSPDefs and SPDefs are hidden by default. To view all the defined WSSPDefs and SPDefs, see [Showing and Hiding WSSPDefs and SPDefs](#).

To show only the WSSPDefs in a related snap pattern group in the table, see [Filtering by Related Snap Patterns](#).

The filters (*Snap Def*, *Pattern*, *Periods*, and *Wire Types*) are evaluated dynamically to customize the table, in order of precedence from highest to lowest:

- [Filtering by Snap Defs](#)
- [Filtering by Pattern](#)
- [Filtering by Periods](#)
- [Filtering by Wire Types](#)
- [Filtering by Global Active](#)
- [Filtering by Constraints in the Technology File](#)

Using *Snap Def*, *Pattern*, *Periods*, and *Wire Types* filters affects the WSSPDefs and SPDefs that are shown in the Track Pattern table but does not change the patterns that are displayed in the canvas.

### Filtering by Related Snap Patterns


Customers with a large number of width spacing patterns will often create related snap pattern groups to limit different design groups to a smaller set of patterns or active patterns.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

To show only the WSSPDefs in a related snap pattern group:

- ➔ Choose the related snap pattern group in the *Filter* drop-down list.

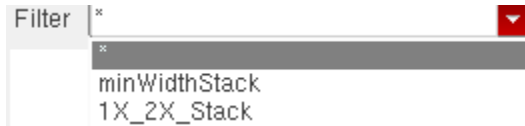

**Note:** The *Filter* drop-down list will show the defined related snap pattern groups and filter settings that are saved in the memory, as described in [Saving and Restoring Filter Settings](#).

The *Snap Def* filter will be cleared. Only WSSPDefs in the selected related snap pattern group will be shown in the table. Any SPDefs in the table are not affected. The patterns in the canvas might also change if any of the current active patterns are not allowed in the related snap pattern. For these cases, the active pattern will be assigned to an allowed pattern in the related snap pattern group.

### Filtering by Snap Defs

To show only WSSPDefs and SPDefs matching an expression:

- ➔ Type the expression in the *Snap Def* field.

As you type, WSSPDefs and SPDefs in the *Layer/Def* column of the table will dynamically update to include only those matching the expression. Expressions are case-sensitive and can include the special characters shown in Table 3-1.

**Table 3-1 Expression Syntax**

?	Matches any single character.
*	Matches any sequence of zero or more characters.
[ <i>chars</i> ]	Matches any single character in <i>chars</i> . If <i>chars</i> contains a sequence of the form <i>a-x</i> , then any character between <i>a</i> and <i>x</i> (inclusively) will match.
{ <i>a, b, ...</i> }	Matches any of the strings <i>a, b, ...</i> listed within the braces.

### Filtering by Pattern

To show only WSSPDefs with allowed WSPs matching an expression:

- ➔ Type the expression in the *Pattern* field.

As you type, WSSPDefs in the *Layer/Def* column of the table will dynamically update to include only WSSPDefs with WSPs that match the expression. Expressions are case-sensitive and can include the special characters shown in Table [3-1](#).

### Filtering by Periods

If *Show all* is selected, the *Periods* filter list box will show the periods for the enabled and WSSPDefs in the Track Pattern table. Otherwise, only the periods for the enabled WSSPDefs are shown.

To show only WSSPDefs with a specific period:

- ➡ Click the period in the *Periods* list box.

The period is selected. Only WSSPDefs with a period matching a selected period will be shown in the Track Pattern table. Multiple periods can be selected.

To deselect a period:

- ➡ Click the period.

The filter is removed for the period.

### Filtering by Wire Types

If *Show all* is selected, the *Wire Types* filter list box will show the wire types for the *active* patterns of the enabled and WSSPDefs in the Track Pattern table. Otherwise, only the wire types for the active patterns of the enabled WSSPDefs are shown.

To show only WSSPDefs with an active WSP containing a pattern of a specific wire type:

- ➡ Click the wire type in the *Wire Types* list box.

The wire type is selected. WSSPDefs with an active WSP containing a pattern of a wire type matching a highlighted wire type will be shown in the Track Pattern table. Multiple wire types can be selected.

To deselect a wire type:

- ➡ Click the wire type.

The filter is removed for the wire type.




### Important

Choosing wire types in the *Wire Types* filter list does not set the wire types for the active pattern. You must set the wire types for the active pattern in the Track Pattern table. For more information, see [Specifying the Active Patterns](#).

## Filtering by Global Active

The *Global Active* filter relates to the SKILL functions, [dbSetCellViewActiveWireTypes](#) and [dbGetCellViewActiveWireTypes](#). The cellview active wire types modify what is available in a WSP. This is similar to the way wire types are selected for a specific `widthSpacingSnapPatternDefs` in the Track Pattern table. The *Global Active* filter sets the active wire type for all WSSPDefs instead of just a single WSSPDef in the cellview. This is unlike the *Wire Types* column in the Track Pattern table which displays a single WSSPDef.

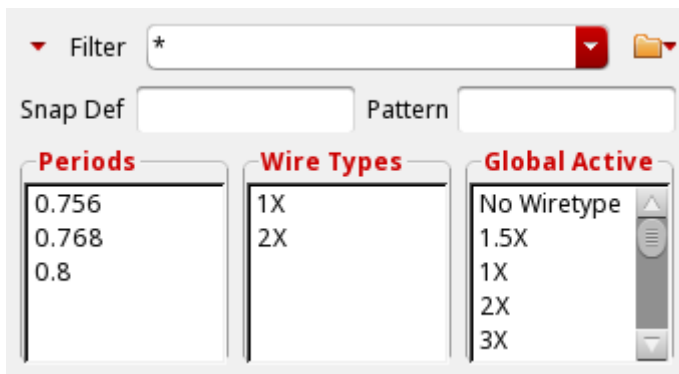

## Filtering by Constraints in the Technology File

If *Show FCG* is selected, the Track Pattern table displays track patterns based on the constraints in the technology file. If the WSSPDef is not a member of any `allowedSnapPatternDefs`, it is always shown. However, if the WSSPDef is a member of any alternate foundry constraint group's `allowedSnapPatternDefs`, it is only shown in the Track Pattern table when it is a part of the current alternate foundry constraint group's `allowedSnapPatternDefs`.


If *Show FCG* is selected, you can see the *Hoff* check box. When you select this check box, the Track Pattern table displays WSSPDefs that have a matching `WSSPDef_hoff`.

**Note:** The *Show FCG* and *Hoff* options are visible only when the [showFCGGUI](#) environment variable is set to `t`. The `cdba.layout AlterenateFoundryCG` environment

variable sets the value of the current active alternate foundry constraint group. You can update it in the Layout Editor Options form.


### Clearing Filters

To reset all filters and turn off the visibility of patterns:


- ➔ Click the reset icon .

All filters are reset, and the WSSPDefs and SPDefs are refreshed accordingly in the Track Pattern table. The visibility for all the patterns is turned off.


To reset only filters:

- ➔ Shift+click the reset icon .

All layers in the Track Pattern table are collapsed or expanded.

- ➔ Ctrl+click the reset icon .

Only the filter settings are reset.

- ➔ Ctrl+Alt+Shift+click the reset icon .

The defaults are restored and the Track Pattern table is refreshed.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)


[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

[Saving and Restoring Filter Settings](#)

## Saving and Restoring Filter Settings

Filter settings in *Track Pattern* assistant can be saved and restored from the memory or a file. This also saves in-design RSPs to a file that can be loaded in another cellview.

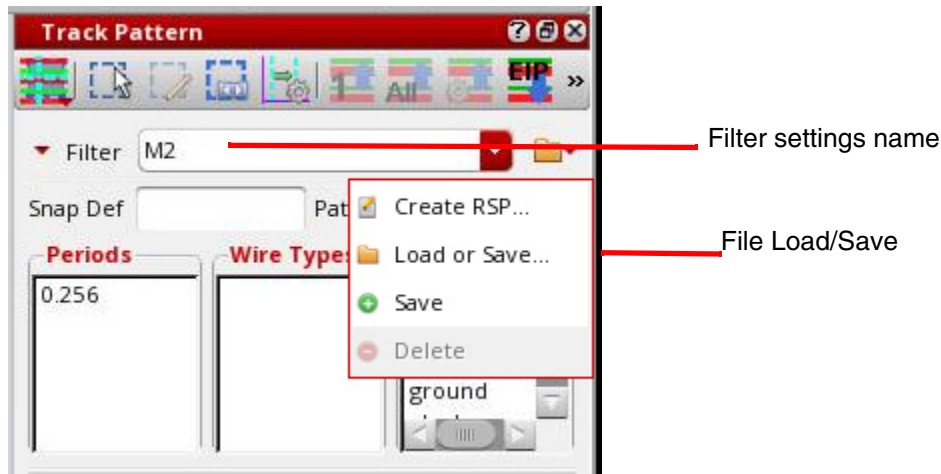


To save the current filter settings in memory:

1. Type the name for the current filter settings in the *Filter* field.
2. Click *Save*.

The filter settings are saved to the assigned name, which is added to the list of settings in the *Filter* drop-down list.

To restore the saved filter settings from memory:

- ➔ Select the filter settings name from the *Filter* drop-down list.

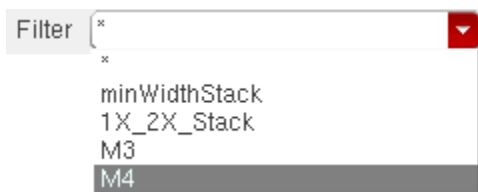

The filter settings are restored.

**Note:** Related snap pattern group names are also shown in the drop-down list and can be selected to filter the patterns in the Track Pattern table, as described in [Filtering by Related Snap Patterns](#).

To delete filter settings from memory:

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---


1. Select the filter settings name from the *Filter* drop-down list.
2. Click *Delete*.

**Note:** Although defined width spacing pattern group names are shown in the drop-down list, they cannot be deleted.

To store all the saved filter settings to a file:

1. Click the *Load or Save* option from the  drop-down list in the *Track Pattern* assistant.

The *Open TPA File* form appears.

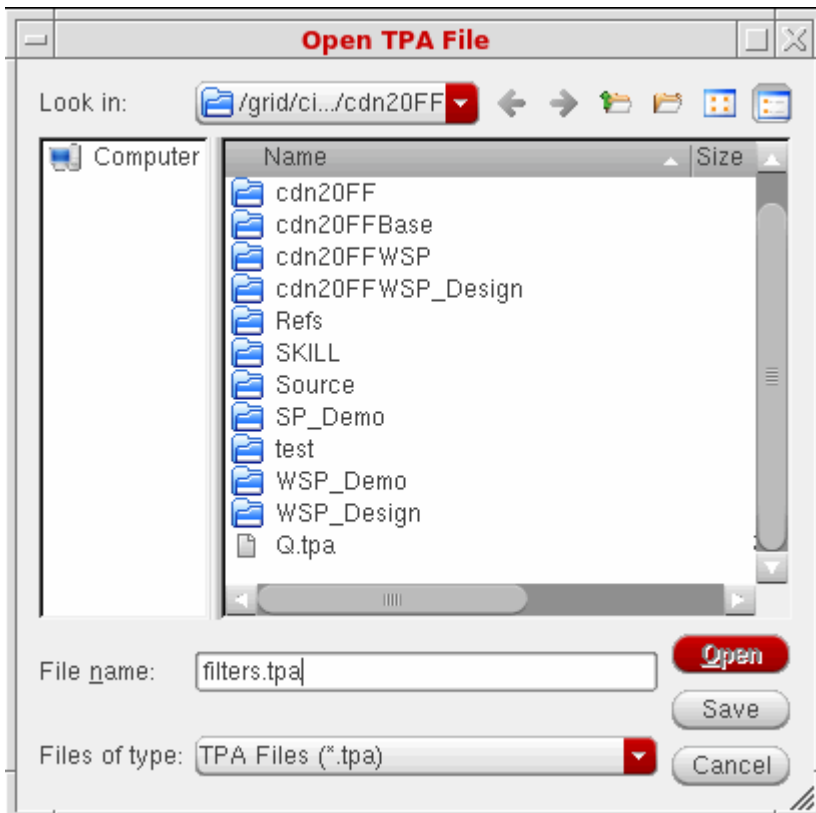

2. Enter the filename.

The filename must have a `.tpa` extension, otherwise the *Save* button will not be active.

3. Choose *Save*.

All the filter settings that are saved in memory will be stored in the specified TPA file.

To load filter settings from a TPA file:

1. Click the *Browse* button (...) in *Track Pattern* assistant.

The Open TPA File form appears.

2. Enter the filename or browse through the hierarchy for the file to load.
3. Click *Open*.

All the filter settings in the specified TPA file will be available in the *Filter* drop-down list of *Track Pattern* assistant.

### ***Related Topics***


[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## **Choosing the Track Pattern Display Mode**

Click the track pattern *Display Mode* icon on the toolbar in the *Track Pattern* assistant to control the display of boundaries and track elements in the canvas. You can choose one of the following from the list: *Full*, *Tracks*, *Boundary*, *Periods*, and *Period and Tracks*.

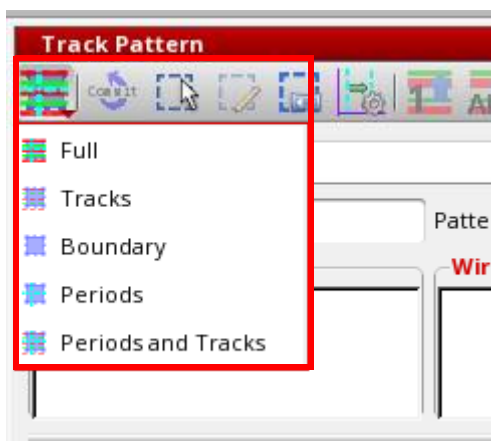


**Note:** The *Display Mode* icon on the toolbar changes to reflect the current display mode.

## Virtuoso Width Spacing Patterns User Guide


### Track Pattern Assistant

---


The following figure depicts the display options.

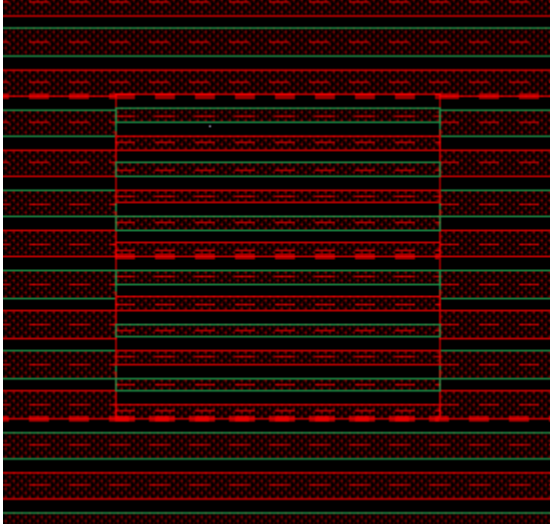


**Full** shows tracks and track widths, periods, and WSP and SP region boundaries.

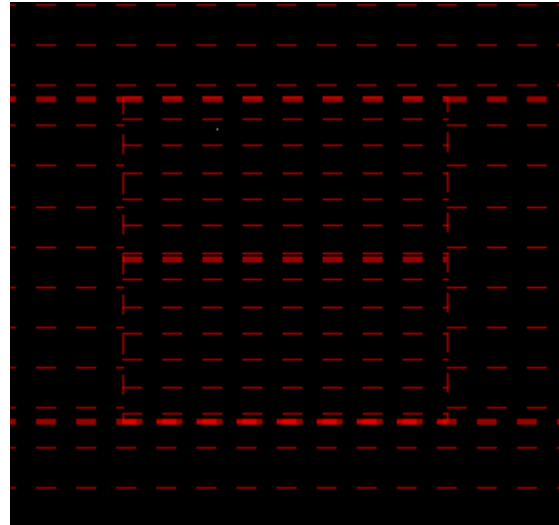

**Tracks** shows tracks, periods, and WSP and SP region boundaries.

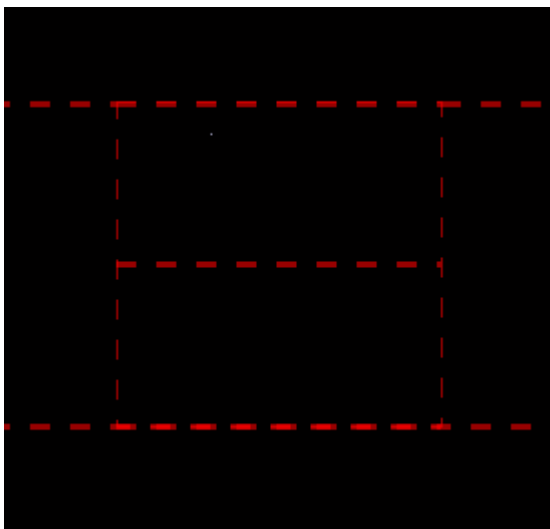

**Periods** shows periods and WSP and SP region boundaries.

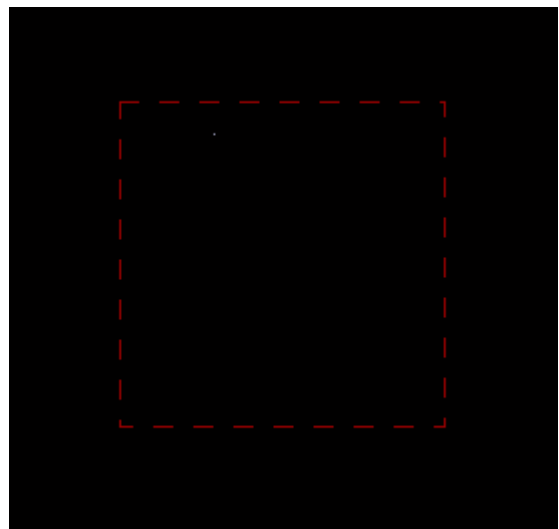


**Boundary** shows WSP and SP region boundaries.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

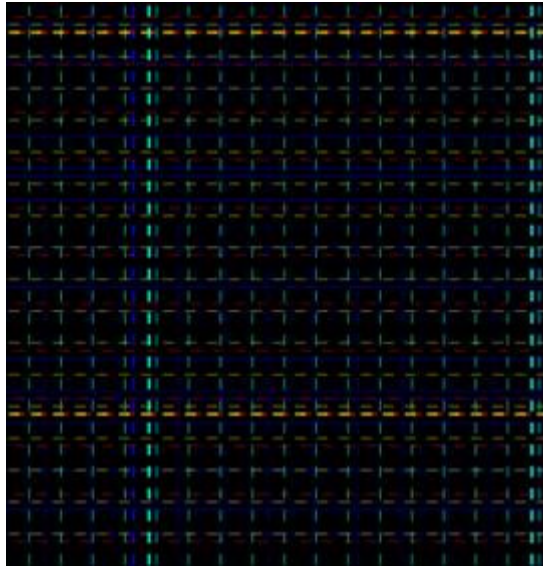

***Periods and Tracks*** shows both periods and tracks

The display mode can also be set in the *Snap Pattern Display* field of the Display Options form. For more information, see Controlling the Display of Width Spacing Patterns in Virtuoso Layout Suite L User Guide.

### ***Related Topics***

Launching the Track Pattern Assistant

Track Pattern Assistant Toolbar

Track Pattern Table

## Committing Active WSSPDefs as Global Defs

You can commit active WSSPDefs as global defs. This eliminates the need to select the RSP in the filter every time you want to select a related snap pattern.

To make an active WSSPDef a global def, select the active WSSPDef in the Track Pattern Assistant and click the *Commit to Global* icon.



The selections in the track pattern table are committed as global settings. If you set the active WSP pattern and remove the filter and then select \* in the *Filter* field, the global def is displayed in the track pattern table.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)



## Creating Width Spacing Pattern Regions

You create width spacing pattern regions for areas where you want to use a grid that is different from the global grid. Single-layer and multiple-layer regions can be created and are represented by an `oaFigGroup`.

To create a width spacing pattern region:

1. Click the *Create Region* icon on the toolbar in the *Track Pattern* assistant.
2. Press F3 to open the form.



The *Create Region* form appears.

**Note:** You can use the F3 button to show or hide the *Create Region* form.

Def	Layer	Pattern Groups	Patterns	Active Pattern	Shift Color	Flipping
M1_H_0_640	M1		m1new	m1new		Stepped
M1_wsp	M1		m1flat	m1flat		Stepped
M2_wsp	M2		m2min,m2minB	m2min		Stepped

1. Choose one of the following in the *Related Snap Patterns* list:

☐ Asterisk (\*)

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

Shows all the defined WSSPDefs in the *Snap Pattern Defs* list.

- ❑ A related snap pattern group name

Shows only the WSSPDefs for the selected related snap pattern group in the *Snap Pattern Defs* list.

- ❑ Row template:

The row templates are stored so that you can select a related snap pattern with row templates instead of individual elements.

You can also select multiple related snap patterns. Use **Shift** or **Ctrl** with the pointer to toggle between the related snap patterns. The combined related snap patterns are used to select the active WSSPDefs and allowed patterns.

Def	Layer	Pattern Groups	Patterns	Active Pattern	Shift Color	Flipping
M1_H_0_640	M1		m1new	m1new		Stepped
M1_wsp	M1		m1flat	m1flat		Stepped
M2_wsp	M2		m2min,m2minB	m2min		Stepped

2. Choose one or more WSSPDefs in the *Snap Pattern Defs* list.

3. Choose one or more WSSPDefs in the *Snap Pattern Defs* list.

A row appears in the table at the bottom of the form for each selected WSSPDef, showing the following:










- ❑ *Def* name

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

The different element types have icons. Along with the addition of row templates, in order to tell the difference between different element types, icons have been added next to the names as well. OrthoWSSPDefs have the black hashtag with red line showing which position – old style ortho WSSPDefs have no icon like M1\_ortho\_L. Snap patterns get black lines, and WSSPDefs get red&green lines which show the track direction.

	M1_alt	
	M1_H_0_640	WSSPDefs: Red and green lines show the track direction
	M1_wsp	
	M1_ortho_UL	OrthoWSSPDefs
	M1_ortho_U	
	M1ortho_Ub	
	M1_ortho_L	
	M1ortho_Lb	
	M2_wsp	
	FB48	Snap patterns

#### ☐ *Layer*

Display the layer name of the patterns (WSP).

#### ☐ *Pattern Group*

Choose the pattern groups (WSPG) to allow for the region from the drop-down list of defined pattern groups for the WSSPDef.

#### ☐ *Patterns*

Choose the patterns (WSP) to allow for the region from the drop-down list of defined patterns for the WSSPDef.

#### ☐ *Active Pattern*

Choose the active pattern from the drop-down list.

#### ☐ *Shift Color*

Choose whether colors should be shifted for the pattern.

#### ☐ *Flipping*

Choose the repeat mode for the region as one of the following: *Stepped*, *Flipped Odd*, or *Flipped Even*. *Unset* restores this value to the global grid default.

- ☐ *Stepped*: The pattern is the same in every period.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

- *Flipped Odd*: The pattern is flipped in every other period. The first period is not flipped.
- *Flipped Even*: The pattern is flipped in every other period. The first period is flipped.

**Note:** The available choices are dependent on the allowed repeat mode setting for the pattern.

**Note:** You can use the text box to filter the *Snap Pattern Defs* by name. When you apply the name filter for WSSPDefs, the selections that you make are retained in the Snap Pattern Defs list. Also, the selections are reflected in the region table.

#### 4. (Optional) Enter a *Name*.

When selected in the canvas, this region name will appear in *Track Pattern* assistant at the bottom-left of the form. If not specified, the region will be assigned a name in the following format: FG\_x where x is an integer.

#### 5. You can choose from one of the following WSP creation options:

- *Draw Area*: You can draw an area by specifying the options on this tab.

You can select the *Auto Complete Region* check box to enable the *No. of X periods* and *No. of Y periods* fields.

*Snapping*: You can derive the WSP region snapping values by specifying the options in this section. This section can be used to specify or select:

- *A Multiplier*: You can specify a multiplier for X and Y fields. The multiplier can be an integer, float, or fraction.
- *Snapping Options*: You can select the region snapping values from the following list of options:

max pitch: The pitch with the largest value of the selected WSSPDefs in horizontal or vertical direction.

manufacturing grid: The value specified in the manufacturing grid.

user units: One user unit. For the RSP that you select in the Create Region form, if the `regionSnapPitchVertical` and `regionSnapPitchHorizontal` values are specified in the `relatedSnapPatterns` in the technology database, these values are used as the user unit values for snapping the RSP.

window snap: This is the value specified in the *X Snap Spacing* and *Y Snap Spacing* values in the Display Options form.


## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

predefined value: A value predefined for a WSP.

- X/Y Calculated Values: The X and Y snapping values calculated based on options specified above are displayed after the equal to sign in the *Snapping* section.

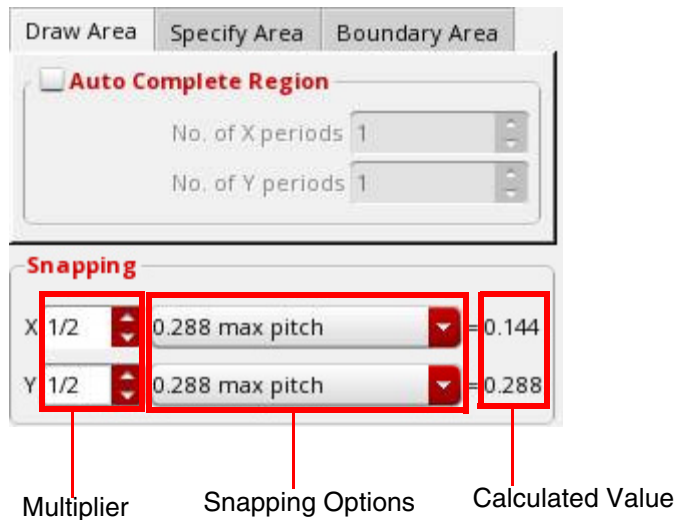

- *Specify Area*: You can specify the area of the width spacing pattern region by specifying the options on this tab.

You can specify the *X Origin*, *Y Origin*, *Width*, and *Height* for the width spacing pattern region.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

**Snapping:** The options in the snapping section are the same as those available in the *Draw Area* tab. These are explained in the *Draw Area* section above.

The screenshot shows the 'Specify Area' tab of the Track Pattern Assistant. The 'Snapping' section is highlighted with a red box. Below the box, three labels are connected to the section by red lines: 'Multiplier' points to the 'X 1/2' field, 'Snapping Options' points to the '0.288 max pitch' dropdown, and 'Calculated Value' points to the '= 0.144' field.

Tab	X Origin	Y Origin	Width	Height	Coordinates
Draw Area	4	6	4	6	((4 6) (8 12))

Snapping		
X 1/2	0.288 max pitch	= 0.144
Y 1/2	0.288 max pitch	= 0.144

Multiplier      Snapping Options      Calculated Value

- ❑ **Boundary Area:** You can specify the boundary area, PR boundary, or area boundary of the width spacing pattern region by specifying the options on this tab.

You can select the boundary, PR boundary or area boundary, from the *Boundary* drop-down list box.

You can also specify the boundary identification details in the *Layer Pattern* and *Purpose* fields. You can use the wildcard characters \* or ? for matching the layer name. The default value for the *Purpose* field is *id*. You can also specify a string that represents a purpose in the this field.

When you specify the layer and purpose, all shapes on matching LPPs are added to the *Boundary* drop-down list box.

The screenshot shows the 'Boundary Area' tab of the Track Pattern Assistant. The 'Boundary' field is set to 'PRBoundary'. The 'Boundary Identification' section has empty 'Layer' and 'Purpose' fields.

Tab	Boundary	Coordinates
Draw Area		
Specify Area	PRBoundary	((-0.445 -0.384) (3.395 2.304))

Boundary Identification	
Layer	
Purpose	

***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Editing Width Spacing Pattern Regions

You can change the attributes associated with WSP regions such as the region name, allowed patterns and pattern groups, the active pattern, wire types, and repeat mode.

To edit WSP regions:

1. Select one or more regions in the canvas.
2. Click the *Edit Region* icon on the toolbar in the *Track Pattern* assistant.



The Edit WSP Regions form appears.

The current region index and number of regions are shown at the top of the form with the WSSPDef and period for the current region. Each region group will be represented by a region for each of its layers. For example, a region group comprising three layers will be represented by three regions, one for each of the three layers.


3. Use the left and right arrows at the upper-left corner of the form to scroll between the regions.
4. Choose the *Allowed Pattern Groups*, *Allowed Patterns*, the *Active Pattern*, and *Wire Types* in the respective lists for the region.
5. Click *Flip Options* to view or change the repeat mode for a pattern in the region.



## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

The Pattern Flipping form appears.

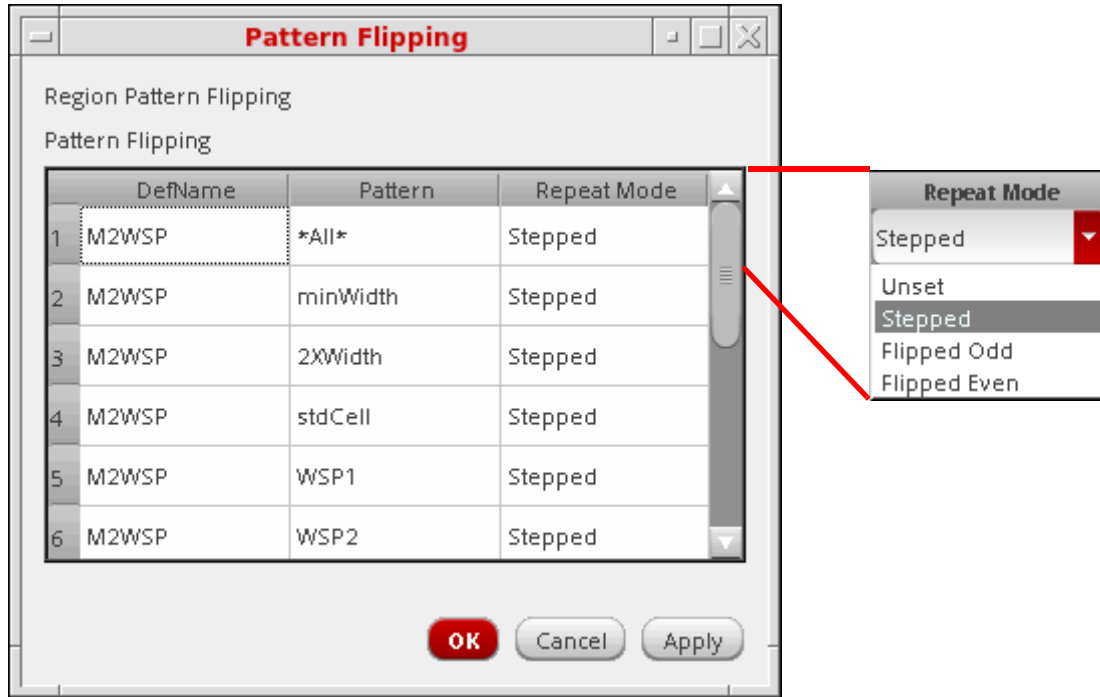

The default repeat mode for a WSSPDef in the region is the first table entry for the WSSPDef with *Pattern* *\*All\**. All patterns in the WSSPDef will have the same repeat mode unless you change individual settings in the *Repeat Mode* column.

Choose the default repeat mode or individual pattern repeat modes for the region as one of the following: *Stepped*, *Flipped Odd*, or *Flipped Even* from the respective row in the *Repeat Mode* column. *Unset* restores the value to the global grid repeat mode for a WSSPDef, or to the default for the WSSPDef if you are unsetting an individual pattern.

- ☐ *Stepped*: The pattern is the same in every period.
- ☐ *Flipped Odd*: The pattern is flipped in every other period. The first period is not flipped.
- ☐ *Flipped Even*: The pattern is flipped in every other period. The first period is flipped.

**Note:** The available choices are dependent on the allowed repeat mode setting for the pattern.

6. Click *OK* or *Apply* to set the changes.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

#### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Stretching Width Spacing Pattern Regions

You can stretch a width spacing pattern region. The region is stretched based on the *Number of X periods/Number of Y periods* or a combination of *X Step/Y Step* and *Multiplier*.

To stretch a width spacing pattern region:

1. Click the *Stretch Region* icon on the toolbar in the *Track Pattern* assistant.
2. Press F3 to open the form.



The Stretch Region form appears.

A screenshot of the 'Stretch Region' dialog box. It has three tabs: 'Draw Area', 'Specify Area', and 'Boundary Area'. The 'Specify Area' tab is active. Under the 'Auto Increment Region' section, there are two input fields: 'No. of X periods' and 'No. of Y periods', both set to '1'. Below this is a 'Snapping' section with two rows. The first row is for 'X' with a multiplier of '2' and a snap value of '0.001 window snap', resulting in '= 0.002'. The second row is for 'Y' with a multiplier of '2' and a snap value of '0.001 window snap', also resulting in '= 0.002'. A 'Cancel' button is at the bottom right.

3. Select the *Auto Increment Region* check box to enable the *No. of X periods* and *No. of Y periods* fields. The width spacing pattern region will be stretched based in these values.
4. Specify the multipliers in the *Snapping* section. You can specify a multiplier for X and Y fields. The multiplier can be an integer, float, or fraction. You can select the region snapping values from the drop-down list. The X and Y snapping values calculated based on options specified above are displayed after the equal to sign in the *Snapping* section.

The width spacing pattern region is stretched based on the values specified on the *Stretch Region* form.

**Note:** The row region which is at the same location as the width spacing pattern region is also stretched when the *Stretch Region* command is selected.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

#### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Choosing the Global Grid Settings

To specify the repeat mode, DEF offsets, and the offset reference for the WSSPDefs in the design:

1. Click the *Design* icon on the toolbar in the *Track Pattern* assistant.



The Design Settings form appears.

**Design Settings**

DEF Offsets      Relative To: prBoundary

	DefName	Direction	Offset
1	M2WSP	Vertical	0
2	M3WSP	Horizontal	0
3	M4WSP	Vertical	0

Pattern Flipping

	DefName	Pattern	Repeat Mode
1	M2WSP	minWidth	Stepped
2	M3WSP	minWidth	Stepped
3	M4WSP	minWidth	Stepped


OK Cancel Apply

2. Choose whether the *DEF Offsets* are *Relative To prBoundary* or *Origin* from the drop-down menu.
3. For each WSSPDef in the *DEF Offsets* table, enter the offset in the *Offset* column.


For cellview snap pattern offset constraint, the offset is displayed in light blue.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

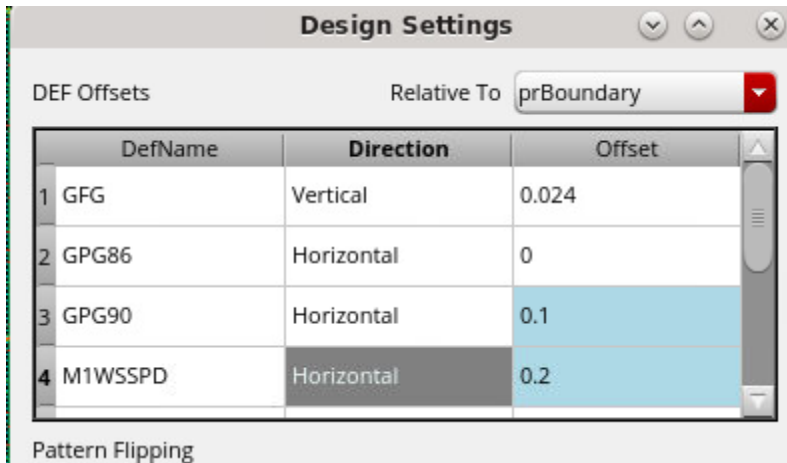

You can delete the constraint from the context-sensitive menu.

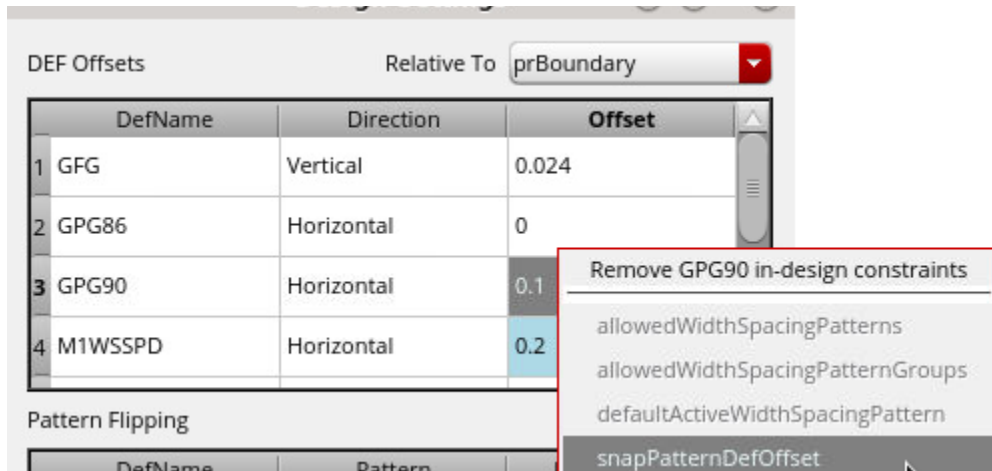

- For each *Pattern* in the *Pattern Flipping* table, choose the *Repeat Mode* for the global grid as one of the following: *Stepped*, *Flipped Odd*, or *Flipped Even*. *Unset* restores this value to the global grid default.

- ☐ *Stepped*: The pattern is the same in every period.
- ☐ *Flipped Odd*: The pattern is flipped in every other period. The first period is not flipped.
- ☐ *Flipped Even*: The pattern is flipped in every other period. The first period is flipped.

**Note:** The available choices are dependent on the allowed repeat mode setting for the pattern.

- Click *OK* or *Apply* to set the values.

***Related Topics***

[Launching the Track Pattern Assistant](#)


[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Pulling Up Patterns from a Subcell

To pull up the WSSPDefs for a single subcell or all instances of an instance master:

1. Select an instance that has WSSPDefs in the layout.
2. Click *Pull Up One* (for only this instance), *Pull Up All* (for all the instances of an instance master), *Pull Up WSPs For Layers* (for all instances of a layer) icons on the toolbar in the *Track Pattern* assistant. When you select *Pull Up WSPs For Layers*, you can select the layers to be used to pull up the WSPs.

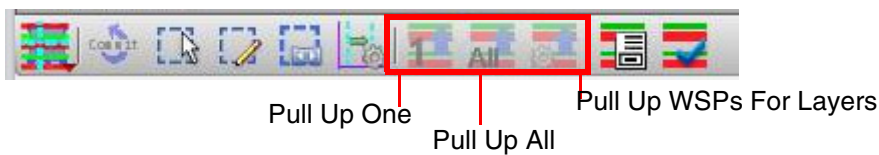

- ☐ All the WSPs and WSSPDefs that are defined in the instance master are copied to the level 0 design, if they are not already present in the level 0 design.
- ☐ All pattern regions and their attributes are copied from level 1 to level 0.
- ☐ A pattern region is created for every active SPDef in the instance master using the PR boundary, if it is set, or the bounding box of the instance master, if the PR boundary is not set. The regions will be named *def\_cell\_inst*, where *def* is the SPDef name, *cell* is the cell name, and *inst* is the instance name.
- ☐ A figGroup is created with all instance boundary pattern regions as members. The figGroup for the global WSPs is named *wspRegion\_cell\_inst* and local pattern regions, if they exist, are named *figGrp\_cell\_inst*, where *figGrp* is the local region name, *cell* is the cell name, and *inst* is the instance name.

You can select and view the newly created figGroups using the Navigator assistant.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)



## Pushing down WSSPDefs in EIP

You can use the *EIP Auto Pushdown Options* icon on the toolbar in the *Track Pattern* assistant to have pins in a subcell snap to the top-level WSP tracks.

This option lets you copy WSPs from the parent cell into the subcell when entering Edit-in-place. You could use this to adjust pin locations in subcells to match the top level cell's WSP locations. However, all standard WSP-based functionality is still applicable, such as there is no limitation to perform edits to pins. This means that pathSegs and wires also snap to the pushed down WSPs.

If the *Enable Auto WSSPDef Pushdown* option is enabled on the EIP Auto Pushdown Options form, the WSPs are pulled down on the desired layers in the subcell. The subcell is renamed based on the top-level cell name to reflect the origin of the WSPs.

To push down WSSPDefs snap to the top-level WSP tracks:

1. Select an instance that has WSSPDefs in the layout.
2. Click the *EIP Auto Pushdown Options* icon on the toolbar in the *Track Pattern* assistant.




EIP Auto Pushdown Options

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

The EIP Auto Pushdown Options form opens.

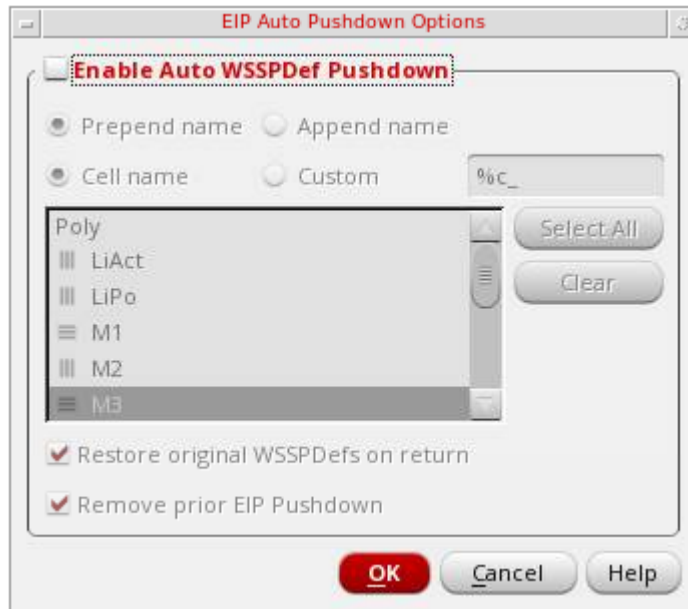

3. Select the *Enable Auto WSSPDef Pushdown* check box.
4. Select prepend name, append name, cell name or custom to add the parent cellview name appropriately to the WSSPDef name that is pulled down.
5. Select the pushdown layer from the list box.
6. Select the *Restore original WSSPDefs on return* check box to turn to top and revert the subcell to the same active WSPs present prior to the EIP pushdown.
7. Select the *Remove prior EIP Pushdown* check box to remove the WSPs that have been created in prior EIP pushdowns.

**Note:** You can also toggle indexed track custom display. This icon is available when the environment variable, `showIndexDisplayBtn`, is set to `t`.

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Pushing down WSSPDefs in Hierarchy

The *Hierarchy Auto Pushdown Options* icon is available in the *Track Pattern* assistant if you set the `tpaShowHierPushdownBtn` to `t`.

You can use the *Hierarchy Auto Pushdown Options* icon on the toolbar in the *Track Pattern* assistant to push WSSPDefs in hierarchy.


To push the WSSPDefs in heirarchy:

1. Select an instance that has WSSPDefs in the layout.
2. Click the *Hierarchy Pushdown Options* icon on the toolbar in the *Track Pattern* assistant.



Hierarchy Pushdown Options

The *tpaHierPushdown* form opens.

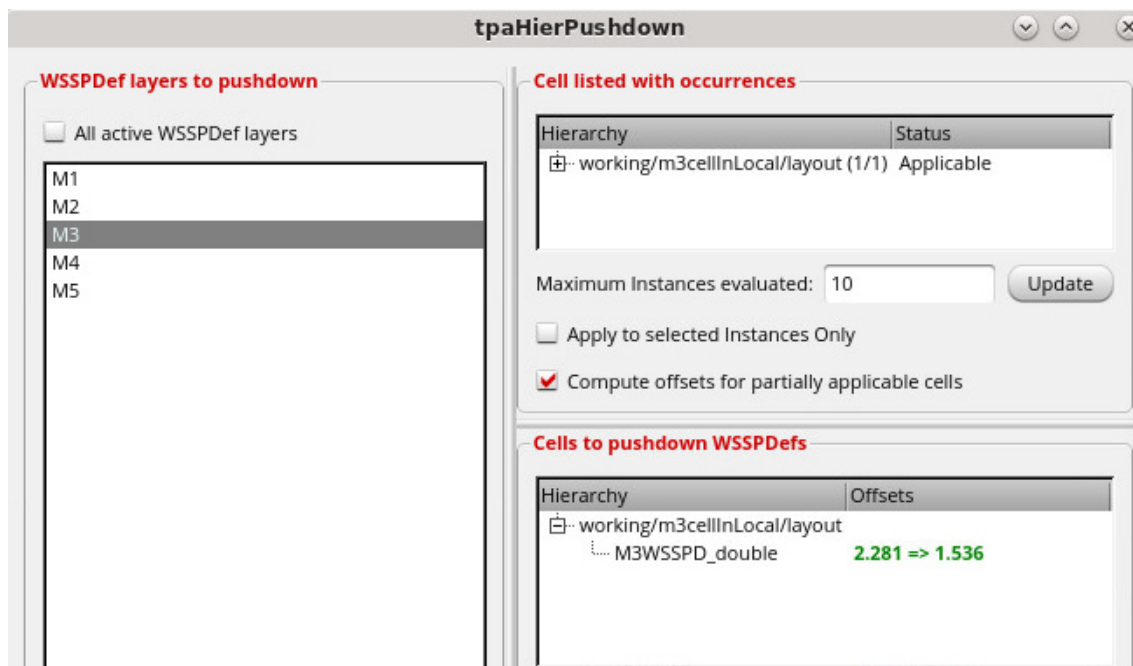A screenshot of the 'tpaHierPushdown' dialog box. The dialog has a title bar with standard window controls. It is divided into two main sections. The left section, titled 'WSSPDef layers to pushdown', contains a checkbox 'All active WSSPDef layers' and a list box with items M1, M2, M3 (selected), M4, and M5. The right section, titled 'Cell listed with occurrences', contains a table with columns 'Hierarchy' and 'Status'. The table has one row: 'working/m3cellInLocal/layout (1/1)' with status 'Applicable'. Below the table is a text field 'Maximum Instances evaluated:' with the value '10' and an 'Update' button. There are two checkboxes: 'Apply to selected Instances Only' (unchecked) and 'Compute offsets for partially applicable cells' (checked). At the bottom, there is another section titled 'Cells to pushdown WSSPDefs' containing a table with columns 'Hierarchy' and 'Offsets'. This table has two rows: 'working/m3cellInLocal/layout' and 'M3WSSPD\_double' with an offset value '2.281 => 1.536'.

3. Select the WSSPDefs layers to pushdown from the *WSSPDefs layers to pushdown* section.

## Virtuoso Width Spacing Patterns User Guide


### Track Pattern Assistant

---

4. The *Cell listed with occurrences*, *Cells to pushdown WSSPDefs*, and *Occurrences with offset conflicts* sections are listed.
5. Specify the maximum number of instances to be evaluated in the *Maximum Instances evaluated* option.
6. Select *Apply to selected Instances Only* or *Compute offsets for partially applicable cells* to select these options for the cell listed with occurrences.

This CCR introduces pushing down local region WSPs in the `_tpaHierPushdownDialog`

When you have instances that are inside local regions, they are considered for pushing down the WSP of the local region into the sub cell. If an instance crosses a WSP local region boundary, it is not considered for pushdown and is marked as *Ignored*.

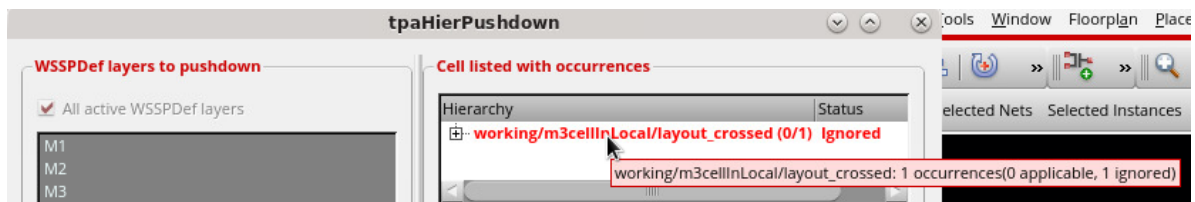

When multiple instances are fully inside or outside local regions, if they have different WSPs or periods, they are marked as conflicts, and they can be selected for forced pushdown.

The local regions push the local region WSP into the sub cell, make it the active WSP, and align the offset.

## Related Topics

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

# Virtuoso Width Spacing Patterns User Guide

## Track Pattern Assistant

### Launching the WSP Manager

You can launch the WSP Manager from the *Track Pattern* assistant.

**Note:** You should set the `tpaShowWSPBtn` environment variable to `nil` to remove the *WSP Manager* icon from the *Track Pattern* assistant toolbar.

To launch the WSP Manager, click the *WSP Manager* icon on the toolbar in the *Track Pattern* assistant.



The *WSP Manager* form appears.

A screenshot of the WSP Manager dialog box. The title bar says "WSP Manager". There are four tabs: "Edit" (selected), "Import", "Derive", and "Options". The "Pattern" section has fields for "Name", "Layer", and "Track Direction", each with a dropdown arrow. Below these are checkboxes for "Auto-Compute Period" and "Period Offset", both set to 0. The "Period Repeat" section shows "Allowed Repeat Mode: any; Default Repeat Mode: none; Repeat Offset: all". The "Tracks" section shows "0 tracks", a "Track Color" dropdown set to "Alternate", and a "First Track Offset" field set to 0. At the bottom is a table with columns: Width, Spacing, Repeat, Wire Type, Color, and Display Packet. The table is currently empty. At the very bottom are buttons: "Create", "View", "Clear", "Delete", "Close" (in a red box), and "Help".

***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Launching the WSP Active Checker

You can launch *WSP Active Checker* from the *Track Pattern* assistant. To launch it, click the *WSP Active Checker* icon on the toolbar in the *Track Pattern* assistant.



The *Batch Checker* form appears.

A screenshot of the 'Batch Checker' dialog box. The dialog has a title bar 'Batch Checker'. On the left is a 'Check' list with the following items: 'Routability', 'Process Rules' (checked), 'Connectivity', 'Specialty Routing', 'Placement', 'Fabrication', and 'WSP | SP Active' (checked). The main area is divided into three sections: 'Scope' with radio buttons for 'Current Editable Cellview' (selected) and 'Area' (with a 'Select' button); 'Filter Options' with 'Hierarchy Depth' set to 0, 'Marker Limit' set to 1000, 'Select LPPs by' with radio buttons for 'Palette Visibility' (selected) and 'Choices' (with 'Layer' and 'Purposes' sub-options), and checkboxes for 'Merge Same Layer Shapes' (checked), 'Exclude Blockage', and 'Ignore Valid Jogs'; and 'Check For' with checkboxes for 'Color' (checked), 'Width' (checked), and 'Wire Type' (checked). At the bottom are buttons for 'OK', 'Cancel', 'Apply', 'Defaults', and 'Help'.

## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

#### ***Related Topics***

[Launching the Track Pattern Assistant](#)


[Track Pattern Assistant Toolbar](#)



[Track Pattern Table](#)



### Track Pattern Assistant Customization

You can customize the *Track Pattern* assistant in the following ways:

- You can control the visibility of the *Filter* section by expanding or collapsing it using the icon, .
- You can also click and drag the horizontal section divider to control the amount of information shown in the *Filter* section.

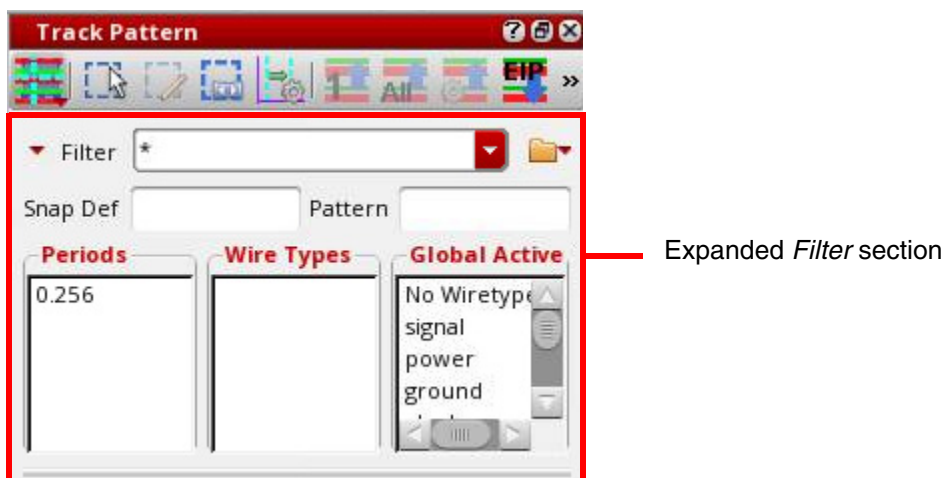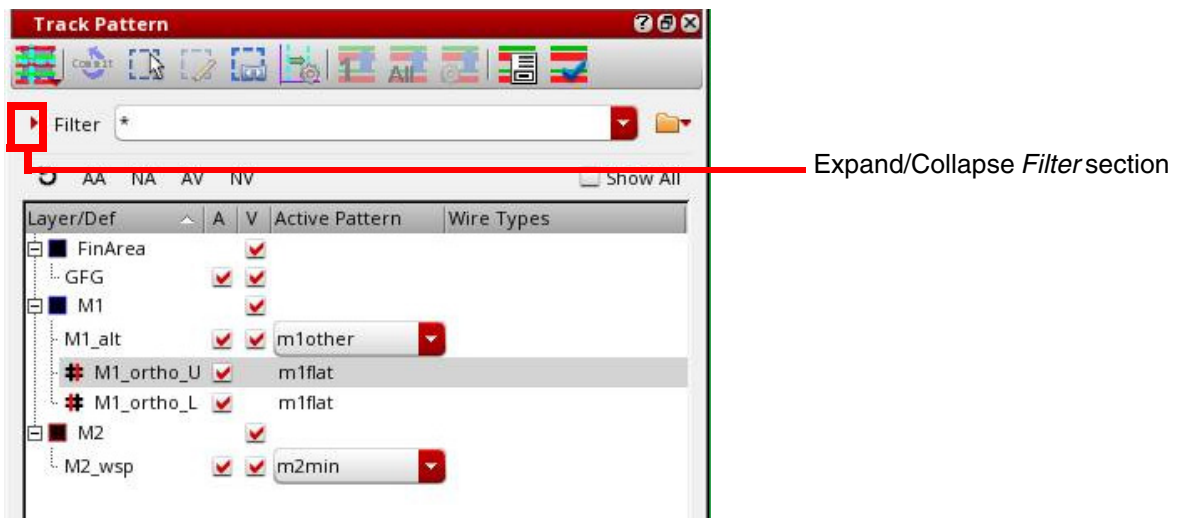

- Click and drag table column headers to the left or right to reorder columns.
- Click table column dividers to resize the columns.

# Virtuoso Width Spacing Patterns User Guide

## Track Pattern Assistant

- Click the *Layer/Def* column to reorder the layers in an ascending or descending order.

The screenshot shows the Track Pattern Assistant window with several sections and annotations:

- Filter:** A dropdown menu showing "groupBasic". A red box highlights the folder icon next to it, with an annotation: "Load or save filter file to/from the disk".
- Periods:** A list box containing "0.288" and "0.384".
- Wire Types:** A list box containing "No Wiretype", "signal", "power", "ground", and "clock".
- Global Active:** A list box containing "No Wiretype", "signal", "power", "ground", and "clock".
- Section Divider:** A red box highlights the horizontal line between the filter section and the table section, with an annotation: "Click and drag the section divider to resize the *Filter* section."
- Table:** A table with columns: "Layer/Def", "A", "V", "Active Pattern", and "Wire T". The "Layer/Def" column header is highlighted with a red box, with an annotation: "Click the *Layer/Def* column header to reorder the layers." The "A" and "V" column headers are also highlighted with red boxes, with an annotation: "Click and drag column headers to reorder." The "Active Pattern" column header is highlighted with a red box, with an annotation: "Click and drag column dividers to resize columns."
- Table Content:** The table contains several rows of data, including "myRowTemplate", "RR\_myRowTemplate0", "M1", "M1\_wsp", "M1ortho\_Lb", and "M2".

The inset screenshot shows the Track Pattern Assistant window with a different view. The "Filter" dropdown is set to "\*". The "Periods" list box contains "0.384". The "Wire Type" list box is empty. The "Global Active" list box contains "No Wiretype", "signal", "power", "ground", and "clock". The table section is also visible, showing columns "Layer/Def", "A", "V", "Active Pattern", and "Wire T". The "Layer/Def" column header is highlighted with a red box, with an annotation: "Click the *Layer/Def* column header to reorder the layers." The "A" and "V" column headers are also highlighted with red boxes, with an annotation: "Click and drag column headers to reorder." The "Active Pattern" column header is highlighted with a red box, with an annotation: "Click and drag column dividers to resize columns."

## Related Topics


[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

## Creation and Editing of Related Snap Pattern Group

You can create or edit related snap patterns using the *Create RSP* option and the options in the Create/Edit Related Snap Pattern Group form.

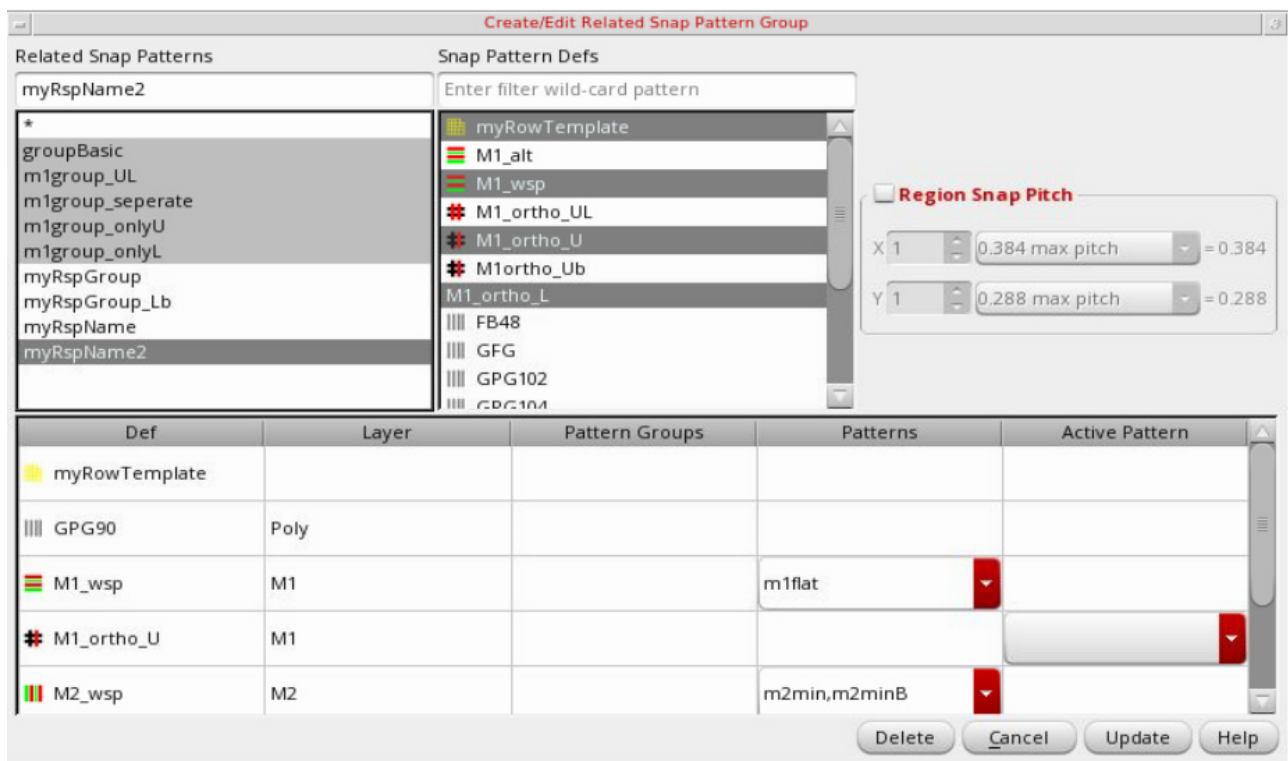

You can select the snap pattern defs for a related snap pattern. You can also delete a selected RSP using the *Delete* button.


## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant

---

You can also select multiple related snap patterns. Use `Shift` or `Ctrl` with the pointer to toggle between the related snap patterns. The combined related snap patterns are used to select the active WSSPDefs and allowed patterns.

You can select the *Region Snap Pitch* check box to specify the *X* and *Y* attributes for the pitch.

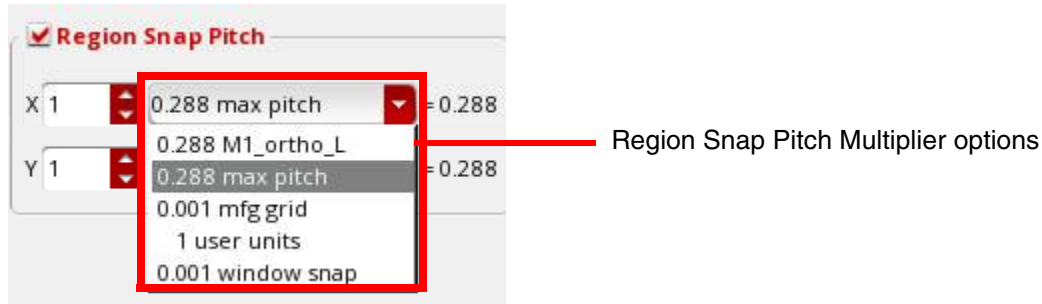

### ***Related Topics***

[Launching the Track Pattern Assistant](#)

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)


## Generating Shapes for Layout Verification

The WSP shape generator utility creates layers, such as diffCheck, as required on the top level of the current cellview for DRC layout verification. When you use this utility, any existing hierarchical shapes or blockages on the layer are placed as cutouts. The generated shapes are derived from WSP tracks and design rules are not applied on these shapes. If you are using region id shapes, you must to space these shapes an appropriate distance apart to avoid minimum length violations being created.

To open the WSP shape generator utility:

1. Choose *Tools – Create shapes from Width Spacing Pattern*.

The Shape Generator form is displayed.

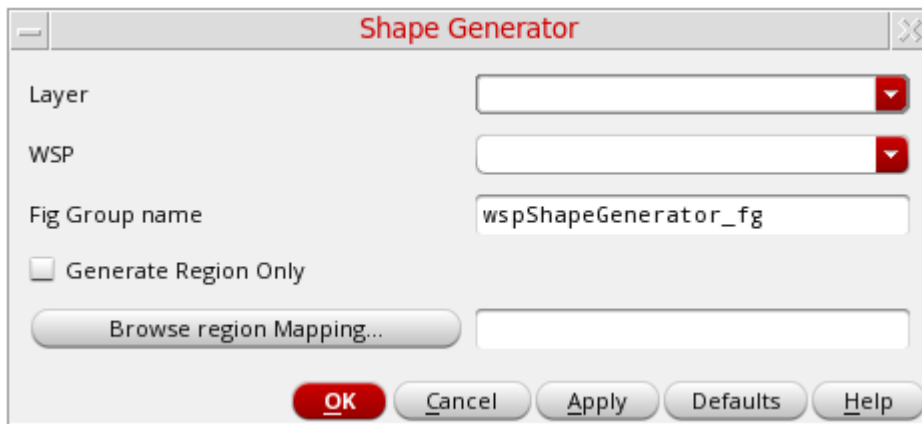

2. Select the layer on which the shapes need to be generated from a WSP.
3. Select the WSP from the drop-down. Specify the fig group name inside which the shapes that are generated are to be placed.

The default fig group name is `cellview_fg`. If you do not specify name in the fig group field, the layer shapes are generated at the top level instead of being placed inside a fig group.

4. Select the *Generate Region Only* option if you want to use the region map file WSP selection and instead of WSP specified in the *WSP* field.
5. Click the *Browse region Mapping* button to select the region mapping file that should be used to guide where a specific WSP should be used instead of applying the selections in the fields above.

The mapping file specifies the name of the region ID layer or region ID layer-purpose pair followed by `layer:WSSPDef:WSP, RegionIDLayer:RegionIDPurpose`


## Virtuoso Width Spacing Patterns User Guide

### Track Pattern Assistant


---

`layer:WSSPDef:WSP`. If specifying a layer-purpose pair, it generates only the WSP shapes in the specified layer-purpose pair area. When you select this file, a temporary WSP local regions is created in the design and the generated shapes follow the local regions WSP patterns.

To ensure legal shapes are generated by the utility, blockage objects are used. If the blockage is partially overlapping a WSP track, the tracks are trimmed to prevent slivers from being created.

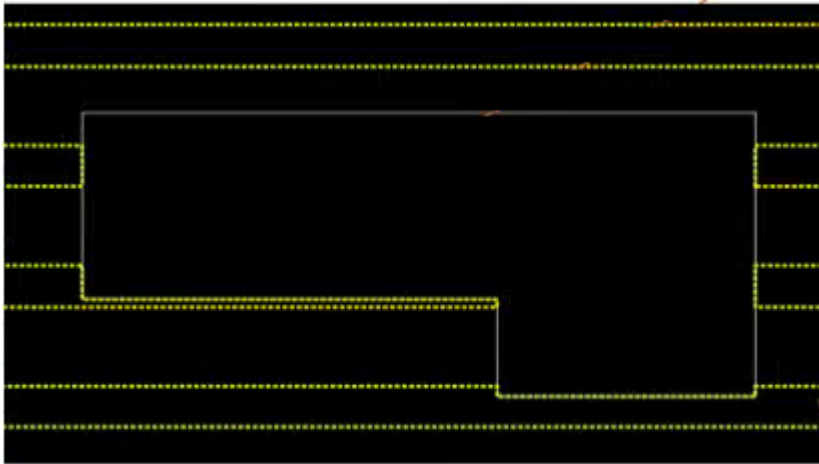

diffCheck Shapes before Removing Slivers

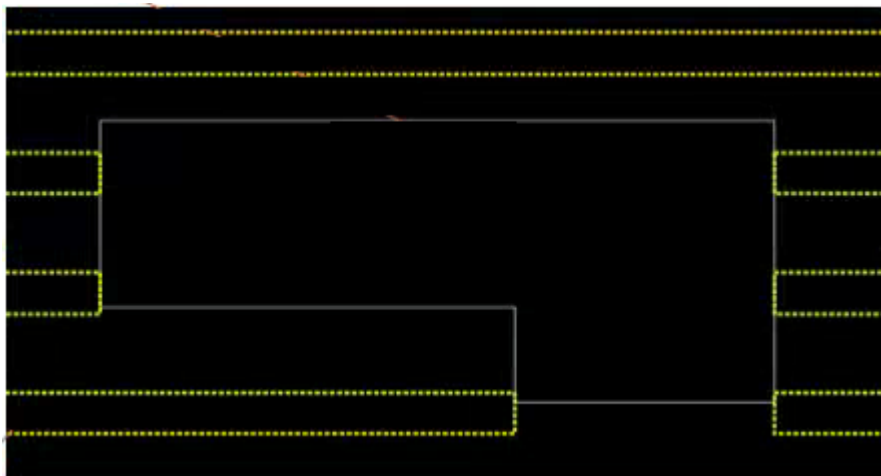

diffCheck Shapes after Removing Slivers

### ***Related Topics***

#### Launching the Track Pattern Assistant

# **Virtuoso Width Spacing Patterns User Guide**

## **Track Pattern Assistant**

---

[Track Pattern Assistant Toolbar](#)

[Track Pattern Table](#)

[Shape Generator](#)

# **Virtuoso Width Spacing Patterns User Guide**

## **Track Pattern Assistant**

---



---

## WSP Forms Reference

---

This appendix describes the Width Spacing Patterns (WSP) forms as they appear in the GUI.

- [Create/Edit Related Snap Pattern Group](#)
- [Shape Generator](#)
- [WSP Manager](#)

## Create/Edit Related Snap Pattern Group

Creates or edits related snap patterns.

Field	Description
<i>Related Snap Patterns</i>	Specifies the list of related snap patterns.
<i>Snap Pattern Defs</i>	Specifies the list of snap pattern definitions.
<i>Region Snap Pitch</i>	Specifies the X and Y pitch values for the RSP.
<i>Def Layer Pattern Groups Patterns Active Pattern</i>	This table specifies the snap pattern definition name, layer name, pattern groups, patterns, and active pattern for the selected snap pattern definition.

### ***Related Topics***

[Creation and Editing of Related Snap Pattern Group](#)

## Shape Generator

Creates layers, such as diffCheck, as required on the top level of the current cellview for DRC layout verification..

Field	Description
<i>Layer</i>	Specifies the layer on which the shapes are to be generated from a WSP pattern.
<i>WSP</i>	Specifies the name of the WSP to be used to generate shapes.
<i>Fig Group name</i>	Specifies the name of the fig group inside which the shapes that are generated are placed.
<i>Generate Region Only</i>	Specifies that the region map file is used for WSP selection instead of the pattern specified in the <i>WSP</i> field.
<i>Browse region Mapping</i>	Specifies the region mapping file that should be used to guide where a specific WSP should be used in the design.

### ***Related Topics***

[Generating Shapes for Layout Verification](#)

## WSP Manager

The WSP Manager form lets you create and modify width spacing patterns in the current design, copy width spacing patterns from another design, and generate width spacing patterns from existing layout shapes.. The form contains the following tabs.

Tab	Description
<u>Edit</u>	Lets you create and modify width spacing patterns in the current design.
<u>Import</u>	Lets you copy width spacing patterns from another design.
<u>Derive</u>	Lets you generate width spacing patterns from existing layout shapes in the search box Region.
<u>Options</u>	Lets you specify the options to be used when creating, modifying, copying, or generating width spacing patterns. .

### Edit

The following table describes the fields available on the *Edit* tab of the WSP Manager form.

Field	Description
<b><i>Pattern</i></b>	Specifies the pattern details, such as name, layer, and direction.
<i>Name</i>	Specifies the width spacing pattern name. If the pattern is defined in a technology library that is attached to the design, the technology library name is shown in parentheses. Patterns with an asterisk (*) are used in multiple layers or multiple WSSPDefs. By default, no name is specified.
<i>Layer</i>	Specifies the layer for the width spacing pattern tracks. Choose a layer from the drop-down list box. By default, no layer is specified.
<i>Track Direction</i>	Specifies the direction for the width spacing pattern tracks. This is usually the same as the routing layer direction. Choices are <i>Horizontal</i> or <i>Vertical</i> . By default, the track direction is not specified.
<i>Auto-Compute</i>	Computes the period based on the track setup and shows the value in the <i>Period</i> field.

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

Field	Description
<i>Period</i>	Specifies the width spacing snap pattern period definition when <i>Auto-Compute</i> is not selected. When <i>Auto-Compute</i> is selected, the computed period based on the track setup is shown. You can specify only positive values in this field.
<i>Period Offset</i>	Specifies the global pattern offset (the distance from the start of the pattern to the PR boundary, if it exists, or to the origin in the axis specified by the <i>Track Direction</i> ). You can specify only positive values in this field.
<b>Pattern Repeat</b>	Specifies the period repeat options.
<i>Allowed Repeat Mode</i>	Specifies the allowed repeat modes for the width spacing pattern. Choices are <i>Any</i> , <i>None</i> , <i>Stepped Only</i> , or <i>Flipped Only</i> .
<i>Default Repeat Mode</i>	Specifies the default repeat mode for the width spacing pattern. Choices are <i>None</i> , <i>Stepped</i> , <i>Flipped Starts With Odd</i> , or <i>Flipped Starts With Even</i> . The default value is <i>t</i> .
<i>Repeat Offset</i>	Specifies how the <i>First Track Offset</i> is to be applied. Choices are <i>First Period Only</i> or <i>All Periods</i> .
<b>Tracks</b>	Configures the tracks for the pattern, and choose options for the track color, spacing mode, and first track offset.
<i>Track Color</i>	Specifies how colors are assigned to tracks. Choices are <i>Alternate</i> , <i>As Specified</i> , and <i>As Specified with Period Shift</i> .
<i>First Track Offset</i>	Specifies the offset to the first track from the beginning of the pattern period.

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

Field	Description
<i>Tracks</i>	<p>Defines the tracks for the pattern in rows, with the first track as row 0. The table columns can be shown or hidden.</p> <p>The table columns are:</p> <ul style="list-style-type: none"><li>■ <i>Width</i> is the track width in user units.</li><li>■ <i>Spacing</i> is the spacing between tracks, in user units.</li><li>■ <i>Repeat</i> is the number of times to repeat the track.</li><li>■ <i>Wire Type</i> specifies the wire type for the track as a user-defined type, or a wire type or signal type that is predefined in the technology library.</li><li>■ <i>Color</i> specifies the mask color for the track.</li><li>■ <i>Display Packet</i> specifies the display packet name for the WSP track.</li></ul>
<b>Action Buttons</b>	<p>The action buttons to create and modify the width spacing patterns.</p>
<i>Create</i>	<p>Adds the width spacing pattern to the design database.</p>
<i>View</i>	<p>Displays a preview the pattern without saving it to the design database.</p>
<i>Clear</i>	<p>Resets the <i>Edit</i> fields to their environment variable value, if available, or their default value. The <i>Tracks</i> table is cleared.</p>
<i>Delete</i>	<p>Removes the width spacing pattern from the design database.</p>

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

## Import

The following table describes the fields available on the *Import* tab of the WSP Manager form.

Field	Description
<i>Library</i>	Specifies the name of the library to be imported.
<i>Cell</i>	Specifies the name of the cell to be imported.
<i>View</i>	Specifies the name of the view to be imported.
<i>Import as global</i>	Specifies the imported WSP and its associated definition is global. This makes the width spacing patterns visible globally.
<i>Tracks</i>	<p>Displays the details of the tracks for the pattern selected in the <i>WSPs</i> section. The table columns can be shown or hidden.</p> <p>The table columns are:</p> <ul style="list-style-type: none"><li>■ <i>Width</i> is the track width in user units.</li><li>■ <i>Spacing</i> is the spacing between tracks, in user units.</li><li>■ <i>Repeat</i> is the number of times to repeat the track.</li><li>■ <i>Wire Type</i> sets the wire type for the track as a user-defined type, or a wire or signal type that is defined in the technology library.</li><li>■ <i>Color</i> sets the mask color for the track.</li><li>■ <i>Display Packet</i> specifies the display packet name for the WSP track.</li></ul>
<b>Action Buttons</b>	The action buttons to copy width spacing patterns from another design.
<i>Import All</i>	Imports all the width spacing patterns in the <i>WSPs</i> section to the current design.
<i>Import Selected</i>	Imports the width spacing patterns that are selected in the <i>WSPs</i> section to the current design.

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

---

<i>View</i>	Displays a preview the pattern without saving it to the design database.
-------------	--

---



## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

## Derive

The following table describes the fields available on the *Derive* tab of the WSP Manager form.

Field	Description
<b><i>Region</i></b>	Specifies the region of the search box.
<i>Origin X</i>	Specifies the x-coordinate of the origin for the search box.
<i>Origin Y</i>	Specifies the y-coordinate of the origin for the search box.
<i>Width</i>	width of the search box in the x-axis direction.
<i>Height</i>	height of the search box in the y-axis direction.
<i>Draw</i>	lets you click in the canvas to set the vertices of the search box. This automatically sets the <i>Origin X</i> , <i>Origin Y</i> , <i>Width</i> , and <i>Height</i> fields.
<i>Update</i>	draws the search box in the canvas based on the <i>Origin X</i> , <i>Origin Y</i> , <i>Width</i> , and <i>Height</i> settings, and updates the width spacing patterns in the <i>WSPs</i> list.
<i>Enable Smart Snapping</i>	identifies objects close to the mouse pointer and snaps to them when drawing the search box.
<i>Shift Color</i>	shifts track colors when a pattern is repeated.
<i>Include Blockages</i>	adds tracks for blockage shapes.
<i>WSPs</i>	Lists the width spacing patterns generated from the shapes in the search box, by layer.

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

<i>Tracks</i>	<p>shows the details of the tracks for the pattern selected in the <i>WSPs</i> section <i>when only one pattern is selected</i>.</p> <ul style="list-style-type: none"><li>■ <i>Width</i> is the track width in user units.</li><li>■ <i>Spacing</i> is the spacing between tracks in user units.</li><li>■ <i>Repeat</i> is the number of times to repeat the track.</li><li>■ <i>Wire Type</i> specifies the wire type for the track as a user-defined type or a wire type or signal type that is predefined in the technology library.</li><li>■ <i>Color</i> specifies the mask color for the track.</li><li>■ <i>Display Packet</i> specifies the display packet name for the WSP track.</li></ul>
<b>Action Buttons</b>	The action buttons to generate width spacing patterns from existing layout shapes in the search box <i>Region</i> .
<i>Derive Selected</i>	Derives the selected width spacing patterns to the current design and displays the tracks in the canvas.
<i>View</i>	Displays a preview of the selected pattern without saving it to the design database.
<i>Clear</i>	removes the search box, clears the <i>Region</i> , <i>WSPs</i> , and <i>Tracks</i> fields in the <i>Derive</i> tab.

---

## Options

The following table describes the fields available on the *Options* tab of the WSP Manager form.

Field	Description
<b>General</b>	Specifies the general options for the WSP manager.
<i>Spacing Mode</i>	<p>Specifies how the spacing between tracks is measured. The choices are: <i>Edge to Edge</i> and <i>Center to Center</i>.</p> <ul style="list-style-type: none"><li>■ Center to Center: Measures the spacing from centerline to centerline between the tracks and for First Track Offset.</li><li>■ Edge to Edge</li><li>■ Measures the spacing from edge to edge between the tracks and for First Track Offset.</li></ul> <p>When you change the <i>Spacing Mode</i> in the <i>Options</i> tab, the spacing mode for all the tabs in the WSP Manager changes.</p>
<i>Auto clear name on layer change</i>	<p>Automatically clears the name in the <i>Layer</i> field on the <i>Edit</i> tab when you change the layer name. This ensures that an existing WSP is not overwritten by mistake.</p>

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

<i>Editing Mode</i>	<p>Specifies the editing mode for tracks. The choices are <i>Use Pattern Viewer (Period and Track table read-only)</i> and <i>Use WSP Manager (Pattern Viewer read-only)</i>.</p> <ul style="list-style-type: none"><li>■ <i>Use WSP Manager (Pattern Viewer read-only)</i>: Lets you update the tracks on the Edit tab. Then, you can preview the tracks.</li><li>■ <i>Use Pattern Viewer (Period and Track table read-only)</i>: Lets you edit the tracks graphically. The tracks table is updated based on the edits in the preview. You must make the edits in the first period region. The edits you can make include creating shapes, changing the colors of tracks, or deleting, stretching, or moving tracks.</li></ul>
<i>Enable new def as global</i>	Makes the new WSSPDef as a global WSSPDef and is set globally active if there are no pre-existing globally active definitions on the same layer.
<i>Enable def name editing</i>	Displays the <i>WSP Def Name</i> field on the <i>Edit</i> tab that lets you modify the WSSPDef name. The new name is used to create the WSSPDef.
<i>Filter Layers to valid routing layers</i>	Filters the layers listed in the <i>Layers</i> field on the Edit tab to valid routing layers. If this option is not selected, all layers are listed in the <i>Layers</i> field on the Edit tab.
<b><i>Initialize from layout</i></b>	Specifies the options that initialize from the layout.
<i>Use canvas visibility</i>	Uses the visibility options specified in the Palette Assistant and <i>Display Levels: Stop</i> in the <u>Display Options form</u> . If not selected, uses all the objects across hierarchies and all the layer-purpose pairs to generate the WSP.
<i>Ignore blockages</i>	Includes or excludes blockages when creating tracks.
<i>Ignore top level pins</i>	Includes or excludes pins at the top level when creating tracks.
<i>Verbose mode</i>	Displays debug messages in the CIW.
<i>Use aspect ratio of shapes</i>	Ignores the shapes that are not drawn along the right direction.

---

## Virtuoso Width Spacing Patterns User Guide

### WSP Forms Reference

---

#### ***Related Topics***

[Creating and Modifying WSPs](#)

[Importing WSPs from Another Design](#)

[Generation of WSPs from Existing Shapes](#)

[Specifying WSP Options](#)

## **Virtuoso Width Spacing Patterns User Guide**

### **WSP Forms Reference**

---

---

## WSP Environment Variables

---

The `layout` and `layout.wspMgr` environment variables associated with Width Spacing Patterns (WSPs) are listed below.

Only the environment variables documented in this chapter are supported for public use. All other WSP-related environment variables, regardless of their name or prefix, and undocumented aspects of the environment variables described below, are private and are subject to change at any time.

### ■ General WSP Environment Variables

- ☐ `figGroup`
- ☐ `layer`
- ☐ `regionMapFile`
- ☐ `regionOnly`
- ☐ `tpaShowWSPBtn`
- ☐ `wspPattern`
- ☐ `wspTemplateCell`
- ☐ `wspTemplateFile`

### ■ WSP Manager Environment Variables

- ☐ `Edit tab`
  - ☐ `autoComputePeriod`
  - ☐ `firstTrackOffset`
  - ☐ `patternRepeat`
  - ☐ `period`
  - ☐ `periodOffset`

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

- ☐ repeatOffset
- ☐ trackColor
- ☐ trackColumns
- ☐ Import tab
  - ☐ importCellName
  - ☐ importLibName
  - ☐ importViewName
- ☐ Derive tab
  - ☐ includeBlockages
  - ☐ shiftColor
  - ☐ smartSnap
- ☐ Options tab
  - ☐ autoClearOnLayerChange
  - ☐ ignoreBlockagesForInit
  - ☐ ignoreL0Pins
  - ☐ spacingMode
  - ☐ useAspectRatio
  - ☐ usePaletteVisibility
  - ☐ verbose

#### ■ Track Pattern Assistant Environment Variables

- ☐ activeSetsVisibility
- ☐ enableAutoPushdown
- ☐ pushdownLayers
- ☐ removePriorPushdown
- ☐ renameDefs
- ☐ restoreDefsOnReturn
- ☐ syncActive



## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

- ❑ tpaAutoRegionNameFromRSP
- ❑ tpaFilterFile
- ❑ tpaShowDisabled

## activateNewPatterns

```
layout.wspMgr activateNewPatterns 'boolean { t | nil }
```

### Description

Specifies whether the new WSPDef is global. The default value is `t`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Enable new def as global</i>

### Examples

```
envGetVal("layout.wspMgr" "activateNewPatterns")  
envSetVal("layout.wspMgr" "activateNewPatterns" 'boolean t)
```

#### **activeSetsVisibility**

```
layout.tpa activeSetsVisibility 'boolean { t | nil }
```

#### **Description**

Specifies that when you select active, visibility does not get selected. The default value is t.

#### **GUI Equivalent**

None

#### **Examples**

```
envGetVal("layout.tpa" "activeSetsVisibility")  
envSetVal("layout.tpa" "activeSetsVisibility" 'boolean t)
```

## autoClearOnLayerChange

```
layout.wspMgr autoClearOnLayerChange 'boolean { t | nil }
```

### Description

Specifies whether the name in the *Layer* field on the *Edit* tab is automatically cleared when you change the layer name. The default value is `nil`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Auto clear name on layer change</i>

### Examples

```
envGetVal("layout.wspMgr" "autoClearOnLayerChange")  
envSetVal("layout.wspMgr" "autoClearOnLayerChange" 'boolean t)
```

## autoComputePeriod

```
layout.wspMgr autoComputePeriod 'boolean { t | nil }
```

### Description

Specifies whether the period is automatically computed based on the tracks in the width spacing pattern. The default value is `nil`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Auto-Compute</i>

### Examples

```
envGetVal("layout.wspMgr" "autoComputePeriod")  
envSetVal("layout.wspMgr" "autoComputePeriod" 'boolean t)
```

## defNameEditing

```
layout.wspMgr defNameEditing 'boolean { t | nil }
```

### Description

Displays the *WSP Def Name* field on the *Edit* tab that lets you modify the WSSPDef name. The new name is used to create the WSSPDef. The default value is `nil`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Enable def name editing</i>

### Examples

```
envGetVal("layout.wspMgr" "defNameEditing")  
envSetVal("layout.wspMgr" "defNameEditing" 'boolean t)
```

## enableAutoPushdown

```
layout.tpa enableAutoPushdown 'boolean { t | nil }
```

### Description

Specifies that it copies Edit-In-Place for the specified layers. The default value is `nil`.

### GUI Equivalent

Command	<i>Assistant – Track Pattern – EIP Auto Pushdown Options</i>
Field	<i>Enable Auto WSSPDef Pushdown</i>

### Examples

```
envGetVal("layout.tpa" "enableAutoPushdown")
envSetVal("layout.tpa" "enableAutoPushdown" 'boolean t)
```

## firstTrackOffset

```
layout.wspMgr firstTrackOffset 'float offset_in_microns
```

### Description

Specifies the offset, in microns, from the first track to the beginning of the pattern period. The default value is 0.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>First Track Offset</i>

### Examples

```
envGetVal("layout.wspMgr" "firstTrackOffset")  
envSetVal("layout.wspMgr" "firstTrackOffset" 'float 1.0)
```



## hoff

```
layout.tpa hoff 'boolean { t | nil }
```

### Description

Enables or disables the *Hoff* check box in the Track Pattern table. The default value is `nil`.

### GUI Equivalent

Command	<i>Assistant – Track Pattern</i>
Field	<i>Hoff</i>

### Examples

```
envGetVal("layout.tpa" "hoff")  
envSetVal("layout.tpa" "hoff" 'boolean t)
```

## ignoreBlockagesForInit

```
layout.wspMgr ignoreBlockagesForInit 'boolean { t | nil }
```

### Description

Specifies whether to include or exclude blockages when creating tracks. The default value is `nil`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Ignore blockages</i>

### Examples

```
envGetVal("layout.wspMgr" "ignoreBlockagesForInit")
envSetVal("layout.wspMgr" "ignoreBlockagesForInit" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### ignoreL0Pins

```
layout.wspMgr ignoreL0Pins 'boolean { t | nil }
```

#### Description

Specifies whether to include or exclude pins at the top level when creating tracks. The default value is `nil`.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Ignore top level pins</i>

#### Examples

```
envGetVal("layout.wspMgr" "ignoreL0Pins")  
envSetVal("layout.wspMgr" "ignoreL0Pins" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### importCellName

```
layout.wspMgr importCellName 'string "any_cell_name"
```

#### Description

Sets the cell name of the cellview to import. The default value is " ".

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Cell</i>

#### Examples

```
envGetVal("layout.wspMgr" "importCellName")  
envSetVal("layout.wspMgr" "importCellName" 'string "m2_wsp1")
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### importLibName

```
layout.wspMgr importLibName 'string "any_lib_name"
```

#### Description

Sets the library name of the cellview to import. The default value is " ".

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Library</i>

#### Examples

```
envGetVal("layout.wspMgr" "importLibName")  
envSetVal("layout.wspMgr" "importLibName" 'string "myDemo")
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### importViewName

```
layout.wspMgr importViewName 'string "any_view_name"
```

#### Description

Sets the view name of the cellview to import. The default value is " ".

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>View</i>

#### Examples

```
envGetVal("layout.wspMgr" "importViewName")  
envSetVal("layout.wspMgr" "importViewName" 'string "layout")
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### includeBlockages

```
layout.wspMgr includeBlockages 'boolean { t | nil }
```

#### Description

Specifies whether to generate tracks for the blockage shapes in the search box of the canvas. The default value is `nil`.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Include Blockages</i>

#### Examples

```
envGetVal("layout.wspMgr" "includeBlockages")  
envSetVal("layout.wspMgr" "includeBlockages" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### patternRepeat

```
layout.wspMgr patternRepeat 'cyclic { "any" | "none" | "stepped" | "flipped" }
```

#### Description

Specifies the allowed repeat mode for the width spacing pattern. The default value is `any`.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Allowed Repeat Mode</i>

#### Examples

```
envGetVal("layout.wspMgr" "patternRepeat")  
envSetVal("layout.wspMgr" "patternRepeat" 'cyclic "stepped")
```



## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### period

```
layout.wspMgr period 'float period_in_microns
```

#### Description

Specifies the period, in microns, of the width spacing pattern. If you set this value, the autoComputePeriod environment variable should be set to `nil`. The default value is 0.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Period</i>

#### Examples

```
envGetVal("layout.wspMgr" "period")  
envSetVal("layout.wspMgr" "period" 'float 2.0)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### periodOffset

```
layout.wspMgr periodOffset 'float offset_in_microns
```

#### Description

Specifies the global period offset, the distance from the start of the width spacing pattern to the origin in the axis of the track direction. The default value is 0.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Period Offset</i>

#### Examples

```
envGetVal("layout.wspMgr" "periodOffset")  
envSetVal("layout.wspMgr" "periodOffset" 'float 2.5)
```

## pushdownLayers

```
layout.tpa pushdownLayers 'string "layername"
```

### Description

Specifies the layers that are to be pulled down on EIP. The default value is " ". This means that on enabling the *EIP Auto Pushdown Options*, the design is evaluated to preselect all the current active WSP layers.

### GUI Equivalent

Command	<i>Assistant – Track Pattern – EIP Auto Pushdown Options</i>
Field	<i>Layers list box</i>

### Examples

```
envGetVal("layout.tpa" "pushdownLayers")  
envSetVal("layout.tpa" "pushdownLayers" 'string "M1:M2")
```

## removePriorPushdown

```
layout.tpa removePriorPushdown 'boolean { t | nil }
```

### Description

Specifies whether to remove the WSPs that have been created in prior EIP pushdowns. The default value is `t`.

### GUI Equivalent

Command	<i>Assistant – Track Pattern – EIP Auto Pushdown Options</i>
Field	<i>Remove prior EIP Pushdown</i>

### Examples

```
envGetVal("layout.tpa" "removePriorPushdown")  
envSetVal("layout.tpa" "removePriorPushdown" 'boolean t)
```

## renameDefs

```
layout.tpa renameDefs 'string "layername"
```

### Description

Sets the radio buttons and the input text field when the *Enable Auto WSSPDef Pushdown* option is selected. The values are interpreted based on the content. The string value is used to determine how to adjust the WSP name when doing the EIP pushdown. If the value starts with *&*, the *Append name* radio button is selected. If the value has no *&*, or if it ends with an *&*, the *Prepend name* radio button is selected. If the value is *&\_%c*, the *Cell name* and *Append name* radio buttons are selected. If the value is *%c\_*, the *Prepend name* and *Cell name* radio buttons are selected. In other cases, *Custom* is selected.

### GUI Equivalent

Command	<i>Assistant – Track Pattern – EIP Auto Pushdown Options</i>
Field	<i>Auto WSSPDef Pushdown radio buttons and text field</i>

### Examples

```
envGetVal("layout.tpa" "renameDefs")
envSetVal("layout.tpa" "renameDefs" 'string "%c_")
```

## repeatOffset

```
layout.wspMgr repeatOffset 'cyclic { "first" | "all" }
```

### Description

Specifies whether the first track offset is to be applied to only the first period or to all the periods. The default value is `all`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Repeat Offset</i>

### Examples

```
envGetVal("layout.wspMgr" "repeatOffset")  
envSetVal("layout.wspMgr" "repeatOffset" 'cyclic "first")
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### shiftColor

```
layout.wspMgr shiftColor 'boolean { t | nil }
```

#### Description

Specifies whether track colors should be shifted when a pattern is repeated. The default value is `nil`.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Shift Color</i>

#### Examples

```
envGetVal("layout.wspMgr" "shiftColor")  
envSetVal("layout.wspMgr" "shiftColor" 'boolean t)
```

## showFCG

```
layout.tpa showFCG 'boolean { t | nil }
```

### Description

Enables or disables the *Show FCG* check box in the Track Pattern table. The default value is `nil`.

### GUI Equivalent

Command	<i>Assistant – Track Pattern</i>
Field	<i>Show FCG</i>

### Examples

```
envGetVal("layout.tpa" "showFCG")  
envSetVal("layout.tpa" "showFCG" 'boolean t)
```



## showFCGGUI

```
layout.tpa showFCGGUI 'boolean { t | nil }
```

### Description

Displays track patterns based on the constraints in the technology file in the Track Pattern table. The default value is `nil`.

### GUI Equivalent

Command	<i>Assistant – Track Pattern</i>
Field	<i>Show FCG</i>

### Examples

```
envGetVal("layout.tpa" "showFCGGUI")
envSetVal("layout.tpa" "showFCGGUI" 'boolean t)
```

## smartSnap

```
layout.wspMgr smartSnap 'boolean { t | nil }
```

### Description

Specifies whether edges of the search box are snapped to objects in the canvas when the search box is drawn. The default value is `nil`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Enable Smart Snapping</i>

### Examples

```
envGetVal("layout.wspMgr" "smartSnap")  
envSetVal("layout.wspMgr" "smartSnap" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

## spacingMode

```
layout.wspMgr spacingMode 'cyclic { "centerToCenter" | "edgeToEdge" }
```

### Description

Specifies how the spacing is to be measured between tracks for the width spacing pattern. The default value is `edgeToEdge`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Spacing Mode</i>

### Examples

```
envGetVal("layout.wspMgr" "spacingMode")  
envSetVal("layout.wspMgr" "spacingMode" 'cyclic "centerToCenter")
```

## syncActive

```
layout.tpa syncActive 'boolean { t | nil }
```

### Description

Synchronizes the active WSSPDefs in one window to other cellviews so that the active WSSPDefs match. When this environment variable is set to `nil`, each cellview has it's own constraints for active WSSPDefs. The default value is `nil`.

### GUI Equivalent

None

### Examples

```
envGetVal("layout.tpa" "syncActive")  
envSetVal("layout.tpa" "syncActive" 'boolean t)
```

## tpaAutoRegionNameFromRSP

```
layout tpaAutoRegionNameFromRSP 'boolean { t | nil }
```

### Description

Specifies when a related snap pattern is selected, the region name is automatically generated. The value specified by you for the region name is ignored. The default value is `nil`.

### GUI Equivalent

None

### Examples

```
envGetVal("layout" "tpaAutoRegionNameFromRSP")  
envSetVal("layout" "tpaAutoRegionNameFromRSP" 'boolean t)
```

#### **tpaFilterFile**

```
layout tpaFilterFile 'string "any_file_name"
```

#### **Description**

Determines the name of the TPA filter file that is to be loaded automatically when the Track Pattern assistant is initialized. The default value is " ".

#### **GUI Equivalent**

None

#### **Examples**

```
envGetVal("layout" "tpaFilterFile")  
envSetVal("layout" "tpaFilterFile" 'string "myTPA")
```

## tpaShowDisabled

```
layout tpaShowDisabled 'boolean { t | nil }
```

### Description

Specifies whether disabled WSSPDefs and global SPDefs are shown in the Track Pattern assistant Track Pattern table. The default value is `nil`.

### GUI Equivalent

Command	<i>Assistant – Track Pattern</i>
Field	<i>Show All</i>

### Examples

```
envGetVal("layout" "tpaShowDisabled")  
envSetVal("layout" "tpaShowDisabled" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### tpaShowWSPBtn

```
layout tpaShowWSPBtn 'boolean { t | nil }
```

#### Description

Displays the *WSP Manager* button in the Track Patter Assistant. The WSP selected in the Tracks Pattern table is selected in the *WSP Manager*.

#### GUI Equivalent

Command	<i>Assistant – Track Pattern</i>
Field	<i>WSP Manager</i>

#### Examples

```
envGetVal("layout" "tpaShowWSPBtn")  
envSetVal("layout" "tpaShowWSPBtn" 'boolean t)
```



## trackColor

```
layout.wspMgr trackColor 'cyclic { "alternate" | "user" | "shift" }
```

### Description

Specifies how tracks are assigned colors.

- `alternate` cycles through mask colors in order, starting from the first track's color.
- `user` assigns the colors explicitly from the track table.
- `shift` assigns the colors explicitly from the track table for the first period, then applies a shift for each subsequent period.

The default value is `alternate`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Track Color</i>

### Examples

```
envGetVal("layout.wspMgr" "trackColor")  
envSetVal("layout.wspMgr" "trackColor" 'cyclic "alternate")
```

## trackColumns

```
layout.wspMgr trackColumns 'string [{"width"} [{"spacing"} [{"repeat"} [{"wiretype"}  
 [{"color"}]}
```

### Description

Specifies the columns as a space-separated string for the *Tracks* table in the WSP Manager form. The default value is "width spacing repeat wiretype color".

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Tracks</i>

### Examples

```
envGetVal("layout.wspMgr" "trackColumns")  
envSetVal("layout.wspMgr" "trackColumns" 'string "width spacing color")
```

## useAspectRatio

```
layout.wspMgr useAspectRatio 'boolean { t | nil }
```

### Description

Specifies whether to ignore shapes that are not drawn in the right direction.

The default value is `nil`.

### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Use aspect ratio of shapes</i>

### Examples

```
envGetVal("layout.wspMgr" "useAspectRatio")  
envSetVal("layout.wspMgr" "useAspectRatio" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### usePaletteVisibility

```
layout.wspMgr usePaletteVisibility 'boolean { t | nil }
```

#### Description

Specifies whether the visibility options specified in the Palette and *Display Levels: Stop* in the Display Options form are used. The default value is `nil`.

#### GUI Equivalent

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Use canvas visibility</i>

#### Examples

```
envGetVal("layout.wspMgr" "usePaletteVisibility")  
envSetVal("layout.wspMgr" "usePaletteVisibility" 'boolean t)
```

## Virtuoso Width Spacing Patterns User Guide

### WSP Environment Variables

---

#### **verbose**

```
layout.wspMgr verbose 'boolean { t | nil }
```

#### **Description**

Specifies whether to display debug messages in the CIW. The default value is `nil`.

#### **GUI Equivalent**

Command	<i>Create – P&amp;R Objects – Width Spacing Patterns</i>
Field	<i>Verbose mode</i>

#### **Examples**

```
envGetVal("layout.wspMgr" "verbose")  
envSetVal("layout.wspMgr" "verbose" 'boolean t)
```

## wspTemplateCell

```
layout wspTemplateCell 'string "any_template_name"
```

### Description

Determines the name of the template cellview from which to copy the WSP information when a new design or an existing design is opened, unless the WSP information already exists. The objects copied are: WSPs, WSP Groups, related snap patterns, and WSSPDefs. Region shapes are not copied. Valid values for the template cellview name are in the format: *cell* or *cell/view* in the same library, or *lib/cell/view*. The default view is *layout*. The default value is *" "*.

### GUI Equivalent

None

### Examples

```
envGetVal("layout" "wspTemplateCell")  
envSetVal("layout" "wspTemplateCell" 'string "myWSP")
```

## wspTemplateFile

```
layout wspTemplateFile 'string "any_file_name"
```

### Description

Determines the name of the SKILL file that will be loaded when a design is opened or a new cellview is created. The SKILL file is not loaded if there is existing WSP data in the cellview. The standard search mechanism is used (current directory, home directory, project directory, and so on). The default name is ".wspinit".

### GUI Equivalent

None

### Examples

```
envGetVal("layout" "wspTemplateFile")  
envSetVal("layout" "wspTemplateFile" 'string "myWSPinit")
```