


LCsoft Board with USB Conn

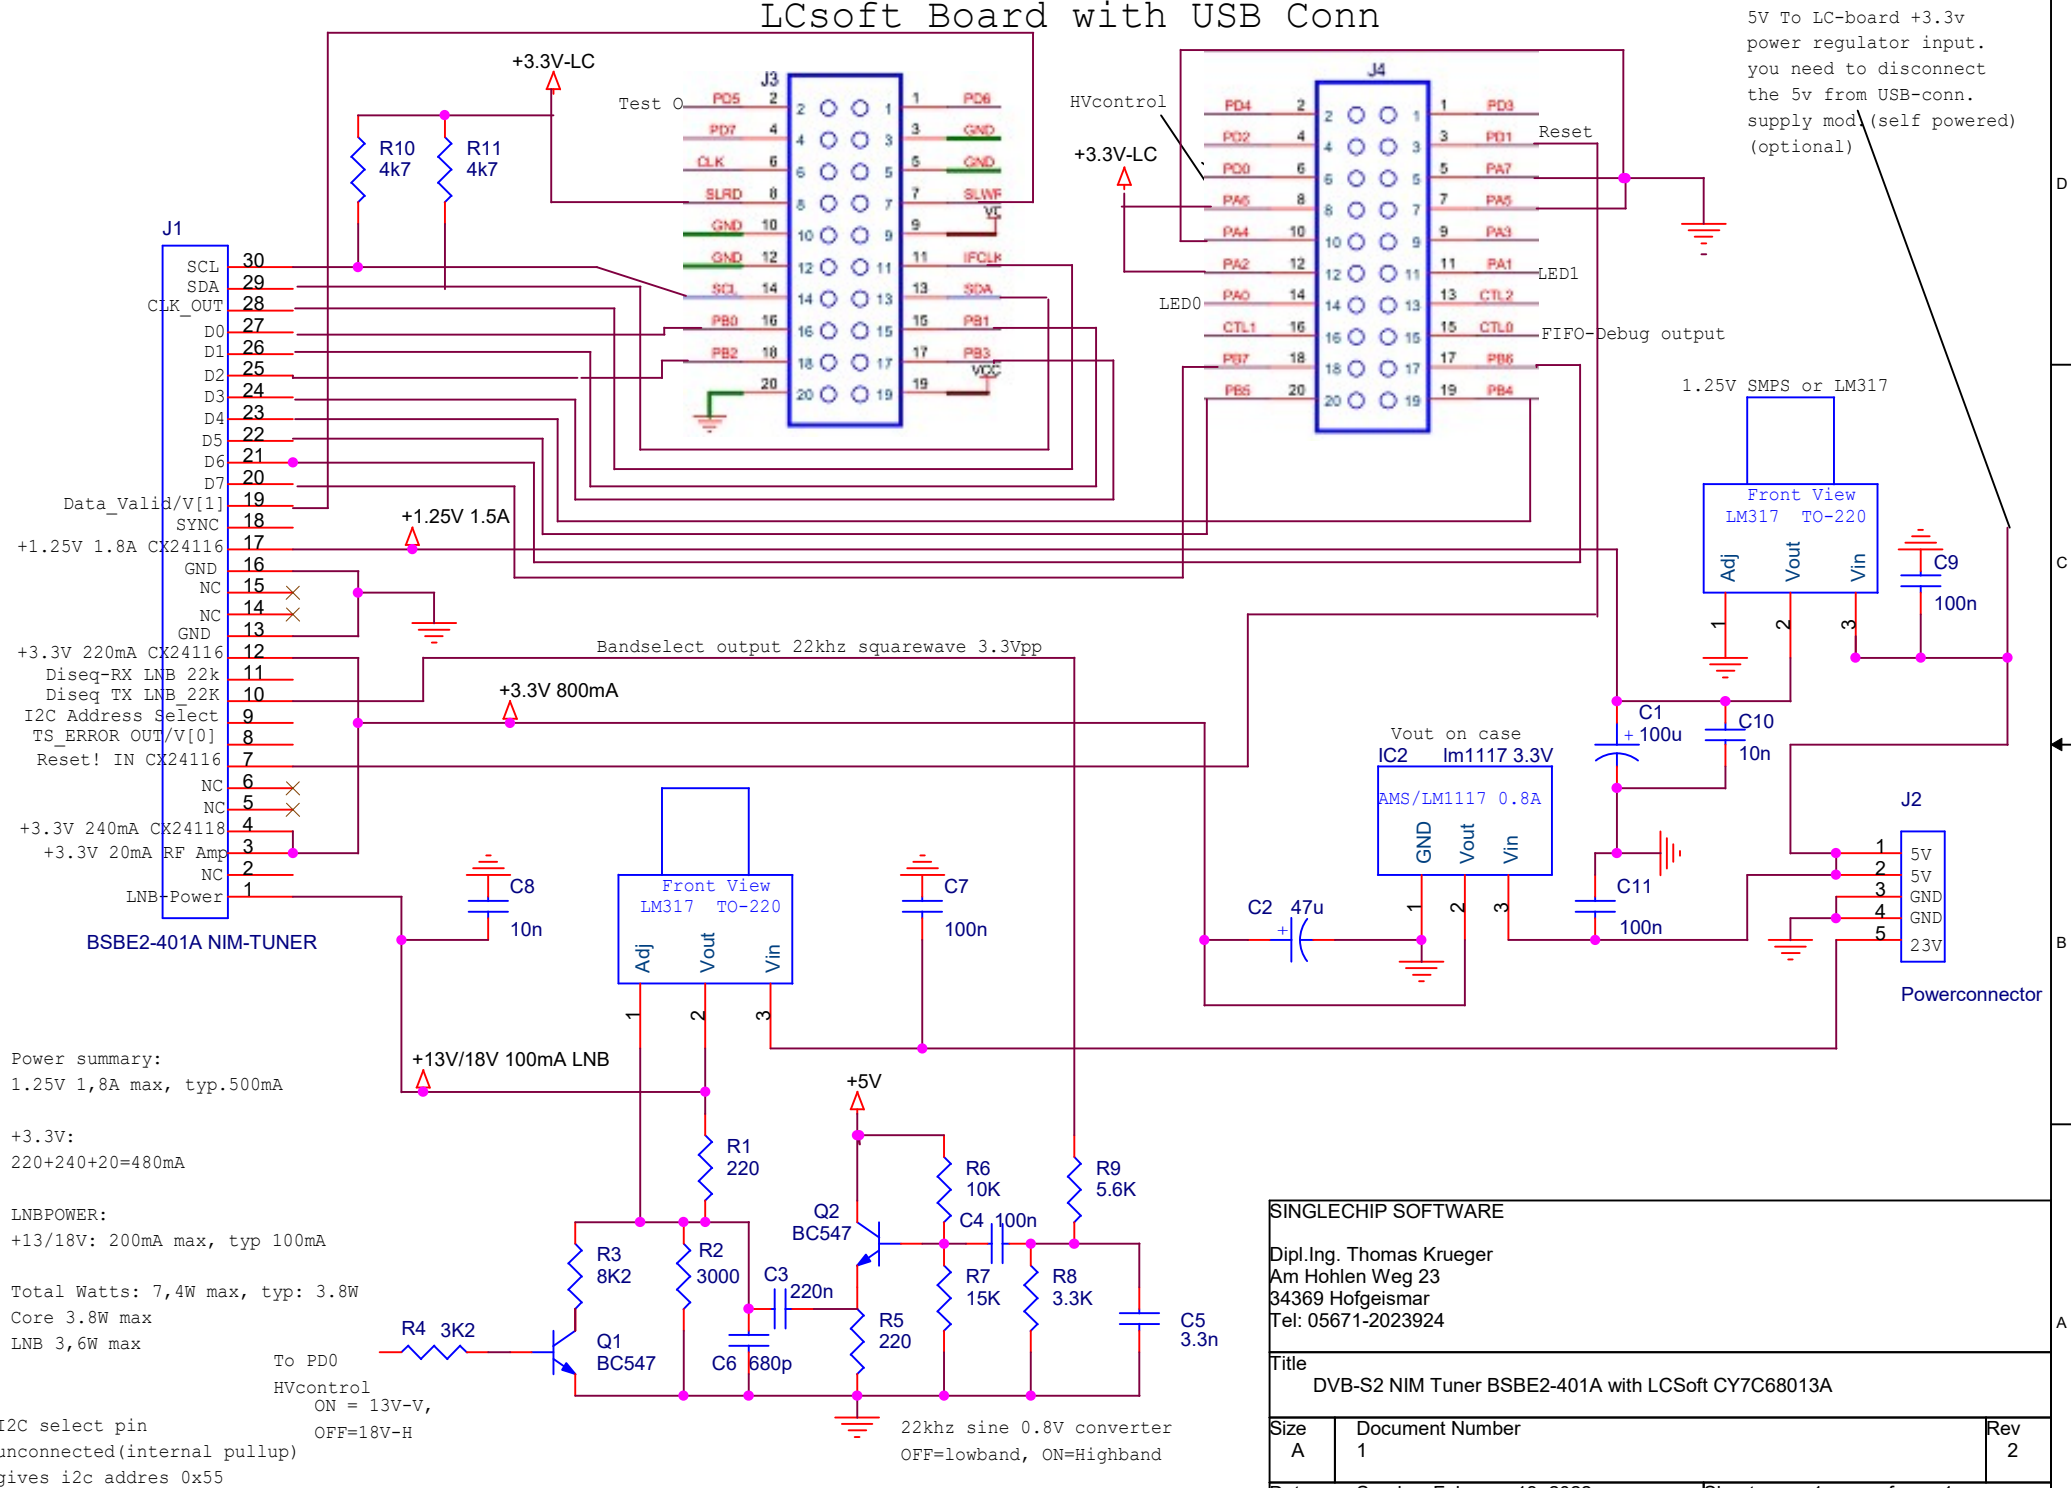

5V To LC-board +3.3v
power regulator input.
you need to disconnect
the 5v from USB-conn.
supply mod.(self powered)
(optional)