

TCP/IP for Embedded system M3S-T4-Tiny: Ethernet Driver Interface Specification

Renesas Microcomputer

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

How to Use This Manual

This manual explains the direction for uses of the M3S-T4-Tiny Ethernet driver interface.

1. Organization

This manual can be broadly divided into the following units.

1. Overview
2. Preconditions
3. Internal Configuration of the Ethernet Driver Interface
4. Function Specifications
5. Detailed Description of Driver Functions

Table of Contents

1. Overview	5
2. Preconditions.....	6
3. Internal Configuration of the Ethernet Driver Interface	7
4. Function Specifications.....	9
4.1 Global Variables	9
5. Detailed Description of Driver Functions.....	10
5.1 lan_open.....	11
5.2 lan_close	12
5.3 lan_read.....	13
5.4 rcv_buff_release.....	14
5.5 lan_write	15
5.6 lan_reset.....	16
5.7 tcp_api_slp	17
5.8 tcp_api_wup.....	18
5.9 udp_api_slp.....	19
5.10 udp_api_wup.....	20
5.11 ena_int.....	21
5.12 dis_int.....	22
5.13 tcpudp_act_cyc	23
5.14 tcpudp_get_time.....	24
5.15 lan_inthdr	25
5.16 get_random_number	26
5.17 report_error	27
5.18 register_callback_linklayer	30
5.19 lan_check_link	31

1. Overview

This manual describes the Ethernet driver interface specification for the Tiny TCP/IP library “M3S-T4-Tiny” (called the T4). Although the T4 library supports Ethernet-based communication, the part of whose depending on LAN controller specifications is separated from the main library to a driver unit, and it makes possible you to customize that part of library as necessary.

In this manual, it describes the specifications of the functions that you may need to use when developing Ethernet drivers according to the specifications of your LAN controller.

2. Preconditions

The preconditions are as follows.

1. Packets in Ethernet format are sent and received using the Ethernet procedure.
2. The transmit/received packet data are assumed to be those of Ethernet packets except CRC.
3. The transmit packet data is separated into the header and the data parts. The header part is stored in a global variable and the data is stored in a 1-byte integer type (char) array before being passed to the driver.
4. The received packet data for one octet is stored in the receive buffer in network byte order (big endian), when the data is transferred by Ethernet in order.
5. The maximum length of the received packet data is limited to 1,520 octets (allowed range of Ethernet). When the receive buffer length in the driver is shorter than 1,520 octets, it is the maximum length of the received packet data.
6. The receive buffer is controlled by the driver, whose pointer is passed to the global variable. The number of buffers can be defined by the users.

3. Internal Configuration of the Ethernet Driver Interface

The relationship between protocol processing section and Ethernet driver in T4 library is shown in **Figure 3.1**. Ethernet driver interface is outlined in **Table 3.1** (detailed in Section 5).

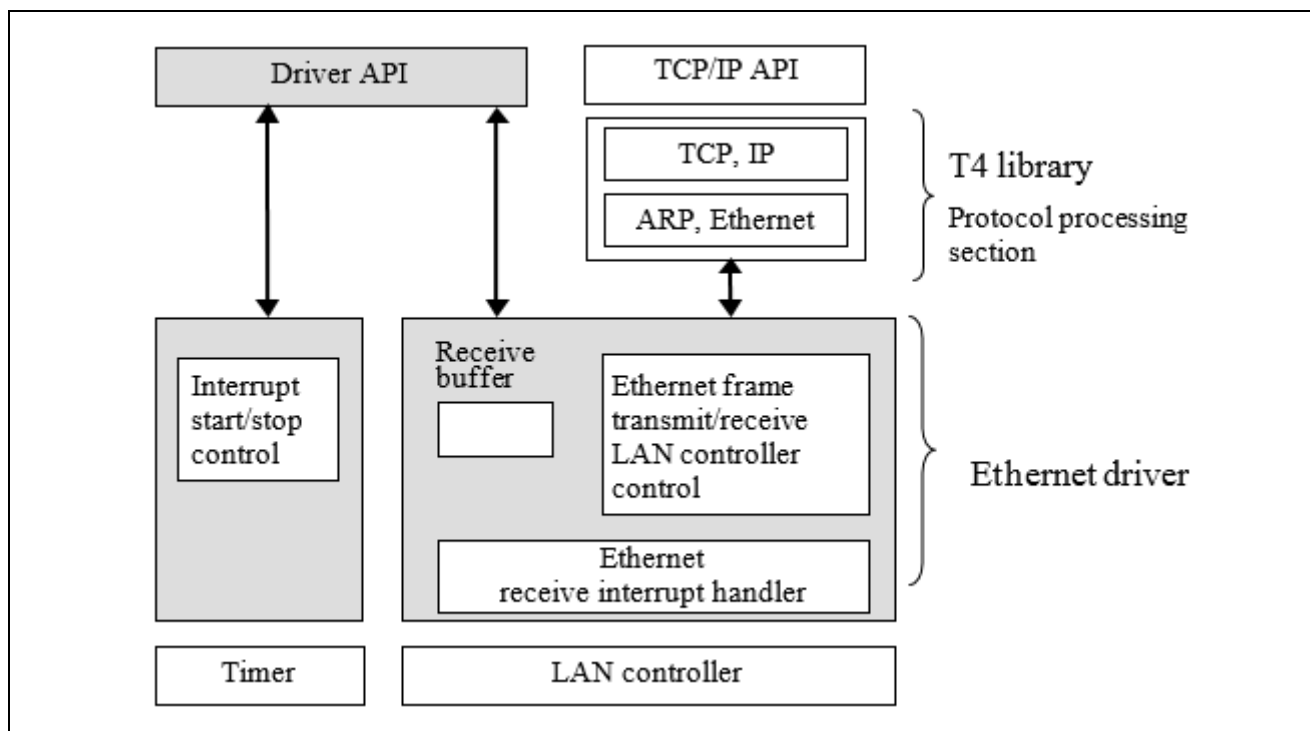


Figure 3.1 Block diagram of the Ethernet Driver

The driver uses the functions listed in **Table 3.1**, as the interface to initialize, transmit and receive the data and operate other task.

Table 3.1 List of Driver Interface

Function Name	Description
ER lan_open(void)	Initialize and start LAN controller
ER lan_close(void)	Deactivate the LAN controller
H lan_read(UB, B**)	Receive data
H rcv_buff_release(UB)	Release the receive buffer of the driver
H lan_write(UB, B*, H, B*, H)	Send data
void lan_reset(UB)	Reset LAN controller
void tcp_api_slp(ID)	Wait for completion of API
void tcp_api_wup(ID)	Cancel the wait state of the API completion
void udp_api_slp(ID)	Wait for completion of API
void udp_api_wup(ID)	Cancel the wait state of the API completion
void ena_int(void)	Enable interrupt used T4 cyclic
void dis_int(void)	Disable interrupt used T4 cyclic
void tcpudp_act_cyc(UB)	Control cyclic activation of TCP/IP processing function
UH tcpudp_get_time(void)	Get time information
void lan_inthdr(void)	Interrupt handler
void report_error(UB, H , UB*)	Report error
void get_random_number(UB *, UW)	Random number acquisition
void register_callback_linklayer(callback_from_system_t)	Register the callback function called when Ethernet link layer connected/disconnected.
H lan_check_link(UB)	Check the link status of the Ethernet layer.

4. Function Specifications

4.1 Global Variables

Ethernet address

UB _myethaddr[6]

This variable is stored in a MAC address of a LAN controller. It is possible to be set by users in configuration file of T4.

When this variable is set all 0s by user, a MAC address is read from ROM and is set to a LAN controller.

5. Detailed Description of Driver Functions

Each API details are shown as following format.

< Format >

Shows the API format.

< Explanation >

Shows the functionality and behavior of each API and the precautions to be observed when using API.

< Argument >

Shows the meaning of parameters to the API and limitations on acceptable values.

< Return Value >

Shows the type of value or error code returned by the API and the conditions under which an error occurs.

5.1 lan_open

< Format >

ER lan_open(void)

< Explanation >

This function initializes the Ethernet controller to make it useful for other driver functions.

It also initializes the receive buffers. If the global variable (_myethaddr) is all 0s, the Ethernet address stored in EEPROM is set to the Ethernet controller and also copied to _myethaddr.

If the global variable (_myethaddr) is not all 0s, its value is set to the Ethernet controller.

Called by the user program.

< Argument >

Argument	I/O	Type	Explanation
none	-	-	-

< Return Value >

Type	Explanation
0	Normal
Negative value	Error (could not be activated)

5.2 lan_close

< Format >

ER lan_close (void)

< Explanation >

This function deactivates operation of the Ethernet controller.

Called by the user program.

< Argument >

Argument	I/O	Type	Explanation
none	-	-	-

< Return Value >

Type	Explanation
0	Normal
-1	Error

5.3 lan_read

< Format >

H lan_read(UB lan_port_no , B **buf)

< Explanation >

Store the receive buffer pointer to the parameter pointer (**buf) indicated by LAN port channel parameter. And, return the status corresponds receive status.

< Argument >

Argument	I/O	Type	Explanation
lan_port_no	Input	UB	Channel number
buf	Output	B **	Pointer to be stored in the receive buffer area.

< Return Value >

Type	Explanation
0 or greater	Size of the received packet
-1	Error (could not be activated)
-2	Controller is inactive
-5	Ethernet controller is operating erratically, or Ethernet controller needs to be reset
-6	Received packet CRC error

5.4 rcv_buff_release

< Format >

H rcv_buff_release(UB lan_port_no)

< Explanation >

This function release the receive buffer (specified in lan_read parameter) using in T4 indicated LAN port number parameter.

If the timing that reception buffer release permission (rcv_buff_release()) is returned is not defined, please control a reception buffer.

< Argument >

Argument	I/O	Type	Explanation
lan_port_no	Input	UB	LAN port number corresponds to release buffer

< Return Value >

Type	Explanation
0	completed

5.5 lan_write

< Format >

H lan_write(UB lan_port_no, B *header, H header_len, B *data , H data_len)

< Explanation >

This function writes the contents of the header and data areas passed by the parameters to the transmit buffer of the Ethernet controller for one packet before sending a packet.

< Argument >

Argument	I/O	Type	Explanation
lan_port_no	Input	UB	LAN port number to send
header	Input	B*	Pointer to the header area to send one
header_len	Input	H	Length of the header to send
data	Input	B*	Pointer to the data area to send
data_len	Input	H	Length of the data to send

< Return Value >

Type	Explanation
0	Transmission is succeeded.
-5	Transmission is failed.

5.6 lan_reset

< Format >

```
void lan_reset( UB lan_port_no )
```

< Explanation >

This function resets the Ethernet controller as shown in the following step. This operation does not involve initializing the receive buffers and other variables.

- (1) Deactivates the Ethernet controller (by using lan_close()).
- (2) Set the registers, etc. of the Ethernet controller again.
- (3) Restart the Ethernet controller.

< Argument >

Argument	I/O	Type	Explanation
lan_port_no	Input	UB	LAN port number to reset

< Return Value >

Type	Explanation
none	-

5.7 tcp_api_slp

< Format >

```
void tcp_api_slp( ID cepid )
```

< Explanation >

In the T4, it determines whether or not the issued API has been completed, after issuing each API.

This function is called every time it is checked. The intervals of each check can be altered by user definition, and can be switched to another task until the API is completed.

When using the μ ITRON OS, for example, it is possible to switch to another task by calling `tslp_tsk()` or `dly_tsk()` in this function. The CPU can be used effectively.

Furthermore, if the MCU supports the wait mode (in which the CPU clock is deactivated until an interrupt is generated), it is possible to reduce the electricity consumption in the chip by the wait mode in this function.

If this function is empty (no processing), the completed check will be performed at short intervals, but it is not a problem for a function.

< Argument >

Argument	I/O	Type	Explanation
cepid	Output	ID	The CEPID of start waiting API

< Return Value >

Type	Explanation
none	-

5.8 tcp_api_wup

< Format >

```
void tcp_api_wup( ID cepid )
```

< Explanation >

This function is called when the issued TCP API has been completed, and it cancels the wait state by the function tcp_api_slp() that waits for completion of API.

When using the μ ITRON OS, for example, it is possible to wait until the API is completed by calling the system call slp_tsk() in tcp_api_slp(), and to cancel the wait in API completion by calling the system call iwup_tsk() in this function. The CEPID of completed API is set to argument. User can know which task should be wakening up by this ID.

If the wait mode is entered into in the function tcp_api_slp(), the wait in tcp_api_slp() is not always needed to cancel by this function so that the wait is canceled by an interrupt. If the wait of the function tcp_api_slp() is canceled by an interrupt or other factors, this function can be empty (no processing) without causing any problem.

< Argument >

Argument	I/O	Type	Explanation
cepid	Output	ID	The CEPID of completed API

< Return Value >

Type	Explanation
none	-

5.9 udp_api_slp

< Format >

```
void  udp_api_slp( ID cepid )
```

< Explanation >

In the T4, it determines whether or not the issued API has been completed, after issuing each API.

Other explanation is same as tcp_api_slp().

< Argument >

Argument	I/O	Type	Explanation
cepid	Output	ID	The CEPID of start waiting API

< Return Value >

Type	Explanation
none	-

5.10 udp_api_wup

< Format >

```
void  udp_api_wup( ID cepid )
```

< Explanation >

This function is called when the issued API has been completed, and it cancels the wait state by the function `udp_api_slp()` that waits for completion of API.

Other explanation is same as `tcp_api_wup()`.

< Argument >

Argument	I/O	Type	Explanation
cepid	Output	ID	The CEPID of completed API

< Return Value >

Type	Explanation
none	-

5.11 ena_int

< Format >

```
void dis_int( void )
```

< Explanation >

This function is called when the cancel API (tcp_can_cep / udp_can_cep) is called. This function makes T4 cycle (timer interrupt) enabled.

< Argument >

Argument	I/O	Type	Explanation
none	-	-	-

< Return Value >

Type	Explanation
none	-

5.12 dis_int

< Format >

```
void dis_int( void )
```

< Explanation >

This function is called when the cancel API (tcp_can_cep / udp_can_cep) is called. This function makes T4 cycle (timer interrupt) disabled.

< Argument >

Argument	I/O	Type	Explanation
none	-	-	-

< Return Value >

Type	Explanation
none	-

5.13 tcpudp_act_cyc

< Format >

```
void tcpudp_act_cyc( UB cycact )
```

< Explanation >

This function controls cyclic activation of TCP/IP processing function _process_tcpip() corresponding to parameter cycact. The interval of cyclic activations of _process_tcpip() must be set to 10 ms or less.

< Argument >

Argument	I/O	Type	Explanation
cycact	Input	UB	Set to start or stop cyclic activation of TCP/IP processing function. 0: Stop cyclic activation of TCP/IP processing function. 1: Start cyclic activation of TCP/IP processing function.

< Return Value >

Type	Explanation
none	-

5.14 tcpudp_get_time

< Format >

UH tcpudp_get_time(void)

< Explanation >

This function returns the current time. The accuracy of current time is 10 ms, using integer division, rounding down.

Current time is 0 when system starts. Current time is incremented each 10ms.

Current time returns 0 when this value would overflow.

< Argument >

Argument	I/O	Type	Explanation
none	-	-	-

< Return Value >

Type	Explanation
UH	The current time

5.15 lan_inthdr

< Format >

```
void lan_inthdr( void )
```

< Explanation >

This function is called by an interrupt signal from the Ethernet controller.

Used in the INT1 interrupt handler.

< Argument >

Argument	I/O	Type	Explanation
none	-	-	-

< Return Value >

Type	Explanation
none	-

5.16 get_random_number

< Format >

```
void get_random_number ( UB *data, UW len )
```

< Explanation >

Set the random number to the data pointer with the length that specified data length.

< Argument >

Argument	I/O	Type	Explanation
data	Output	UB *	Data pointer to write the random value.
len	Input	UW	Byte length for needed random value.

< Return Value >

Type	Explanation
none	-

5.17 report_error

< Format >

```
void report_error( UB lan_port_no , H error_code, UB *buf )
```

< Explanation >

This function notifies the Error information that is occurred in the T4 Library to the Ethernet Driver from lan_read(). And notifies pointer that indicates error packet data area to the Ethernet Driver.

User can make process corresponding error code in this function.

In case error occurred in same timing, error code will be output bigger code. (near 0)

< Argument >

Argument	I/O	Type	Explanation
lan_port_no	Output	UB *	Specify the port that has error occurred
error_code	Output	H	-1 : receive length error receiving data length is out of 60-1514.
			-2 : network layer error receiving data is not IP packet or ARP packet
			-3 : transport layer error The receiving data that comes from lan_read() is IP packet, but not TCP packet or UDP packet or ICMP,IGMP packet. IP address is matched with T4 IP address, the packet reaches at transport layer.
			-21 : ARP message error 1 The receiving data that comes from lan_read() is ARP packet, but destination IP address in ARP message is unmatched.
			-22 : ARP message error 2 The receiving data that comes from lan_read() is ARP packet, but the data error in ARP message. <ul style="list-style-type: none"> • hardware type (0x0001 : Ethernet) • upper layer protocol type (0x0800 : IP) • hardware address length (0x06 : MAC address) • protocol address length (0x04 : IP address)
			-41 : IP header error 1 The receiving data that comes from lan_read() is IP packet, but destination IP address in IP header is unmatched.

			-42 : IP header error 2 The receiving data that comes from lan_read() is IP packet, but source IP address in IP header is multicast address or broadcast address.
			-43 : IP header error 3 The receiving data that comes from lan_read() is IP packet, but source IP address in IP header is loopback address.
			-44 : IP header error 4 The receiving data that comes from lan_read() is IP packet, but IP version is not "4" in IP header.
			-45 : IP header error 5 The receiving data that comes from lan_read() is IP packet, but including IP header options.
			-46 : IP header error 6 The receiving data that comes from lan_read() is IP packet, but incorrect IP checksum
			-47 : IP header error 7 The receiving data that comes from lan_read() is IP packet, but IP data length included in IP header is larger than lan_read() return value(receive data length), or smaller than IP header minimum length(20 byte).
			-48 : IP header error 8 The receiving data that comes from lan_read() is IP packet, but source IP address included in the IP header is network address(ex: xxx.xxx.xxx.0/24) or broadcast address(ex: xxx.xxx.xxx.255/24).
			-49 : IP header error 9 The receiving data that comes from lan_read() is IP packet, but IP fragment flag is ON in IP header.
			-61 : TCP header error 1 The receiving data that comes from lan_read() is TCP/IP packet, but the port number included in the TCP header does not match the communication endpoint that status is "established" or "listen". And, all TCP communication endpoint has been established, the additional connection is coming. Example1: Remote host specifies the port 80, but T4 listen the port 20 only, this error code will occur. Example2: Remote host specifies the port 80, but T4 does not listen the any port, this error code will occur. Example3: T4 uses 5 TCP communication endpoint, all these are connected and, additional connection is coming, this error code will occur.

			-62 : TCP header error 2 The receiving data that comes from lan_read() is TCP/IP packet, but incorrect TCP checksum
			-81 : UDP header error 1 The receiving data that comes from lan_read() is UDP/IP packet, but incorrect UDP checksum
			-82 : UDP header error 2 The receiving data that comes from lan_read() is UDP/IP packet, but UDP checksum is zero and variable "udp_enable_zerochecksum" is set value excepting 0.
			-83 : UDP header error 3 The receiving data that comes from lan_read() is UDP/IP packet, but incorrect UDP port number
			-101 : ICMP header error 1 The receiving data that comes from lan_read() is ICMP/IP packet, but incorrect ICMP type (excepting echo request 0x08)
			-121 : IGMP header abnormality 1 The receiving data that comes from lan_read() is ICMP/IP packet, checksum of IGMP header was abnormal
			-122 : IGMP header abnormality 2 The receiving data that comes from lan_read() is ICMP/IP packet, if the IGMP type is other than IGMPv2Report (0x16) and IGMPv1Report (0x12)
			-131 : Illegal DHCP process
			-132 : DHCP transmission timeout occurred
buf	Output	UB *	pointer indicating error packet header.

< Return Value >

Type	Explanation
none	-

5.18 register_callback_linklayer

< Format >

```
void register_callback_linklayer( callback_from_system_t call_fp )
```

< Explanation >

This function is the function that registers the callback function to notify event from link layer to T4. To receive the notification, please register the function pointer has type of callback_from_system_t. Callback function can be set only one function. If user registers several functions, always over-write.

The following is callback function.

```
typedef ER (*callback_from_system_t) ( UB channel, UW eventid, VP param );
```

If function pointer is not registered, T4 will not notify of the status. The argument channel means LAN port number, eventid is kind of notification, param is the pointer (currently, in not use, therefore this value is zero) that provide parameter value to the user.

ETHER_EV_LINK_OFF : Disconnected the Ethernet layer.

ETHER_EV_LINK_ON : Connected the Ethernet layer.

ETHER_EV_COLLISION_IP : Detected IP address collision.

< Argument >

Argument	I/O	Type	Explanation
call_fp	Input	callback_from_system_t	Register the callback function

< Return Value >

Type	Explanation
none	-

5.19 lan_check_link

< Format >

H lan_check_link (UB lan_port_no)

< Explanation >

Check the link status of the Ethernet layer.

< Argument >

Argument	I/O	Type	Explanation
lan_port_no	Input	UB	Channel number

< Return Value >

Type	Explanation
0	Link Off
1	Link On

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Oct 07, 2010	—	First Edition issued
1.01	Jan 06, 2011	8	Change api_wup() prototype.
1.02	Aug 23, 2011	12	Added report_error() function.
1.03	Apr 01, 2012	8-9	Change spec. api_slp(void) -> tcp_api_slp(ID), udp_api_slp(ID) api_wup(ID) -> tcp_api_wup(ID), udp_api_slp(ID) Correct typo. lan_read() argument "Buf" -> "buf"
1.04	Jun 21, 2013	—	Updated document template.
1.05	Apr 01, 2014	6-16	lan_read(B**) -> lan_read(UB, B**) rcv_buff_release(void) -> rcv_buff_release(UB) lan_write(B*, H, B*, H) -> lan_write(UB, B*, H, B*, H) lan_reset(void) -> lan_reset(UB)
1.06	Aug 07, 2015	—	Update document template.
1.07	Dec 01, 2015	3,16	Added I/O information for each functions arguments. Added get_random_number() function.
1.08	Nov 30, 2016	8,30	Update document template. Added the information about register_callback_linklayer() function that is called L2 link layer will be Link Off or On. Added the information about lan_check_link() function.

TCP/IP for Embedded system M3S-T4-Tiny:
Ethernet Driver Interface Specification

Publication Date: Rev.1.00 Oct 07, 2010
Rev.1.08 Nov 30, 2016

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.77C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141

TCP/IP for Embedded system M3S-T4-Tiny: Ethernet Driver Interface Specification

