




## 4cy COP Sequential

(Cam sensor needed for this setup)

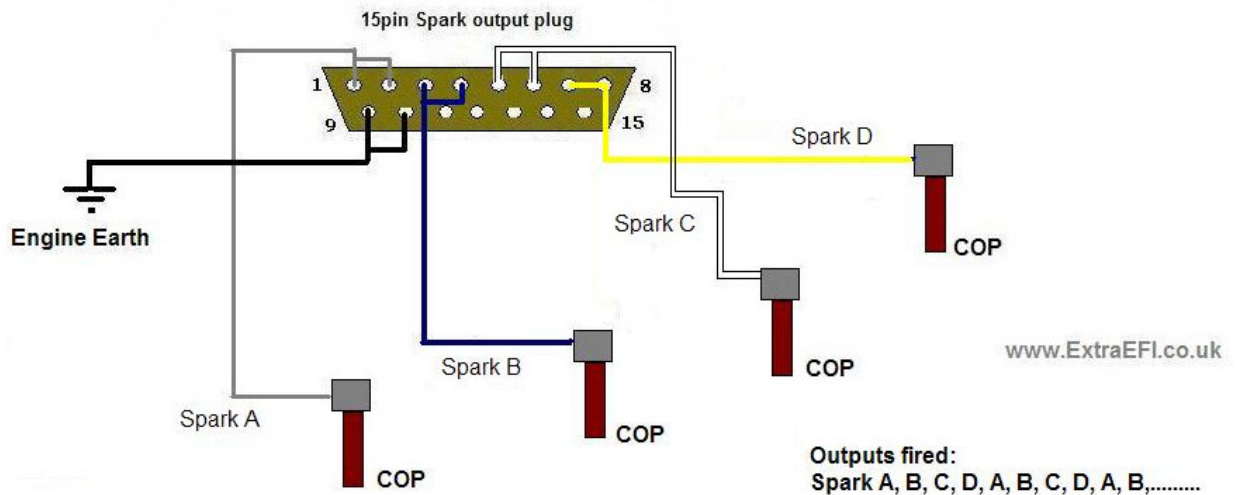

Example  
So if firing order is 1,3,4,2 connect:  
Spark A - Cy 1  
Spark B - Cy 3  
Spark C - Cy 4  
Spark D - Cy 2

Ideally wire the 12V feed to the coil pack from the fuel pump relay.

[www.ExtraEFI.co.uk](http://www.ExtraEFI.co.uk)