




## **Ford Crank Sensor (VR Type as on Zetec, etc)**

**Ford type VR  
sensor**

Looking at pins from the plug  
Pin 1 is the signal cable  
Pin 2 is the ground cable

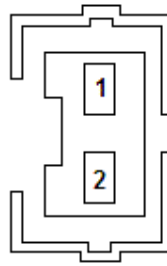

**[www.ExtraEFI.co.uk](http://www.ExtraEFI.co.uk)**