

BIMServer installation instructions


The provided BIMserver in the shared [GoogleDrive](#) is the pre-compiled executable binary version, which means, installation will be happened with couple of clicks.

BIMServer is an open source project/development which is always under development. There is not a well-prepared documentation is available. You can check the official [website](#) to find something useful..

Since the development is continuous, the installation of BIMServer on your own computer **may go wrong**. This is mainly because in the change of BIMServer configuration or the Java configuration of your computer.

For installation:

- 1) Download **BIMserver_preCompiled.jar** to your computer.
- 2) Double-click on the file. You will see the following screen of “**BIMServer Starter**”.

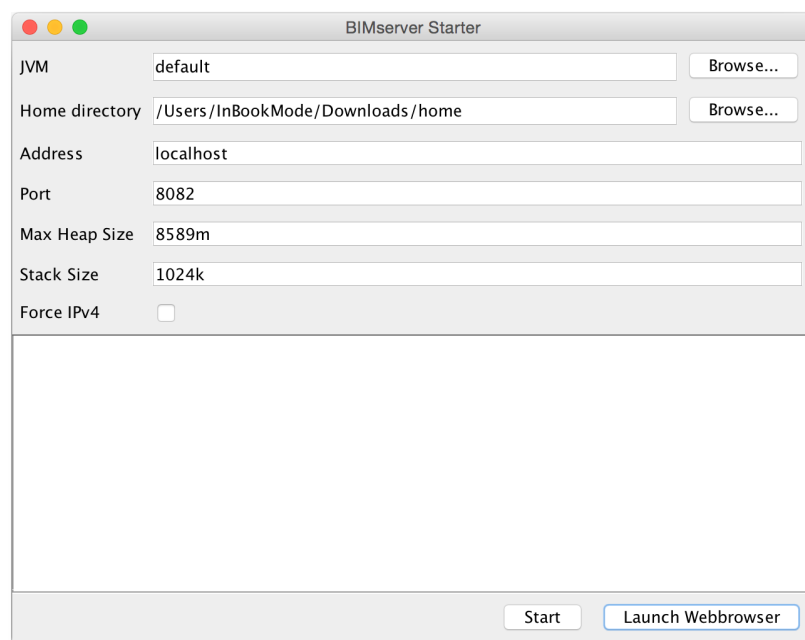

- 3) Click the **Start** button and wait for the necessary files' installation. (Depending on your computer's conf. it may take 3-4 mins.). **At this step, the installation may go wrong. If so, sorry :(**
- 4) In the Log, when you see “**Server started successfully**” It means that everything is fine and BIMServer is installed successfully.
- 5) At the last step, click the “**Launch Webbrowser**” button to access the BIMServer user interface.
You can directly go to this address as well:
<http://localhost:8082/apps/bimviews/?page=Login>