

## 403 Forbidden

本电子书由CyberArticle制作。点击[这里](#)下载CyberArticle。注册版本不会显示该信息。删除广告

# WA5300系列云AP版本瘦切胖配置案例

目录

[WA5300系列云AP版本瘦切胖配置案例](#)

[1.1 适用产品系列](#)

[1.1.1 AP瘦切胖配置案例（Bootrom）](#)

## 1.1 适用产品系列

本手册适用于如下产品：比如WA5320、WA5320-C、WA5320-C-EI、WA5320H、WA5320-SI等WA5300系列云AP。

### 1.1.1 AP瘦切胖配置案例（Bootrom）

操作风险提示：AP瘦切胖有风险，操作不当或者意外断电会导致设备故障，操作需谨慎。命令行升级需在PC上搭建TFTP Server（推荐用户使用3C Daemon搭建TFTP服务器）


将软件版本下载到设备FLASH内，然后通过命令行加载Bootrom版本，再加载主机软件版本，加载时输入的文件名一定要一致，建议复制黏贴，然后升级过程中避免断电重启操作。

1、先从官网下载WA5300云AP的胖版本，本案例以WA5320举例

[https://www.h3c.com/cn/d\\_201909/1225175\\_30005\\_40.htm#\\_Toc18344758](https://www.h3c.com/cn/d_201909/1225175_30005_40.htm#_Toc18344758)

下载压缩包WA5300-CMW710-R2425P10-OASIS.zip，解压生成ipe文件，从官网下载对应版本文件需要修改成wa5300-oasis.ipe，放到电脑桌面上。

2、电脑通过网线连接到ap的一个网口，电脑网卡设置为：192.168.0.1 255.255.255.0，如下例子打开TFTP服务器，把ipe软件版本放到电脑桌面上，TFTP服务器目录指向电脑桌面，然后点击确定。

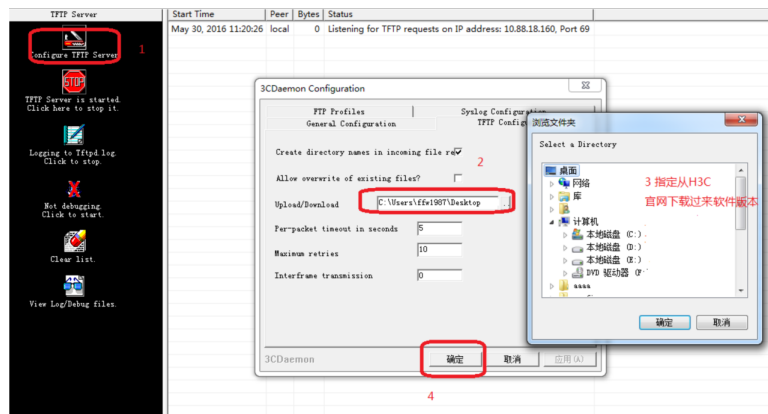

3、console口操作，console口登录方法参考《1.03 设备管理-Console登录方法》  
在AP重启的时候按住不停地按Ctrl+B进入设备的bootroom菜单。

```
*****
*
*
*          H3C WA5320 BootWare, Version 7.15          *
*
*
*****
```

Copyright (c) 2004-2018 New H3C Technologies Co., Ltd.

```
Compiled Date      : Aug 21 2018
CPU Type           : ARM
CPU L1 Cache       : 32KB
CPU L2 Cache       : 256KB
CPU Clock Speed    : 710MHz
Memory Type        : DDR3 SDRAM
Memory Size        : 256MB
Memory Speed       : 533MHz
Flash Size         : 32MB
PCB Version        : Ver.B
```

BootWare Validating...

Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Password recovery capability is enabled.

Note: The current operating device is flash  
Enter < Storage Device Operation > to select device.

### 3.1、升级扩展bootrom版本

要求boot版本必须为对应版本配套的7.18版本，版本文件中可获取. 如果当前版本已经为7.18，直接忽略此步骤。

```
=====
|<1> Boot System                               |
|<2> Enter Serial SubMenu                       |
|<3> Enter Ethernet SubMenu                     |
|<4> File Control                               |
|<5> Restore to Factory Default Configuration   |
|<6> Skip Current System Configuration          |
|<7> BootWare Operation Menu                    |
|<8> Skip Authentication for Console Login      |
|<9> Storage Device Operation                   |
|<0> Reboot                                    |
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9): 7 //进入bootware子菜单
```

```
=====
|Note:the operating device is flash             |
|<1> Backup Full BootWare                       |
|<2> Restore Full BootWare                      |
|<3> Update BootWare By Serial                  |
|<4> Update BootWare By Ethernet                |
|<0> Exit To Main Menu                         |
=====
Enter your choice(0-4): 4 //设置更新bootware方式通过网线
```

```

=====
|<1> Update Full BootWare          |
|<2> Update Extended BootWare      |
|<3> Update Basic BootWare         |
|<4> Modify Ethernet Parameter     |
|<0> Exit To Main Menu             |
=====
Enter your choice(0-4): 4 //设置上传配置

```

设置上传文件名，此处是更新bootware，需上传boot文件；设置IP地址

```

=====
|Note:   "." = Clear field.         |
|        "-" = Go to previous field. |
|        Ctrl+D = Quit.             |
=====
Protocol (FTP or TFTP) :tftp
Load File Name       :wa5300.ipe
                     :apwa5300_v7.18.btw //bootware版本名称，，如boot版本已经是
V7.18了，可忽略本步骤，继续升级bin版本
Target File Name     :wa5300.ipe
                     :apwa5300_v7.18.btw //bootware版本名称
Server IP Address    :192.168.0.99 192.168.0.1 //电脑ip地址
Local IP Address     :192.168.0.98 192.168.0.19 //配置和电脑同网段任意地址
Subnet Mask          :255.255.255.0
Gateway IP Address   :0.0.0.0

```

```

=====
|<1> Update Full BootWare          |
|<2> Update Extended BootWare      |
|<3> Update Basic BootWare         |
|<4> Modify Ethernet Parameter     |
|<0> Exit To Main Menu             |
=====
Enter your choice(0-4): 1 //更新bootware
Loading.....Done.

```

1233920 bytes downloaded!

Updating Basic BootWare? [Y/N]Y //手工输入“Y”

Updating Basic BootWare.....Done.

Updating Extended BootWare? [Y/N]Y //手工输入“Y”

Updating Extended BootWare.....Done.

更新完成后选择0退回主界面并reboot

```
=====
|<1> Update Full BootWare          |
|<2> Update Extended BootWare      |
|<3> Update Basic BootWare         |
|<4> Modify Ethernet Parameter     |
|<0> Exit To Main Menu            |
=====
Enter your choice(0-4): 0
```

```
=====
|Note:the operating device is flash |
|<1> Backup Full BootWare           |
|<2> Restore Full BootWare          |
|<3> Update BootWare By Serial      |
|<4> Update BootWare By Ethernet    |
|<0> Exit To Main Menu             |
=====
Enter your choice(0-4): 0
```

```
=====
|<1> Boot System                    |
|<2> Enter Serial SubMenu           |
|<3> Enter Ethernet SubMenu         |
|<4> File Control                   |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
=====
```

```

|<7> BootWare Operation Menu          |
|<8> Skip Authentication for Console Login |
|<9> Storage Device Operation          |
|<0> Reboot                          |
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9): 0 //重启
System is starting...
Press Ctrl+D to access BASIC-BOOTWARE MENU
Booting Normal Extended BootWare
The Extended BootWare is self-decompressing.....
.Done.

```

### 3.2、升级ipe版本

重启完成后查看bootwre版本为7.18，再次Ctrl+B进入bootware，Ctrl+F格式化flash，此处注意需要格式化，避免空间不足导致版本解压失败

```

*****
*                                     *
*           H3C WA5320 BootWare, Version 7.18           *
*                                     *
*****

Copyright (c) 2004-2019 New H3C Technologies Co., Ltd.

```

```

Compiled Date      : Mar  8 2019
CPU Type           : ARM
CPU L1 Cache      : 32KB
CPU L2 Cache      : 256KB
CPU Clock Speed   : 710MHz
Memory Type       : DDR3 SDRAM
Memory Size       : 256MB
Memory Speed      : 533MHz
Flash Size        : 32MB
PCB Version       : Ver.B

```

BootWare Validating...

Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Password recovery capability is enabled.

Note: The current operating device is flash

Enter < Storage Device Operation > to select device.

```
=====
|<1> Boot System                               |
|<2> Enter Serial SubMenu                     |
|<3> Enter Ethernet SubMenu                   |
|<4> File Control                             |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration        |
|<7> BootWare Operation Menu                  |
|<8> Skip Authentication for Console Login    |
|<9> Storage Device Operation                 |
|<0> Reboot                                  |
=====

Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9): // Ctrl+F格式化flash, "Y"需要手工输入
Warning:All files on flash will be lost! Are you sure to format? [Y/N]Y.....
.....
.....
Format success.
```

```
=====
|<1> Boot System                               |
|<2> Enter Serial SubMenu                     |
```

```

|<3> Enter Ethernet SubMenu          |
|<4> File Control                     |
|<5> Restore to Factory Default Configuration |
|<6> Skip Current System Configuration |
|<7> BootWare Operation Menu         |
|<8> Skip Authentication for Console Login |
|<9> Storage Device Operation        |
|<0> Reboot                          |
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
Enter your choice(0-9): 3 //进入以太口子菜单

```

选5设置有线网络配置，上传之前需要把胖AP版本文件名改成wa5300-oasis.ipe

```

=====
|Note:the operating device is flash |
|<1> Download Image Program To SDRAM And Run |
|<2> Update Main Image File             |
|<3> Update Backup Image File           |
|<4> Download Files(*.*)                |
|<5> Modify Ethernet Parameter          |
|<0> Exit To Main Menu                  |
|                                     |
=====
Enter your choice(0-5): 5 //修改以太口参数

```

```

=====
|Note:      "." = Clear field.          |
|          "-" = Go to previous field.  |
|          Ctrl+D = Quit.               |
=====
Protocol (FTP or TFTP) :tftp

```



```

Load File Name      :apwa5300_v7.18.btw
                    :wa5300-oasis.ipe //此处注意修改版本文件名称为wa5300-oasis.ipe
Target File Name    :apwa5300_v7.18.btw
                    :wa5300-oasis.ipe //此处注意修改版本文件名称为wa5300-oasis.ipe
Server IP Address   :192.168.0.1      //电脑ip地址
Local IP Address    :192.168.0.19     //配置和电脑同网段任意地址
Subnet Mask         :255.255.255.0
Gateway IP Address  :0.0.0.0

```

```

=====
|Note:the operating device is flash          |
|<1> Download Image Program To SDRAM And Run |
|<2> Update Main Image File                 |
|<3> Update Backup Image File               |
|<4> Download Files(*.*)                   |
|<5> Modify Ethernet Parameter              |
|<0> Exit To Main Menu                     |
|                                           |
=====
Enter your choice(0-5): 2 //更新主版本文件
Loading.....
.....
.....
.....
.....
.....
.....Done.
27445248 bytes downloaded!
Image file wa5300-oasis-boot.bin is self-decompressing...
Saving file flash:/wa5300-oasis-boot.bin .....
.....Done.
Image file wa5300-oasis-system.bin is self-decompressing...
Saving file flash:/wa5300-oasis-system.bin .....
.....

```

```
.....
.....
.....
.....Done.
```

升级完成后选择0退回主界面并且reboot

```
=====
|Note:the operating device is flash          |
|<1> Download Image Program To SDRAM And Run      |
|<2> Update Main Image File                      |
|<3> Update Backup Image File                    |
|<4> Download Files(*.*)                        |
|<5> Modify Ethernet Parameter                  |
|<0> Exit To Main Menu                          |
|_____|
=====
Enter your choice(0-5): 0
```

```
=====
|<1> Boot System                                |
|<2> Enter Serial SubMenu                      |
|<3> Enter Ethernet SubMenu                    |
|<4> File Control                              |
|<5> Restore to Factory Default Configuration    |
|<6> Skip Current System Configuration          |
|<7> BootWare Operation Menu                    |
|<8> Skip Authentication for Console Login      |
|<9> Storage Device Operation                  |
|<0> Reboot                                    |
|_____|
=====
Ctrl+Z: Access EXTENDED ASSISTANT MENU
Ctrl+F: Format File System
Ctrl+C: Display Copyright
Ctrl+Y: Change AP Mode
```

Enter your choice(0-9): 0

System is starting...

Press Ctrl+D to access BASIC-BOOTWARE MENU

Booting Normal Extended BootWare

The Extended BootWare is self-decompressing.....

.Done.

\*\*\*\*\*

\*

\*

\* H3C WA5320 BootWare, Version 7.18 \*

\*

\*

\*\*\*\*\*

Copyright (c) 2004-2019 New H3C Technologies Co., Ltd.

Compiled Date : Mar 8 2019

CPU Type : ARM

CPU L1 Cache : 32KB

CPU L2 Cache : 256KB

CPU Clock Speed : 710MHz

Memory Type : DDR3 SDRAM

Memory Size : 256MB

Memory Speed : 533MHz

Flash Size : 32MB

PCB Version : Ver.B

BootWare Validating...

Press Ctrl+B to access EXTENDED-BOOTWARE MENU...

Loading the main image files...

Loading file flash:/wa5300-oasis-system.bin.....

.....

.....

Done.

Loading file flash:/wa5300-oasis-boot.bin.....

Done.

Image file flash:/wa5300-oasis-boot.bin is self-decompressing.....

.....  
 .....  
 .....  
 .....

.....Done.

System image is starting...

Startup configuration file doesn't exist or is invalid.

Line con0 is available.

Press ENTER to get started.

至此设备启动完成

配置关键点：

- 1) boot版本升级到版本配套的booware版本文件7.18版本
- 2) 升级完bootware后需要格式化Flash，避免空间不足导致失败
- 3) 从官网下载对应版本文件需要修改成wa5300-oasis.ipe
- 4) 操作步骤与传统瘦切胖类似，无需切换ap-mode，选择<2> Update Main Image

File

云AP是Fat AP。初次使用云AP，给云AP上电后，云AP会默认开启4个无线服务：

- 其中一个称之为管理WIFI，也称内部WIFI，SSID为H3C\_XXXXXX，XXXXXX为设备mac地址后六位。管理WIFI供商铺内部员工管理使用，一般在2.4G频段工作，当设备未连接到绿洲时，通过连接管理WIFI在浏览器输入10.40.94.1或myap.h3c.com访问本地web页面可进行本设备下的无线服务管理配置，一旦连接上绿洲，将只能通过绿洲平台进行统一的无线服务配置管理。
- 其余3个称为用户WIFI，也称商业WIFI，SSID为H3C\_WiFi\_1、H3C\_WiFi\_2、H3C\_WiFi\_3，不加密，不认证，不隐藏。当设备连接到外网，可为已经连接上用户WIFI的用户提供上网服务。