


TRANSFERRING FUEL FROM FORWARD TO  
AFT STORAGE TANKS WHILE FEEDING  
ENGINES FROM SERVICE TANKS

Open outlet valves of  
tank from which it is  
desired to transfer  
fuel. Use transfer  
pump.

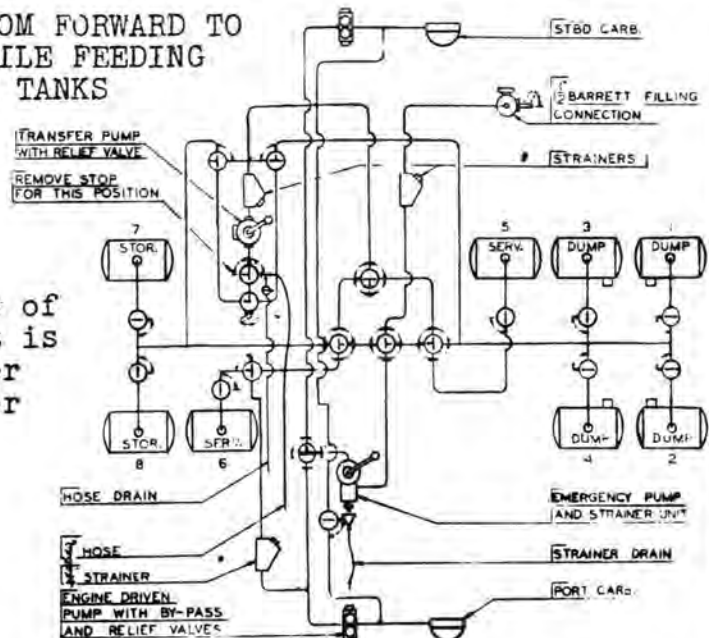


K-3 thru K-10

FUEL SYSTEM K  
SCHEMATIC DIAGRAM

Fig. XXVIII-i

TRANSFERRING FUEL FROM AFT TO  
FORWARD STORAGE TANKS WHILE  
FEEDING ENGINES FROM SERVICE TANKS

Open outlet valves of  
tanks from which it is  
desired to transfer  
fuel. Use transfer  
pump.

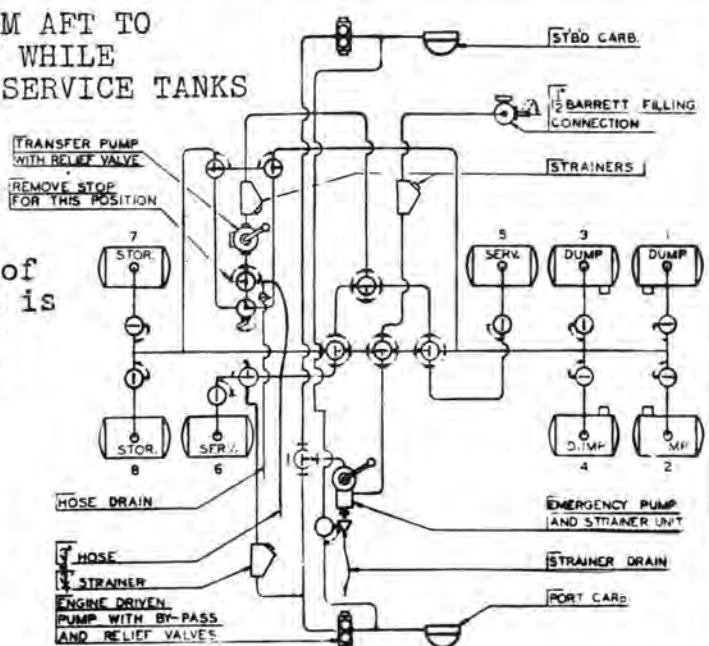

K-3 thru K-10

FUEL SYSTEM K  
SCHEMATIC DIAGRAM

Fig. XXVIII-j