


4.1.Navigation Buttons

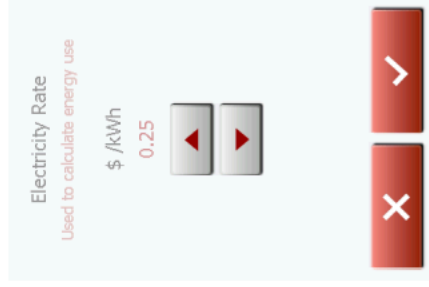

Accept/Back/Cancel/Arrow Up/Arrow Down/Arrow Left/Arrow Right
Whenever you change a parameter setting, you must tap the “**Accept**” button for the thermostat to acknowledge the change.
“**Accept**” is shown on the screen as “✓”.

“**Back**” is shown on the screen as a button marked with a hollow arrow pointing to the left.

In the various menus and submenus, you will find the “**Back**” button in the upper left corner of the touchscreen.

Tap the “**Back**” button to return to the previous menu.

“**Cancel**” is shown on the screen as a button marked “**X**”.

Although “**Cancel**” has the same effect as “**Back**”, it also results in all the unsaved settings being discarded.

As soon as you leave a home screen and enter one of the menus, either a “**Back**” button or a “**Cancel**” button will be shown.

To return to the home screen, tap **Back/Cancel** once or multiple times depending on where you are in the menu structure.

“**Arrow Up**”, “**Arrow Down**”, “**Arrow Left**”, and “**Arrow Right**” are used to toggle settings and values and to navigate through the menus. The “**Arrow Up**” and “**Arrow Down**” buttons are accelerated buttons. Holding either of them will make the value change continuously.

