



KEPServerEX V6.17 Software License 注册向导

KEPServer 软件授权激活分为 2 种方式，分别为在线激活和离线激活（推荐优先使用离线激活）。

首先在软件安装后，电脑右下角托盘区中，右键“KEPServerEX 6 Administration”图标，点击“License Utility”进入授权管理界面

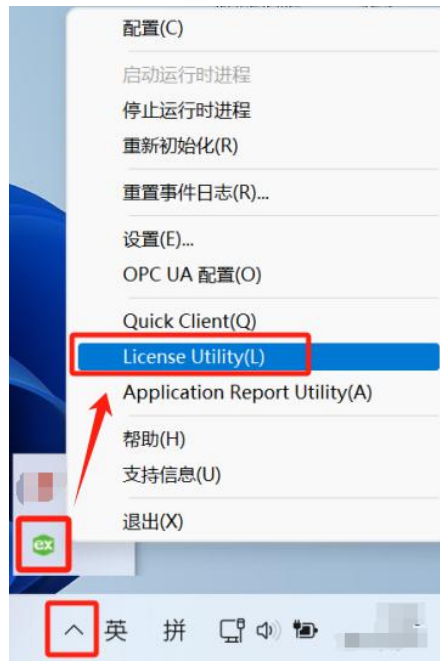

如果托盘区内没有 EX 图标，可以到电脑开始菜单-Keeware 文件夹中，点击“KEPServerEX 6 Administration”，就可以在托盘区显示 EX 图标。

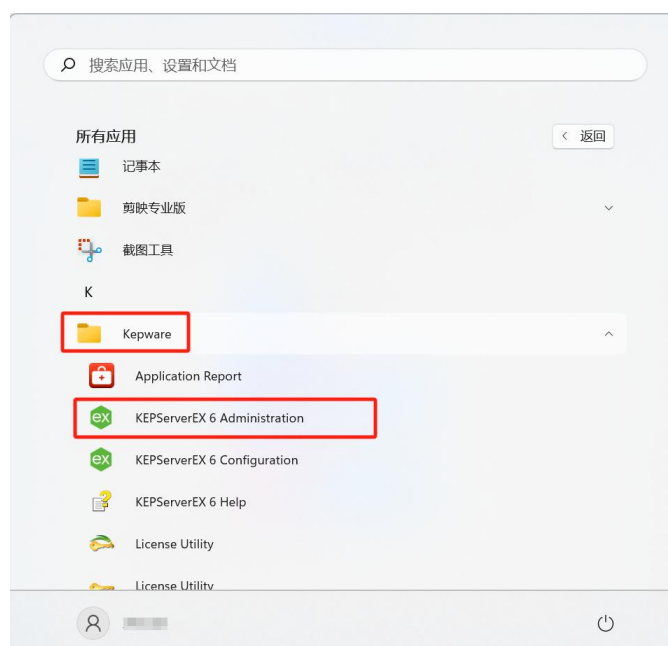

或者在软件配置界面中，也可以在工具栏里，打开“License Utility”界面。



弹出“查看许可证”页面：



一、离线激活方式

1、这里我们先演示离线激活方式。将“可能时在线执行许可操作（要求本机可访问互联网）”的勾选取消。点击“激活”



许可证附加信息:


类型: 不适用

说明: 不适用

☒ 可能时在线执行许可操作(要求本机可访问互联网)(O)

打印(P) 激活(A) 续订(R) 关闭(C) 帮助

2、进入如下页面，选择“下一步”：

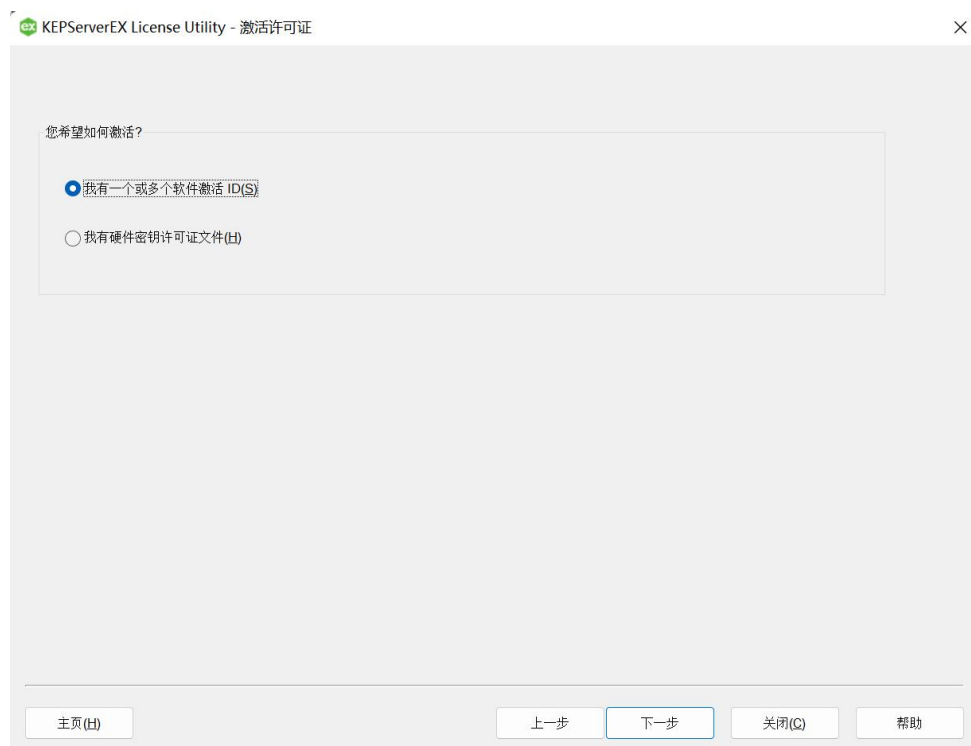

KEPServerEX License Utility - 激活许可证

您希望如何激活?



☒ 我有一个或多个软件激活 ID(S)

☐ 我有硬件密钥许可证文件(H)


主页(H) 上一步 下一步 关闭(Q) 帮助

2、在左上角输入 Activation ID（如果需要激活多个 ID，输入时注意换行。**注意：**多个相同驱动的 ID 不能同时激活在一台电脑上，否则会造成 License 丢失），点击“保存到文件”，生成激活请求文件 activation_request.txt 并保存到本地（文件名称与路径可修改）。


注意：服务器机器名称是自动识别的，需要确认与计算机名称保持一致。

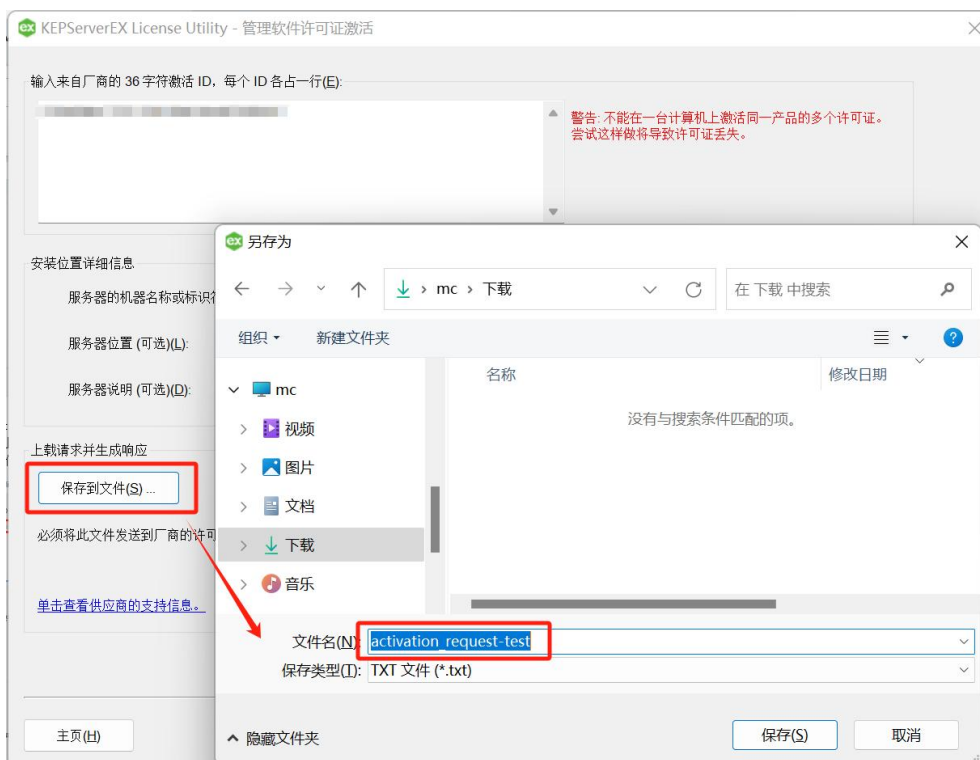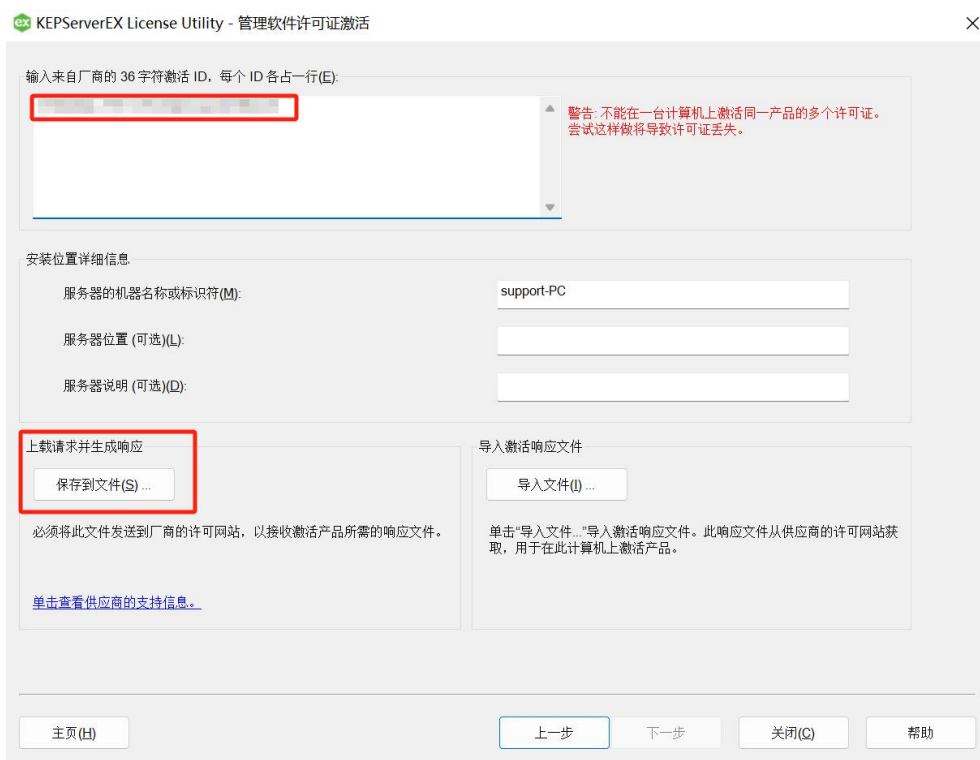


3、登录 KEPWARE 官网（<https://my.kepware.com/s/>），进入 My Kepware（如果没有帐号，需要先创建一个帐号，或者直接联系上海泗博进行激活）

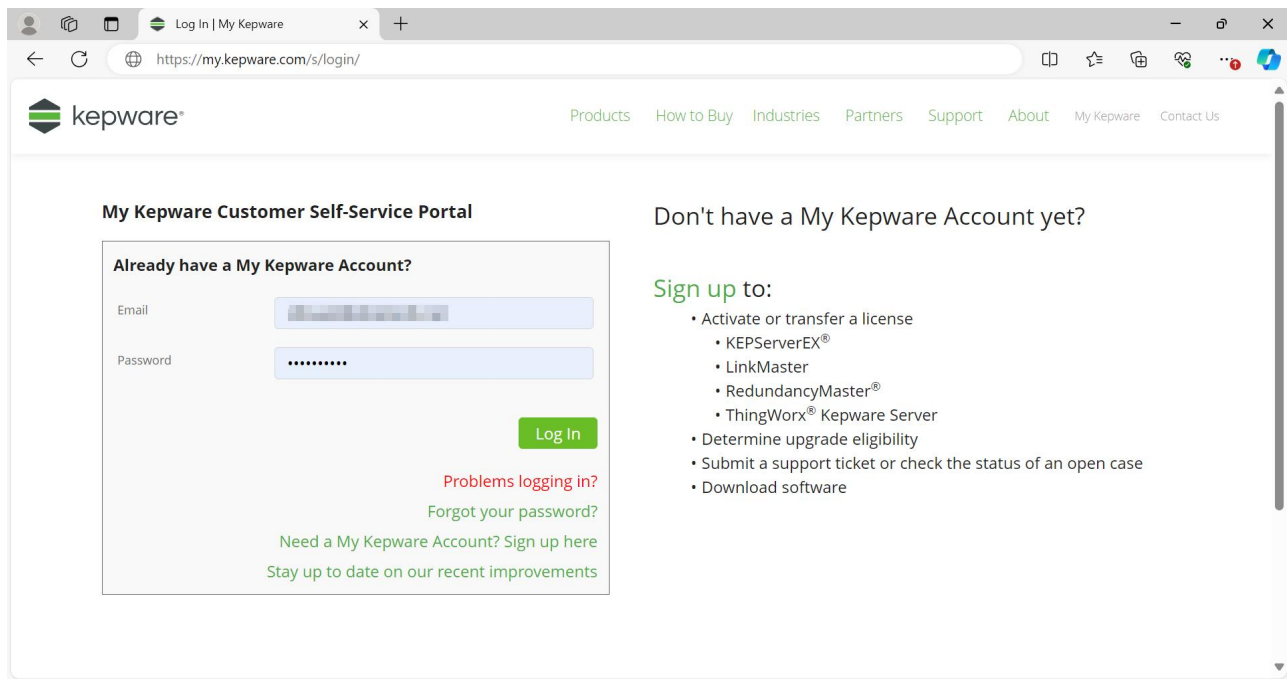

4、点击“Activate Product License”：

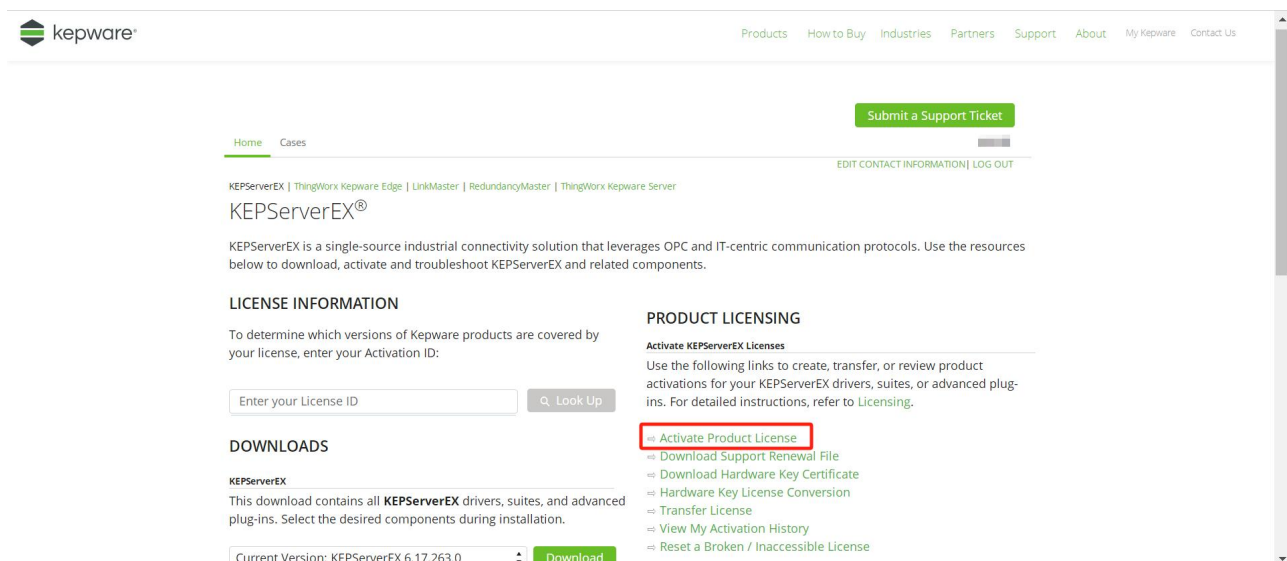

5、点击“选择文件”，选择保存的“activation_request.txt”文件

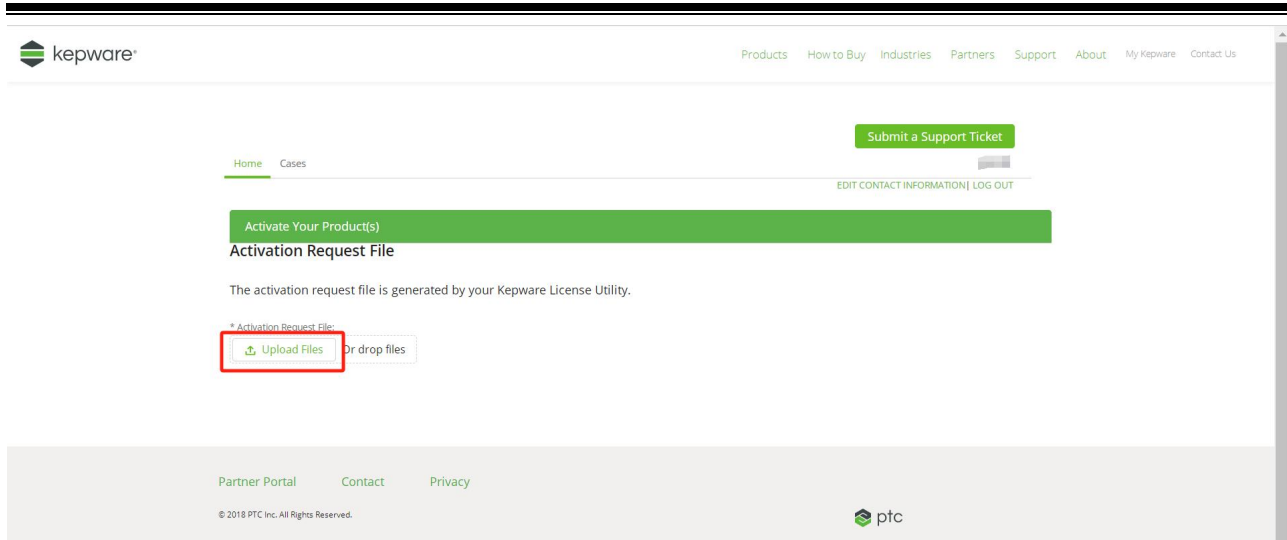

Home Cases

Submit a Support Ticket

EDIT CONTACT INFORMATION | LOG OUT

Activate Your Product(s)

Activation Request File

The activation request file is generated by your Kepware License Utility.

* Activation Request File:

Upload Files or drop files


Partner Portal Contact Privacy

© 2018 PTC Inc. All Rights Reserved.

ptc

6、勾选 “I am the end user”，网页滚动到最下面，填入相关信息并勾选 3 个全部条件。

注意：server name 必须填写实际注册 Licence 的电脑的计算机名称，以便以后的维护及管理

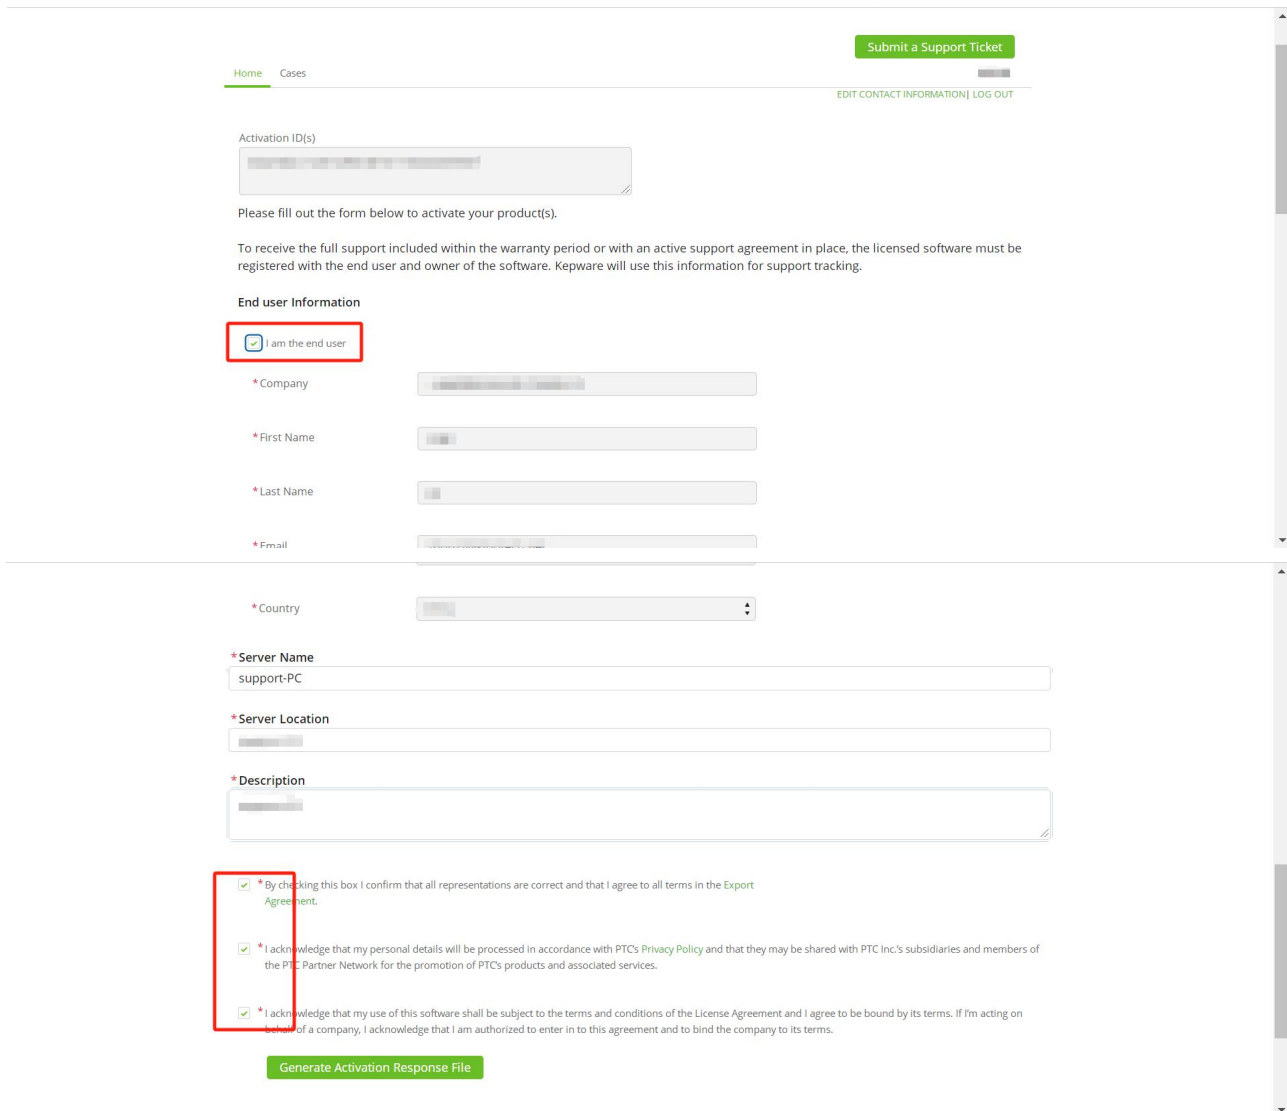

Home Cases

Submit a Support Ticket

EDIT CONTACT INFORMATION | LOG OUT

Activation ID(s)

Please fill out the form below to activate your product(s).

To receive the full support included within the warranty period or with an active support agreement in place, the licensed software must be registered with the end user and owner of the software. Kepware will use this information for support tracking.

End user Information

☒ I am the end user

* Company

* First Name

* Last Name

* Email

* Country

* Server Name

support-PC

* Server Location

* Description


☒ * By checking this box I confirm that all representations are correct and that I agree to all terms in the Export Agreement.

☒ * I acknowledge that my personal details will be processed in accordance with PTC's Privacy Policy and that they may be shared with PTC Inc.'s subsidiaries and members of the PTC Partner Network for the promotion of PTC's products and associated services.


☒ * I acknowledge that my use of this software shall be subject to the terms and conditions of the License Agreement and I agree to be bound by its terms. If I'm acting on behalf of a company, I acknowledge that I am authorized to enter in to this agreement and to bind the company to its terms.


Generate Activation Response File


7、点击 “Generation Activation Response File” 上传文件，上传文件成功后，再点击下载

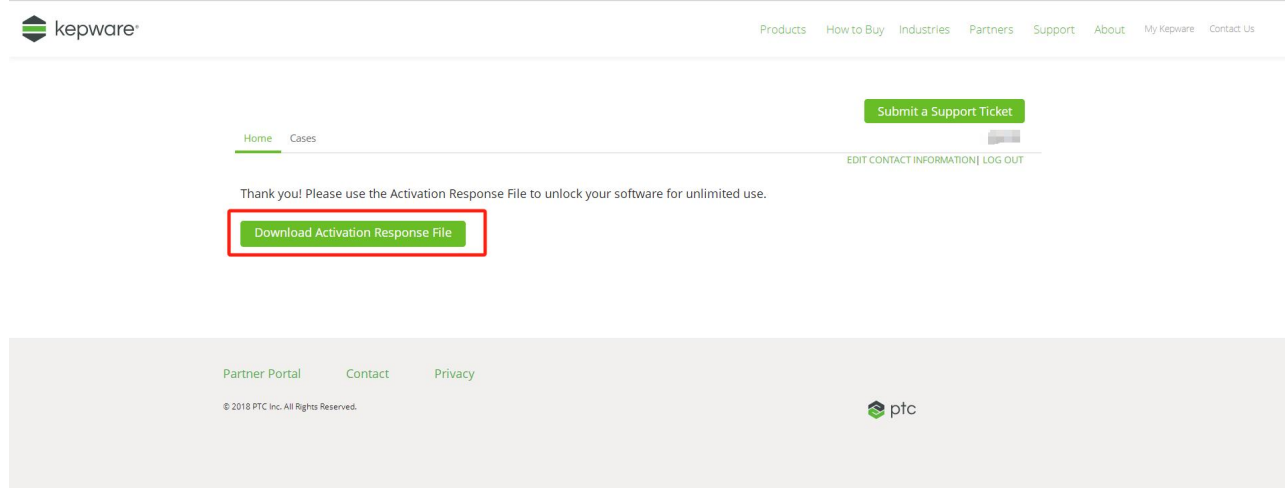

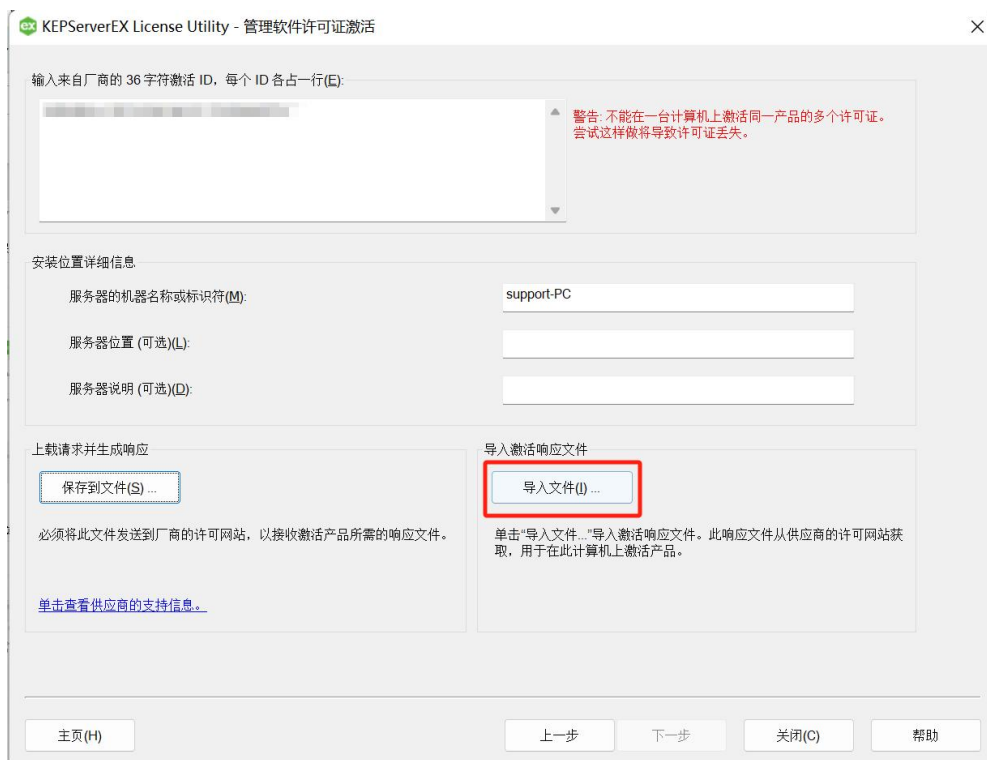

8、将下载好的“activation_response.txt”文件复制到安装 KEPServerEX 的电脑，点击激活界面中的“导入文件”，选择这个 response 文件后点击下一步，之后会提示安装成功的提示信息。

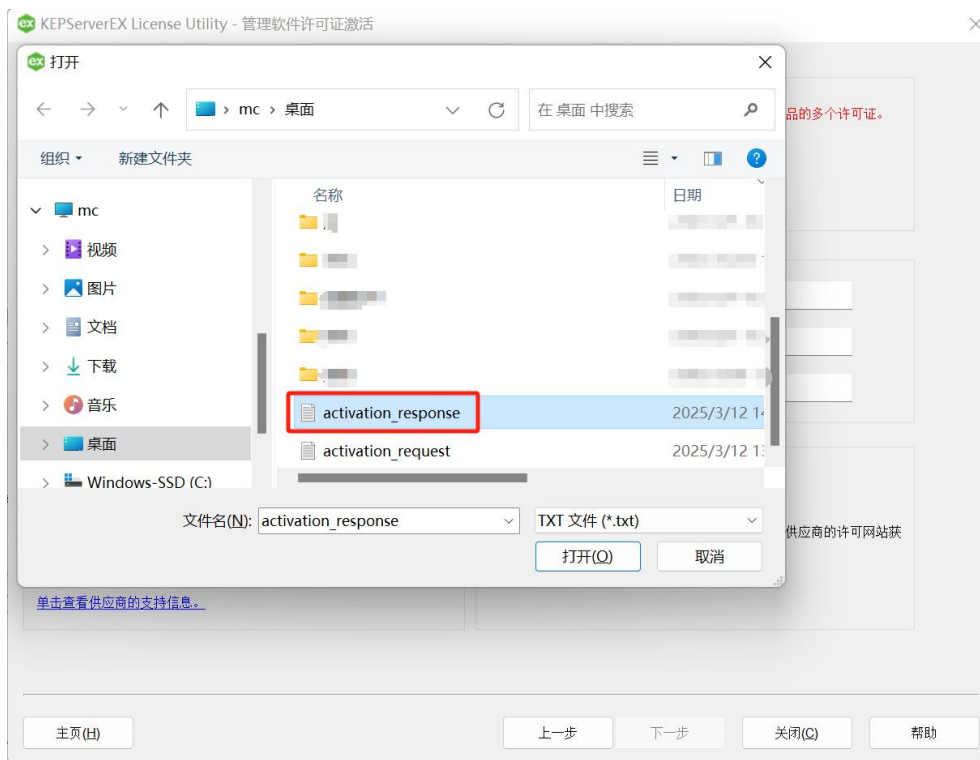

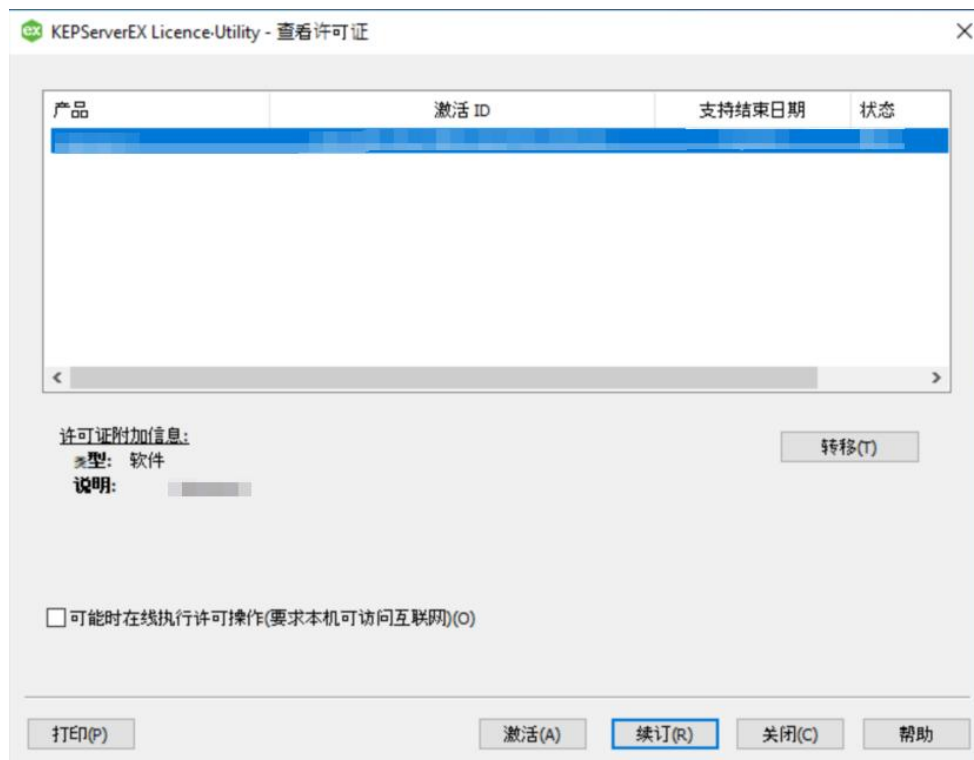





注册成功后，右键点击电脑右下角 EX 图标 ，如下图所示，点击“停止运行时服务”，会提示“将断开活动客户端的连接，确定继续？”，选择“是(Y)”，然后再右键点击右下角 EX 图标  点击“启动运行时服务”，即可正常使用这个 licence。



二、在线激活方式


首先需要确保激活授权的计算机处于联网状态下，且有 <https://my.kepware.com/s/> 的账户，没有需要提前注册。

1、首先还是在授权管理的首页，确认“可能时在线执行许可操作（要求本机可访问互联网）”已被勾选，然后点击激活，选择软件激活，进入下一步。

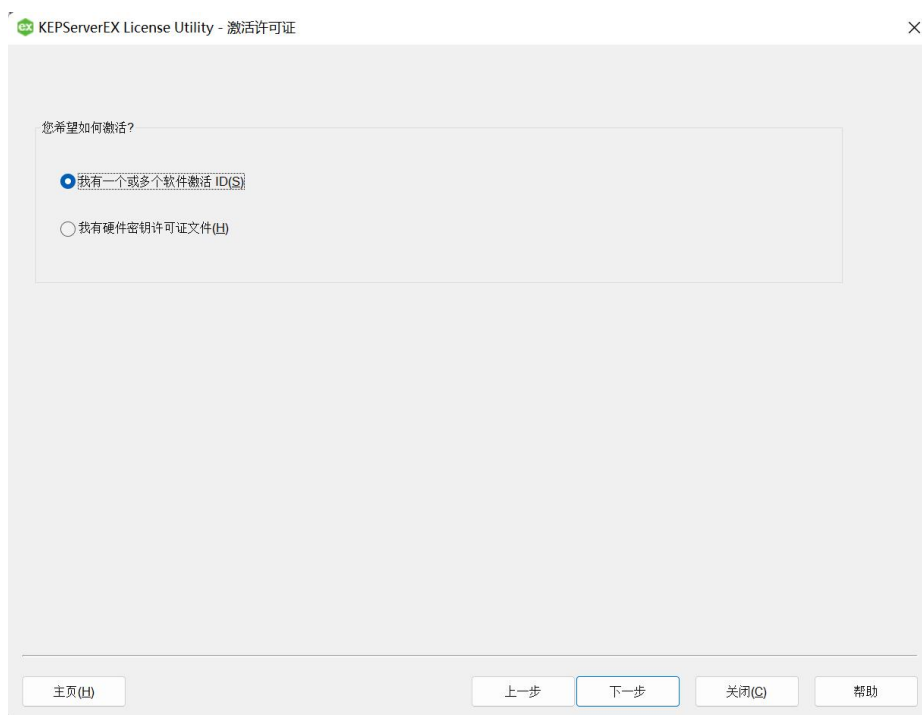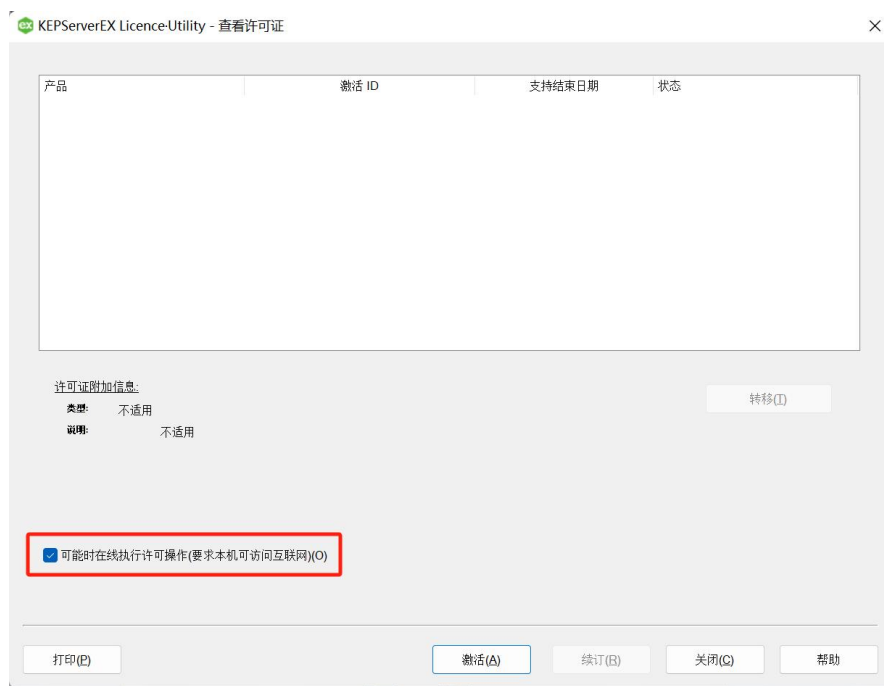

2、在左上角输入 Activation ID（如果需要激活多个 ID，输入时注意换行），然后在下方输入 my.kepware 网站的账户密码，然后点击下一步。

3、点击激活后，弹出对应窗口，显示相关信息，等待一会后，提示激活成功。点击下一步，返回主页，就可以看到授权已被成功激活，状态正常。

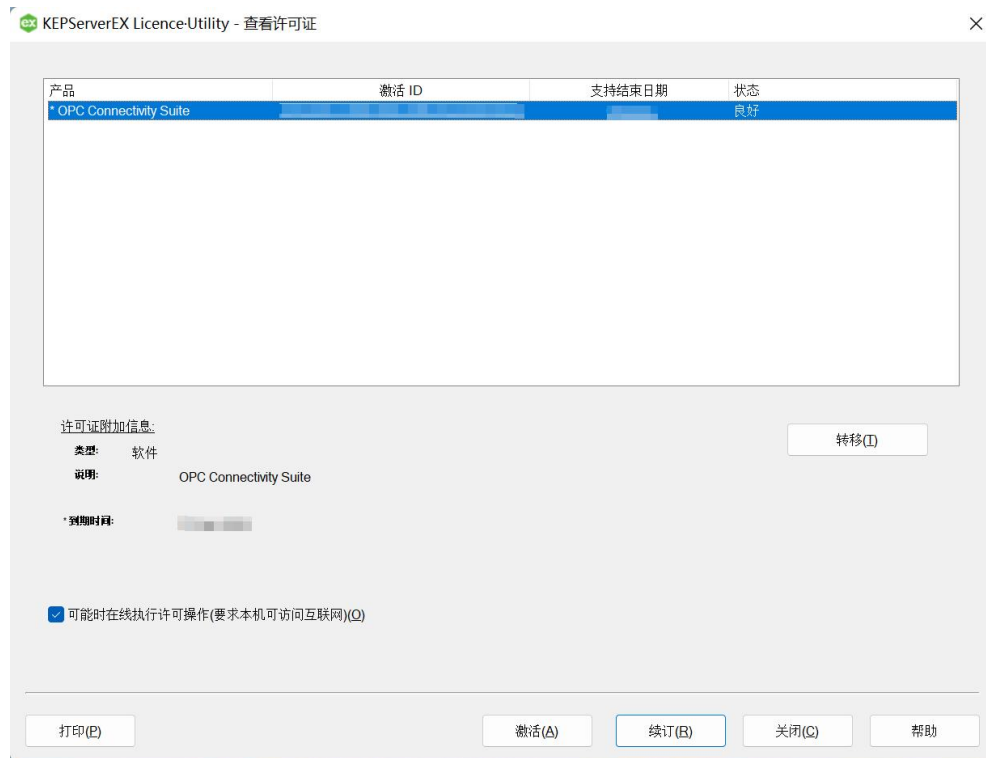

*如果有问题：提示大致如下，具体情况可联系上海泗博：021-3126 5138

