

Warning / Advertencia

The device must be used with a 5V power source.

El dispositivo se debe usar con una fuente de energía de 5v, como la incluida.


User Manual Manual de usuario

Multifunctional Device




VASS Instruments

Modo portaretrato

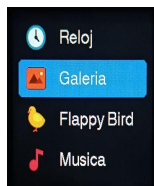


En el modo Galería, la pantalla mostrará diferentes fotos cada 5 segundos.

Modo altavoz

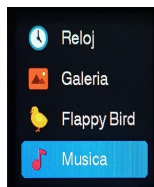


Cuando se activa el modo Música, se encenderá la conexión Bluetooth. Empareja el dispositivo con un teléfono o un computador portátil, y funcionará como un altavoz inalámbrico para el dispositivo conectado.

Clock Mode

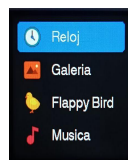

In the main menu, you can choose a function using the left button, and start it with the right button. You can exit any mode by pressing the left button.

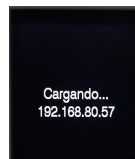

The screen shows a "Connecting" message until it connects to Wi-Fi and gets the time.



Once connected successfully, the screen will display the current time.

Front Panel



1. Select Button
2. Start Button
3. Tft RGB


Display

If the device is unable to obtain the time automatically, you can manually configure it using a web browser. Just enter the IP address displayed on the screen.

The screenshot shows a web page titled 'Configuración del Reloj'. It has a dark background with white text. There is a dropdown menu for 'Zona Horaria (GMT)' with the text 'Seleccione un huso horario'. Below it is a text input field for 'Hora manual (HH:MM:SS)' with the value '14:30:00'. At the bottom is a green button labeled 'Actualizar Hora'. Below the button, it says 'Hora actual: 18:00:00'.


The web page allows you to configure the time zone and time manually.

Back Panel

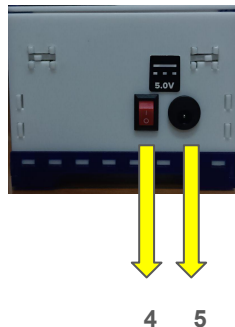

4. Power switch
5. 5v DC power plug (2.1mm)


Modo Flappy Bird

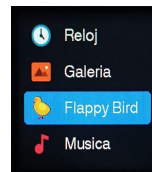

Al seleccionar la función de Flappy Bird, se iniciará un juego en el cual debes evitar que el ave toque los tubos que aparecen en la pantalla.



En la pantalla principal, presiona el botón derecho para comenzar el juego.

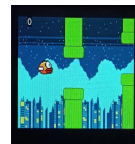


Una vez iniciado, presiona el botón derecho para hacer que el ave suba.

Si el dispositivo no puede obtener la hora automáticamente, puedes configurarla manualmente desde un navegador web. Solo debes ingresar la dirección IP que se muestra en la pantalla.


The screenshot shows a web page titled 'Configuración del Reloj'. It has a dark background with white text. There is a dropdown menu for 'Zona Horaria (GMT)' with the text 'Seleccione un huso horario'. Below it is a text input field for 'Hora manual (HH:MM:SS)' with the value '14:30:00'. At the bottom is a green button labeled 'Actualizar Hora'. Below the button, it says 'Hora actual: 18:00:00'.

La página web permite configurar manualmente la zona horaria y la hora.

Modo reloj

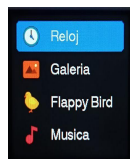

En el menú principal, puedes seleccionar una función usando el botón izquierdo y comenzar la función con el botón derecho. Puedes salir de cualquier modo presionando el botón izquierdo.

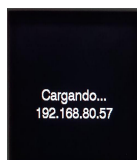


La pantalla muestra un mensaje de "Cargando" hasta que se conecta a la red Wi-Fi y obtiene la hora.




Una vez conectado correctamente, la pantalla mostrará la hora actual.


Flappy Bird Mode

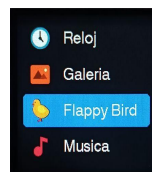

When selecting the Flappy Bird function, a game will start in which you must prevent the bird from hitting the pipes that appear on the screen.

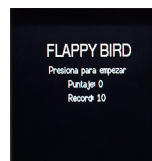


On the main screen, press the right button to start the game.

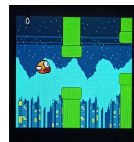


Once the game begins, press the right button to make the bird fly upward.

Photo frame Mode

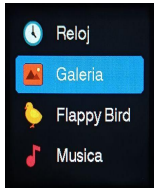

In Gallery mode, the screen will cycle through different photos every 5 seconds.

Speaker Mode

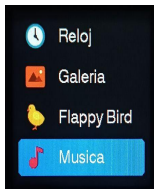

When Music mode is activated, Bluetooth will turn on. Pair the device with a phone or laptop, and it will function as a wireless speaker for the connected device.


Panel frontal



1. Botón de selección
2. Botón de inicio
3. Pantalla

TFT RGB

Panel trasero

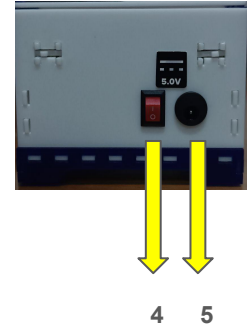

4. Interruptor de encendido
5. Conector de alimentación de 5V.