

# tactics\_pi

## a performance enhancement to dashboard\_pi

Rev 1.0 (DashT 2.0)

This document is © 2015-2019 [tom-r](#) and reproduced here from the [original source](#), together with the source code containing *tactic\_pi* algorithms and methods under the GNU General Public License v3 (GPL v3) – Likewise, modifications in [DashT](#) software into those algorithms and their documentation in this document are © 2020 [canne](#), and published under the same license. Please feel free to fork and copy this work but if you plan to publish it, please keep this notice unmodified in the document together with any copyright statement in the source code.

## 1. Introduction

*Everything started with the question : “Do we make it around the edge of that island when we tack now and sail the same apparent wind angle on the other tack ?”*

### Disclaimer :

This is still alpha code (not even beta), and you should not use it for live – real sailing.

I will not be liable for any harm, damage or whatever strange things happen if you use this plug-in and rely on its data.

## Table of content


1. Introduction.....	1
1.1 What tactics_pi can do :.....	3
1.2 Prerequisites :.....	5
2. Basic functions which work without a polar file.....	6
2.1 Calculate true wind data.....	6
2.2 Calculate “Leeway”.....	7
2.3 Calculate the surface current.....	8
2.3.1 Activation of the current display.....	9
2.4 Calculate and display the boat laylines.....	10
2.5 Show wind barbs.....	11
2.5.1 Activation of Wind barb display.....	11
2.6 Current Direction and Current Speed :.....	12
2.7 Heel :.....	12
2.8 Leeway :.....	13
2.9 TWA to Waypoint.....	13
2.10 “App.& True Wind Angle” dial instrument with TWD display.....	15
2.11 Average Wind Instrument.....	15
3. Performance functions which need a polar file.....	17
3.1 Load a polar file.....	17
3.2 Display polar on chart.....	19
3.3 Activation of the polar display on the chart.....	20
3.4 Performance data.....	21
3.5 Instruments which need a polar.....	22
3.5.1 Polarspeed :.....	22
3.5.2 Actual VMG:.....	22
3.5.3 Target VMG-Angle :.....	22
3.5.4 Target VMG :.....	23
3.5.5 Actual CMG:.....	23
3.5.6 Target CMG Angle :.....	23
3.5.7 Target CMG :.....	24
3.5.8 Polar Performance.....	24
3.5.9 Bearing compass.....	25
3.5.10 Polar Compass.....	27
3.6 Temporary waypoint and Target-TWA laylines.....	30
3.7 NKE style NMEA Performance Records and export to the instruments.....	31
3.8 Settings in the INI / CONF file.....	35
3.9 Data export:.....	38
3.10 Restrictions/known issues at the time being :.....	40
4. Terminology :.....	41
5. Appendix.....	42
5.1 How to align/check your magnetic compass with O.....	42
6. History.....	43

## 1.1 What tactics\_pi can do :


- Calculate true wind data : TWA, TWD, TWS from true heading (HDT), speed through water (STW) and app. Wind speed (AWS), with optional correction by heel-angle. Calculation is enabled via a preference setting and disables available true wind data from the bus throughout the tactics\_pi plug-in.
- Calculate the “leeway”, the boat drift based on heel. A common formula is used for that purpose.
- Calculate the surface sea current and display it as single instruments (current speed/direction) as part of the “Bearing compass” or as overlay on the chart (semi transparent). The routines take boat heel and leeway into account. If you don't have a heel sensor, there is a simply workaround, see below. Current display on the chart can be disabled by a preference setting.
- Calculate and display the boat laylines for the current tack, and the same TWA on the other tack. Sea current is taken into account, if available ! Laylines may be toggled on/off. Adjustable length and max. width (triangle, with one corner at the boat) of the boat laylines. The layline width reflects the boat's yawing (COG changes over time).
- You can load a polar file and calculate/display performance data, like actual VMG (velocity made good up-/downwind), Target-VMG, Target-TWA (the opt. TWA up-/downwind), CMG (course made good towards a waypoint), Target-CMG (opt. CMG angle and speed), polar speed (the speed you should be able to sail at current TWA/TWS based on your polar),...
- It can display the actual polar as overlay on the chart, including markers for Target-VMG/CMG angles. Just adopt your course and place your heading pointer on one of the markers, and you sail Target-VMG/CMG based on your polar ...
- You can set a (one !) temporary tactics waypoint and display the laylines to the mark, based on a Target-TWA calculation, while taking your polar into account.
- It has a “dial instruments” called “Bearing compass”. Boat true heading (HDT) points “up”, it shows the boat laylines as well, the surface current, a pointer to the waypoint (either set manually as the temporary Tactics waypoint or read from a NMEA RMB sentence), needles for AWA and TWA, markers for the Target-VMG/CMG angles.
- It has a “Polar compass” instrument, graphically displaying the actual polar ring and markers for Bearing to WP, Target-VMG angles and Target-CMG angles.
- It has an “Average Wind” instrument with an adjustable averaging time, which displays graphically the average wind and its deviations to port / starboard
- It can create specific NMEA performance records with the purpose to export them to

the displays of your instruments. You can now e.g. calculate the polar target speed in the plug-in and send it to your instrument display outside in the cockpit. Currently only available for NKE, but may be enhanced in the future.


- It can export the data from BaroHistory, WindHistory and PolarPerformance instruments to a flat text file with selectable export rate and column separator (via ini file). The export will either create a new, or append to an existing export file.
- There are various settings, which I grouped in a separate tab. To access the preferences screen, right mouse click on the tactics\_pi window, then select “*Preferences ...*”

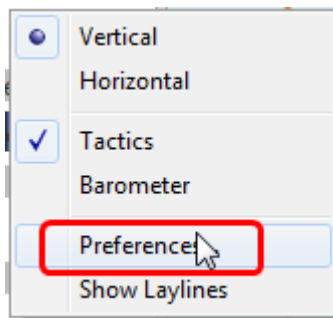

You'll find all settings in a separate tab “*Performance Parameters*” :

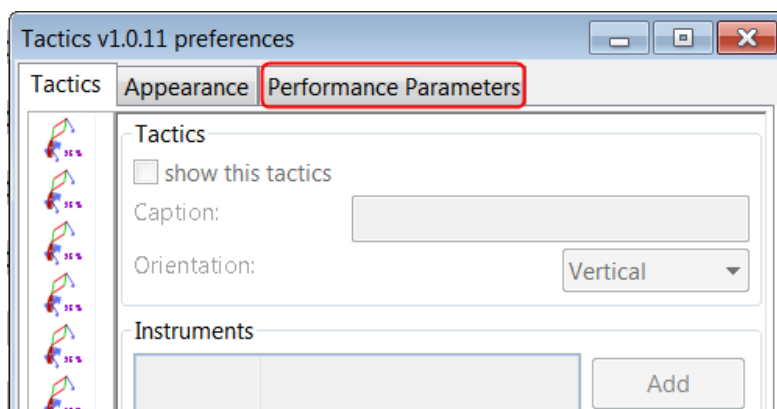

There are so-called ToolTips available for almost all of the preferences. Just hover the mouse over one of the prefs :

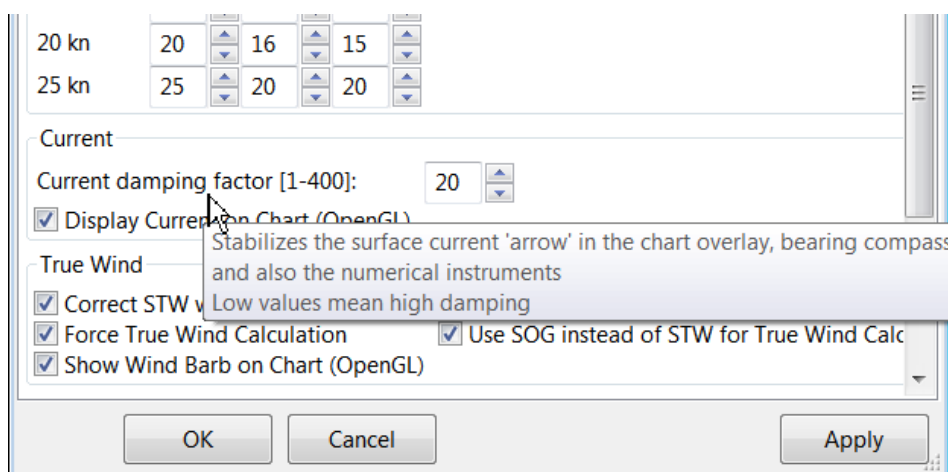

## 1.2 Prerequisites :

- You will need to activate **OpenGL**, if you want to use the chart overlay functions.
- **SOG, COG** from the GPS
- preferably **True Heading** from an electronic compass.  
if not available, magnetic heading will do, as long as you have magnetic variance available (either from the GPS RMC sentence or from the wmm\_pi plug-in)
- **Boat speed through water** from a log / “paddlewheel” sensor
- **Apparent wind angle** and **apparent wind speed**
- **Heel sensor** which supplies your boat heel angle to **O** as XDR sentence  
If not available, there's a workaround with manual input
- You need a polar file of your boat to use all polar based performance calculations
- **Calibrate AWA, Compass HDG/HDT, STW (Speed through water), and AWS (apparent wind speed) as good as possible.** Especially the compass heading calibration tends to be neglected. But this is vital for a proper surface current calculation. All I can say is : sh\*\*\* in – sh\*\*\* out ... ;-)

The terms CMG and VMG used in this documentation are not unique across instrument manufacturers and other sailing software packages. I will use both terms here in this documentation, but starting with ver. 1.0.3 you can change both terms by setting 2 preferences in the ini file. See the ini-file chapter (“Settings in the INI file”) for details please.


**See also the Terminology at the very end for explanation of terms**

## 2. Basic functions which work without a polar file

### 2.1 Calculate true wind data

The plug-in can calculate true wind data (TWA, TWS, TWD) but keeps the calculated data inside the plug-in (it does not broadcast it to O)!

True wind calculation is done silently if you don't have TWA, TWS, TWD available in your NMEA stream. Furthermore you can force the true wind calculation in the plug-in by a preference setting. If the tick "*Force True Wind Calculation*" is set

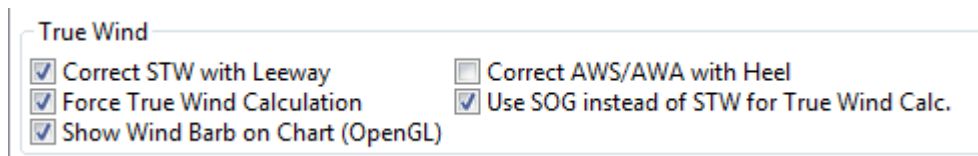

it does not matter if TWA, TWS and TWD are already available on the system or not. Calculation is done in the plug-in then. It does calculate TWA, TWS and TWD.

This is e.g. useful, if you have a heel sensor, which is not integrated in your instrument bus. You can use the corrections then to get more accurate true wind data.

Input is AWA, AWS, STW, and for TWD also true heading HDT.

If you don't have HDT on your system bus (but only HDG), you can use **wmm\_pi**.

**wmm\_pi** supplies the magnetic variation and if running is taken into account to calculate HDT from HDG

If you have a heel sensor in your system, and its data is available in O, you can use two corrections

- *Correct STW with Leeway :*  
the plug-in can calculate your leeway (drift angle) based on on your heel sensor (see below). That means your boat is possibly moving sideways, which adds an error to the True Wind calculation. Standard instruments normally do not take this effect into account, as far as I know. NKE does this correction in its regatta processor only, but not on their normal instruments.
- *Correct AWS/AWA with Heel*  
This option corrects your AWS and AWA data by the heel angle. **Use this option with great care !**. Manufacturers normally already do correct this, if you have a heel sensor integrated in your instrument bus. O will simply receive the already corrected data for AWS / AWA then. The result would be wrong data ! I implemented this option for those sailors using an external (or DIY) heel sensor, which is not recognized by their instrument system. You'll get a warning popup as soon as you set the tick.
- *Use SOG instead of STW for True Wind Calc.*

replaces STW (Speed through water, the “log”) with SOG (from the GPS) in the internal true wind calculation. The idea is simply to have a fallback for the true wind calculation in case your log fails and also to eliminate side effects on the calculation by surface current.

## 2.2 Calculate “Leeway”

Leeway describes the drift of the boat due to the force of the wind. Leeway is the basic input for the surface current calculation described later on. Input for the leeway calculation is your heel angle. Normally you'd say : the more you heel, the more you drift . But that's only part of the truth. Other significant inputs are boat speed and the shape of your hull...

A widely (NKE, B&G,...) used formula calculates the leeway with 3 input values : heel, boat speed (STW), and hullshape-factor.

$$\text{Leeway} = \text{hullshape-factor} * \text{heel} / (\text{STW} * \text{STW})$$

To make this work, you have to estimate the hullshape-factor.

The attribute in the preferences is called “*Boat's Leeway factor [0..20]:*”

The input range is 0...20, 10 is a good value to start with.

If you don't have a heel sensor on board, you can either set a fixed value ( e.g. 0 when motoring without sails), or try to set up a very simple “heel polar”.

Heel polar :

TWS/TWA	45°	90°	135°
5 kn	5	5.1	5
10 kn	8	10	11
15 kn	25	20	13
20 kn	20	16	15
25 kn	25	20	20

The idea is that almost every magnetic compass installed in the cockpits has a scale, where you can read the degrees of heel.


Then simply compare the O instruments display, for TWA and TWS, read the values from the scale and put it into the small table above.

Please be sure to read **True Wind Angle** and **True Wind Speed** and not apparent wind angle and speed !!!

I tried it on my own boat, comparing the heel polar values with those of my sensor. It works astonishingly well.

**Even if you use the heel-polar, you have to estimate the “*Boat's Leeway factor [0..20]:*”**

You have 3 choices for heel input, depending on where you set the radio button in the preferences. You can switch the radio buttons forth and back while sailing to compare the results, no problem

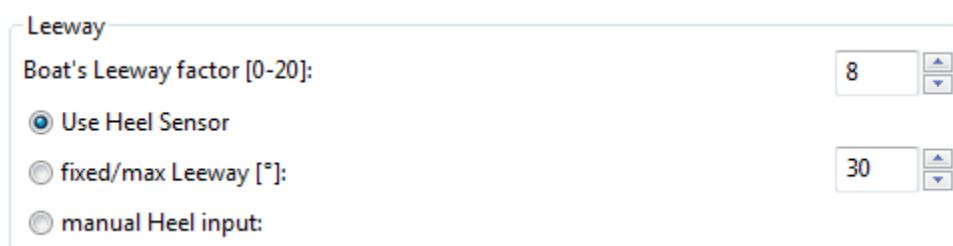

Leeway

Boat's Leeway factor [0-20]: 8

☒ Use Heel Sensor

☐ fixed/max Leeway [°]: 30

☐ manual Heel input:

The attribute “*fixed/max Leeway [°]:*” is dual purpose:

1. The given value is always taken into account as maximum possible Leeway value. In the screenshot below, I set it to 30°. If your heel polar or calculation with the formula above outputs values >30°, the program takes 30°.
2. If you set the radio button here, the routines always take 30°, no matter what your sensor calculates or your heel-polar would tell you.

## 2.3 Calculate the surface current

If you compare your HDT and COG vectors in O (the 2 forward vectors on the chart at your boat), the difference between both is a mixture between Leeway (the boat's drift) and surface current. Once we can determine Leeway, the rest is surface current.

The surface current calculation is simply a triangle calculation with vectors.


Always seen from the current position, the first vector is HDT (degrees) / STW (length).

As your boat drifts with the wind, the second vector is “course through water” (CRS, degrees) and STW (length)

“course through water” is actually HDT with applied leeway.

The resulting vector between CRS/STW and COG/SOG is the surface current.



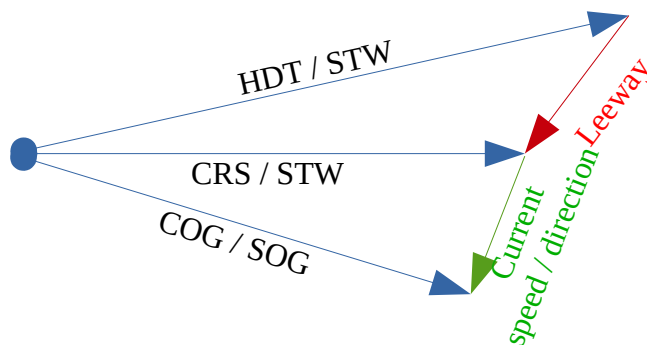

To calculate the current, you need as input HDT, STW, Leeway, COG and SOG and your GPS latitude / longitude.

In the preferences you can set 2 options for the current :

the damping factor : the lower the values are the more filtering is applied, and the reading gets more stable. On the other hand, it starts lagging a bit.

The **lower** the value, the more damping is applied. Actually I'm experimenting in the range of 0.001 to 0.025. Keep this value at the lower end, then start to increase, until it gets unstable.

Current

Current damping factor [0.001-0.4]:

☒ Display Current on Chart (OpenGL)

Please note :

tactics\_pi currently *always* corrects STW with Leeway *for the current calculation* , independent of the preference setting "Correct STW with leeway". This may change in a future release.

### 2.3.1 Activation of the current display

You can show a semi transparent blue current symbol underneath your boat, showing the surface current direction.




To activate the current display on the chart by default, upon program start, navigate to the Preferences dialogue and set the tick "[Display Current on Chart \(OpenGL\)](#)". The

preference is only setting the default.

While navigating in OpenCPN, you can turn the current overlay display on / off as you like.

Just right-click on any Tactics\_pi instrument and select “*Show Current*”. This toggles the display on/off.

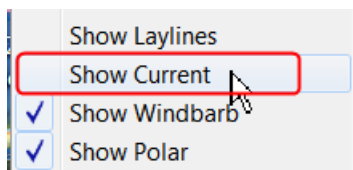

## 2.4 Calculate and display the boat laylines


You can show the boat laylines on the chart. They refer to COG.

The colours mean

red = wind from port

green = wind from starboard.

The width is defined by the yawing of your boat, the more you yaw, the wider they get

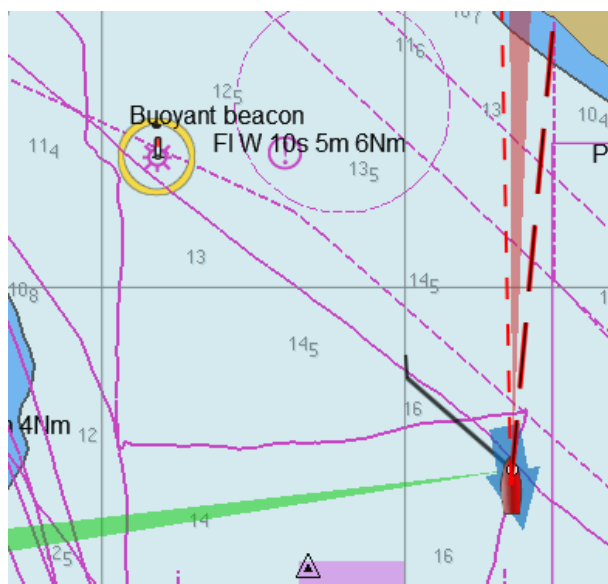

The second layline (green in this example) simply shows you where you would get on the other tack / gybe when you sail the same TWA after the tack. **Leeway and current are taken into account for the calculation of the second layline.**

In the preferences, you can set the following options :

Laylines	
Layline width damping factor [0.025-1]:	0.2
Layline length on Chart [nm]:	10
Min. Layline Width [°]:	2
Max. Layline Width [°]:	30


The [Layline width damping factor](#) is the rate how fast the layline width reacts on COG changes.

It's done with exponential smoothing, the smaller the factor, the higher the damping rate.

You can define the length of the laylines on the chart, as well as a minimum and maximum width.

If you don't like the yawing effect simply set min and max both to 1 or 2 degrees.

To toggle the layline display on the chart on/off, right-click on the tactics\_pi main window and select "[Show laylines](#)"

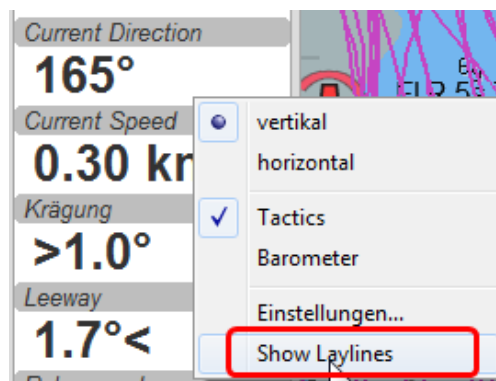

## 2.5 Show wind barbs


You can also show a wind barb at the boat position, showing you direction and speed (feather length) in 5 kt steps




### 2.5.1 Activation of Wind barb display

To activate the wind barb display on the chart by default, upon program start, navigate to the Preferences dialogue and set the tick "[Display Wind Barb on Chart \(OpenGL\)](#)". The

preference is only setting the default.





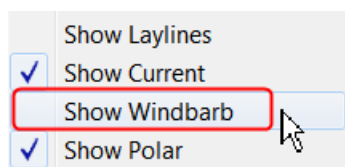







While navigating in OpenCPN, you can turn the wind barb overlay display on / off as you like. Just right-click on any Tactics\_pi instrument and select “[Show Windbarb](#)”. This toggles the display on/off.




I took the basic code for the wind barbs from the tack and laylines plug-in, but had to adopt the transit from one barb to the next level. Furthermore it to show the barbs up to 47 knots correctly now (it ends at 30 kts in the original code)

This is the currently implemented wind barb scale (0-2kts has no feather at all) :

Wind Barb Scale	
symbol	knots
	0-2
	3-7
	8-12
	13-17
	18-22

Wind Barb Scale	
symbol	knots
	23-27
	28-32
	33-37
	38-42
	43-47

## 2.6 Current Direction and Current Speed :

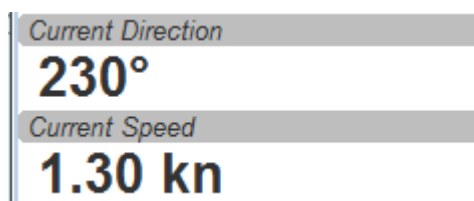

Current direction means “current sets into ...”

## 2.7 Heel :




In this example we heel to **starboard** !

## 2.8 Leeway :



Boat drifts 0.5° to **starboard** due to heel

## 2.9 TWA to Waypoint

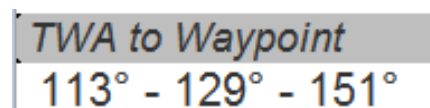

This instrument is meant to check the TWA on the (new) tack prior to sailing the tack/gybe manoeuvre.

Once you know the TWA angles of your sails, this is very useful e.g. to see which of your downwind sails to use on the next tack.

The instrument shows 3 data values: <min TWA > - <average TWA> - <max TWA>

<min TWA > and <max TWA> are live values without any damping.


<average TWA> is the *average* TWA angle towards your given WP.

All 3 values are exactly the same data as used in the [Average Wind Direction](#) instrument, just recalculated to TWA towards a waypoint.

**Please note:** you cannot refer from <min TWA > and <max TWA> to port / starboard side, values are simply sorted in the display to low and high.

**dashboard\_tactics (DashT) v2.0 onward Note:** As mentioned, this instrument depends on the Average Wind Direction instrument (section 2.11) which has been extended in *DashT* to include two range of averaging time, “normal” and “short” time span. This instrument is set, in *DashT* to use the “short” time range (like for regatta) by default. Since this feature can be turned off in the Average Wind Direction instrument (see section 2.11), this instrument automatically returns back to “normal”, *i.e* to long average wind integration and smoothing time. It is also possible to select the long integration time permanently, in the ini/conf file, see section 3.8:[TwaMarkUseShortAvgWind](#).


Once the wind veers from port to starboard side on full downwind courses the display can look like this

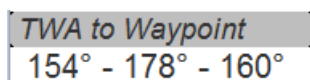

That means : average TWA is 178° and the wind deviates to 154° to one tack and 160° to the other tack.

Default average time is 6 minutes, you can change this by using the slider in the **Average Wind Direction** instrument (which also defaults to 6 minutes) !

**dashboard\_tactics (DashT) v2.0 onward Note:** default time is 4 minutes, maximum 30. “Short” integration time is from 10 .. 50 % of that time, default is 25 % integration time.

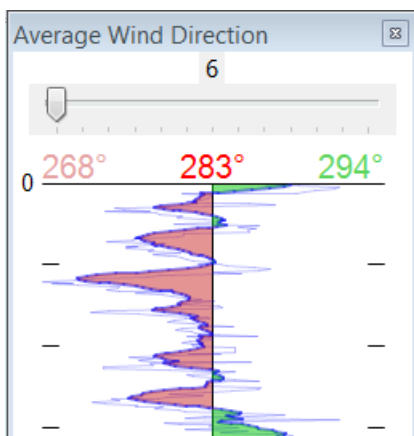

To do this, just define the ‘**Average Wind Direction**’ instrument in your list of instrument, open it once (per session) and move the slider. You can close the instrument afterwards, just keep it in the list of instruments.

Either place a WP in the GPS (NMEA--> RMB) or simply drop the TacticsWP on the new course line.

As with the other functions, the “Tactics temp.WP” overrules the RMB coming in from a GPS.

It'll give you an idea which gennaker/spi or sail to select on the next tack.


*Example :*

*Let's say we have 2 gennakers on board, the first one start to work at 105°TWA, has its best performance at 120-125° and drops out at 135° TWA.*

*The second gennaker starts at 115°, has its best performance at 130-140° TWA and can be used all down to 160° TWA*


*With the example values (113 – 129 – 151) from the screenshot above you cannot stay on the direct course line to the WP with the second gennaker all time as it starts at 115° (whereas we recorded 113° TWA...), but overall it fits with its optimum performance (130-140°) much better to the average wind direction (129° TWA) than the first gennaker...*

## 2.10 “App.& True Wind Angle” dial instrument with TWD display

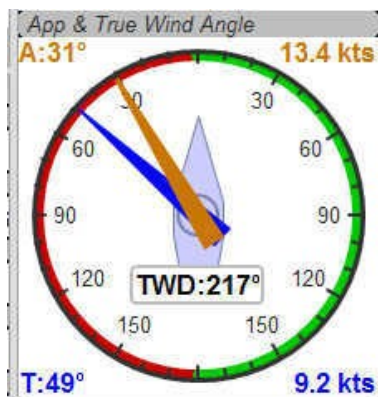

I added the TWD to the dial instrument; this saves some space on the screen for an extra instrument

## 2.11 Average Wind Instrument

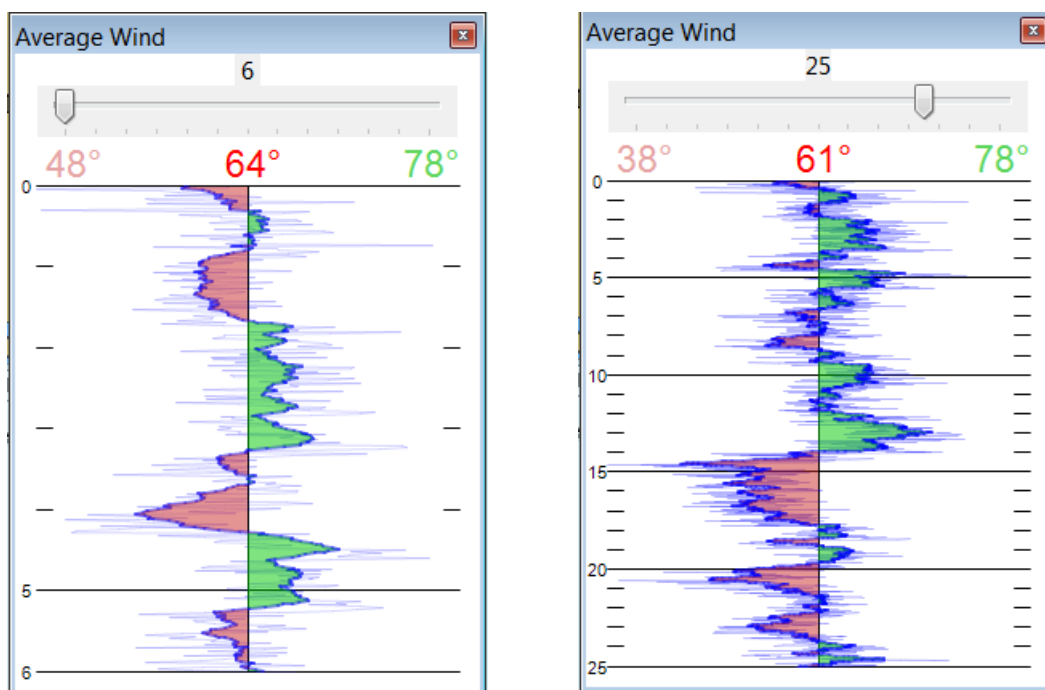

A new graphical instrument shows the average wind and its deviations to both sides.

The curve is centered on the average wind, green means the wind is on starboard of the actual average wind, red means it blows more from port.

You can adjust the averaging time in steps of 1 [min] between 6 and 30 mins.

**dashboard\_tactics (DashT) v2.0 onward Note:** default time is 4 minutes, maximum 30. “Short” integration time is from 10 .. 50 % of that time, default is 25 % integration time.

The **red** number in the center is the average wind direction, **left** and **right** is the min and max (unfiltered) wind angles to either side.

The very thin lines are the unfiltered wind direction input from the instruments.

To adjust the time average, just pull the slider left / right.

The vertical scale is [minutes], short dashes every minute, full horizontal line every 5 minutes.

The instrument has its own timer, so it's independent of the connection speed.

The idea is:

if you sail in puffy, changing winds, that you see graphically when the wind changes to the other side. In theory, you should tack, as soon as the wind veers away and crosses the average wind direction ...


As you can see in the examples above there are definitely cycles, where the wind changes direction.

Please note :

Moving the average time slider has a drawback on the **TWA to Waypoint** instrument

**dashboard\_tactics (DashT) v2.0 onward Note:** In addition to TWA to Waypoint, the AverageWind instrument controlled calculator is shared with all instruments - both the "normal" and the "short" integration time is used in all "DashT Race" instruments.

The DashT instrument has a bit different look, showing the new "short" and less smoothed integration time and the wind variation ranges during that time, indicating the short wind shifts clearly with a red slider. This feature can be turned off, see section 3.8.

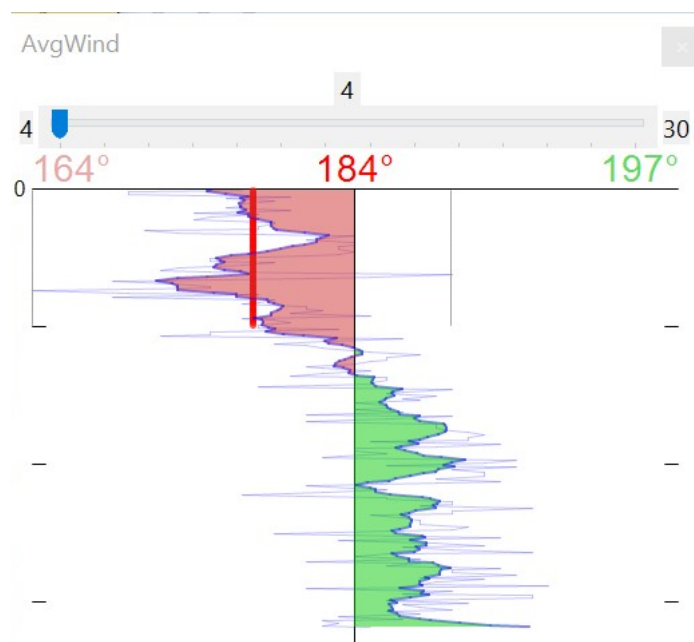




## 3. Performance functions which need a polar file

### 3.1 Load a polar file

You can load a polar file from the preferences screen

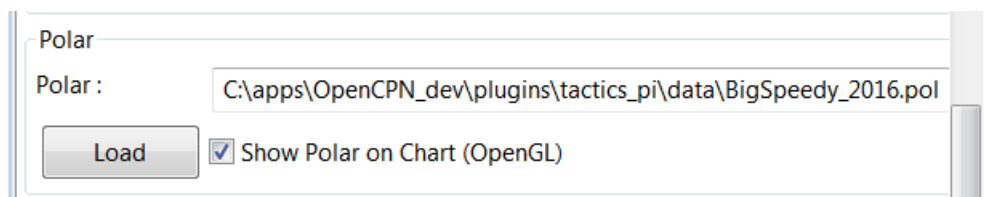

Click on the load button and select a polar file.

The format is the same that polar\_pi uses (or better: used last summer). I took the basic code from there, to keep the plug-ins consistent. This is also the reason why I did not spend time in displaying the polar again. You can use polar\_pi instead.

When loading the polar, it is written to a 2 dimensional static array with 181 lines for each TWA degree (0...180°) and 61 rows (0...60) for each knot of windspeed. It's a simple lookup table for the latter use, with the purpose to reduce the processor load and increase access speed in normal use.

Loading Procedure :

1. The TWA = 0 row and the TWS = 0 column is filled with zeros
2. The rest of the array is filled with NAN values.
3. The values from the polar file are placed at their corresponding spots in the array
4. The missing data in between given values (= not NAN) is then filled with average values.

**Please note :**

- **only polars with TWA / TWS / STW, and TWS/STW in knots make sense**
- **I do not extrapolate polars beyond their outside limits.**


If you run in a 30kt wind, and your polar ends at 25 kts, then the performance instruments

will give you a “no polar data” text. I suggest that you turn polar\_pi / vdr\_pi on at that point and record your data :-)

The only exception of the extrapolation is the range between the 0 kts windspeed and the first given value.

I do simple averaging here.

In other words : if **yellow** is the whole polar from TWS 0-60 kts and TWA 0-180°prefilled with NAN, and **red** is your polar data, you will get the **green** square filled with data.

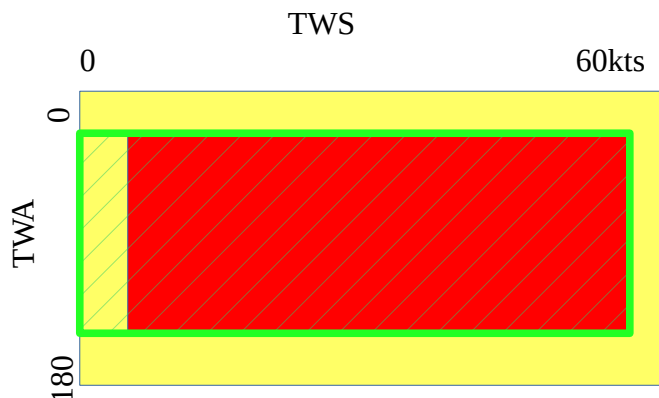

**See the ini file chapter, how you can read out the array as a text file (see key `PolarLookupTableOutputFile=...`).**

Here is an example of a polar file starting at 50° TWA

[illegible]

And this is the corresponding lookup table dumped to a file using the ini key `PolarLookupTableOutputFile`

Polar.txt - Editor																		
	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17
d/s	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
0	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
1	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
2	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
3	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
4	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
5	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
6	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
7	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
8	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
9	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
10	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
11	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
12	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
13	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
14	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
15	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
16	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
17	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
18	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
19	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
20	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
21	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
22	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
23	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
24	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
25	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
26	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
27	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
28	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
29	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
30	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
31	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
32	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
33	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
34	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
35	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
36	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
37	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
38	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
39	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
40	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
41	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
42	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
43	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
44	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
45	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
46	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
47	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
48	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
49	0.00	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3	-1.#3
50	0.00	0.85	1.69	2.54	3.39	4.23	5.08	5.55	6.02	6.39	6.76	6.96	7.17	7.27	7.37	7.41	7.45	7.49
51	0.00	0.85	1.79	2.56	3.41	4.26	5.11	5.58	6.06	6.42	6.79	6.99	7.19	7.29	7.39	7.43	7.47	7.51
52	0.00	0.86	1.71	2.57	3.43	4.29	5.14	5.62	6.09	6.46	6.82	7.01	7.21	7.31	7.41	7.45	7.49	7.53
53	0.00	0.86	1.73	2.59	3.45	4.31	5.18	5.65	6.13	6.49	6.84	7.04	7.23	7.33	7.43	7.47	7.52	7.56
54	0.00	0.87	1.74	2.60	3.47	4.34	5.21	5.69	6.17	6.52	6.87	7.06	7.25	7.35	7.45	7.49	7.54	7.58

True wind speed values are averaged now. True wind angle is still rounded to the next full knot. For testing I implemented full averaging of TWS & TWA as well , but live comparisons didn't show improvement. I think this is a good compromise to average TWS only, as I'm pretty sure that TWA won't be more accurate than one degree, due to upwash issues, position and accuracy of the wind vane, compass accuracy, etc.


## 3.2 Display polar on chart

You can display the polar as overlay on the chart.. The size of the different polar "rings" is normalized, they all have the same size. Nevertheless, the plug-in always shows the current / correct polar ring. The polar orientation is related to the true wind direction, and it shows **blue** markers for the Target-VMG angles up- and downwind, and **red** markers for the Target-CMG angles (if you have an active NMEA-RMB-sentence or a Tactics\_pi waypoint set).

There's also a small **blue** HDT line displayed. I decided to add an additional marker for Hdt, because I found it easier than always remembering which of the 2 red default markers is Heading and which one is Course over ground ...


To sail Target-VMG / Target-CMG angle, simply steer the **blue** HDT pointer on one of the Target-VMG / - CMG markers.

As you can see here, there may be 2 **red** CMG markers, the **preferred one has the bigger size** !

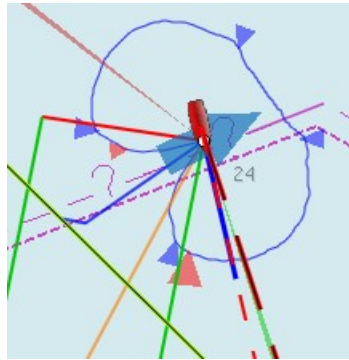


### 3.3 Activation of the polar display on the chart

To activate the polar display on the chart by default, upon program start, navigate to the Preferences dialogue and set the tick “[Show polar on chart \(OpenGL\)](#)”. The preference is only setting the default.

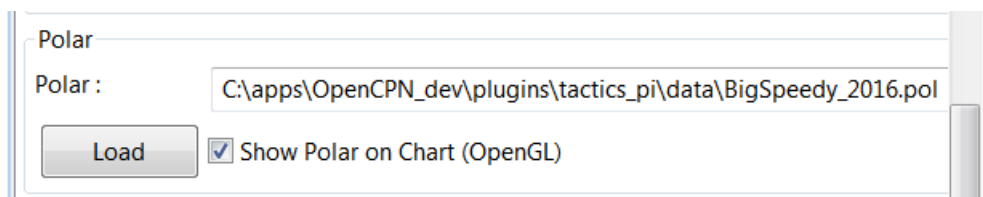


While navigating in OpenCPN, you can turn the polar overlay display on / off as you like.

Just right-click on any Tactics\_pi instrument and select “[Show Polar](#)”. This toggles the display on/off.

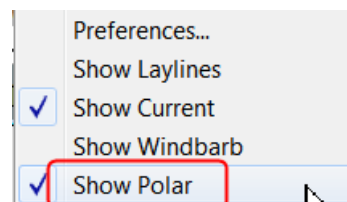

### 3.4 Performance data

various performance data is available as text instruments. See the following chart for reference on the different terms in relation to a polar curve

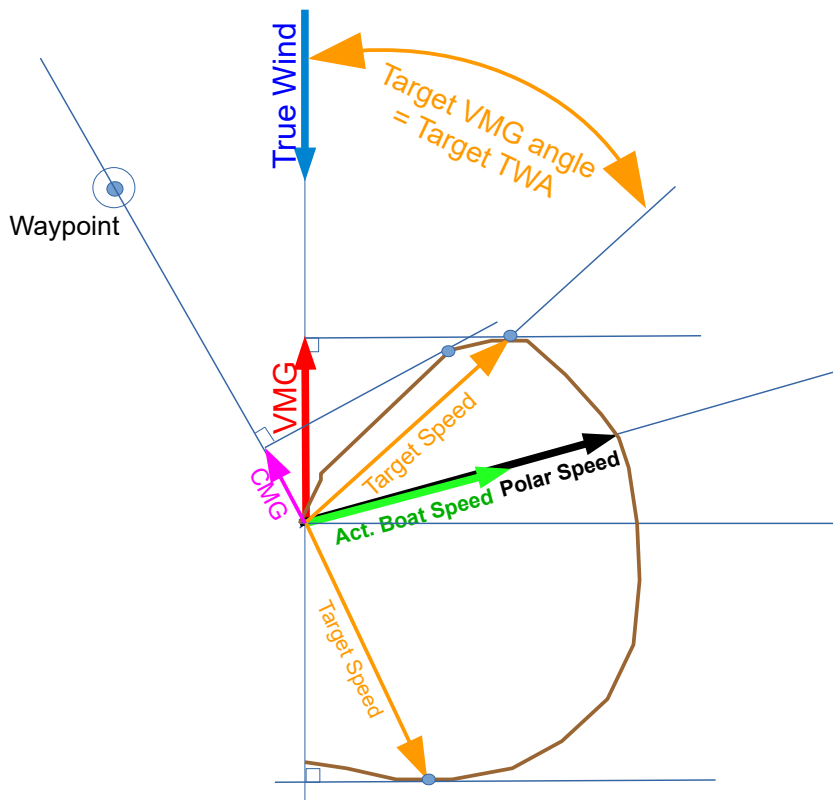

For some of the instruments I split the display in a % value for your current speed in relation of the polar data value as 100%.

**51 % / 11.95 kn**

In this example, we're currently doing (only) 51%, of what the polar has stored as optimum value. According to the polar we should be able to do 11.95 knots.

The reason to do so was simply that the data belongs together anyway and so to save space on the screen

### 3.5 Instruments which need a polar

#### 3.5.1 Polarspeed :

Polarspeed  
**51 % / 12.17 kn**

This is simply the reference of what speed we should be able to sail based on our current TWA / TWS values. The % value is the reference to STW.

This is **actual boat speed** versus **polar speed** in the drawing above.

Values below 100% mean, where slower than the polar says, above 100% mean where faster than the polar (we should run vdr\_pi now to record the data) :-)

Useful in crosswind / reaching conditions without a waypoint

It shows the optimum speed for the given wind conditions.


### 3.5.2 Actual VMG:



Is the "Velocity made good" referring to the wind direction. The means we're moving with 6,27 kts into wind direction. Also works when we sail downwind (then it's off the wind)

$VMG = STW * \cosine(\text{True Wind Angle})$

### 3.5.3 Target VMG-Angle :



Also known as **Target TWA**; this is the optimum TWA (True Wind Angle) when sailing upwind or downwind for a given wind speed, based on your polar data. **Very useful when sailing up-/downwind** without a waypoint.

The program simply searches the polar with a given TWS for the optimum TWA up-/downwind. It's defined as the tangens on the polar.

### 3.5.4 Target VMG :



Also known as "target boat speed" (**target speed** in the diagram above)


This is the reference to the Target VMG-Angle. In our example it means :

If we would sail with 164° TWA (from ex. above), then we could make 11.95 knots according polar), but currently we're doing only 51% of that.

### 3.5.5 Actual CMG:

Actual CMG
8.36

Actual **C**ourse **M**ade **G**ood = aka VMC; the component of your boat speed towards a waypoint. We're moving with 8.36 knots towards a waypoint

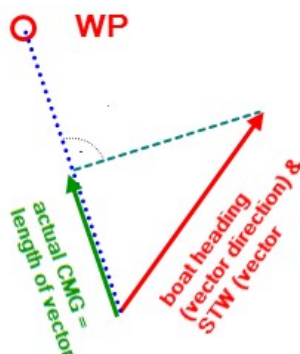

$CMG = STW * \cosine(\text{Heading} - \text{Marks bearing})$

Quite valuable on reaching courses towards a waypoint.

### 3.5.6 Target CMG Angle :

Target CMG-Angle
130°

Optimum angle to sail fastest to a waypoint, based on your polar data (Like VMG, but not up-/downwind but towards a waypoint).

### 3.5.7 Target CMG :


Target CMG
64 % / 11.98 kn

Same as *Target VMG*, but towards a waypoint. Means : “If we would sail 130° (Target CMG Angle, from ex. Above), we would move towards the waypoint with 11.98 knots, but currently we're only doing 64% of that.

**Comment : Calculation is verified, but it doesn't tell you (yet) if you're on the correct tack**


### 3.5.8 Polar Performance

– sail trimming aid --

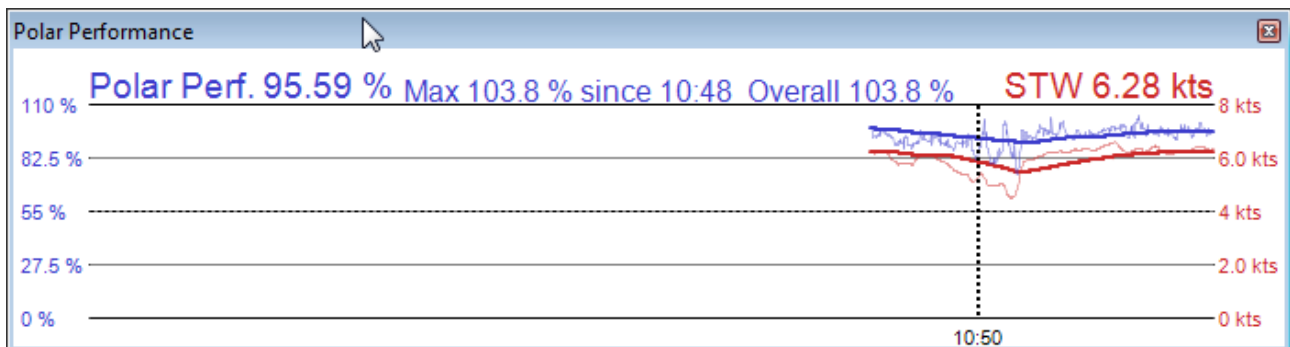

A new graphical instrument like Wind-History or Baro-History.


It simply plots the **STW** (speed through water) as percentage of the **polar speed** data (=100%) for the actual true wind speed TWS and true wind angle TWA. It is this comparison in the polar chart above, plotted as %

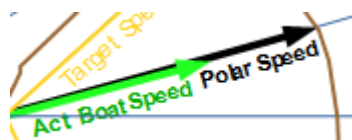

The idea is a simple sail trimming aid, as the percentage value is quite stable in comparison to the real speed values. And TWA / TWS is constantly adjusted while reading the polar data.

Message : as long as the filtered curve points upwards your trim adjustments were right, if it points down, you're sailing worse than before ...

### 3.5.9 Bearing compass

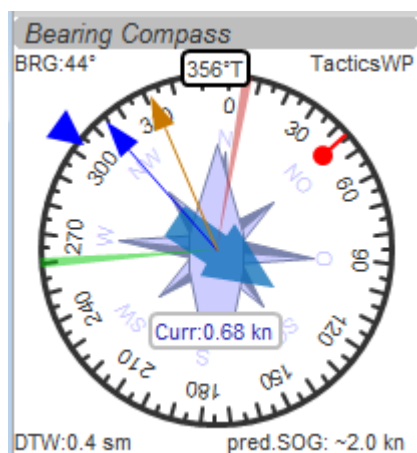



Nice dial instrument, inspired by NKEs tactics page, which I called *Bearing Compass*.

**UP- direction** is HDT, in this example (356°T)




### Surface Current:

We see the blue surface current arrow based on boat heading (HDT) and the current speed "Curr: 0.68 kn"



### Needles for TWA and AWA :

Furthermore we have the **blue, thin arrow**, which is TWA on boat axis. It also shows the TWD on the degree scale (315°) and the AWA arrow in **orange/yellow** (standard dashboard colour)

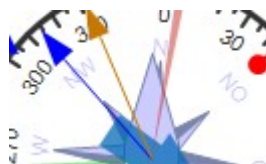

### Laylines :

You see the red/green laylines, which are based on COG. As with the laylines on the chart, the second layline shows you where you end up sailing **the same TWA on the other tack**.

Leeway and current are taken into account.

Use the second layline together with the waypoint marker described below.


**Please note** : the calculation is based on TWA. Especially when sailing downwind with a gennaker, your apparent wind angle depends very much on the speed of the boat. As soon as the gennaker start working aerodynamically, it'll speed up the boat and your AWA will show lower values (points more forward). If you gybe now, your boat speed will drop, and although sailing the same TWA, your app. wind angle will be higher than before. You will have to bring you boat back up to speed to see the same AWA than before the tack.

This can be tricky when you're close to a buoy and don't have much space/time to speed

up your boat again.

### Target VMG Angle indicator :

The blue triangle outside the degree scale is the Target-VMG Angle (Target TWA)

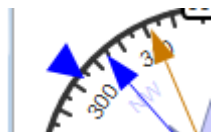


Simply adopt your course to place your blue TWA-arrow on the Target-VMG pointer, and you sail optimum (polar based) speed up-/or downwind.

### Waypoint marker :

If a waypoint is active, either by a NMEA-RMB sentence from your GPS or the temporary tactics WP which you can place on the chart, you will see the WP as a **red dot**.

**The manually placed tactics WP overrides a parallel available RMB sentence**

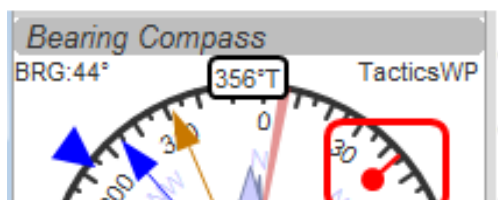


Change your course and place it under the layline ( the red one in this example) and you will directly bump into it.

Or use the second layline to determine when it is time to tack towards the waypoint and when you will make it around the WP (the red dot should be outside the second layline then)

### Additional data :

The top 2 corners show the bearing to the WP and the name of the WP (See screenshot above).

The lower 2 corners give you




DTW = the distance to the WP and predicted speed over ground on the other tack, **assuming that you sail the same TWA** on the other tack. This simply drops out of the surface current calculation ...


### 3.5.10 Polar Compass

I derived this instrument from Bearing Compass. Once you loaded a polar, it shows you the actual polar ring. The size of the ring is normalized (always the same size).

The polar is rotated with the TWD, which is shown as thin blue line here. In this example

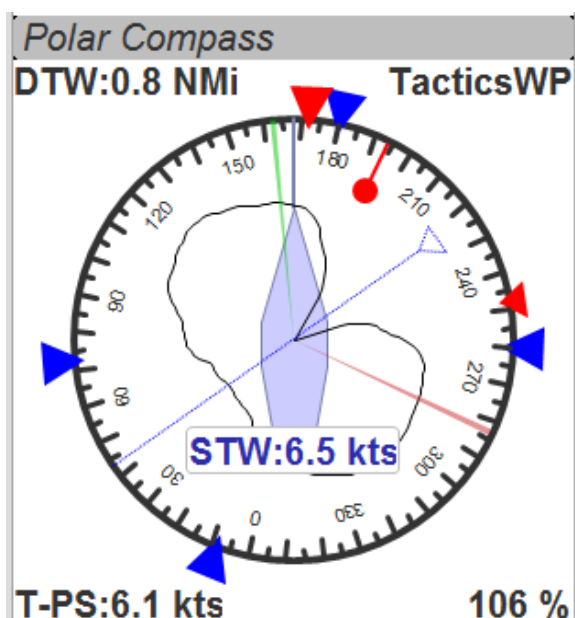

True Wind Direction is ~226°, the wind is blowing from port aft. Please note the vertical True Heading line, highlighted in **green** here :

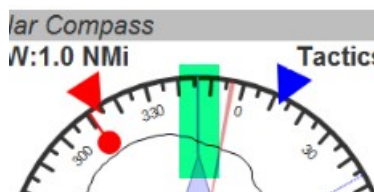

The 4 **blue** markers (triangles) are showing the Target-VMG-Angles up- and downwind. They are based on the actual polar ring and are moving with the with the polar.

The **red** maker(s) (triangles) are the Target-CMG Angles towards a Waypoint. They are only shown if you have an active Waypoint set (via NMEA-RMB or the 'temp. TacticsWP').

The **red** dot inside the compass shows the bearing to the waypoint.


In contrary to **Bearing Compass**, the VMG/CMG markers are shown in conjunction with the polar and are rotating with the polar/true wind angle.

To sail optimum VMG- or CMG-Angle, change your course in a way that **the boats heading line (green markup above) points on one of the markers**.



Top left and right data fields show


- DTW = Distance to Waypoint
- Waypoint name (here : TacticsWP)
- The centered data is STW = Speed Through Water

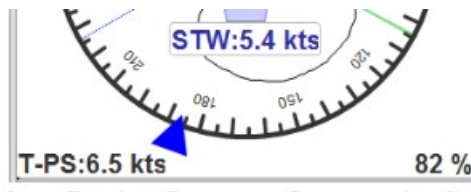

The 2 bottom fields are

- T-PS : Target-PolarSpeed on the left
- PolarSpeed-% = the percentage of you actual STW compared to the Target-PolarSpeed.

Furthermore you see the laylines which are based on CoG.

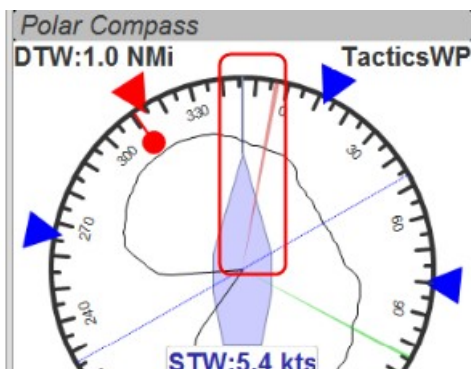


In this example, there is a angle btw. the HDT line and the layline, so we have a significant drift !

There may be 2 red CMG pointers, based on Bearing and True Wind direction. Generally one of them is preferred, because you approach the WP faster. The preferred one has a bigger size !!!

**For those who are interested in the theory of CMG calculation**, see the following example with the markups below:

From this solid purple bearing line, we have to find the tangens on the polar curve to both sides. The tangens is -- in relation to the purple bearing line -- the highest point of the polar curve. Graphically one draws perpendicular lines from the purple bearing line to either side until it just touches the polar curve. The length on the purple bearing line, measured from the 0-point of the polar, to the perpendicular intersections (marked **CMG**) corresponds to the Target CMG speed.

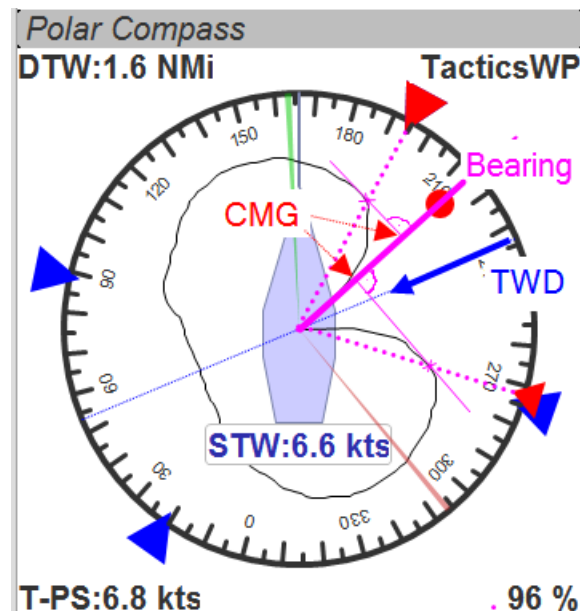



You can right-click on any place in the chart and drop a temporary waypoint (exactly one).



wind from port

**Additionally** I do a polar based calculation to see if the direct course would be faster compared to the Target-VMG calculation.

In that case you'll get a red or green line directly to the waypoint. Colour depends on the side the wind is blowing from. Wind from port → **red**, wind from starboard → **green**

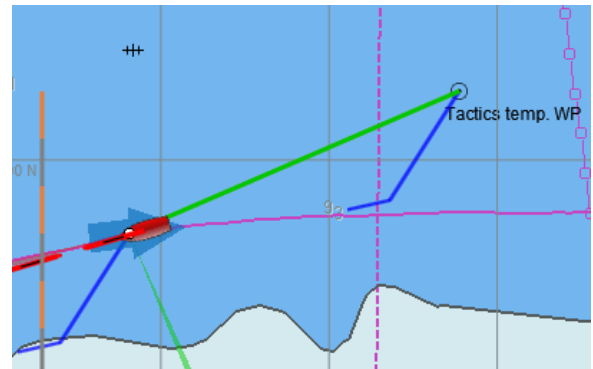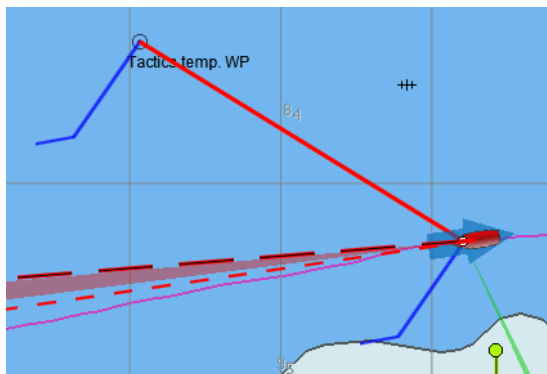

As you can see here I'm placing a wind barb also on the tactics waypoint.

Please note :

In contrast to weather routing, I'm explicitly not using grib files here for current/wind info. The "Temp. Tactics Waypoint" is meant for a quick, near run around a buoy, cape of an island, etc. using the live wind data we currently experience and the momentary surface current. Just drop a mark on the chart and off you go. Delete it, drop it somewhere else, and boom, off you go again. Maximum one tack/gybe not more.

### 3.7 NKE style NMEA Performance Records and export to the instruments

NKE supports the upload of specific performance data to their instrument bus, which can be shown in their displays then. These records are polar based and unless you're using their (quite expensive) regatta processor, this gives us an easy way to display e.g. the "Target Polar Speed" outside in the cockpit on the standard instrument displays.

Due to the lack of information on other manufacturers capabilities, I implemented this for the NKE system right now.

Be aware that OpenCPN can only import/export NMEA183 right now, but not NMEA2000 or SeaTalk.

The following 5 records are implemented :

### Speed and performance target

`$PNKEP,01,x.x,N,x.x,K*hh<CR><LF>`

|      \ target speed in km/h

      \ target speed in knots

### Course on next tack

`$PNKEP,02,x.x*hh<CR><LF>`

      \ Course (COG) on other tack from 0 to 359°

### Opt. VMG angle and performance up and downwind

In tactics\_pi v1.0.11:

`$PNKEP,03,x.x,x.x,x.x*hh<CR><LF>`

|    |    \ performance downwind from 0 to 99%

|    \ performance upwind from 0 to 99%

      \ opt. VMG angle 0 à 359°

In dashboard\_tactics\_pi (DashT) v2.0 onwards:<sup>1</sup>

`$PNKEP, 03, x.x, x.x, x.x*hh<CR><LF>`

|      |      \ *polar speed performance TWA/TWS from 0 to 99%*

|      \ *performance upwind or downwind from 0 to 99%*

      \ *opt.VMG angle 0-359deg \*/*

**Angles to optimise CMG and VMG and corresponding gain (available but to be verified)**

---

1- In *DashT* the VMG target upwind/downwind % value is the same as shown in instrument 3.5.4.



\$PNKEP,04,x.x,x.x,x.x,x.x\*hh<CR><LF>

| | | \ Gain VMG from 0 to 999%

| | \ Angle to optimise VMG from 0 to 359°

| \ Gain CMG from 0 to 999%

\ Angle to optimise CMG from 0 to 359°

### Direction and speed of sea current


\$PNKEP,05,x.x,x.x,N,x.x,K\*hh<CR><LF>

| | \ current speed in km/h

| \ current speed in knots


\ current direction from 0 à 359°

There is a new tab now in the Preferences where you can define up to 5 performance NMEA183 records to be created.

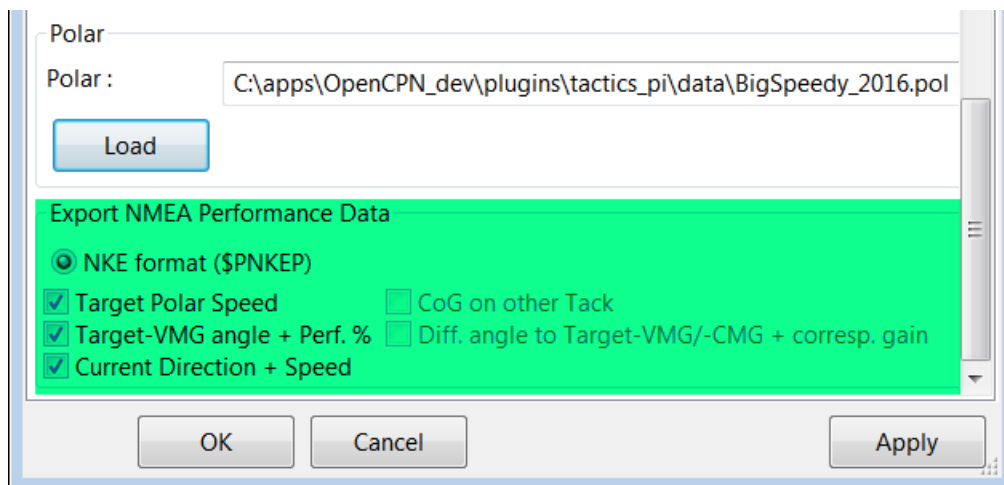

These 5 NMEA183-records all begin with \$PNKEP and are created on the fly using the data calculated in the plug-in and are sent to OpenCPNs NMEA stream. **To send the records to your instruments, you have to define an outgoing connection in you Interface connections**, e.g. like this :



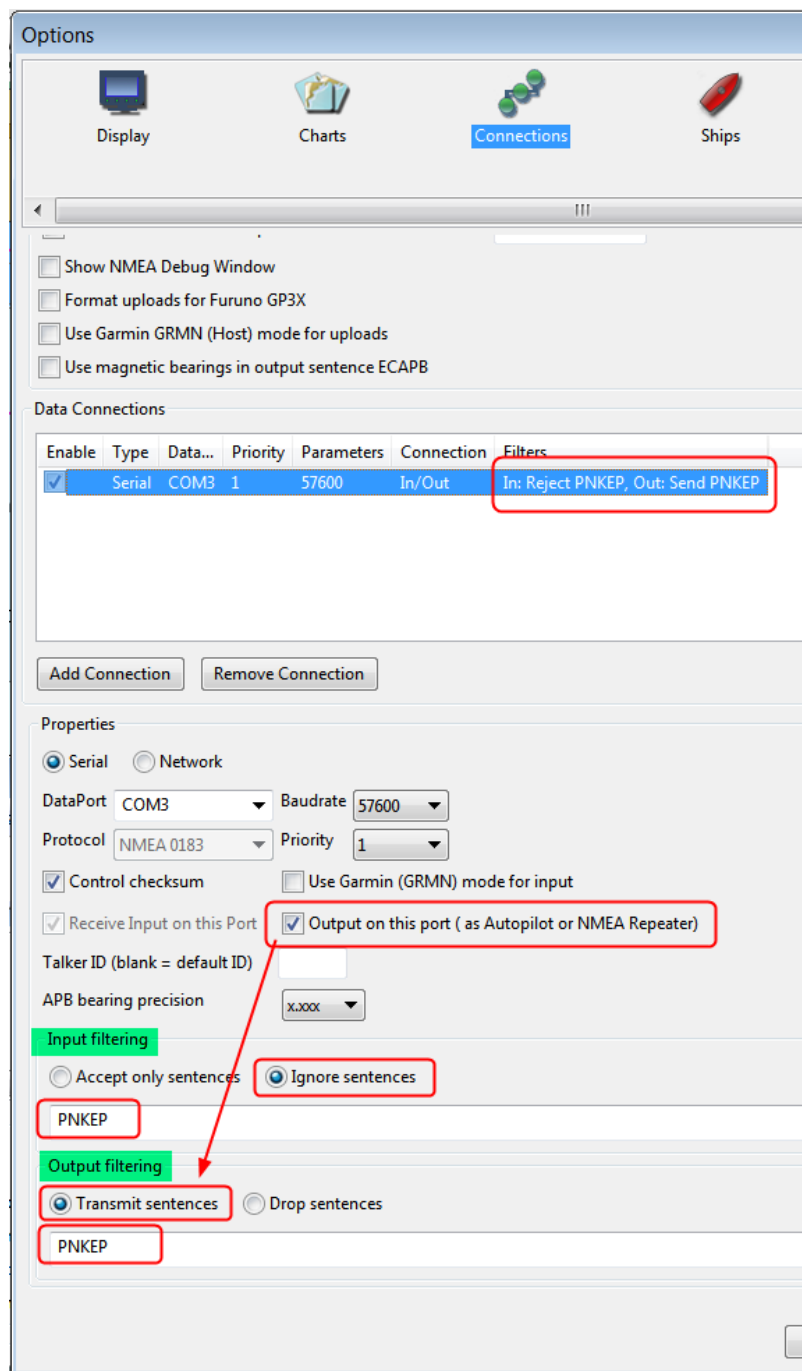

- Set an output filter as shown above, filtering for **PNKEP**. After set up, you should see records beginning with \$PNKEP, in your NMEA debug window.


NKE exports the \$PNKEP sentences as soon as they're available on the topline bus. Normally they're calculated in their regatta processor and then exported to the PC.

- Therefore **ignore** all incoming \$PNKEP sentences ! Click on *Input filtering* (see screenshot above), select *Ignore sentences* and add PNKEP.
- Don't forget to re-init your NMEA data stream **in your instruments**, to make sure the new records are accepted.

### 3.8 Settings in the INI / CONF file

I added a complete tab “Performance parameters” with all the settings.

The prefs tab now shows the currently installed version including the patch

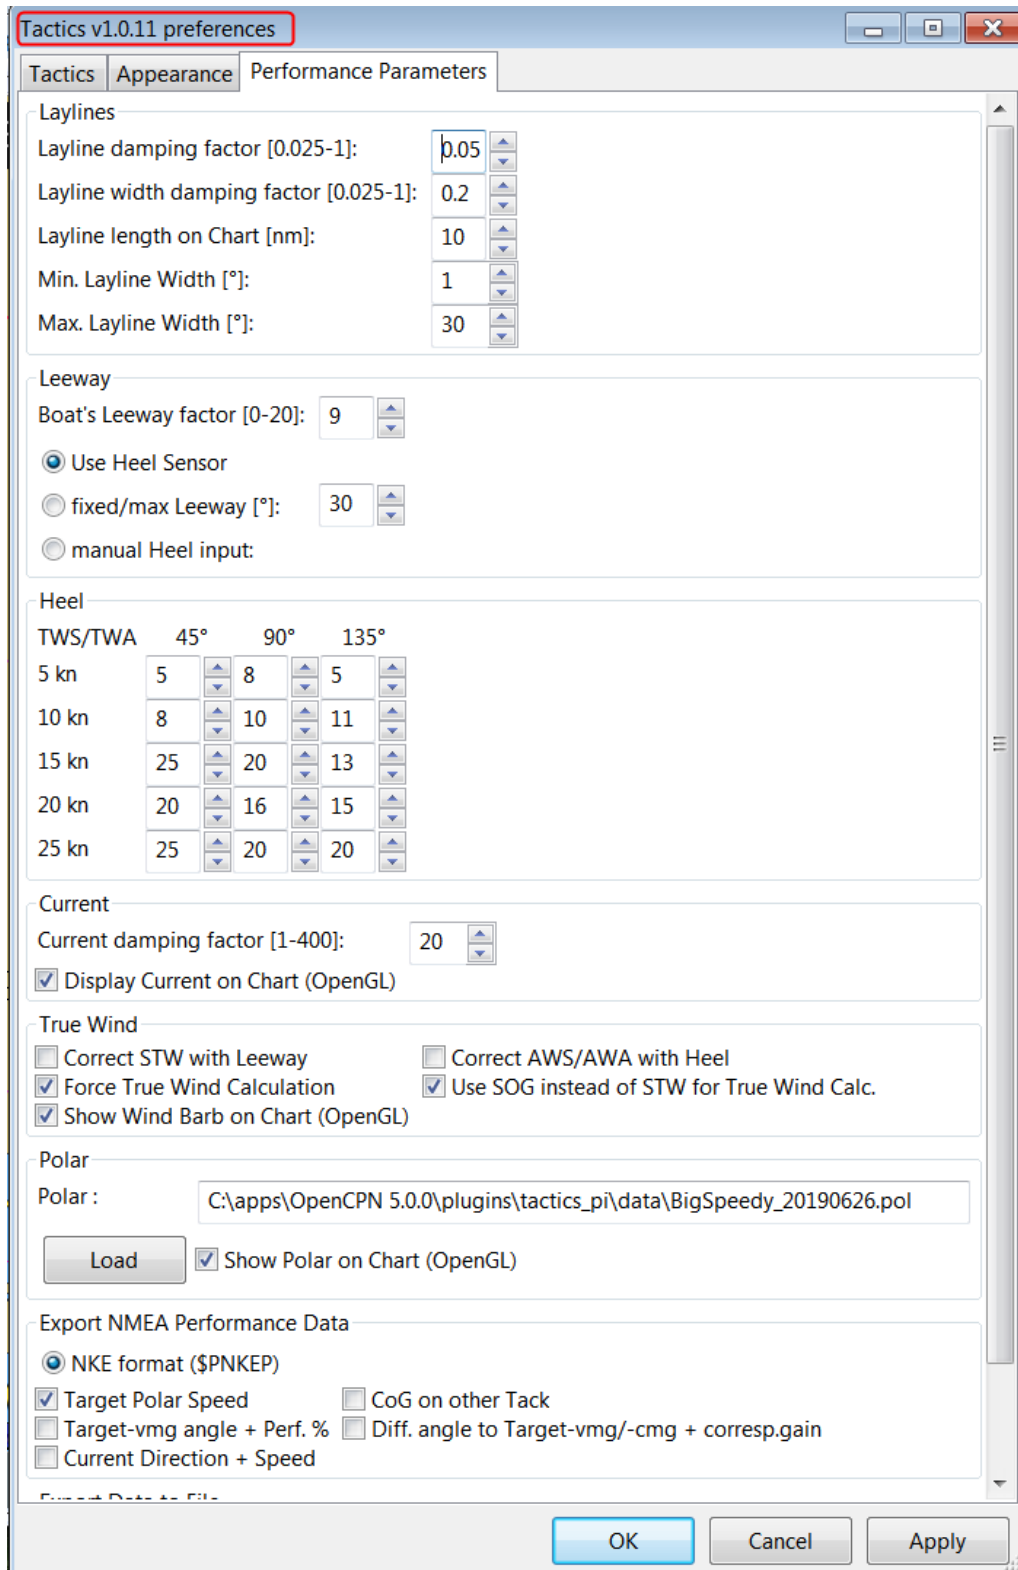

The **Apply** button sets the global variables which are used for the preferences directly, without closing the pref's window.

All parameters are written to the opencpn.ini (or .conf) file using the standard "dashboard" functionality, i.e. when closing tactics\_pi itself. I'll add a "Save" button here, which directly writes to the ini file.

You'll find all keys under section [plug-ins/Tactics] and subsequent sections starting with [plug-ins/Tactics/...]

The basic setup is inherited from dashboard\_pi, I did not change any of the "original dashboard" keys, but added some

New with Version 1.0.3 are CMGSynonym & VMGSynonym.

With both parameters you can set synonyms for the terms CMG and VMG throughout the plug-in. Ex. If you set **CMGSynonym=VMC** all text strings in the plug-in will show VMC instead of CMG.

Relevant are :

#### **[plug-ins/Tactics]<sup>2</sup>**

...

CurrentDampingFactor=0.003

MinLaylineWidth=2

MaxLaylineWidth=30

LaylineWidthDampingFactor=0.2

ShowCurrentOnChart=1

LaylineLenghtonChart=5

CMGSynonym=CMG

VMGSynonym=VMG

DataExportSeparator=;

#### **[plug-ins/Tactics/BearingCompass]**

DampingDeltaCoG=0.4

MinLaylineDegrees=2

MaxLaylineDegrees=30

#### **[plug-ins/Tactics/Performance]**

PolarFile=C:\\apps\\OpenCPN 4.1.925\\plug-ins\\weather\_routing\_pi\\data\\polars\\Aki950routage.pol

PolarLookupTableOutputFile=C:\\temp\\Polar.txt

BoatLeewayFactor=8

---

2 - In **DashT**, you can find the same settings under the "**DashT**" label, **plug-ins/DashT/Tactics**

fixedLeeway=30  
UseHeelSensor=1  
UseFixedLeeway=0  
UseManHeelInput=0  
UseSOGforTWCalc=1  
Heel\_5kn\_45Degree=5  
Heel\_5kn\_90Degree=5  
Heel\_5kn\_135Degree=10  
Heel\_10kn\_45Degree=8  
Heel\_10kn\_90Degree=10  
Heel\_10kn\_135Degree=11  
Heel\_15kn\_45Degree=25  
Heel\_15kn\_90Degree=20  
Heel\_15kn\_135Degree=13  
Heel\_20kn\_45Degree=20  
Heel\_20kn\_90Degree=16  
Heel\_20kn\_135Degree=15  
Heel\_25kn\_45Degree=25  
Heel\_25kn\_90Degree=20  
Heel\_25kn\_135Degree=20  
UseSOGforTWCalc=1  
ExpPolarSpeed=1  
ExpCourseOtherTack=0  
ExpTargetVMG=1  
ExpVMG\_CMG\_Diff\_Gain=0  
ExpCurrent=1  
NKE\_TrueWindTableBug=0

### **dashboard\_tactics (DashT) v2.0 onward Note:**

TwaMarkUseShortAvgWind=1 (see 2.9)

also related to:

[plug-ins/DashT/Tactics/AverageWind]

AvgTime=240 (the “normal integration time, min=240[s] (eg. 4 minutes) max= 1800)

ShortAvgTimePercentage=25 ([%] of the above time for “short” integration, min=10, max=50, 0=turns off)

I think they are self-explaining, if you compare the settings with the preferences screenshot above.

All damping factors are “alpha” from the standard exponential smoothing formula, except [CurrentDampingFactor](#) where I'm using double exponential smoothing at the moment.

They should range between something above 0 and 1, the smaller the number, the higher the damping, 1 means no filtering at all

Recommendation : Use [CurrentDampingFactor](#) with low values, like 0.03 to get a stable reading

One interesting key, which is not available in the preferences screen is [PolarLookupTableOutputFile](#)

As explained earlier, the polar file is loaded into an array. When you set this key, you can dump that array to a (tab delimited) text file, which can be read e.g. with notepad++.

As mentioned earlier, this array is prefilled with NAN values, NANs are reflected in the file as “-1.#J”.

If you want to see/check that, just add that key manually under section [\[plug-ins/Tactics/Performance\]](#)

Make sure the path exists and the given file is writeable. There's no safety checks implemented here, so use at your own risk.

### [DataExportSeparator=;](#)

With this key you can define your own column separator for the data export functions of BaroHistory, WindHistory & PolarPerformance. A tab is represented by ‘\t’


(see also chapter ‘Data Export’ below)

There are more keys and sections for tactics\_pi but all others came with dashboard\_pi and were not touched by me.


## 3.9 Data export:

There is a new data export functionality for the BaroHistory, WindHistory and PolarPerformance instruments.

You will find a button in the top left corner of each of the 3 instruments like this :

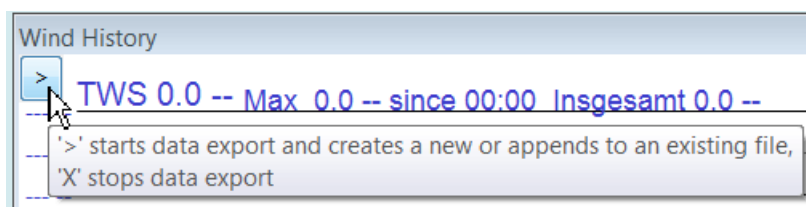


Once you click the '>' button, a menu pops up and you have to select the export rate (the latest setting is saved to opencpn.ini and will be set as default at startup )

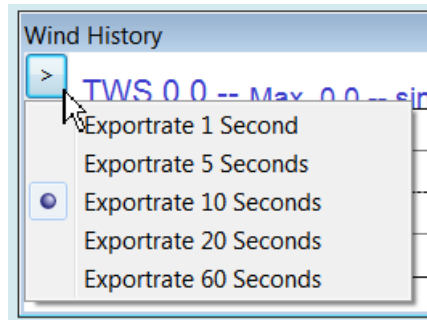

After selecting one of the export rates, a file picker pops up and asks you for an export file name. If you give it an existing name, the data will be appended (added) at the end of the file. If the file does not exist, it will be created. Like the export rate, also the filename is stored in opencpn.ini and set as default for the file picker.

**There is NO logical check on the content of the file if you decide to use an existing file !**

Once the export is running, the button changes to 'X' :

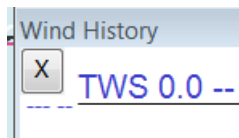

To stop the data export, click the 'X' . Export stops immediately.

The export files always contains the current date, **local** time (incl. sec.), and the instruments data; the first line in the file is always the headline with the field description. I'm using a standard wxWidgets function to format date and time, so this should (hopefully) take your local date/time settings into account...

The following examples have the separator ';' set :

WindHistory (Exportrate 10 sec) :

```
Date;Time;TWD;TWS;smoothed TWD;smoothed TWS
26.07.2019;21:45:00;190;9.4;190;9.9
26.07.2019;21:45:10;188;10.0;190;9.9
26.07.2019;21:45:20;184;9.9;190;10.0
26.07.2019;21:45:30;188;10.5;190;10.0
26.07.2019;21:45:40;191;10.8;190;10.0
26.07.2019;21:45:50;191;11.5;190;10.2
```

PolarPerformance (Exportrate 1 sec):




```
Date;Time;AvgTWA;AvgTWS;smoothed BoatSpd;Percent
26.07.2019;18:11:04;159;11.8;4.30;60.78
26.07.2019;18:11:05;159;11.8;4.31;60.87
26.07.2019;18:11:06;159;11.8;4.31;60.91
26.07.2019;18:11:07;159;11.8;4.32;60.93
26.07.2019;18:11:08;159;11.8;4.32;60.97
26.07.2019;18:11:09;159;11.8;4.32;60.97
26.07.2019;18:11:10;159;11.8;4.32;60.96
26.07.2019;18:11:11;159;11.7;4.32;60.96
```

Barohistory exports Date;Time;Pressure (hPa).

To reduce system load, the internal timer for the baro history instrument is set to 5 seconds, i.e. only every 5 seconds, the display is updated. This should be good enough for barographs which generally export their data at even lower rates.

Exported files can be easily imported into Excel or Libreoffice calc via the File→Open menu, then setting your separator.

Starting with version 1.0.11, there is a new tab 'Export Data to File' now in the 'Performance Parameters':

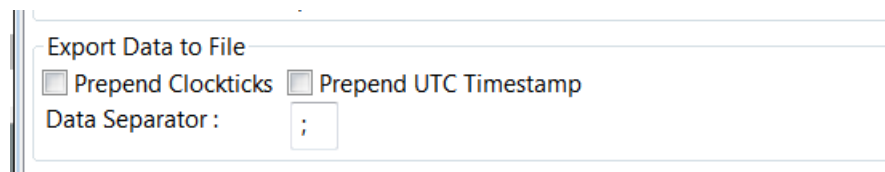

**Prepend Clockticks & Prepend UTC Timestamp** : With these ticks you can add Clockticks and a UTC Timestamp to the data export, at the beginning of each line of exported data.

This can be useful if you intend to process the data afterwards, e.g. via InfluxDB, grafana, etc.

**Data Separator** : You can define and set your own column separator here, instead of the ini-file method described above. A tab is represented by `\t`

### 3.10 Restrictions/known issues at the time being :

- Wind barb display on chart ends at 47 knots. Any windspeed higher than that is displayed as "45 knots". With more than 47 kts, I'm personally not really interested anymore in a correct wind barb display ... ;-)

## 4. Terminology :


Term	Description
AWA	<b>A</b> pparent <b>W</b> ind <b>A</b> ngle; the relative wind angle measured by your wind sensor, related to the boat axis(0°...180°)
AWS	<b>A</b> pparent <b>W</b> ind <b>S</b> peed; the relative speed of the wind measured by your wind sensor
CMG	<b>C</b> ourse <b>M</b> ade <b>G</b> ood; the relative speed approaching a waypoint. This term may be customized to whatever you like. See the ini file chapter for <b>CMGSynonym</b>
COG	<b>C</b> ourse <b>O</b> ver <b>G</b> round; generally supplied by the GPS
HDG	Magnetic heading of your compass; <b>not</b> compensated with mag. variation
HDT	True heading of your compass. "True" means compensated with magnetic variation
Heel	The angular degrees how your boat is heeled (leaning) sideways due to any force from outside (wave, wind, water ballast on one side of the boat, swing keel etc....)
CRS	Course through water; HDT + Leeway, but without currents
Leeway	the drift of your boat based on the wind. As soon as the wind is blowing it implies a force on your boat, the boat starts drifting. Leeway is NOT including any drift due to surface currents ! That's actually the challenge :-)
SOG	<b>S</b> peed <b>O</b> ver <b>G</b> round; generally supplied by the GPS
STW	<b>S</b> peed <b>T</b> hrough <b>W</b> ater; the info that is returned by your "paddlewheel" sensor
Target CMG	The optimum speed / angle towards a waypoint; aka VMC
Target VMG	The optimum speed / angle up- or downwind with reference to the true wind direction (without a waypoint)
TWA	<b>T</b> rue <b>W</b> ind <b>A</b> ngle; the angle of the true wind relative to the boat axis (0°...180°). The unit then gives you the direction as ">"=port, "<"=starboard
TWD	<b>T</b> rue <b>W</b> ind <b>D</b> irection; true wind direction related to the compass rose (0°..359°)
TWS	<b>T</b> rue <b>W</b> ind <b>S</b> peed; the speed of the wind in the atmosphere

Term	Description
VMC	<b>V</b> elocity <b>M</b> ade on <b>C</b> ourse; same as CMG
VMG	<b>V</b> elocity <b>M</b> ade <b>G</b> ood; the relative speed up-/downwind with reference to the true wind direction. This term may be customized to whatever you like. See the ini file chapter for <b>VMGSynonym</b>


## 5. Appendix

### 5.1 How to align/check your magnetic compass with O

- Swing your compass as described by the manufacturer
- Connect your GPS to O to get a stable position
- make sure you have true heading available (use wmm\_pi, in case you don't get the mag. variation from the GPS)
- directly in O, set your heading predictor to a high value, e.g. 10 miles

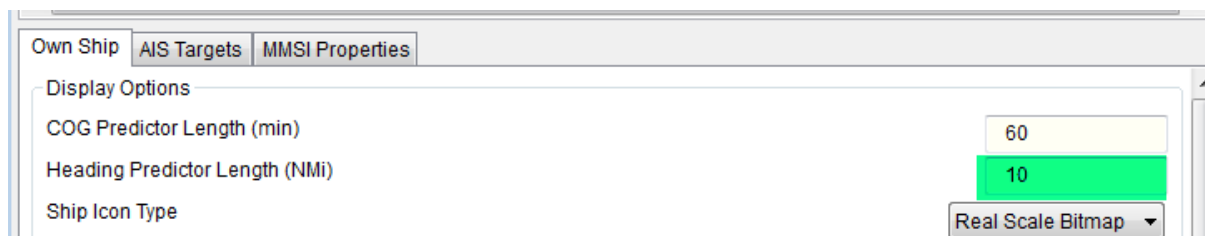

- Put the mouse onto the (thin HDT) predictor line towards the end of the line (the long line reduces the error)

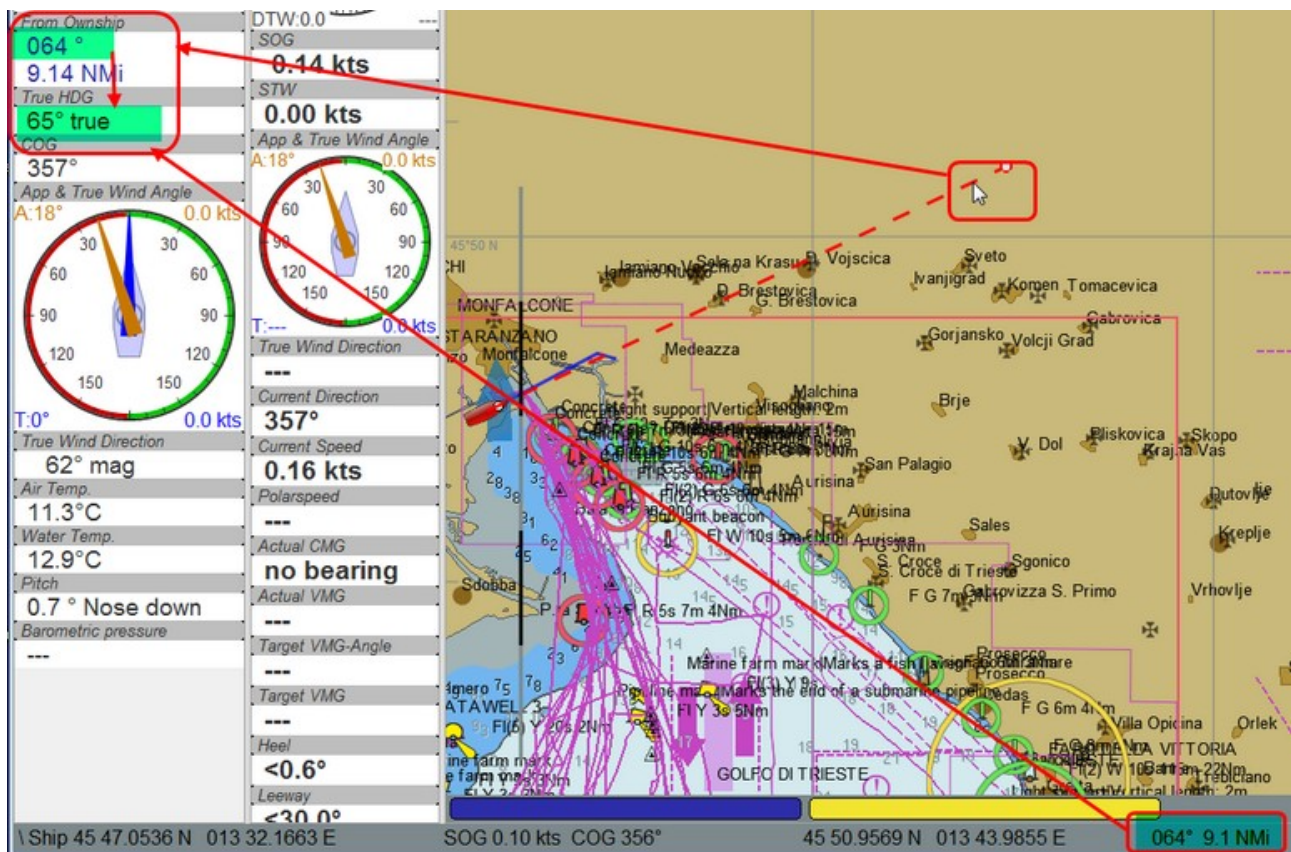

- simply compare now true heading with the status line or the "From Ownship" display...
- then adjust your compass (in this case : -1°)

That's it...

## 6. History

Rev	Date	Remark
1.0	24.05.2016	Initial release
1.1	24.05.2016	Corrected description of true wind calculation
1.2	25.05.2016	Wind barbs corrected; steps corrected and enhanced up to 45kts
1.3	07.06.2016	"TWA to Waypoint" instrument implemented
0.4	11.06.2016	Laylines-to-waypoint reworked, documentation updated Changed Rev from 1.4 to 0.4 to keep the plug-in version inline with the doc version
0.5	14.06.2016	Preferences with scrollbar, internal icons updated
0.6	27.06.2016	<ul style="list-style-type: none"> <li>• Added TWD to the "App. &amp; True Wind Angle" dial instrument;</li> </ul>

Rev	Date	Remark
		<ul style="list-style-type: none"> <li>• Option added to use SOG instead of STW for true wind calculation</li> <li>• code cleanup</li> <li>• “Apply” button added to the preferences</li> </ul>
0.7	04.07.2016	<ul style="list-style-type: none"> <li>• Polarspeed, Target-VMG, Target-CMG, Target-CMG Angle instruments corrected for user speed settings</li> <li>• Added STW to Polar Performance instrument as second graph</li> <li>• minor corrections</li> </ul>
0.7.3	16.07.2016	<ul style="list-style-type: none"> <li>• User settings for wind / boat speed implemented</li> <li>• Watchdog for RMB implemented to recognize the loss of waypoint data in “Bearing Compass” and “TWA to Waypoint” instruments</li> <li>• usage of default plug-in svg icons for “journeyman” styles</li> <li>• picture added for CMG</li> </ul>
0.8	06.11.2016	<ul style="list-style-type: none"> <li>• Correction of TWD calculation</li> <li>• NKE style NMEA performance records implemented</li> <li>• Prefs enhanced to select which performance records to be created.</li> </ul>
0.9	04.12.2016	<ul style="list-style-type: none"> <li>• Completion of \$PNKEP records</li> <li>• TWS averaging when accessing polar data</li> </ul>
1.0	07.01.2017	<ul style="list-style-type: none"> <li>• Polar compass</li> <li>• Average Wind Instrument</li> <li>• Polar overlay on chart</li> <li>• right-click menu to activate/deactivate chart overlays</li> <li>• CMG calculation rework</li> <li>• CMG markers in different sizes</li> <li>• Watchdogs for TWS, TWD, AWS</li> <li>• Tooltips in Preferences</li> <li>• bug fixes</li> <li>• Index in documentation</li> </ul>
1.0.3	05.03.2017	<ul style="list-style-type: none"> <li>• Crowdin translations updated</li> <li>• allow synonyms for CMG and VMG via opencpn.ini file</li> </ul>
1.0.5	05.06.2017	<ul style="list-style-type: none"> <li>• Bugfixes</li> </ul>

Rev	Date	Remark
1.0.8	25.03.2018	<ul style="list-style-type: none"> <li>• Crowdin translations updated</li> <li>• Bugfix showing neg. true heading, by Hans Almqvist</li> </ul>
1.0.9	05.07.2019	<ul style="list-style-type: none"> <li>• Layline stabilization</li> <li>• Performance tuning of wind history, polar performance and baro history by transmitterdan</li> <li>• implementation of the latest dashboard changes by transmitterdan</li> <li>• minor bugfixes</li> </ul>
1.0.10	26.07.2019	<ul style="list-style-type: none"> <li>• Basic data export function for BaroHistory, WindHistory &amp; Polar Performance w/ selectable export rate &amp; filename</li> <li>• Timer for BaroHistory (5s) &amp; PolarPerformance (1 s)</li> <li>• adjustable separator for exports via opencpn.ini file</li> <li>• minor bugfix on leeway calculation with heel angle usage; Thanks to Petri Makijarvi for the hint</li> <li>• new plug-in icons following the O5.x color scheme, many thanks to JohnGC</li> </ul>
1.0.11	08.09.2019	<ul style="list-style-type: none"> <li>• Data export : additional Clockticks &amp; UTC-timestamp as well as data separator selectable via Preferences</li> <li>• 'TWA to Waypoint' instrument now shows 'min-angle', 'average-angle', 'max-angle' Average time can be adjusted via the already available slider of the AverageWind instrument</li> <li>• Boat layline on/off bugfix after restart</li> <li>• Version/Patch display in preferences headline</li> </ul>
<i>DashT 2.0</i>	25.07.2020	<ul style="list-style-type: none"> <li>• Average Instrument used also by Race-series instruments ;</li> <li>• for this purpose the underlay AvgWind class makes now calculations both in long term (next buoy and beyond) and short term (lifter/header).</li> <li>• Average Instrument has visual effect slider indicating the "short term" wind shift clearly</li> <li>• Average wind instrument is used to set both the above short and normal integration lengths in the proportion selected in ini-file</li> <li>• Explained the impact to the TWA to the waypoint instrument and how to manage it (in ini-file).</li> </ul>

