
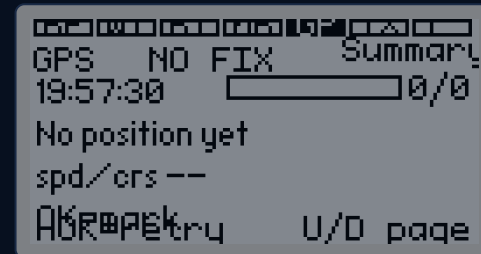


ROOM SWEEP


A field guide to the receive-side room survey app

One Flipper. Every signal the Flipper can hear, mapped: Sub-GHz RF, Wi-Fi beacons, Bluetooth advertisements, 2.4 GHz nRF24 energy, and GPS – presence and signal strength only, never identity. Surveyed passively, logged honestly, and explained screen by screen.

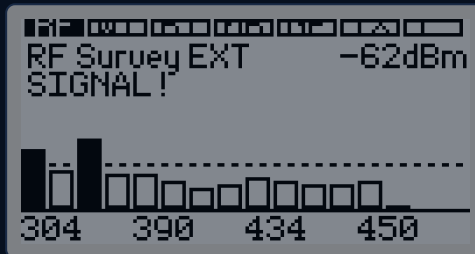

DETECT & ANALYZE ONLY – NO JAMMING, NO DEAUTH, NO CAPTURE/REPLAY.

HEAR THE ROOM. TOUCH NOTHING.

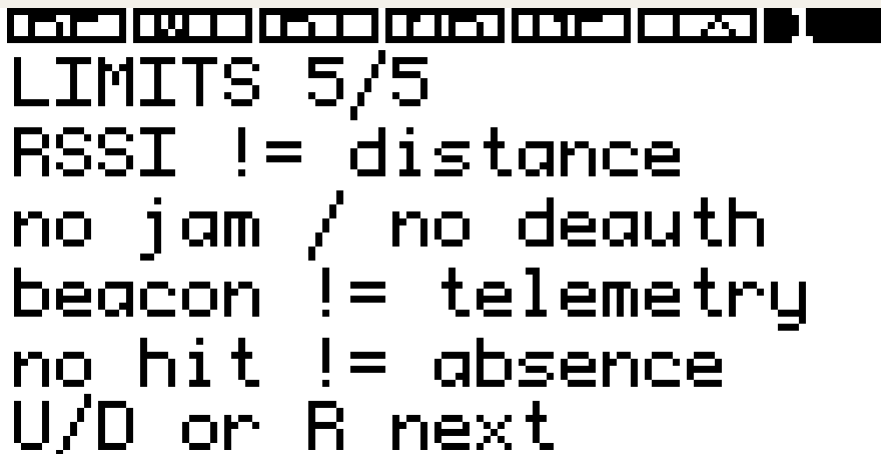

```
LIMITS 5/5
RSSI != distance
no jam / no deauth
beacon != telemetry
no hit != absence
U/D or R next
```

INFO 5/5 – LIMITS: RSSI != DISTANCE • NO JAM • NO DEAUTH • BEACON != TELEMETRY • NO HIT != ABSENCE

WHAT IT DOES

Room Sweep is a survey instrument, not a weapon. It listens to four radio fronts plus GPS and turns what it hears into meters, maps, and session files. The LIMITS page is printed on the device itself: RSSI is not distance, a beacon is not telemetry, and no hit is not proof of absence.

WHAT IT CANNOT DO

It hears that something transmits, and how loud. It cannot name the device, its owner, or its intent. Signal strength is a trend, not a ruler – follow STRONGER/WEAKER on one locked target while walking; the loudest list row is not the nearest thing. It hears only what its bands cover: three CC1101 ranges and 2.4 GHz – no 5 GHz, nothing outside them, and nothing that stays silent while you listen. A quiet sweep is not proof the room is clean.

HOW TO USE


Read the LIMITS page (Info tab, page 5/5) before you trust any reading. Every screen in this guide keeps those honesty rules.

L / R → change tab

Back → settings

Hold Back → exit

LAUNCH. LISTEN. SWEEP LEFT TO RIGHT.

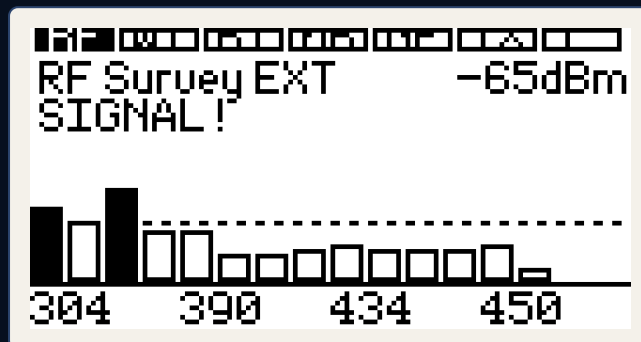

LAUNCH LANDS ON RF SURVEY, ALREADY LISTENING

KEYS 3/5
L/R tab HoldL AN
HoldR page in mode
OK act HoldOK lock
Back set HoldB exit
U/D or R next

KEYS PAGE – THE WHOLE CONTROL MAP, ON DEVICE


WHAT IT DOES

The app opens straight onto the RF Survey screen with the radio already running – no menus to dig through. Seven tabs ride one Right-press apart: RF → Wi → BT → nR → GP → TX → i.

HOW TO USE

Short Left/Right changes tab. Hold Left opens the analyzer. Hold Right pages inside a mode. OK performs the main action, Back opens settings, Hold Back exits. Footers on every screen remind you what L / R / OK do right there.

SURVEY – THE ROOM’S RF PULSE, LIVE

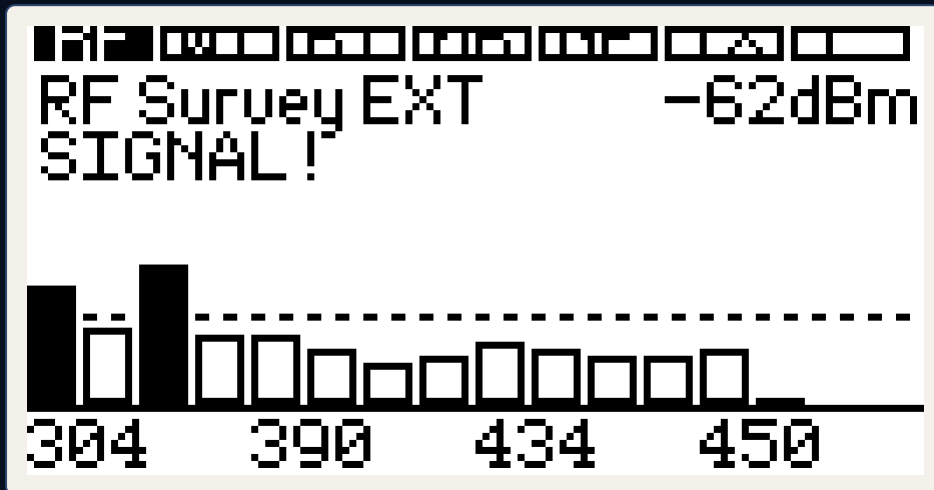

RF SURVEY – LIVE PRESET BANK • RULER 304 / 390 / 434 / 450

WHAT IT DOES

Continuous listen across the CC1101 preset bank (300–348 / 387–464 / 779–928 MHz hardware bands). Each bar is one preset; the ruler underneath marks 304 / 390 / 434 / 450. The header tracks the hottest preset’s dBm and shows a **>-75dBm** tag when energy crosses the dashed alert line – a fixed -75 dBm ENERGY threshold (no device identification). Baseline (Settings → Session → Baseline) is a separate snapshot of the room’s RF floor that the survey bars are drawn against.

HOW TO USE

Leave it running and watch which bars breathe. Up/Down switches RF sub-mode (Survey / Sweep / Peak / Waterfall). Hold Up/Down opens the lock card from anywhere; Hold Left drops into the analyzer.

Up/Down → sub-mode

Hold Up/Down → lock card

Hold Left → analyzer

SWEEP – WALK A WHOLE BAND, MECHANICALLY



RF Sweep [SWEEP EXT]
Band: 300-348 MHz

U/D OK HoldL=AN HoldR

RF SWEEP – [SWEEP EXT] · 300-348 MHz, CHANNEL BY CHANNEL

WHAT IT DOES

[SWEEP EXT] steps the external CC1101 across the selected band (here 300-348 MHz), measuring channel by channel instead of preset hops. It is the slow, thorough cousin of Survey – the way to find a lone device that never sits on a preset frequency.

HOW TO USE


OK starts or cancels the sweep. While idle on the map, Hold Right steps the band. Results can be locked with Hold OK.

OK → start / cancel

Hold Right → step band

Hold OK → lock result

PEAK — CLOSE IN ON ONE CARRIER

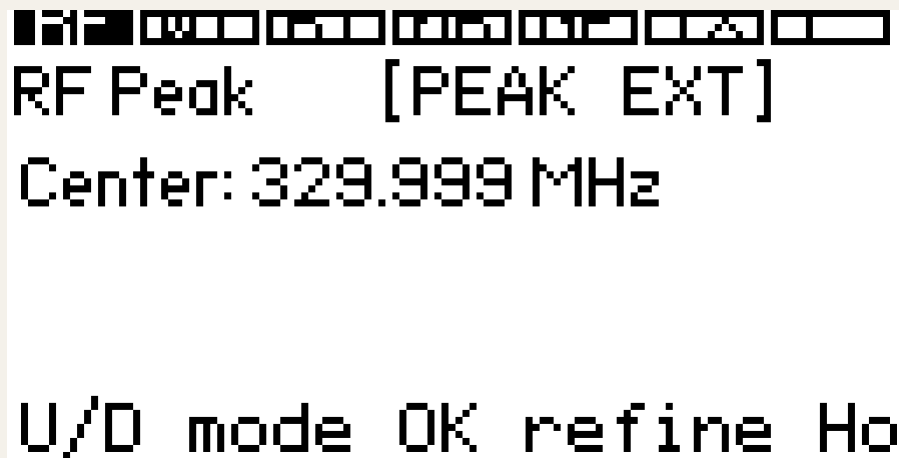

RF Peak [PEAK EXT]
Center: 329.999 MHz
U/D mode OK refine Ho

RF PEAK — [PEAK EXT] • CENTER 329.999 MHZ

WHAT IT DOES

[PEAK EXT] refines around the strongest carrier and reports its center frequency — here 329.999 MHz. Sweep finds the neighborhood; Peak narrows to the doorstep.


HOW TO USE

OK starts or cancels a refine pass. Up/Down changes RF sub-mode; the result can be locked from the lock card.

OK → start / cancel refine

Hold OK → lock result

WATERFALL – TEN SECONDS OF RF HISTORY

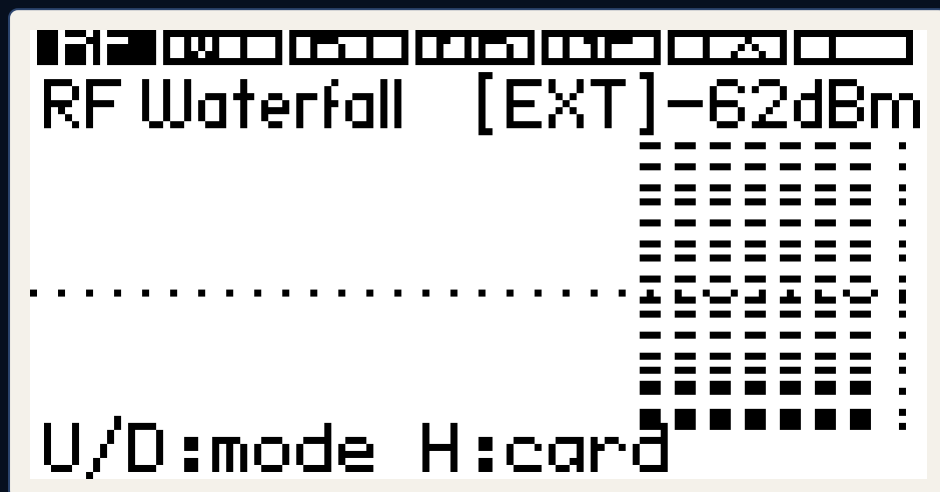

RF WATERFALL – 16 PRESETS • ~2.5 SNAPSHOTS/S • PEAK-HOLD DOTS

WHAT IT DOES

A scrolling spectrum of the 16 presets: newest column on the right, roughly 2.5 snapshots per second, with per-channel peak-hold dots down the right edge and the dashed alert-threshold line across the chart. Purely passive – bursty traffic that Survey's eye might miss leaves a trail here.

HOW TO USE


Nothing to drive; read the room's last ~10 seconds at a glance. Hold Up/Down opens the lock card, Hold Left opens the analyzer.

passive → just watch

Hold Up/Down → lock card

Hold Left → analyzer

LOCK CARD — NAME YOUR TARGET

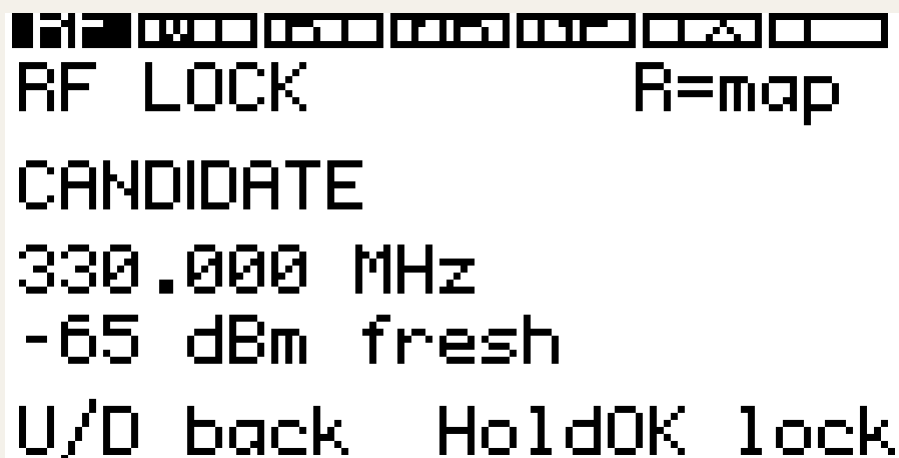A screenshot of a handheld device screen showing a 'RF LOCK' interface. At the top is a status bar with a signal strength indicator (four bars) and a battery level indicator (four bars). Below the status bar, the text 'RF LOCK' is on the left and 'R=map' is on the right. The main display area shows 'CANDIDATE' followed by '330.000 MHz', '-65 dBm fresh', and 'U/D back HoldOK lock' at the bottom.

RF LOCK R=map

CANDIDATE

330.000 MHz

-65 dBm fresh

U/D back HoldOK lock

LOCK CARD — CANDIDATE 330.000 MHz · -65 DBM · FRESH

WHAT IT DOES

CANDIDATE 330.000 MHz · -65 dBm · fresh. From any RF sub-mode, Hold Up/Down slides the card over the map: the strongest candidate, its exact frequency, level, and how fresh the hit is. Hold OK pins it as the lock target that the analyzer then hunts.


HOW TO USE

Hold Up/Down opens/closes (press again to return to the map). Hold OK locks the candidate; Up/Down backs out.


Hold Up/Down → open / close

Hold OK → lock target


HOLD LEFT: THE FOUR-PAGE ANALYZER

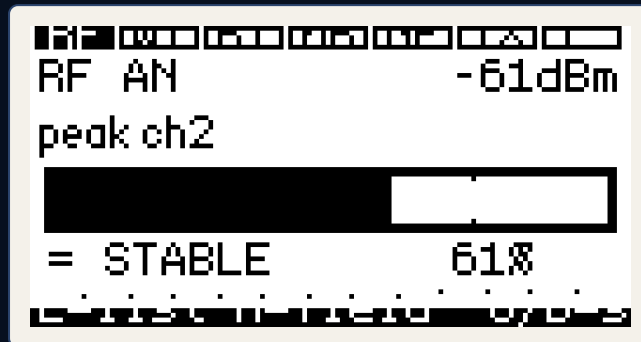


HUNT

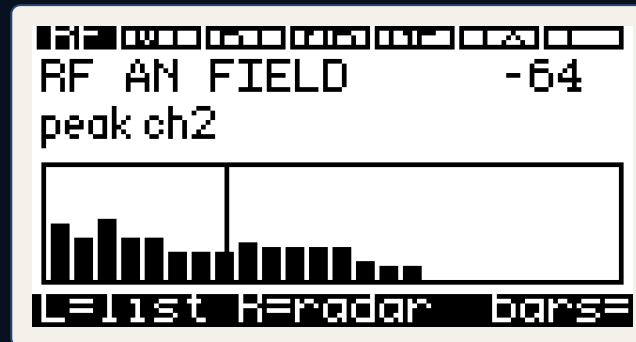

FIELD

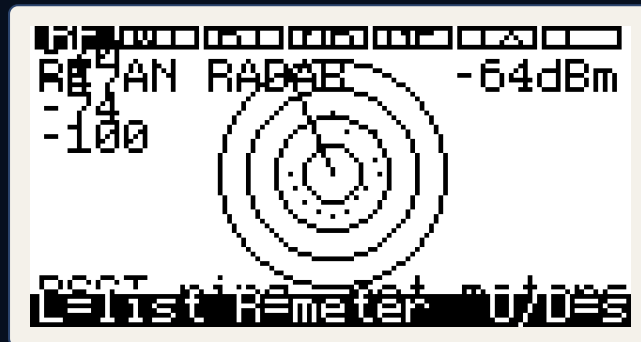

RADAR

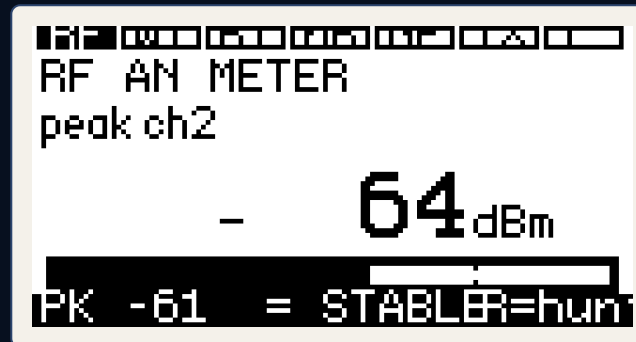

METER

WHAT IT DOES

On RF, Wi-Fi, BLE, and nRF24 alike, Hold Left opens a four-page analyzer tuned to the selected (or locked) source. HUNT: one fat proximity bar with STRONGER / WEAKER / STABLE / STALE / LOST verdicts (STRONGER/WEAKER = the received energy rose or fell – not that anything moved closer). FIELD: spectrum/peer bars for context. ENERGY MAP: rings are RSSI (labeled on screen – not meters) and blip angles are a channel/index wheel, **not a direction**. METER: a big-number read with peak hold and trend. On nRF24 every number is ACT (RPD activity, arbitrary units) – never dBm.

HOW TO USE

Hold Right turns the analyzer's pages. Fresh samples move the bar; silence ages it out – on Wi-Fi/BLE the bar fades after ~2 s and reads LOST by ~6 s. The scan stays alive while the analyzer is open.

Hold Left → analyzer on/off

Hold Right → analyzer page


WI-FI ANALYZER – WALK AN AP TO ITS DOOR




HUNT



FIELD

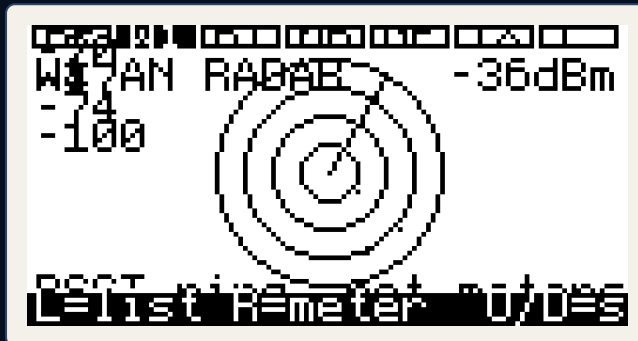

RADAR

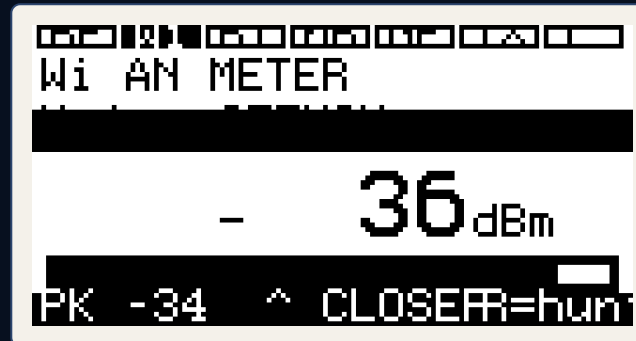

METER

Hunting [redacted SSID] at -37 dBm, STRONGER 91%.

WHAT IT DOES

The Hunt bar tracks that one AP's live table RSSI from the Marauder beacon stream. If beacons stop, the bar fades to LOST rather than pretending – the meter tells the truth about silence.


HOW TO USE

From the Wi-Fi tab, select the AP with Up/Down, then Hold Left. Hold Right pages Hunt → Field → Radar → Meter.


BLE ANALYZER – CHASE AN ADVERTISEMENT




HUNT

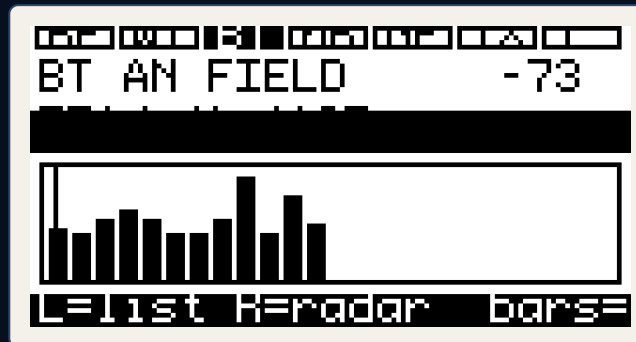

FIELD

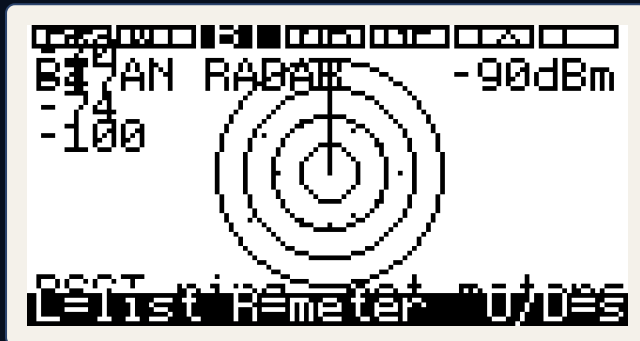

RADAR

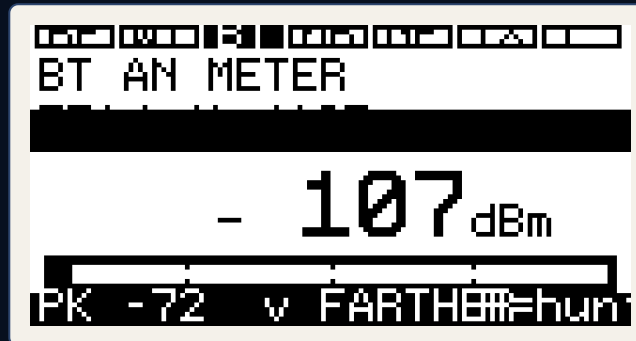

METER

One device, [redacted MAC], from -72 dBm, STRONGER at 47%.

WHAT IT DOES

Same four pages, aimed at a BLE advertiser. The energy map's sweep line and blinking diamond mark your locked target; the meter's PK value keeps the strongest sighting while the trend arrow says whether you're gaining.

HOW TO USE

Select the device in the BT tab, Hold Left to open, Hold Right to page. The analyzer feeds from `sniffbt` and keeps it running.

NRF24 ANALYZER – 2.4 GHZ, THE HONEST ZERO

```

nR AN -127dBm
2.4G RPD
[ ]
LOST 0%

```

HUNT

```

nR AN FIELD -127
2.4G RPD
[ ]
L=1st R=radar bars=

```

FIELD

```

nR AN RADAR -127dBm
-100
[ ]
L=1st R=meter 0/0=5

```

RADAR

```

nR AN METER
2.4G RPD
- 127dBm
[ ]
PK -127 = STABLE=hunt

```

METER

2.4G energy with nothing to hear reads LOST 0% – and says so.


WHAT IT DOES

The analyzer works over the nRF24 RPD (receive power detector) energy survey – a 1-bit “power above about -64 dBm in this channel” check, so nR numbers are ACT (activity), never dBm, and hits are never packets or devices. Empty spectrum shows an empty instrument, not a fake signal.

HOW TO USE

Open from the nR tab with Hold Left. Requires SPI Path = nRF24 and the BFFB bottom switch DOWN.

BEACON LISTENING, ON YOUR MARKS

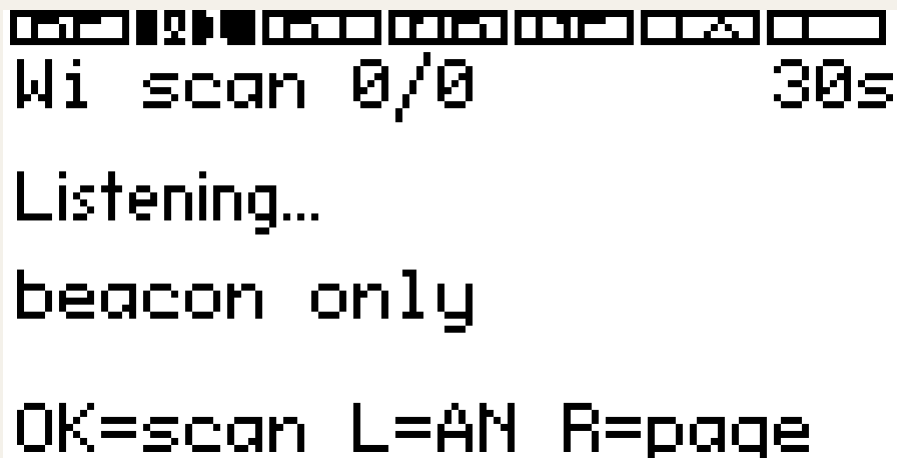

Wi scan 0/0 30s

Listening...

beacon only

OK=scan L=AN R=page

WI-FI - WI SCAN 0/0 · LISTENING... · BEACON ONLY

WHAT IT DOES

Wi scan 0/0 · Listening... · beacon only. The Wi-Fi tab drives a fixed Marauder scan (**sniffbeacon**) – access-point beacons only. The window length comes from Settings → Wireless → ScanWin (15 / 30 / 60 s).

HOW TO USE


OK restarts the scan; the **Wi scan a/b** counter is your selection position within the APs heard (0/0 = none yet, 1/2 = first of two). Hold Right pages Detail / List / Help; Hold Left opens the analyzer.

OK → start / restart scan

Hold Right → page

Hold Left → analyzer

DETAIL — ONE AP, FOUR FACTS

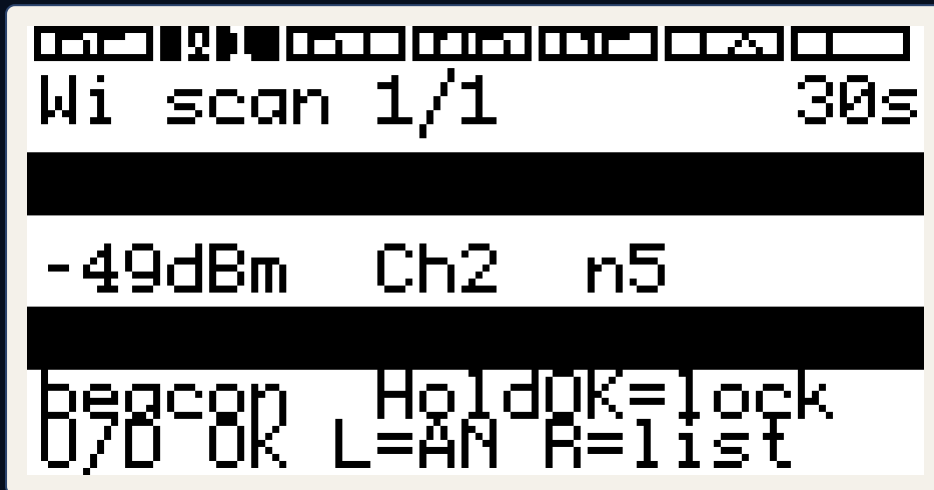

WI-FI DETAIL — [REDACTED SSID] · -49 DBM · CH2

| [redacted SSID] · -49 dBm · Ch2 · [redacted BSSID]

WHAT IT DOES

The Detail page shows the selected AP's name, live RSSI, channel, and MAC, plus a status line that reads **beacon** when unlocked and **LOCK on** once you lock the AP. This is the record you lock for the analyzer.

HOW TO USE


Up/Down selects; Hold OK locks/unlocks the AP for follow; Hold Left analyzes the selected or locked AP.

Up/Down → select AP

Hold OK → lock / unlock

Hold Left → analyzer


LIST THE ROOM, THEN READ THE HELP

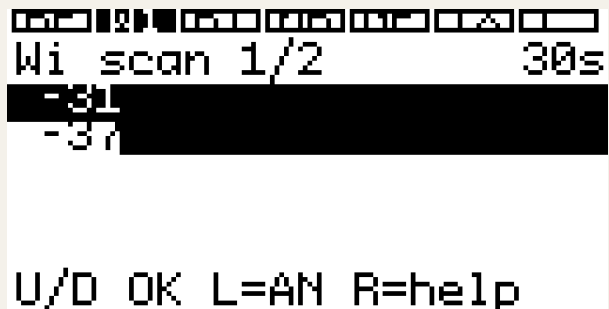

```
Wi scan 1/2 30s
-31
-37

U/D OK L=AN R=help
```

LIST – STRONGEST FIRST, INVERTED ROW IS YOUR SELECTION

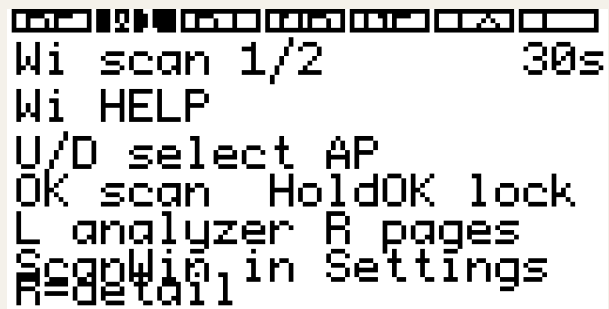

```
Wi scan 1/2 30s
Wi HELP
U/D select AP
OK scan HoldOK lock
L analyzer R pages
ScanWin in Settings
R=detail
```

HELP – THE PAGE'S CONTROLS, ON SCREEN

WHAT IT DOES

The List page stacks the heard APs, strongest first, with your selection inverted. The Help page prints the controls so the app teaches itself on a device with no manual.

HOW TO USE


Up/Down moves the selection; the footer always states what L / R / OK do here.

Up/Down → browse

R → next page

ScanWin → window in Settings

BLUETOOTH – SAME DISCIPLINE, DIFFERENT TRAFFIC

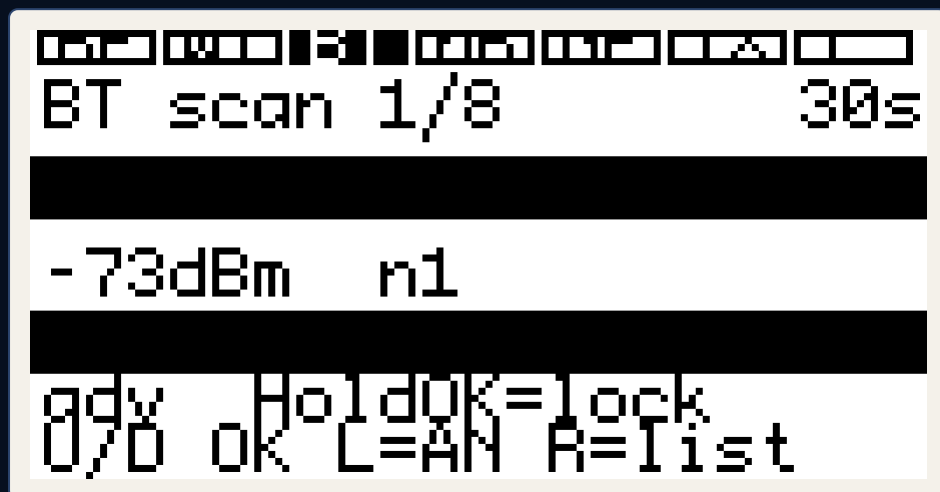

BLE DETAIL – [REDACTED MAC] · -73 DBM · N1 · ADV

| [redacted MAC] · -73 dBm · n1 · adv

WHAT IT DOES

The BT tab runs Marauder's **sniffbt** and shows advertisements: MAC, level, count, and advertisement type. Everything the Wi-Fi tab does, it does for BLE.

HOW TO USE


OK restarts the scan, Hold OK locks the device, Hold Left opens its analyzer, Hold Right pages Detail / List / Help.

OK → scan


Hold OK → lock

Hold Left → analyzer

LOCK A TRACER, KEEP YOUR PLACE

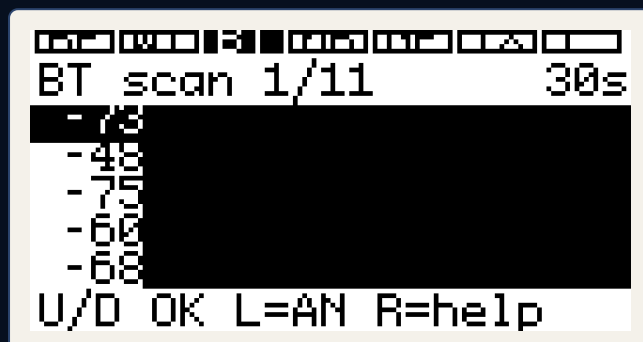

LIST – STRONGEST FIRST; THE INVERTED ROW IS YOUR SELECTION

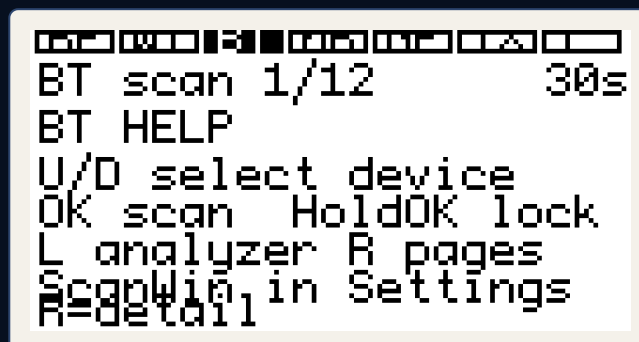

HELP – SCANWIN WINDOW APPLIES HERE TOO

WHAT IT DOES

Locking a device tags the page header with **L** and flips the Detail line to **LOCK on**; newer advertisements keep arriving around your selection. The help page mirrors the BT controls.


HOW TO USE

Up/Down browse, Hold OK lock/unlock, R page.

Hold OK → lock / unlock

R → next page

NRF24 – THE 2.4 GHZ ENERGY SURVEY

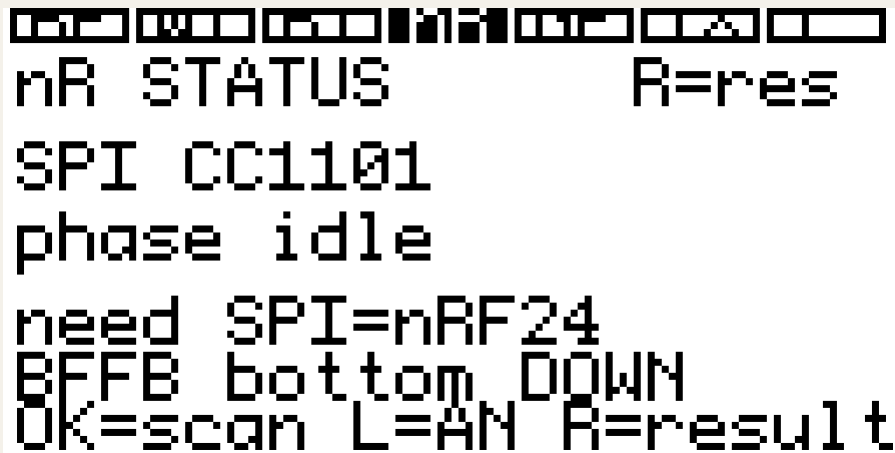

```
nR STATUS          R=res
SPI CC1101
phase idle
need SPI=nRF24
BFFB bottom DOWN
OK=scan L=AN R=result
```

NRF24 STATUS – SPI CC1101 • PHASE IDLE

WHAT IT DOES

2.4G ENERGY • SPI CC1101 • phase idle. This tab surveys raw 2.4 GHz channel energy with the nRF24 in RPD mode – receive only, by design. The status page names your wiring truth: it needs SPI Path = nRF24 and the BFFB bottom switch DOWN, and while nRF24 is selected the Sub-GHz radio falls back to the Flipper's internal CC1101.

HOW TO USE


OK starts/stops an energy pass; Hold Left or Hold OK opens the analyzer; Right shows results.

OK → start / stop pass

Hold Left → analyzer

R → results

RESULTS – ACTIVE CHANNELS, TOP HITTERS

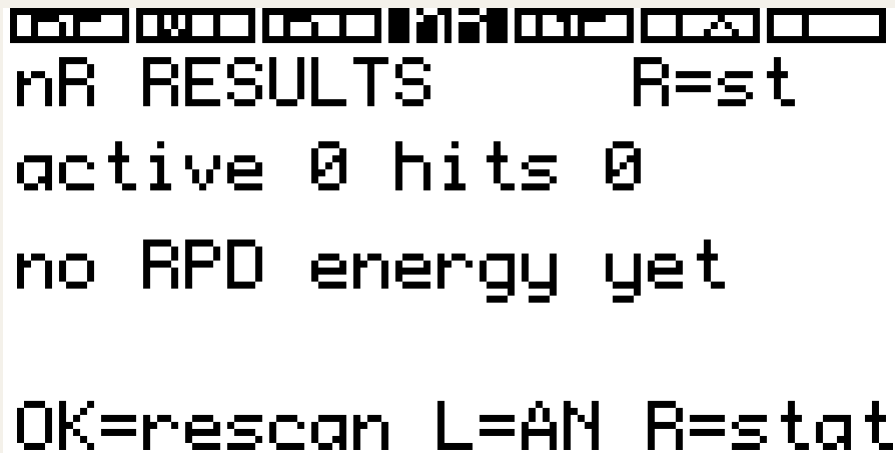

```
nR RESULTS      R=st
active 0 hits 0
no RPD energy yet

OK=rescan L=AN R=stat
```

2.4G RESULTS – ACTIVE 0 · HITS 0 · AN HONEST EMPTY (STALE SCREENSHOT SHOWS THE OLD "NR RESULTS" TITLE – REQUIRES RE-CAPTURE)

active 0 · hits
0 · no RPD
energy yet – an
honest empty.

WHAT IT DOES

After a pass, Results lists how many 2.4 GHz channels showed energy and which channels hit hardest. Cordless phones, keyboards, drones, Wi-Fi overlap – anything pulsing 2.4 GHz leaves a count.


HOW TO USE

OK rescan; Hold Left opens the analyzer on the results.

OK → rescan

Hold Left / Hold OK → anal

GPS – THE ROOM GETS COORDINATES

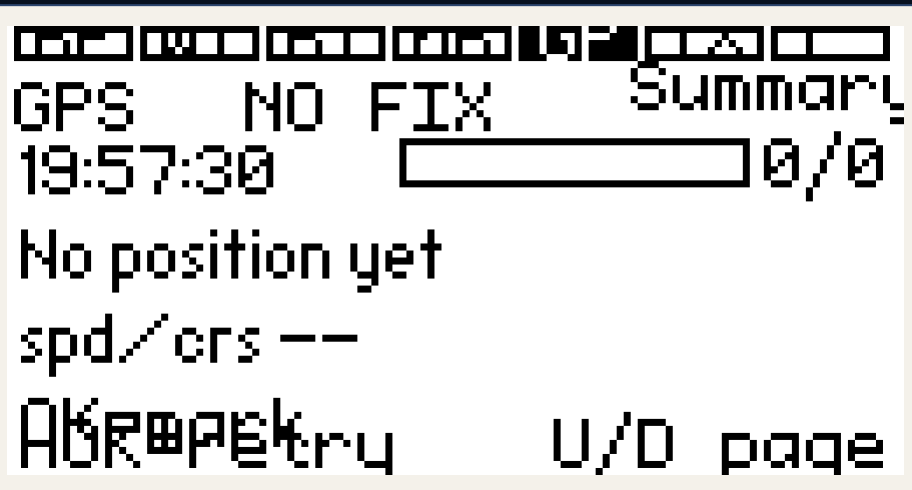

GPS NO FIX Summary
19:57:30 0/0
No position yet
spd/crs --
AKR0PEkry U/D page

GPS SUMMARY – SATELLITE BAR 0/0 · POSITION · SPEED/COURSE

WHAT IT DOES

The Summary page carries time, a satellite bar (here 0/0, no fix), position, and speed/course once a fix lands. OK drops a mark when the NMEA stream is fresh; if the fix is stale or silent, the same press retries the source.

HOW TO USE


Hold OK always retries the source – reinit the stream, swap the GPIO baud 9600 ↔ 115200, or fall back to Marauder's `nmea`. Up/Down pages Summary → Detail → Radar.

OK → set mark / retry

Hold OK → retry source

Up/Down → page

DETAIL – TRUST, BUT COUNT THE SENTENCES

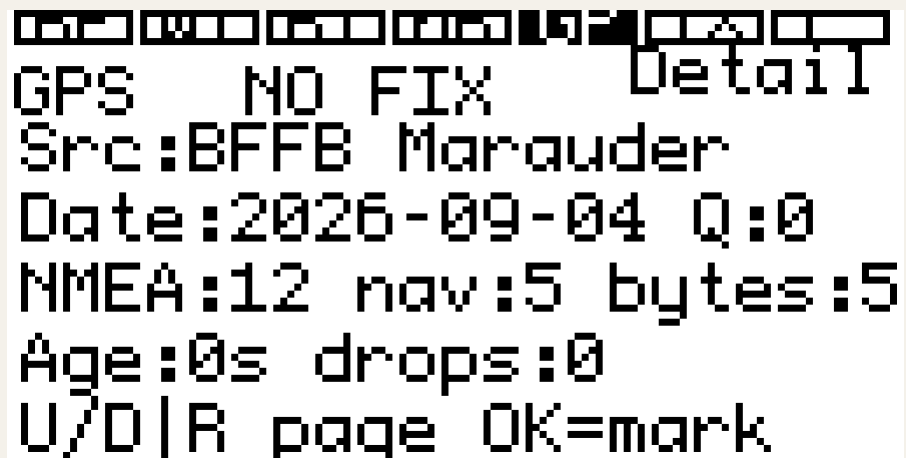

GPS NO FIX Detail
Src:BFFB Marauder
Date:2026-09-04 Q:0
NMEA:12 nav:5 bytes:5
Age:0s drops:0
U/D|R page OK=mark

GPS DETAIL – SRC:BFFB MARAUDER · NMEA:12 NAV:5 · AGE:0S DROPS:0

WHAT IT DOES

Src:BFFB Marauder · NMEA:12 nav:5 bytes:5 · Age:0s drops:0. The Detail page shows which GPS source is live, the date, NMEA/nav counters, the age of the last fix, and dropped sentences – so a confident-looking position can be checked against its plumbing.

HOW TO USE


Read Age before trusting the Radar. OK still sets a mark from here; Up/Down or Right pages on.

OK → mark

Hold OK → retry source

U/D | R → page

RADAR — REAL METERS, WALK TO THE MARK

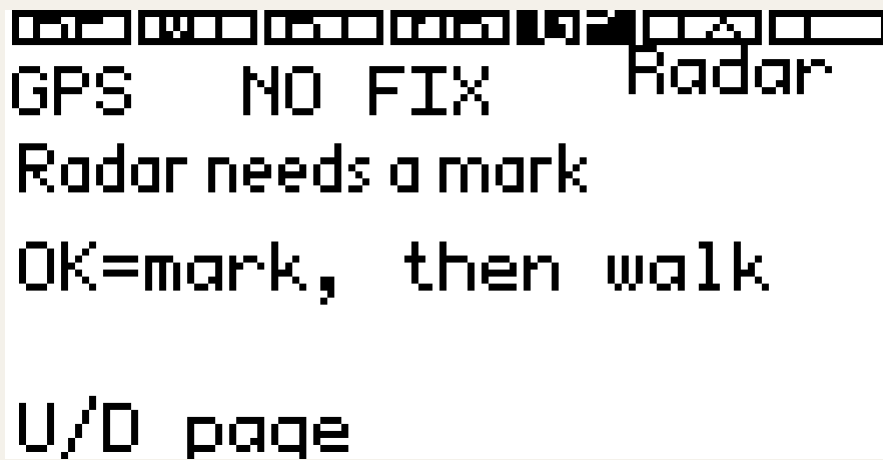

GPS NO FIX Radar

Radar needs a mark

OK=mark, then walk

U/D page

GPS RADAR — NORTH-UP · RINGS 2 M TO 1 KM · TRAIL IN RAM

| Radar needs a mark · OK=mark, then walk

WHAT IT DOES

Set a mark and the radar centers on it, north-up, in real meters: your live position is the blip at true bearing and true haversine distance, rings auto-scale from 2 m to 1 km, and your last ~8 fixes draw the approach trail. The Flipper has no compass – face the blip toward the top of the screen and walk straight at it. The trail lives in RAM only and is never logged.


HOW TO USE

OK sets the mark (needs a fresh fix), then walk. The cross at center is the mark; distance to it shows in the header.

OK → set mark

north-up → steer blip to screen-top

TX — A BOUNDED CARRIER TOOL, BORN DISARMED

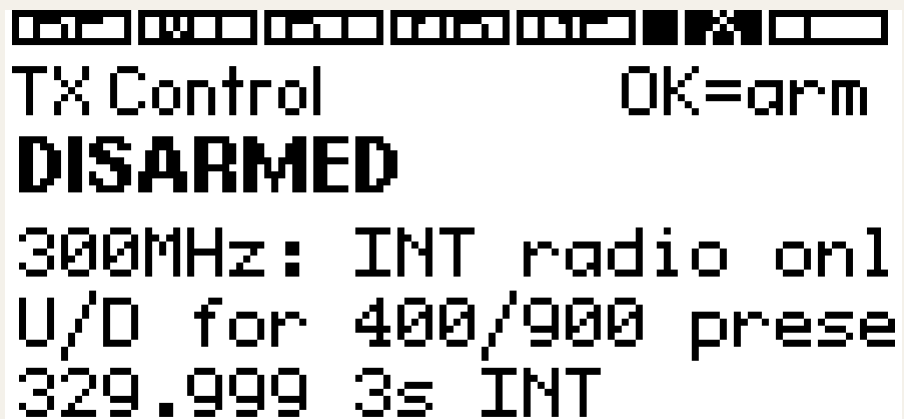

TX Control OK=arm
DISARMED
300MHz: INT radio onl
U/D for 400/900 prese
329.999 3s INT

TX — DISARMED · 300MHZ: INT RADIO ON

WHAT IT DOES

DISARMED · 300MHz: INT radio on. The TX tab is a test transmitter, not an attack mode: it keys a plain 00K carrier on a preset — never replay, never blocking, never continuous. It wakes up DISARMED every single launch, and preflight checks frequency validity, regional rules, and the external-band policy before anything radiates.

HOW TO USE


Short OK arms. Up/Down steps presets (300 / 400 / 900 families). Back disarms at any moment.

OK → arm

Up/Down → preset

Back → disarm

ARMED — THE RADIO KNOWS ITS LIMIT

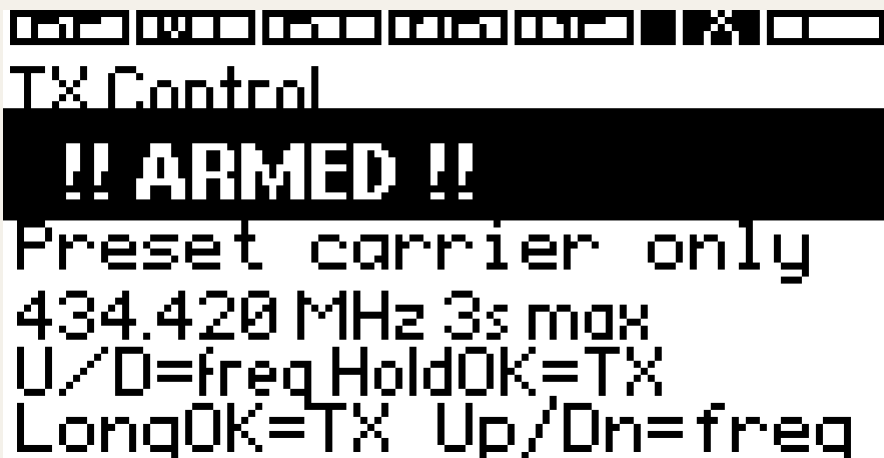

The screenshot shows a terminal window titled 'TX Control'. At the top, there is a status bar with various icons. Below the title, a large black banner displays '!! ARMED !!' in white text. Underneath the banner, the text reads: 'Preset carrier only', '434.420 MHz 3s max', 'U/D=freq HoldOK=TX', and 'LongOK=TX Up/Dn=freq'.

TX — !! ARMED !! · PRESET CARRIER ONLY · 434.420 MHZ 3S MAX

WHAT IT DOES

!! ARMED !! · Preset carrier only · 434.420 MHz 3s max. The banner is impossible to miss, the screen names the ceiling, and the length comes from Settings → Radio → TXDur (1–10 s, never more).

HOW TO USE

Hold OK transmits the bounded carrier and the countdown starts.

Nothing here latches: the arm state exists only to make a deliberate press required.

Hold OK → transmit (bounded)

U/D → change preset first

TX API ACTIVE – SECONDS, NOT MINUTES



TX API ACTIVE – 434.419 MHZ · 2.1S REMAINING · BACK=STOP

WHAT IT DOES

434.419 MHz · 2.1s remaining · Back=stop. A live carrier shows its own countdown and its own kill switch. At zero the radio disarms itself; Back ends it early; every attempt is written to the session log as an event.


HOW TO USE

Back stops immediately. That is the whole interaction – a keyed burst with a visible fuse.

Back → stop now

auto → disarm at 0 s

BACK TO DISARMED – HARDWARE TELLS THE TRUTH TOO

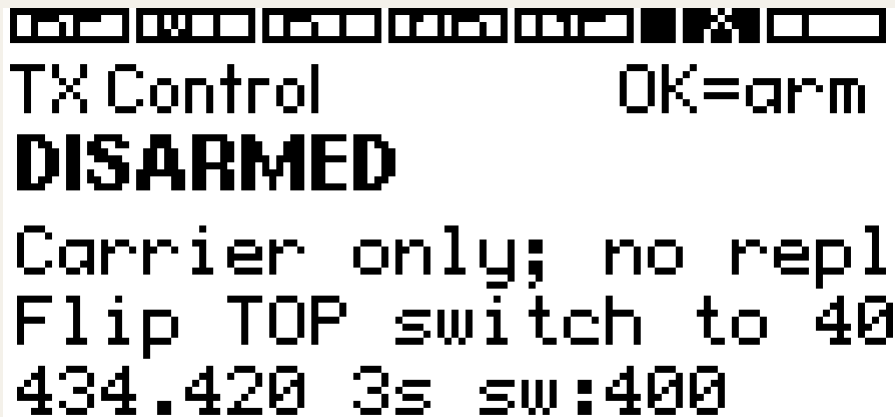

The screenshot shows a handheld device screen with a status bar at the top containing various icons. The main text on the screen reads: 'TX Control' followed by 'OK=arm' on the right. Below this, the word 'DISARMED' is displayed in large, bold letters. Further down, it says 'Carrier only; no repl' and 'Flip TOP switch to 40'. At the bottom, it shows '434.420 3s sw:400'.

TX – DISARMED · CARRIER ONLY; NO REPLAY · SW:400

WHAT IT DOES

After auto-disarm the tab returns to **DISARMED** and states its guardrails in plain text: **Carrier only; no replay**. **sw:400** reads the physical BFFB top switch so the screen always agrees with the hardware band you actually selected.


HOW TO USE

While DISARMED on the external CC1101, Hold Left/Right steps ExtBand (AUTO / 400 / 900). Flip the top switch to match.

Hold L/R → ExtBand (disarmed, ext radio)

top switch → 400 / 900

PRESETS – 300, 434, 450, AND A WALL OF RULES

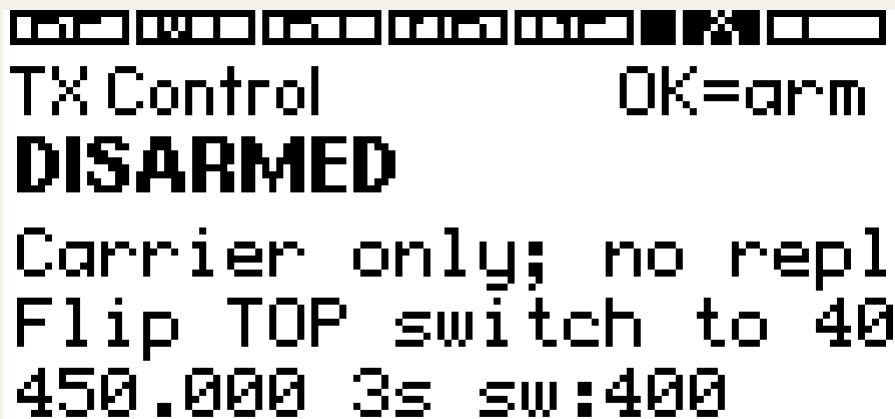

The screenshot shows a handheld radio display with a status bar at the top containing various icons. The main text on the screen reads: 'TX Control' followed by 'OK=arm' on the right. Below this, the word 'DISARMED' is displayed in large, bold letters. Further down, it says 'Carrier only; no repl', 'Flip TOP switch to 40', and '450.000 3s sw:400'.

TX – 450.000 · 3S · SW:400

| 450.000 · 3s · sw:400

WHAT IT DOES

Preset stepping walks twelve stops across the 300 / 400 / 900 MHz families and back; the CC1101's real band gaps (300–348 / 387–464 / 779–928 MHz) are enforced in hardware, not politely suggested. Regional allow-lists and the ExtBand policy gate every attempt in preflight.


HOW TO USE

Up/Down cycles presets while armed or disarmed; the footer repeats the active preset and duration.

Up/Down → step preset


TXDur → 1–10 s in Settings

THE INFO TAB: WHAT THE APP BELIEVES, PUBLISHED

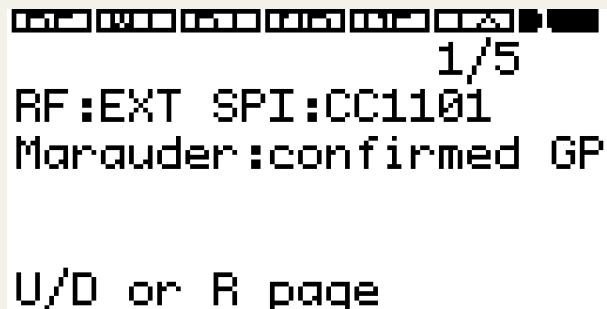

```
1/5
RF:EXT SPI:CC1101
Marauder:confirmed GP
U/D or R page
```

1/5 RADIO – PATH, SPI, MARAUDER, GPS SOURCE

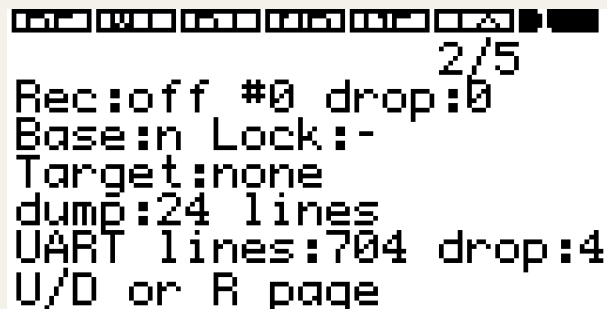

```
2/5
Rec:off #0 drop:0
Base:n Lock:-
Target:none
dump:24 lines
UART lines:704 drop:4
U/D or R page
```

2/5 STATE – RECORD, BASELINE, LOCK, UART

WHAT IT DOES

Page 1/5 prints the live radio path (**RF:EXT SPI:CC1101, Marauder:confirmed** – confirmed means a real Marauder response, not just a cable). Page 2/5 prints session state: record on/off and drops, baseline, lock target, dump lines, UART counters.

HOW TO USE

Hold Right pages through Info; everything here is also in the session files.

Hold Right → next page

A CHEAT SHEET, A PAPER TRAIL, AND A CONSCIENCE

```
KEYS 3/5
L/R tab HoldL AN
HoldR page in mode
OK act HoldOK lock
Back set HoldB exit
U/D or R next
```

KEYS

```
FILES 4/5
apps_data/room_sweep
last report #0
session-N.csv
report-N.txt wart-N
U/D or R next
```

FILES

```
LIMITS 5/5
RSSI != distance
no jam / no deauth
beacon != telemetry
no hit != absence
U/D or R next
```

LIMITS

WHAT IT DOES


Pages 3–5: KEYS (the full control map), FILES (SD path and the last report number), LIMITS (the honesty page – the same rules this guide opened with). The app carries its own manual and its own disclaimers.

HOW TO USE


Everything on these pages is on-device – no website required in the field.

Hold Right → next page

SETTINGS: FEEDBACK YOU CAN FEEL, SILENCE YOU CAN KEEP

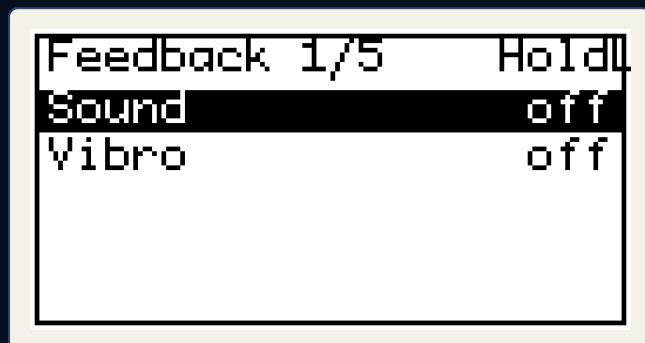

SOUND — OFF BY DEFAULT

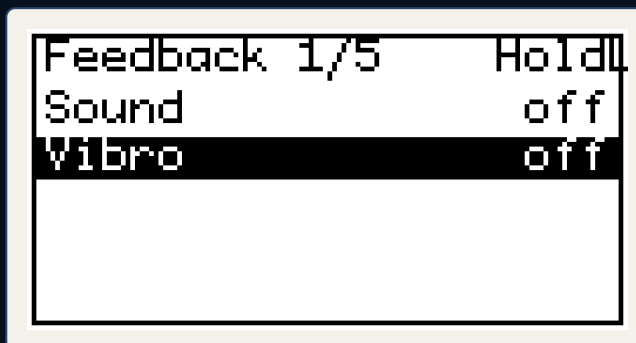

VIBRO — OFF BY DEFAULT

WHAT IT DOES

Back from any tab opens Settings. Feedback groups Sound and Vibro, both defaulting off. With Vibro on, a short tap gives one soft pulse and a hold a double pulse on release — holds register distinctly without looking at the screen. Every toggle confirms with the same tick.

HOW TO USE


Hold Left/Right (or short) changes group; Up/Down moves inside the group; OK toggles.

Back → open settings


L / R → group

OK → toggle

WIRELESS: KEEP THE WINDOWS OPEN

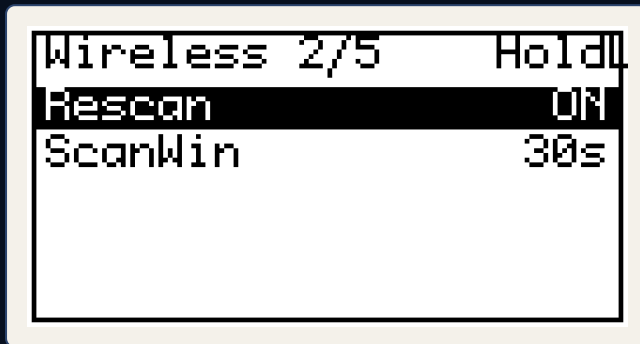

RESCAN – AUTO-RESTART THE WI/BT WINDOW

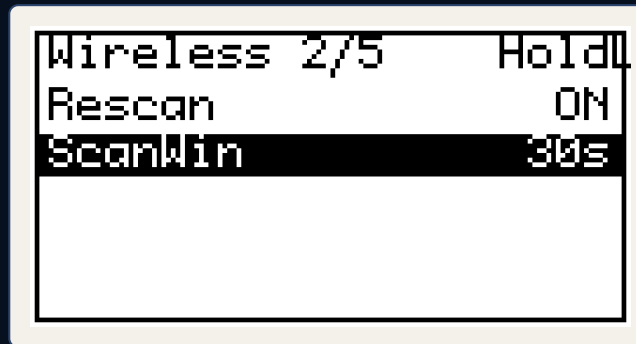

SCANWIN – 15 / 30 / 60 S

WHAT IT DOES

Rescan ON restarts the Wi-Fi/BLE scan window automatically so a busy room keeps refreshing instead of freezing on one pass. ScanWin sets that window: 15, 30, or 60 seconds.

HOW TO USE

Defaults are sensible; shorten ScanWin for snappier lists, lengthen it for quiet rooms.

OK → toggle / cycle

RADIO: ONE SPI BUS, TWO FRONT-ENDS, ONE FUSE

Radio 3/5	Hold
ExtBand	400
SPI Path	CC1101
TXDur	3s

EXTBAND

Radio 3/5	Hold
ExtBand	400
SPI Path	CC1101
TXDur	3s

SPI PATH

Radio 3/5	Hold
ExtBand	400
SPI Path	CC1101
TXDur	3s

TXDUR

WHAT IT DOES

ExtBand picks the external CC1101 band policy (AUTO / 400 / 900). SPI Path switches the BFFB's bottom SPI switch role between CC1101 and nRF24 – and choosing nRF24 forces Sub-GHz onto the internal CC1101 so the two radios can never fight. TXDur caps every carrier at 1–10 s.

HOW TO USE


Set SPI Path to nRF24 only with the bottom switch DOWN; the nR tab status page repeats the requirement.

ExtBand → AUTO/400/900


SPI Path → CC1101/nRF24

TXDur → 1–10 s

GPS: PICK THE PIPE, GATE THE PRIVACY

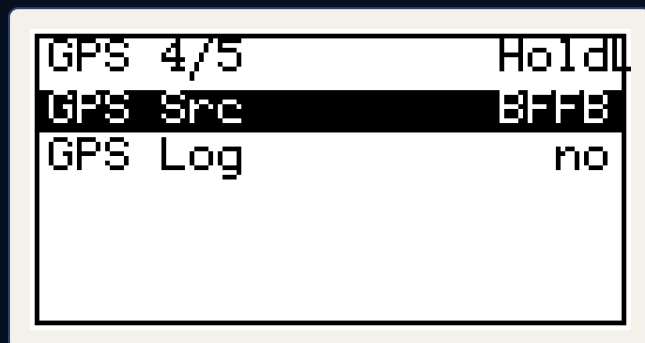

GPS SRC – BFFB STREAM OR GPIO LPUART

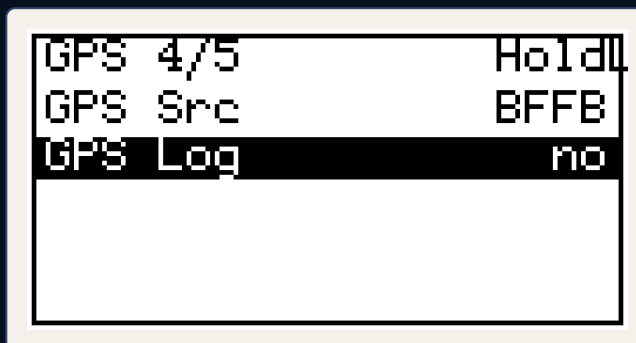

GPS LOG – COORDINATES ON/OFF

WHAT IT DOES

GPS Src chooses between the BFFB Marauder NMEA stream and the Flipper GPIO LPUART (15/16 @ 9600). GPS Log decides whether coordinates are written to session files at all – off, and the logs stay coordinate-free by design.

HOW TO USE

If the source goes quiet, Hold OK on any GPS page retries it – including a GPIO baud swap 9600 ↔ 115200.

GPS Src → BFFB / GPIO

GPS Log → on / off

SESSION: EVIDENCE, NOT NOISE

```
Session 5/5      Hold
Record           off
Baseline         OK=
Raw Dump         24
FullSweep        OK=
```

RECORD

```
Session 5/5      Hold
Record           off
Baseline         OK=
Raw Dump         24
FullSweep        OK=
```

BASELINE

```
Session 5/5      Hold
Record           off
Baseline         OK=
Raw Dump         24
FullSweep        OK=
```

RAW DUMP

```
Session 5/5      Hold
Record           off
Baseline         OK=
Raw Dump         24
FullSweep        OK=
```

FULLSWEEP

WHAT IT DOES

Record opens session N and writes **session-N.csv** plus a Room Report. Baseline snapshots the RF survey floor so the **>-75dBm** energy gate means something. Raw Dump captures a bounded UART snapshot (**uart-N.txt**) – the only file that can contain raw identifiers. FullSweep launches the whole-room sequence.


HOW TO USE

Recording is size-capped; if logging stops, scanning doesn't.

OK → start / stop

Baseline → snapshot floor

FULLSWEEP – ONE PRESS, THE WHOLE ROOM, A REPORT

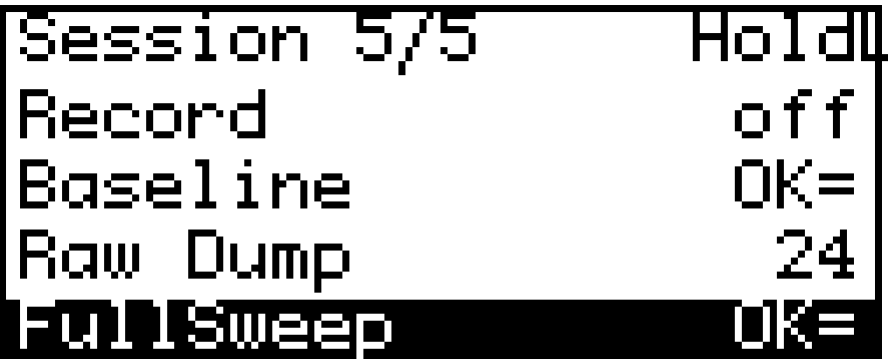

```
Session 5/5      Hold
Record          off
Baseline        OK=
Raw Dump        24
FullSweep       OK=
```

FULLSWEEP – SWEEP DONE · SAVED REPORT-N

WHAT IT DOES

FullSweep sequences RF (10 s) → Wi-Fi (15 s) → BLE (15 s) → nRF24 (12 s) → GPS (8 s) with hard timeouts, skipping nRF24 immediately if the SPI path isn't nRF24. It closes the session, writes **report-N.txt**, and prints an inverted **SWEEP DONE · saved report-N** banner. Progress rides the top strip (**FULL RF 10s**) while tab footers stay visible.


HOW TO USE

Settings → Session → FullSweep → OK, pocket the Flipper, walk the room, come back to a finished report.

OK → start sequence

top strip → live phase

THE PAPER TRAIL: THREE FILES, NO SURPRISES

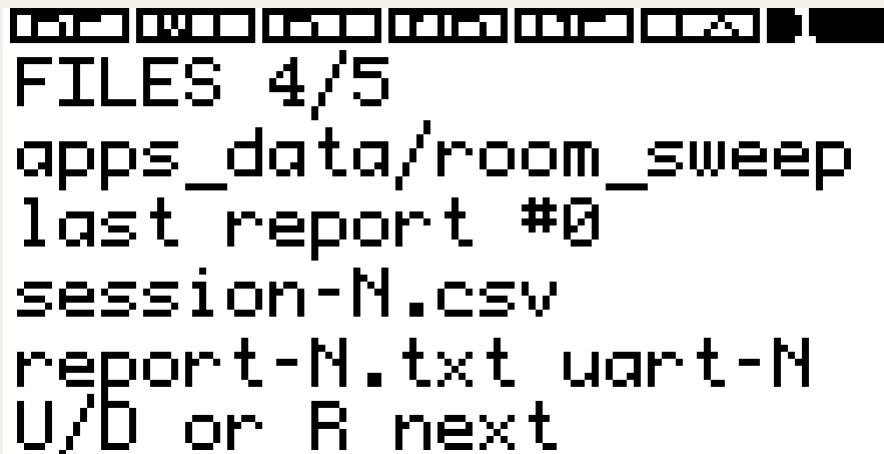

```
FILES 4/5
apps_data/room_sweep
last report #0
session-N.csv
report-N.txt uart-N
U/D or R next
```

INFO FILES — /EXT/APPS_DATA/ROOM_SWEEP/ · LAST REPORT NUMBER

WHAT IT DOES

Everything lands in `/ext/apps_data/room_sweep/`: **session-N.csv** (events, with Wi-Fi/BLE identifiers as session ordinals, not raw names), **report-N.txt** (the plain-text Room Report), and **uart-N.txt** (only if you asked for Raw Dump). Every TX attempt is recorded as an event.

HOW TO USE


Copy the three files off SD after a job; the Info → FILES page shows the path and last report number on device.

csv → events

txt → report

uart → only on request

PLAYS WITH THE BIG BOARD, WORKS WITH THE LITTLE ONE

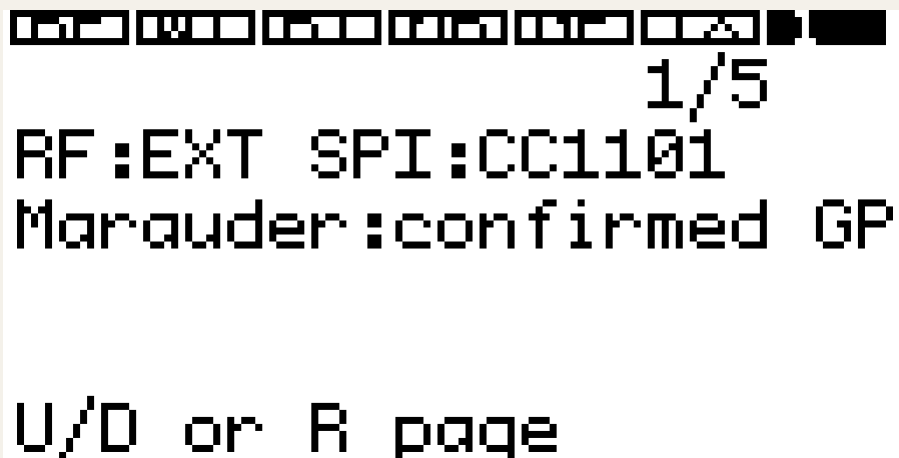

1/5
RF:EXT SPI:CC1101
Marauder:confirmed GP
U/D or R page

INFO RADIO — RF:EXT SPI:CC1101 • MARAUDER:CONFIRMED

WHAT IT DOES

With a BFFB attached, Room Sweep drives the dual CC1101 and the nRF24 over the Flipper SPI bus and talks to the Marauder ESP32 over USART 13/14 @ 115200 – the Marauder stream carries the Wi-Fi/BLE scans, while GPS prefers the Flipper GPIO LPUART (15/16 @ 9600) with Marauder **nmea** as the fallback. Without it, the app falls back to the Flipper's internal CC1101 – RF survey and TX still work, honestly labeled **INT**.


HOW TO USE

The Info → RADIO page tells you which world you're in: EXT vs INT, SPI path, **Marauder:confirmed**.

BFFB → optional

internal CC1101 → fallback

LEAVES AS QUIETLY AS IT LISTENS

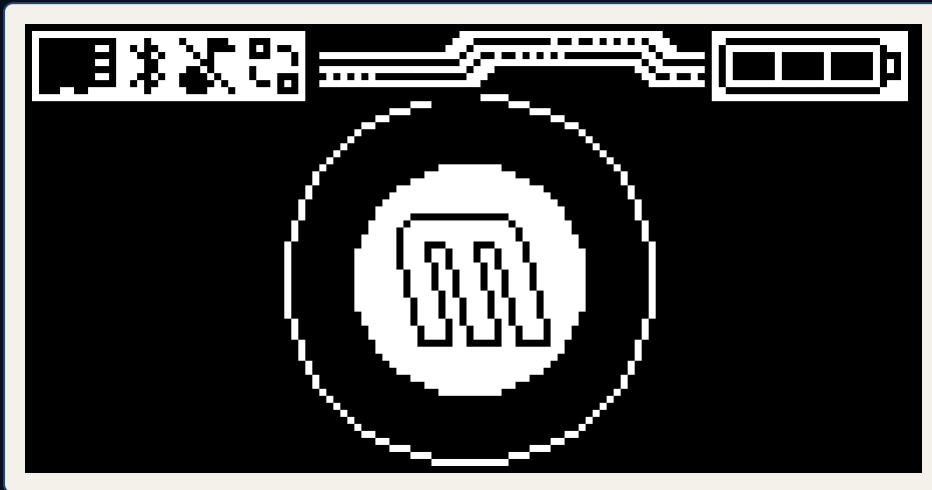

MOMENTUM DESKTOP — AFTER A CLEAN EXIT

WHAT IT DOES

Hold Back exits; the radio closes, the UART expansion port is restored, and the Momentum desktop comes back untouched. Nothing keeps running after the app is gone.

HOW TO USE

Build from source with `./init.sh` (host tests + firmware build), deploy with **ufbt launch**. Targets Momentum mntm-012, API 87.1.

`Hold Back` → exit

`./init.sh` → build gate

FLIPPER ZERO EXTERNAL APP

ROOM SWEEP

Detect & analyze only. No jamming, no deauth, no capture/replay, no denial. RSSI is not distance; a beacon is not telemetry; no hit is not proof of absence.

Companion files: [room_sweep_control_map.html](#) (one-page control map) · [this guide as PDF](#) · [USER_GUIDE.md](#) in the repo.

Firmware: Momentum mntm-012 · API 87.1 · appid room_sweep